



PEX


# Crimp Ring Removal Tool

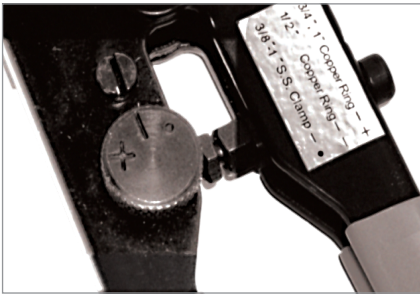


1. Set dial or thumb slide on tool to desired ring cutting size.

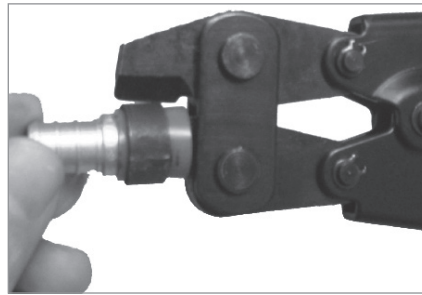


2. Cut PEX pipe close to fitting and insert small jaw inside fitting and compress handle, forcing cutter through crimp ring.

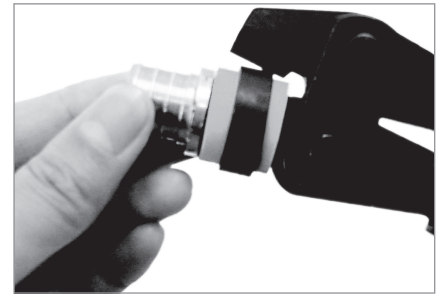


3. Reposition cutter to other side of crimp ring and compress handle forcing the crimp ring open.

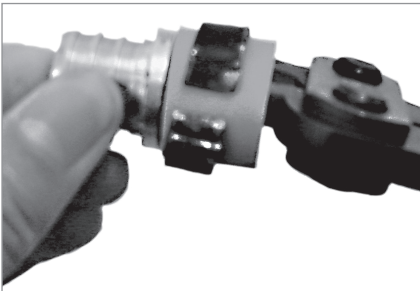

4. Remove PEX ring from pipe.

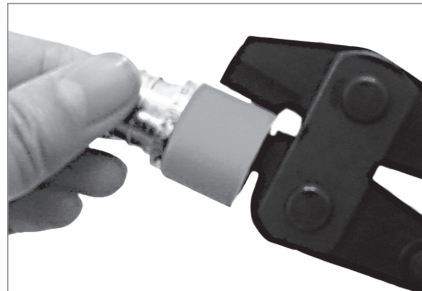

5. Reinsert removal tool into fitting and fully close the handles, forcing the cutting jaw into the PEX pipe.

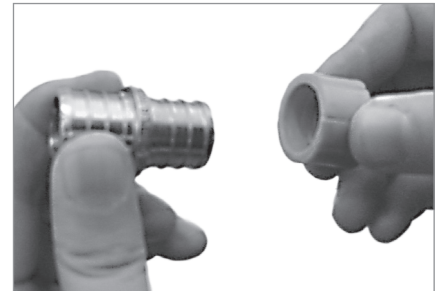

6. Repeat in several positions to free PEX pipe for removal.

Pinch Clamp Removal Tool available:  
69PTKPCRR - Removes 3/8" - 1" pinch clamps

