
SMART TOILET INSTRUCTIONS FOR THE USE OF PRODUCTS

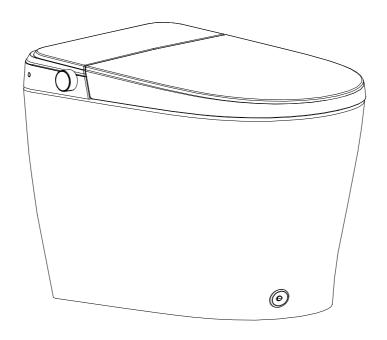

Wisdom knows you better

Automatic Intelligent Toilet

Catalogue

Part 1# Product Instructions

Page1- Page8

Part 2# Product Installation

Page9- Page15

Warning-To avoid electric shock /!



- 1.Do not place the product where it may get wet.
- 2.Do not drop the remote control into the water.
- 3.Do not spray water into the product or plug.

Warning: To avoid burns, fires and injuries




- 1. Children and temperature insensitive users should be accompanied by others when using this product.
- 2. Please only using functions on the manual, do not use other equipments.
- 3.Do not continue to use when the product is out of order, damaged or flooded. Please send the product to the designated repair center for repairing.
- 4. Please make sure that the wires are not damaged by burning.
- 5.Do not use this product when you are out of your mind.
- 6.Do not plug the product or pipe.
- 7.Do not use the toilet outdoors.

The first use of Intelligent toilet

Note: To ensure the normal use of the product, please follow the instructions.

- 1. Insert the power plug into the AC (AC) 110V socket
- 2. Please confirm the digital display panel is working.
- 3. Confirm whether the inlet valve is open.
- 4. Confirm whether the hose between the angle valve and the toilet inlet valve is installed in an appropriate way.

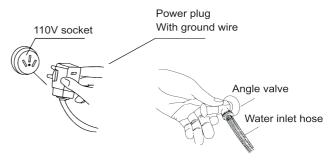


Caution

- 1. Check whether the sprinkler head or water pipe leaks. Method: drying all parts of the pipe and check with absorbent paper.
- 2. Check if there is a sound by pressing the seat around the position of the seat sensor, .
- 3. Check the cleaning, drying, automatic deodorization and automatic flushing are working in a normal way.
- 4. Check whether the damped structure is working.

Seating sensing position

Check the functions of cleaning, drying and automatic deodorization, make sure the sensor is turned on.

Please cover the spray nozzile, when you check the cleaning function, to avoide splasing.

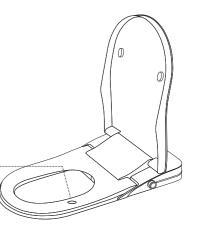

Please read carefully before using. The cautions listed here are related to safety and please follow.



This product is an electrical product. Please do not install it in a place where it is easy to be splashed by water or high humidity. When using it in the bathroom, please install a vent to keep good air flow in the bathroom.

The socket position should be set as follows

- The gearing position of electric outlet should be at least 12inches above the floor, and should leave bathtub as far as possible.
- The back track of electric outlet should use a high speed type of electric leakage switch (responding the electric less than 15 mA) or use an insulate transformer which is more than 1.5 KVA and less than 3 KVA) to protect.

Warning - Be sure to firmly connect ground wires



The power plug of this product is a three-phase plug (with ground wire). There is a danger of electric shock when there is a fault or leakage of electricity. If there is no ground plug in the socket, consult with the electrical installation company. Do not use power supply other than AC 110V, according to relevant regulations.



The product connects a ground of line to carry on to connect a ground of processing, if has never carried on to connect a ground of processing, may arouses to get an electric shock.

Note: the grounding treatment mentioned here means that the grounding resistance is below 100Ω , and the grounding wires of the switchboard shall be copper wires with a diameter of more than 1.6mm.

While using in the bathroom please confirm the power plug have already used silica gel to carry on a waterproof processing.

Using the wrong power supply can easily cause fire

Please be sure to observe the following



Please don't sprinkle urine at the essence and spray. Pull out the plug when it thunders.

Strictly forbid to directly clean the toilet with water. Please do not wipe seat and cover with dry cloth or toilet paper.

Please do not open the seat ring or seat cover violently.

- May cause cracking or malfunction.



Please take antifreeze measures to prevent damage caused by freezing.



Please do not put heaters close to this product.

- Discoloration or malfunction will occur



Please read carefully before using.

The cautions listed here are related to safety and please follow.





Must obey

Notice heat burn

- Please turn the seat temperature down or off when sitting on the toilet for a long time.
- Please set the temperature to room temperature when the following persons use the seat to dry gently.
 - Children, the elderly, the sick, and the disabled, etc.
 - People who take sleeping pills, get
 - drunk o get overtired.

Do not use any power source other than AC 110V

- It may start a fire

Keep cigarettes and other fire kindling away from the product

- It may start a fire

Do not use loose and unstable power sockets

- It may cause fire or electric shock

Please don't sprinkle water or rinse on product essence or the power plug.

- May arouse a fire or get an electric shock
- May cause toilet break, damage or indoor

When long time didn't use, please pull out the power plug.

- For safety, please pull out the power plug
- For re-use, please drain water for one minute before use.

Please do not flush other items except for urine and feces

- May cause then block, sewage outside overflows.

Do not unplug the power plug with wet hands

- It may cause electric shock

Do not distort or damage the water inlet

- It may cause a leak

Do not continue to use the product when it breaks down

When the following occurs, please take out the power plug, close the inlet Angle valve, and stop the inlet.

- Ceramic WC is leaking
- Cracks appear
- Abnormal sound and smell
- Fume-off
- Abnormal heating
- The toilet is clogged
- If continue to use under the condition of failure, it may cause fire, electric shock or indoor seepage problems

Do not damage the power cord or toilet seat cable

- Don't pull
- Don't process
- Don't heat
- Don't forcibly bent
- Do not place heavy objects on the power cord and toilet seat connection line.
- May cause fire, electric shock or short circuit. If the power supply is damaged, please contact a professional for repair.



Do not disassemble, repair or transform the product without permission

- It may cause a fire or electric shock

Do not use extension wires, otherwise, it may cause a fire or electric shock

- Do not connect wires or use extension cords, which may cause fire and electric shock.

Do not install this product in damp places such as bathroom's

- It may cause a fire or electric shock

Do not use dirty water

 May cause skin irritation and other problems



Description of other functions

Note: Please read the following carefully before use

Flushing by hand conduction

Press remote or intelligent control board for flushing, start flushing function (manual open cover)

Hand conduction open over and flip function

Press remote or intelligent control board for opening cover/flip, auto open/off seat and flip (auto open cover)

Radar automatic open cover function

When approaching the toilet, auto open cover, auto off seat and finish flushing when leaving (auto open cover)

Daily cleaning and maintenance

Note: During cleaning and maintenance, please be sure to unplug the power switch and power off

Smart toilet cleaning and maintenance methods

Please wipe it with a soft cloth dampened with water

- If the dirt is not removed in time, it will become difficult to clean, please wipe with water sometimes.
- Static electricity will absorb dust, resulting in the product black, dirty, water wipe can prevent the generation of static electricity.
- The ceramic body can be removed from the toilet seat to facilitate cleaning between the toilet seat and the ceramic body.



Unplug the power supply before maintenance

Cleaning and maintenance of spray head

If there is dirt in the nozzle. Please clean it with a small brush such as a toothbrush.

- Do not stretch and bend the spray head.





Clean the dust on the power plug regularly

When cleaning, remove the power plug and wipe with a dry cleaning cloth. - Poor insulation may cause a fire.

Side knob instructions



Power on/off: long press the knob for more than 3 seconds

Hip cleaning: Female cleaning: Stop:Turn the knob to the left
Turn the knob to the right
Press the knob once

Toilet flushing: Press the knob once before seating **Warm air drying:** Press the knob once when seating

Power failure flushing: connect the spare battery, press the knob for 3 seconds during power failure to start flushing.

- 1. Radar switches to foot cover: press the cover button on the remote control for 5 seconds,
- 2. Turn off | turn on disseat water flushing: press the automatic water flushing button on the remote control for 5 seconds
- 3. Turn off | turn on the function of flushing upon cover falling: press the cover and flushing buttons on the remote control at the same time

With Auto Open Cover Flip Remote Control

Note: Please read the following carefully before use

STOP

You can stop the "Hip cleaning' "Female cleaning", "brying" and other operation when operation

SPRAY/MASSAGE

 $\widetilde{\mathcal{A}}$

Press this button when you are seated, the Hip wash cleaning nozzle will spray at the fixed position for 2 minutes and then stop spraying automatically.

BIDET/MASSAGE



Press this button when you are seated, the female cleaning, nozzle will spray at the fixed position for 2 minutes and then stop spraying automatically.

DRYER

 $\frac{1}{2}$

Press this button to start drying when you are seated. Warm air drying will stop automatically affer 3 minutes.

FORWARD

 $\land \lor$

CLEANING HEIGHTEN



Press this button during the "hip" or. "female" cleaning and adjust the nozzle position without the use of the removable cleaning function.

It can increase or decrease the force of cleaning water pressure. It can be set to weak, medium, strong, or strongest.

OPEN COVER



Press this button, the seat cover will open automatically, and then press it again, the seat cover will close automatically.

OPEN SEAT



Press this button, the seat opens automatically, and press again to close the seat automatically.

FLUSH



Press this button and will start flushing.

WATER



4 degrees can adjust the water temperature, the temperature can be set as, one degree: the environment temperature, second degree: about 93°F, Third degree: about 96°F, Forth degree: about 99°F

SEAT



4 degrees can adjust the seat temperature, the temperature can be set as, one degree: the enviroment tempature, second degree: about 93°F, Third degree: about 96°F, Forth degree: about 99°F.

WIND



4 degrees can adjust the wind temperature the temperature can be set as , one degree: the environment tempature, second degree:about 93°F, Third degree:about 96°F, Forth degree:about 99°F.

<u></u>

Remote control pairing

Switch the knob to the hip cleaning for about 3 seconds ,when you hear a sound , press any button of the remote ,then can pair the remote to the toilet .

BABY WASH



After the baby is seated then press the baby wash button ,it will start the hip cleaning automaticly , and the washing pressure will be adjust to the lowest level automaticly ,it will change to mobile cleaning when press one more time , and auto close the baby washing when you press the " stop " button

AUTO



Nozzle extended and water out for nozzle washing

LIGHT




The night light can be turned on or off in the power-on state.





Note: Please read the following carefully before use

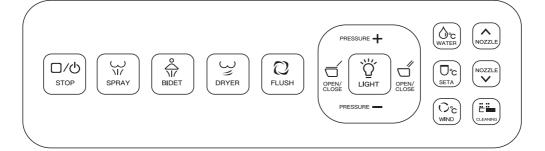

POWER



Press this key to open or shut off the power

DRYING



Press this button to start drying when you are seated. Warm air drying will stop automatically after 3 minutes.

STOP



You can stop the "Hip cleaning", "Female cleaning", "Drying" and other functions in operation.

HIP/ MOBILE



+

Press this button when you are seated, the Hip wash cleaning nozzle will spray at the fixed position for 2 minutes and then stop spraying automatically.

FLUSH



Press this button and will start flushing.

FEMALE/ MOBILE



Press this button when you are seated, the female cleaning nozzle will spray at the fixed position for 2 minutes and then stop spraying automatically.

CLEANING HEIGHTEN

It can increase the force of cleaning water pressure. It can be set to weak, medium,

NIGHT LIGHT



The night light can be turned on or off in the power-on state.

FORWARD



Press this button during the "hip" or "female" cleaning and adjust the nozzle position without the use of the removable cleaning function.

CLEANING HEIGHTEN

strong, or strongest.

It can decrease the force of cleaning water pressure. It can be set to weak, medium, strong, or strongest.

NOZZLE CLEANING



Nozzle extended and water out for nozzle washing

FORWARD



Press this button during the "hip" or "female" cleaning and adjust the nozzle position without the use of the removable cleaning function.

Water Tempature



4 degrees can adjust the water tempature the tempature can be set as, one degree: the environment tempature, second degree: about 93°F,

Third degree :about 96°F, Forth degree : about 99°F

Seat Tempature



4 degrees can adjust the seat tempature the tempature can be set as,one degree :

the environment tempature, second degree :93°F, Third degree :96°F,

Forth degree : about 99°F.

Wind Tempature



4 degrees can adjust the wind tempature the tempature can be set as , one degree: the environment tempature, second degree:about 93°F,

Third degree :about 96°F, Forth degree : about 99°F.

This key is only applicable to the type of sensor flip-over

COVER



Press this button, the seat cover will open automatically, and then press it again, the seat cover will close automatically.

SEAT



Press this button, the seat opens automatically, and press again to close the seat automatically.

CODE FOR REMOTE CONTROL

Rotate the knob until the buttocks are clean and hold for about 3 seconds. After a sound, press any button of the remote control to complete the code.

Note: If the remote control has no response in the first time, it should be code.

Common fault diagnosis

Fault phenomenon	Fault analysis	Fault handling
	Check to see if the power/socket is loose	Please check the circuit
Product doesn't work	Whether there is leakage (the display light of leakage protection plug is not on)	Remove the power plug from the socket and replug it later.Press the reset switch of the leakage protection plug. If the elbow still cannot be operated, please take out the power plug and entrust the repair.
	Check if water is cut off	Pending resumption of water supply
No water when spraying	Check if the Angle valve is closed	Open the Angle valve
	Check if the inlet filter is blocked	Clean or replace the filter
	Check the inlet pipe bends	Unobstructed the pipe
Cleaning insufficient	Check whether the cleaning pressure is at the lowest level	Refer to the instruction manual for regulating the water pressure
rigidity	Check if the inlet filter is blocked	Clean or replace the filter
Spray water disorderly	Abnormal operation Pull out the plug then push it back one minute later and try again	
water temperature	Check that the water temperature is set low	Adjust the water temperature according to the instructions
is not enough	Whether the hot and cold massage function is on	Turn off the hot and cold massage function according to the instructions
The washer often drips water	Solenoid valve failure Please get professional maintenance technicians	
Misoperation of remote control	Check the battery level of the remote control is it too low Please replace the battery	
Drying/seat temperature too low/no heating	Check whether the temperature is set at low or normal temperature	Adjust the temperature according to the instruction
	Whether to turn on the power saving function	Refer to the manual to choose to turn off the power saving function
Seat/ cover falling too fast	Failure of damping drop function	Please get professional maintenance technicians
	Is there any other hard material holding it under the seat	Remove the hard objects
The cleaning function cannot be used normally	Whether the body's sensing area is covered	Adjust the body sensing area of the seat cover
	Whether the power supply is restored during the power failure	Pull out the plug then push it back one minute later and try again
	The skin completely cover the human body induction area of the seat	Sensor failure, please get professional maintenance technicians
Seat/cover cannot open or close * Only for automatic flip models	Failure of automatic damping function	Pull out the plug then push it back one minute later and try again The above way isn't working, please ask professional personnel for maintenance
Low water pressure	Filter mist blocking	Clean the filter according to the instruction
does not flush clean	Pipe bending	Observe whether the connection line bends and keep the water supply line smooth
No siphon flushing is not	Air escapes from the sewage outlet	Please get professional maintenance technicians
clean when wăter pressure is normal	The trapway is blocked	Please get pipe dredge for dredging
Flush is not clean when water pressure normal	Flush valve failure Ask professionals for maintenance	

Due to the different printing time of the materials, the product specifications may be slightly changed. Please refer to the material object.

Product standard


Rated voltage	Alternating voltage 110V±10%, 50HZ/60HZ			
Rated power	Water inlet temperature: 59°F Outlet water temperature: 99°F Water discharge: 750ml/min Power: 1350W			
Cleaning	Water outlet	Hip cleaning	About 700 ml/min	
		Female cleaning	About 700 ml/min	
	Outlet water temperature		Normal temperature, and 93°F/96°F/99°F(4 grades)	
	Water heating		Instant water heater	
	Heater power		Water inlet temperature: 59°F , Outlet water temperature: 99°F Water discharge: 750ml/min Power: 1350W	
Seat heating	Seat temperature		Normal temperature, and 93°F/96°F/99°F(4 grades)	
	Heater power		40W	
Warm drying	Wind temperature		Normal temperature, and 93°F/96°F/99°F(4 grades)	
Spray position		n	Adjustable Fore and Aft	
Water temperature		ure	41~99°F	
Water Pressure (With Water Tank)		Vater Tank)	The lowest pressure : 0.06 Mpa the highest pressure : 0.75 Mpa (static)	
Water Pressure (Without Water Tank)			0.15-0.75 Mpa (static) is about 5L of water in 15 seconds	

Install The Smart Toilet

(1) Tools needed




(2) Parts included

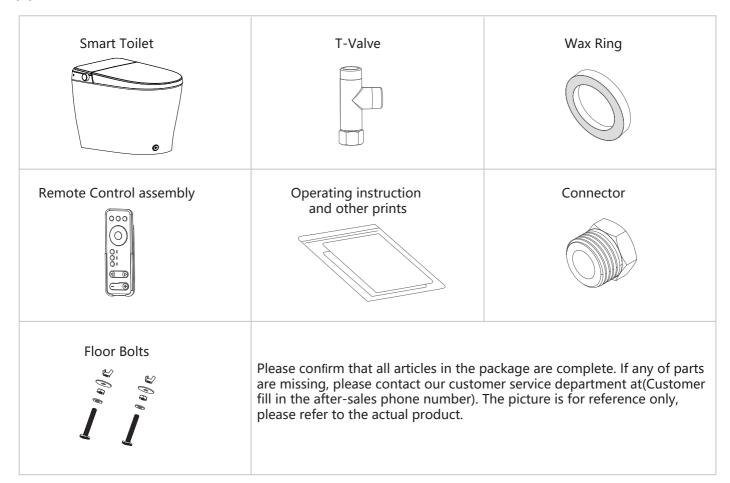

1. Install The Smart Toilet


- (1) Draw a cross marker on the drain outlet on the ground.
- Clean the floor and wipe off any excess dust or dirt. Failure to install on an cleaned surface will affect the quality of installation.

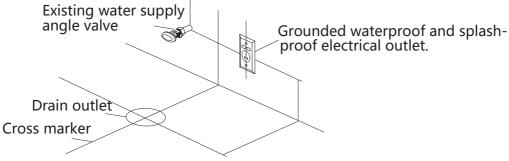


Rough In Size:12" (300mm)

(2) Installation of floor flange.

Ground Flange

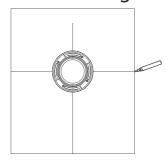


(3) Install smart toilet bottom flange anchor screw.

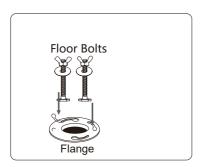


(4) Raise the toilet seat for toilet bowl installation.

TIPS: Different models have different ways to remove the toilet seat.


• Model MT016G7: Hold both seat and cover vertical, pull upward to detach them from ceramic bowl. Move the seat forward as shown.

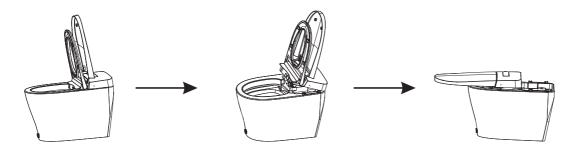

Model MT020U5 、 MT018U1、 MT015K1:Unscrew the screws on the toilet seat, take off the toilet seat

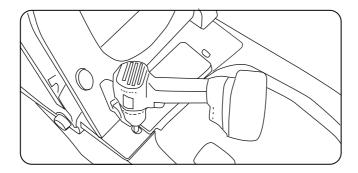


(5) Take off the whole toilet seat and unscrew the flexible tube and black wire

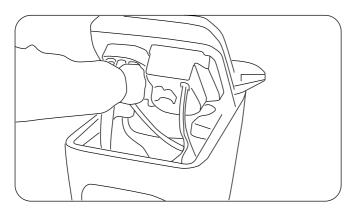



- (6) Install the wax ring and brass floor bolts onto floor flange.
- Turn over the toilet bowl and install the flange ring as below picture.

 Apply some glue on the bottom of the toilet (The adhesive not included.)

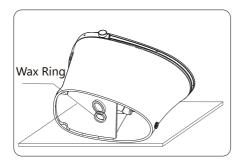

- (7) Installing the toilet bowl onto floor flange
- Two people to lift the toilet bowl, slowly lower the bowl onto the oor ange .Making sure the oor bolts on the oor ange completely come through bolt opening on the bottom of toielt bowl.
- Next, press down the toilet bowl rmly onto the floor so the wax ring can create the full seal.
- •Lastly, screw down the nuts on the floor bolts by hand .

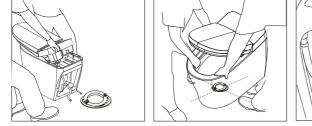

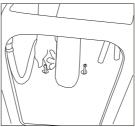




Caution: Do not move the toilet bowl around once the toilet bowl is in position. It can damage the wax ring seal and result in water leakage.


- (8) Install the toilet seat
- Put the toilet seat onto the toilet and reconnecting the flexible hose and black wire

Model MT016G7: Press the cover down slightly harder

Model MT020U5, MT018U1, MT015K1: Install the screws on the toilet seat and put on the fixing cover

  - (9) Connect the three-way valve to the shut-off valve and connect the braided water supply hose.
 - With the 3/8" male connection facing to the right, apply teflon tape and screw on adapter (supplied).






- Connect tee valve to male thread on adapter (apply Telflon tape to male threads). Connect braided supply tubes to three-way valve male connections.

 - 1/2" seat water supply hose to bottom of three-way valve1/2" toilet water supply hose to right side of three-way valve


Note: Use Telflon Tape on all threaded connections to insure a water tight seal.

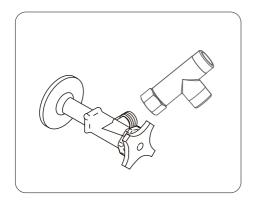



(10) Confirm the water supply.

- Open the water supply angle valve to the greatest extent as shown in the drawing.
- Make sure there is no water leakage in each connection part. If there is water leakage, please re-tighten the nut for re-installation.

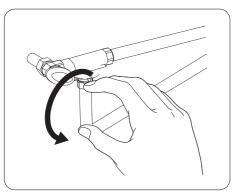


(11) Connect the power supply.

- Connect the ground wire.
- Power plug into the AC 110V socket.
- Confirm whether the power is connected.

Note

Confirm indicator light on the power plug. A lit-up power indicator light will confirm that the smart toilet is powered-on. When powered on, press and hold the knob for 3 seconds to enter standby mode.

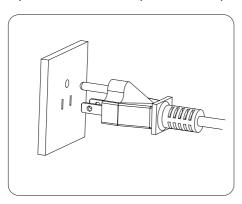


2. Install the Remote Control

(1) Install the Remote Control

- 1. According to the location of the screw holes of the remote control holder, drill two holes with a 6mm-diameter drill.bit on the wall with a depth greater than 45mm.
- 2. Install the expansion tube into the holes.
- 3. Place the remote control holder onto the fixing hole.
- 4. Fix the remote control holder with the configured expansion screws.
- 5. Open the battery area of the remote control and install new batteries.
- 6. Place the remote control on its holder. The specific steps are shown in the drawings below.

If the wall for installation is of a specific material (such as wood panel, MDF), please use a suitable fixing method.

The remote control should be installed in a place that is not easily exposed to water.

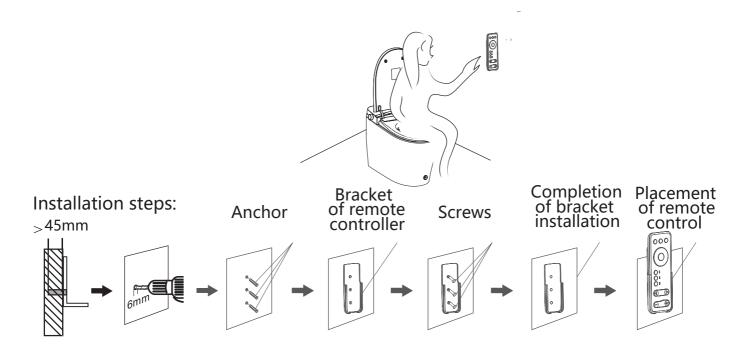

SERVICE AND SUPPORT

If any defects in materials or workmanship are discovered during normal use within six months of installation, we will provide replacement parts free of charge, subject to normal installation, use, repair or maintenance.

This warranty applies to: Original purchaser only, proof of purchase is required when making a claim.

We recommend that all toilet installations be performed by a professional (a licensed professional plumber or contractor).

We will not be responsible for any damage or product failure caused by improper installation, misuse, or failure to hire a licensed professional for installation. We are not responsible for any installation or removal costs.

The half-year limited warranty will be void if:

- Installer failed to follow installation recommendations
- The product has been moved from its original installation location
- The packaging condition of the product has been modified in any way
- The product has been subject to improper maintenance, abuse, misuse, excessive use of chemicals, accidents or other damage.

This toilet does not imply that the product complies with any local building or plumbing requirements

code. It is the consumer's responsibility and obligation to determine compliance with local regulations before and during installation.

If you have any questions or concerns, please contact us directly:

servicefast1@outlook.com