
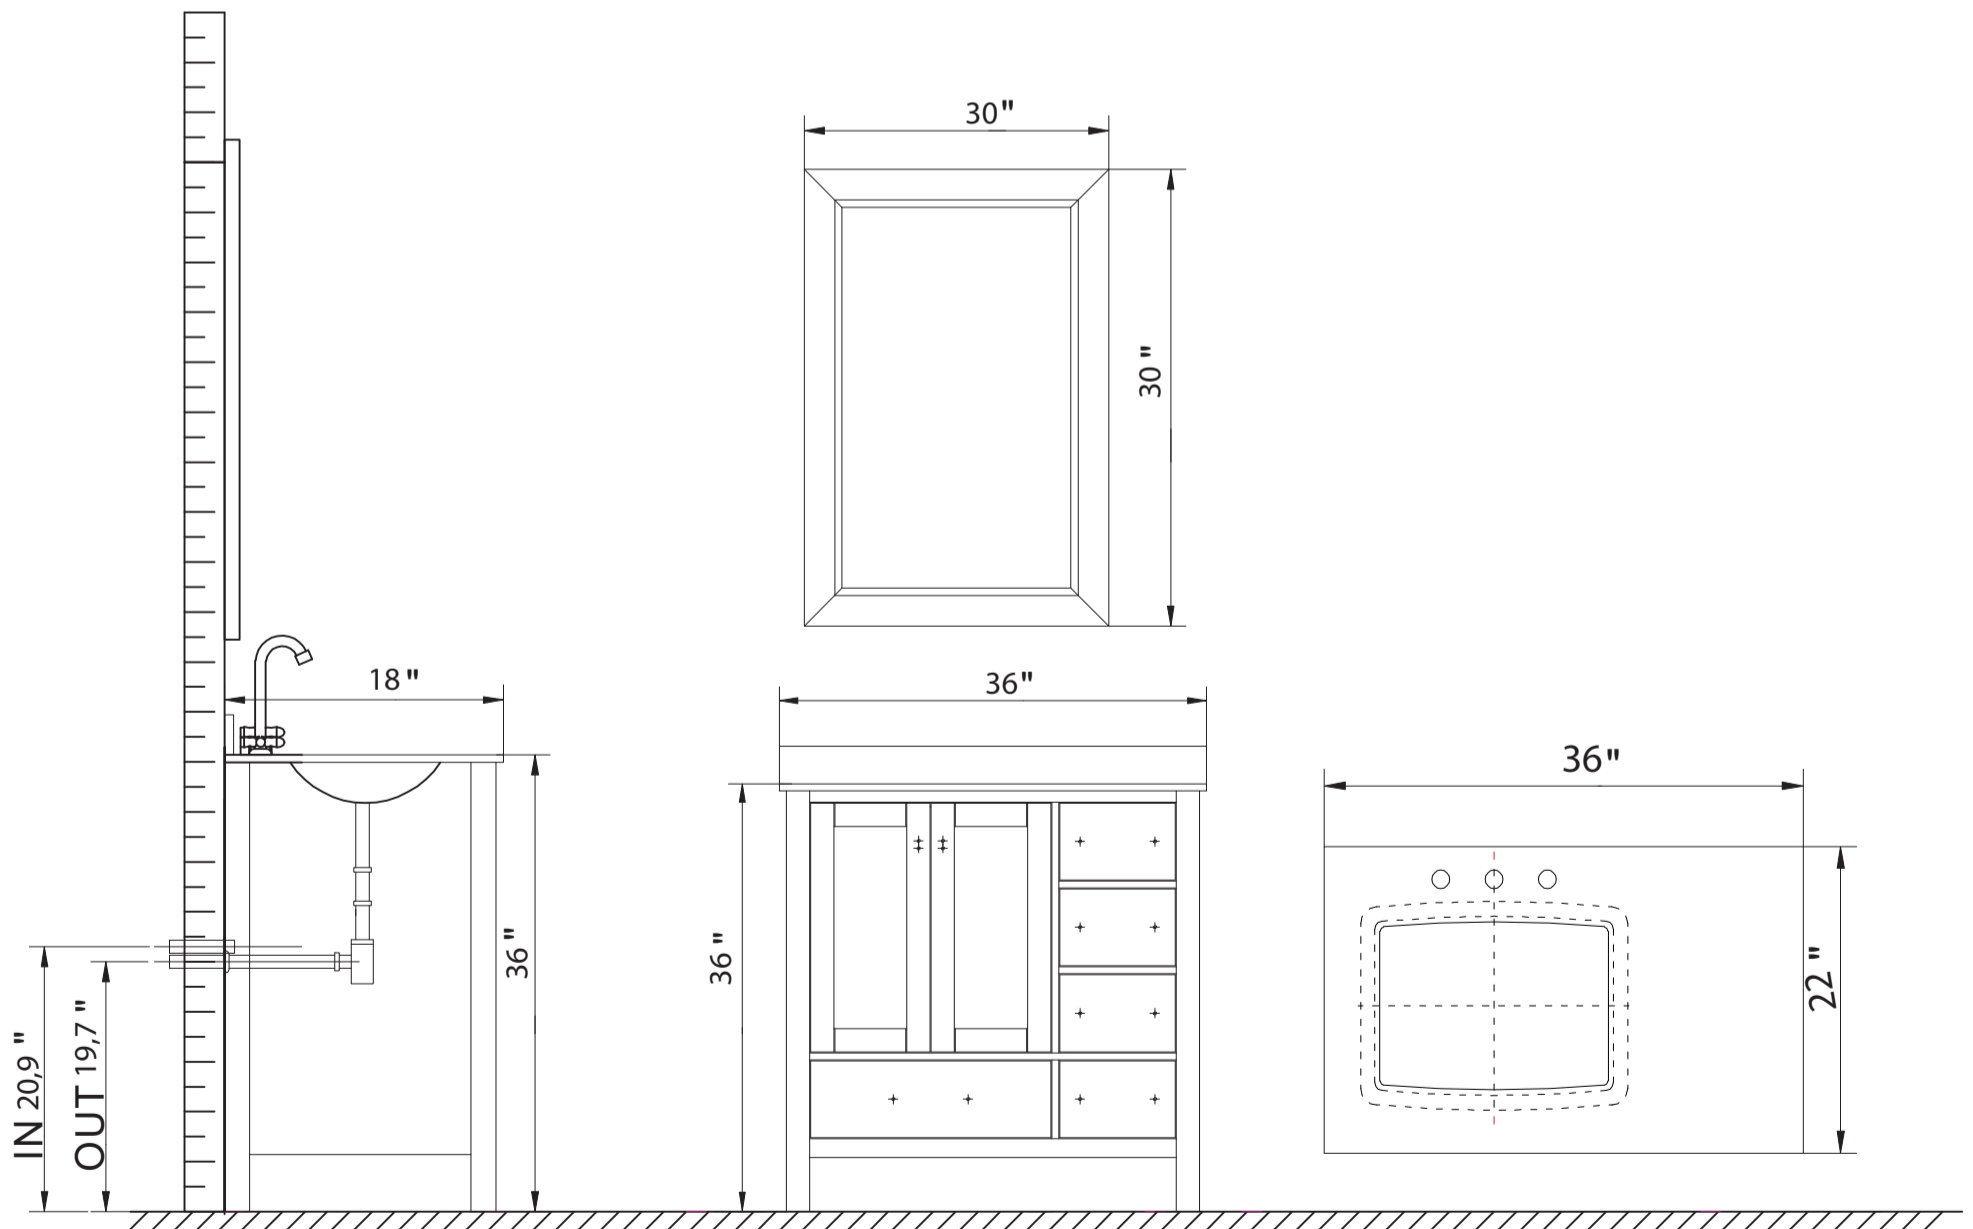
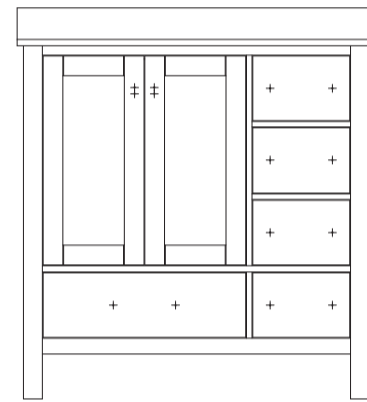



# VIVA

MODEL NO : TVN414-36X18ES


- Please check your product packaging to make Sure the included accessories are in the "list of standard accessories".if any parts are missing, please contact your local dealer immediately
- Do not allow any sharp objects to come in contact with the cabinet,as it will scratch the surface
- Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.
- Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.
- Please avoid using cleaning products that contain bleach or ammonia.
- Wood surface should only be cleaned with wood care products such as soapy water or furniture polish.

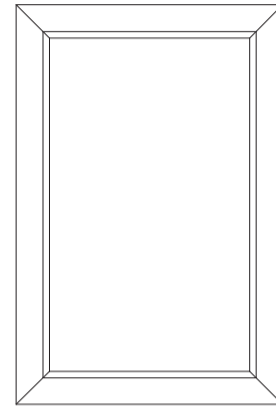

## ERECTING TOOL

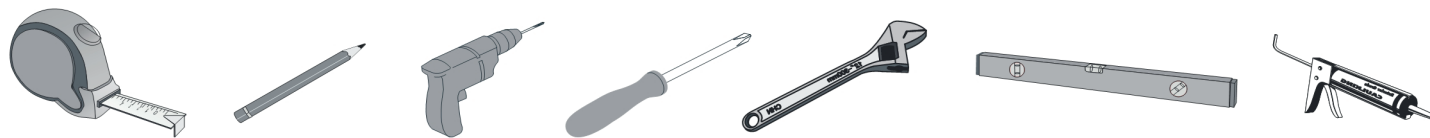

## DRAWER'S ADJUST

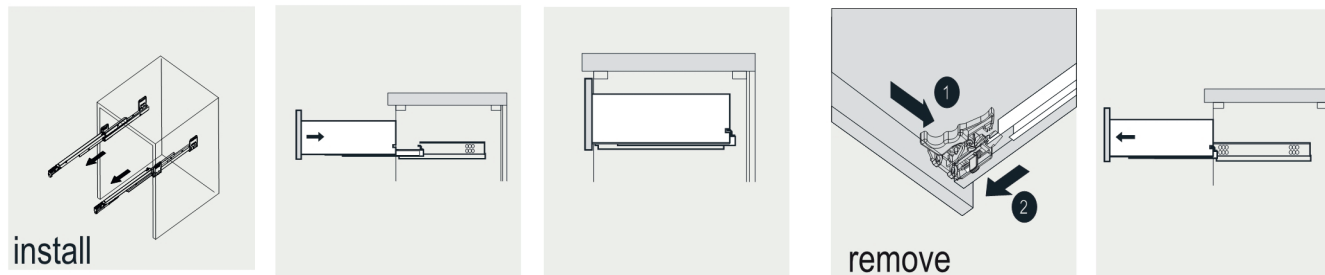

## INSTALLATION INSTRUCTIONS

