


INSTRUCTION MANUAL

Customer Service: 470-926-8618 321-946-6293 yinvaniservice@outlook.com

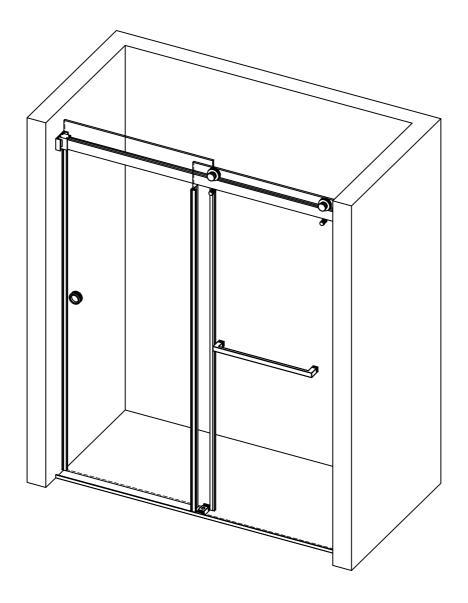



Please keep this manual and product code number for future reference and for ordering replace ment parts if necessary.

GENERAL INSTRUCTIONS

- Read this manual carefully and completely before proceeding.
- It is recommended that you wear safety glasses at all times during the installation.

INSTALLATION OVER CERAMIC TILES

- If your shower door is to be installed over ceramic tiles, the tiles should lay completely under the wall jamb.
- Silicone should be used to seal the gap where the ceramic tiles meet the fixed panel.

NOTICE

- Caulking : no sealant is required inside the shower, unless otherwise stated.
- Some models are equipped with clear sealing gaskets.

CARE FOR YOUR SHOWER DOOR


- Never use scouring powder pads or sharp instruments on metal pieces or glass panels.
 An occasional wiping down with a mild soap diluted in water is all that is needed to keep the panels andmetal parts looking new
- We recommend wiping the glass panels with a squeegee after each use.

Tools Required

Spirit level	Tape measure	Power drill	Drill Bits	Silicone Gun	
Screw driver	Pencil	Hacksaw	Rubber hammer	Safety glasses	

Product specifications are subject to change without notice

Detailed Diagram of Shower Enclosure Components

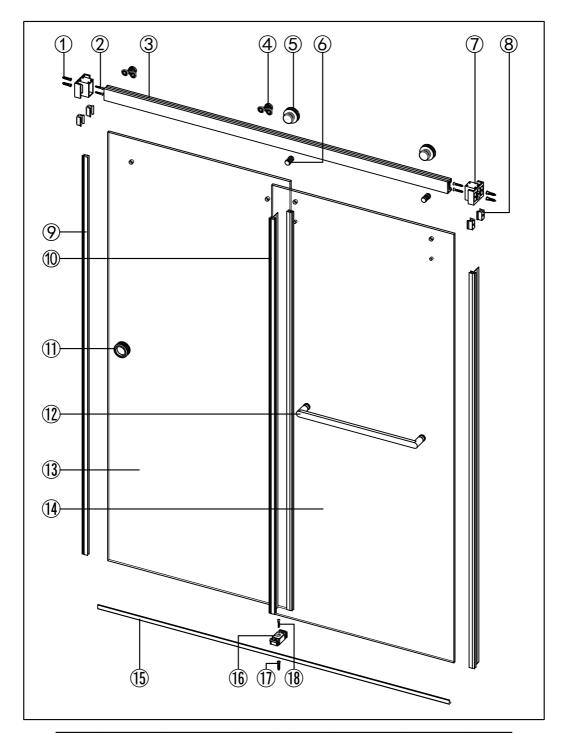

NO.	Name	Picture	Qty	NO.	Name	Picture	Qty
1	8mmWall Plug	A	4	10	Door Seal	Ř–	2
2	Screw ST5x40	ľ	4	11	Towel Bar	0	1
3	Guide Rail	IJ	1	12	Towel Bar		1
4	Roller	B O	2	13	Sliding Door		1
5	Ø60 Roller	X	2	14	Sliding Door		1
6	Anti-jumping Knob	B	2	15	Anti-splash Threshold	Ľ	1
7	Wall Bracket	B	2	16	Guide Block	ŝ.	1
8	Anti Collision Block	Ð	4	17	6mmWall Plug		1
9	Door Seal	Ă	2	18	Screw ST4x30	Ĺ	1

