


# Glass filler handles both paper & glass cups

System limit


temp: 40°F min.to 140°F max.

pressure: 100 psi max. static

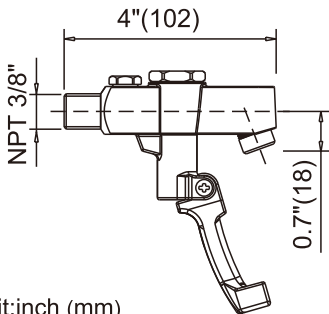

unit:inch (mm)

Flow Adjustment:  
To adjust water flow,  
loosen nut (2) with  
a wrench, then use  
screwdriver to  
turn screw (1)  
to desired for  
leaks.

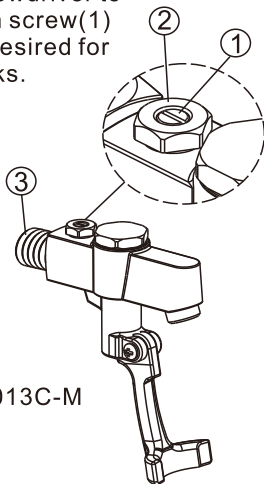

K1013C-M


1. Turn off water supply and drain lines.
2. Use the threads (3) of faucet to connect to the device.

# Glass filler handles both paper & glass cups

System limit


temp: 40°F min.to 140°F max.

pressure: 100 psi max. static

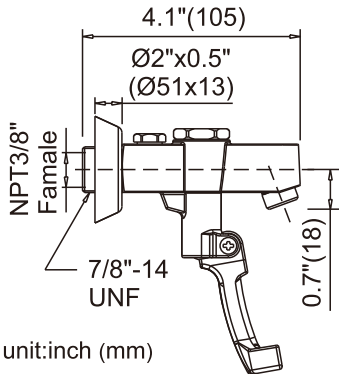

unit:inch (mm)

Flow Adjustment:  
To adjust water flow,  
loosen nut (2) with  
a wrench, then use  
screwdriver to turn  
screw(1) to  
desired for  
leaks.

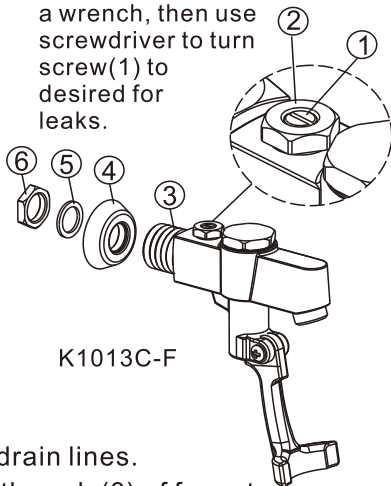

K1013C-F

1. Turn off water supply and drain lines.
2. Position base (4) to cover threads(3) of faucet .
3. Place faucet through 7/8"hole in wall.
4. Replace the washer(5) and nut (6) onto the threads(3) and tighten with a wrench at bottom side of countertop.
5. Use the appropriate connector to connect to the device.