

# Linear High Bay Light Installation Guide

www.maxximastyle.com

## WARNINGS


- · Risk of electric shock Disconnect power at the source before installation.
- If you are unsure about the installation or the maintenance of the wall light, please consult an electrician.
- Do not make or alter any holes in the wiring enclosure or modify any electrical componentry, no serviceable parts.
- Do not install on radiant-heated ceilings, or over a heat source.


## CAUTIONS


- To insure personal safety, proper grounding of the electrical fixture is required.
- The fixture must be wired in accordance with the National Electric Code and applicable local codes or ordinances.
- Suitable for wet locations.
- Check the cargo hold is safe and suitable for the weight of the high bay light.
- Never hang on another high bay or hang objects from the light


### WIRING INSTRUCTIONS


- 1. Ensure that power has been turned off by switching the circuit breaker or by removing the fuse from the fuse panel.
- 2. Install the chain onto the structural member of the ceiling, Secure the other end of the chain to a structure with rated load hardware, see figure 1.
- 3. Install the "V" hooks to the other end of the chain link, see figure 1.
- 4. Install the "V" hooks into the hanging hole on both sides of the high bay light. Enusre the hooks are secure in the mounting holes, see figure 2. If necessary, use pliers to pinch the hooks together.
- 5. Remove the cover plate of the high bay light power suppy box and input power cable from the top. Install 1/2" pipe or AC power core (not provided) and fix it into the hole in the cover plate, see figure 3.
- 6. Using the supplied wire nuts, connect the black (hot) supply wire to the black (hot) fixture wire. Connect the white (neutral) supply wire to the white (neutral) fixture wire. Connect the green/ bare copper (ground) supply wire to the the green (ground) fixture wire, see figure 4.
- 7. Adjust the rotating assembly to the desired lighting angle (adjustment range -135° to 135°), see figure 5.
- 8. Ensure the installation is safe and secure, restore power and check operation of the light.

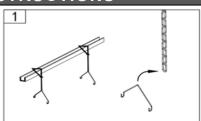

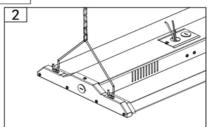

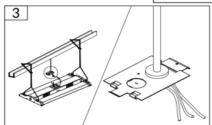

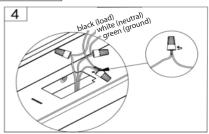

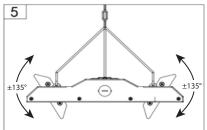

Maxxima extends a 3 year limited warranty to the original purchase that the products listed are free from defects in material and/or workmanship only. Maxxima will replace any warrantied product to the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period. Limited warranty is not transferable and applies to the original installation of the Maxxima product. This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.



