


smart toilet

# PRODUCT INSTRUCTIONS

First of all, thank you for purchasing  
our products!

Contact me if you have any questions :  
[service@theyulika.com](mailto:service@theyulika.com)

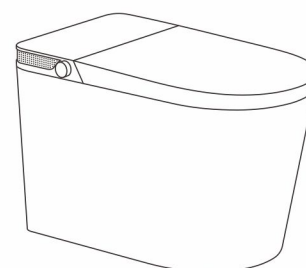

Please read this manual carefully  
before use in order to use the  
product correctly.

## Catalogue

|                                                  |      |    |
|--------------------------------------------------|------|----|
| Safety precautions                               | ---- | 1  |
| Name of each component                           | ---- | 4  |
| Packing list                                     | ---- | 4  |
| <hr/>                                            |      |    |
| Panel cognition                                  |      |    |
| • Remote control description                     | ---- | 5  |
| • Display description                            | ---- | 7  |
| • Description of local operation<br>keys / knobs | ---- | 7  |
| <hr/>                                            |      |    |
| Product installation                             |      |    |
| • Installation method                            | ---- | 8  |
| • Confirmation before use                        | ---- | 9  |
| <hr/>                                            |      |    |
| Use of products                                  |      |    |
| • Function adjustment and use method             | ---- | 10 |
| • Instructions for use                           | ---- | 12 |
| <hr/>                                            |      |    |
| Cleaning and maintenance methods                 |      |    |
| • Screen cleaning                                | ---- | 13 |
| • Disassembly method of toilet cover             | ---- | 14 |
| <hr/>                                            |      |    |
| Fault analysis and troubleshooting               | ---- | 15 |
| Product specification                            | ---- | 16 |
| Product warranty card                            | ---- | 17 |

- First of all, we would like to express our sincere thanks to you for purchasing our products!
- In order to avoid accidents and use this product safely, please read the operation manual carefully.
- Please put the manual in an accessible place and keep it properly.

The contents shown here are related to user safety. Please use this product correctly after reading the manual.



### Warning

It means that if you ignore the sign here and operate, you may cause serious injury or death



### Be careful

It means that human injury or property damage may be caused if the sign here is ignored and misoperated



◆ If the following people (children, the elderly, patients, people with weak skin, people taking sleeping pills, drinkers and people with extreme fatigue) use it for a long time, please set the seat temperature at the low level.

※ Avoid low temperature scald caused by long-term use



◆ Please do not disassemble, repair or modify this product without permission.

※ It is easy to cause fire or electric shock, resulting in human injury  
※ It must be repaired by professionals



◆ Do not touch the power socket with wet hands.

※ Danger of electric shock



◆ Do not use loose power sockets; Do not scratch, damage, process and transform the power supply, forcibly bend, stretch, curl and bundle, load-bearing and over pinch.

※ It is easy to cause electric shock or fire



◆ Please do not power on before water is connected, and do not use power supply other than AC 110V.

※ Easy to cause fire



◆ Please do not open or close the seat ring and seat cover roughly.

※ It is easy to crack or cause electric leakage and other faults



◆ Please do not pull or bend the connecting pipe.

※ It is easy to cause water leakage or no water supply



◆ Do not use dry cloth or toilet paper to wipe the plastic parts of the upper cover, seat ring and seat cover of the whole machine.

※ Easy to cause surface scratch



◆ In case of lightning, please unplug the power plug.

※ Easy to cause accidents or failures



 
◆ Please do not step on the recliner or the cover of the toilet.

※ It is easy to cause damage and failure



◆ The upper cover, seat ring and seat cover of the whole machine are plastic products. Do not put cigarette butts and other objects with fire sources near these parts.

※ Prone to fire



◆ Please prevent direct sunlight, or put the heater and stove close to the toilet.

※ Can cause plastic discoloration



◆ Freezing may occur at night. In order to prevent damage caused by freezing, please take anti freezing measures. (refer to page 14)



## 1

## Safety precautions



◆When cleaning and maintaining plastic parts, do not use unsuitable cleaning agents (bleach, benzene, paint thinner, decontamination powder, cresol, etc.).

※ Splitting or corrosion of plastic parts

 


◆The installation height of the socket shall be more than 0.8m above the ground, and it shall be far away from the place easy to be splashed by water as far as possible.



◆Please clean the dust on the power plug regularly. When cleaning, unplug the power plug and wipe it with a dry cloth

※ Poor insulation can cause fire



◆Do not connect this product to a water source other than tap water (ensure that the water source is clean)


※ It may cause skin inflammation, or electric shock and fire due to internal corrosion of machinery.

## 2

## Name of each component

Display

Slow opening angle valve

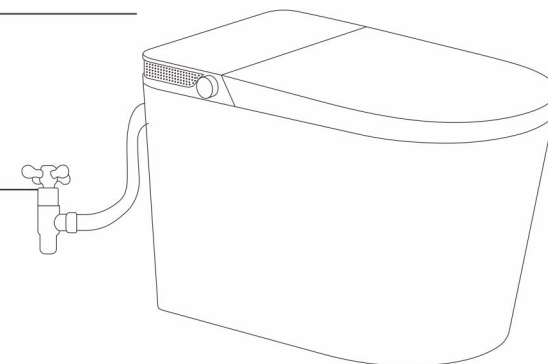

Product size: 700×400×465mm

Center pit distance of sewage outlet 300 / 400mm

## 3

## Packing list

| Serial number | Name                     | Quantity | Remarks           |
|---------------|--------------------------|----------|-------------------|
| 1             | Complete machine         | One      |                   |
| 2             | Slow opening angle valve | One      |                   |
| 3             | Six branch hose          | One      |                   |
| 4             | An instruction manual    | One      |                   |
| 5             | Remote control           | One      | Including battery |
| 6             | Flange ring              | One      |                   |
| 7             | Back-up battery          | One      |                   |

Please use the remote control corresponding to the purchased product

Remote control




Remote control code matching:

After the power is powered on, wait for the buzzer to ring and the knob to turn counterclockwise and pause for 2 seconds. The buzzer will ring for a long time to enter the code matching mode. At the same time, press any key of the remote control to successfully match the code.

- ① For remote control code alignment, rotate the knob counterclockwise and pause for 2 seconds. The buzzer will sound for a long time to enter the code alignment mode. Press any key on the remote control to successfully align the code.
- ②  Press this key to stop all functions being executed.
- ③  Tap on turn on hip wash, tap again to turn on mobile wash. Long press the switch radar automatic opening
- ④  Press once to start the female washing function. The female washing lasts for 120 seconds, and then press once to start the reciprocating function.
- ⑤  It is used for drying after cleaning. The drying time is 3 minutes.
- ⑥  For cleaning the buttocks or women, adjust the position of the cleaning nozzle forward or backward.
- ⑦  It is used to adjust the water pressure during cleaning, with 3 gears in total.

- ⑧  Click to activate the toilet flushing function.
- ⑨  Press this button to turn on the night light.
- ⑩  Press this button to activate the energy-saving mode, and the energy-saving light of the body will light up; Press again to turn off the energy-saving light, and the energy-saving light on the body will turn off.
- ⑪  Press this button to extend the spray bar and start automatic cleaning.
- ⑫  Press this button to flip up or close the seat cover/ring. Long press to adjust the force of opening the cover/ring.
- ⑬  It is adjustable in 4th gear. The indicator light is not on and off at normal temperature, 93 at first gear, 96 at second gear and 99 at third gear. It can be preset or adjusted in real time during the cleaning process, with memory function.
- ⑭  It is adjustable in 4th gear. The indicator light is not on and off at normal temperature, 93 at first gear, 96 at second gear and 99 at third gear. It has memory function. The warm-up time takes a few minutes.
- ⑮  It is adjustable in 4th gear. The indicator light is not on and off at normal temperature, 93 at first gear, 96 at second gear and 99 at third gear. It can be preset or adjusted in real time during the drying process, with memory function. Long press the switch to dry automatically.
- ⑯  During the cleaning process, tap to turn on the strong and weak massage function, then tap to turn it off. When the strong and weak massage function is turned on, the water pressure is strong and weak in the cleaning process, which helps to defecate



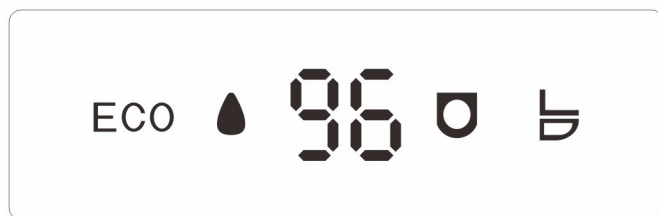


When the water temperature indicator is on, the spray water is in warm water state; When off, the spray water temperature is at normal temperature.



When the seat temperature indicator is on, the seat ring is heated; When off, the seat ring is in normal temperature.




When the temperature indicator is on, it displays the temperature of water temperature / seat temperature when heating.

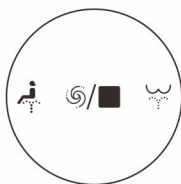

- (1) Flush/Stop: Tap the knob to start the flushing function; Press the knob to perform shutdown.
- (2) Female cleaning: turn the knob counterclockwise to activate the female cleaning function (need to be seated in the toilet and close to the sensing zone); Rotate again to turn on/off the "Mobile Wash" mode.
- (3) Hip cleaning: turn the knob clockwise to activate the hip cleaning function (you need to sit in the toilet and close to the induction zone); Rotate again to turn on/off the "Mobile Wash" mode.

## ① Confirmation of installation environment


1. Before installation, confirm that the wall and floor tiles of the toilet have been completed, and the sewage pipes, waterways and circuits have been reserved, as shown in the figure. Select the corresponding toilet according to the actual pit distance of the toilet (300mm pit distance and 400mm pit distance). Inlet pressure range: 0.15Mpa (dynamic) - 0.75mpa (static); Inlet water temperature: 39°F - 95°F.

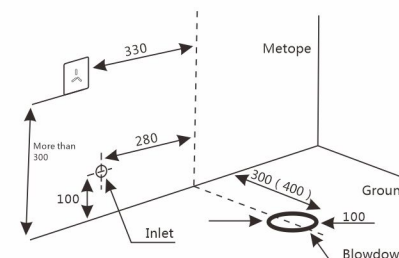

2. Install the water inlet valve on the wall 100mm above the ground and about 280mm to the left of the center of the sewage outlet.

**Tips:** Please use the special water inlet valve attached to this product to install it to the water outlet pipe. If the user has installed the inlet valve, it needs to be removed.

1. The toilet bowl should be installed on the flat concrete floor.
2. As shown figure, drilling holes on the floor and then insert the anchors into the holes, Attach the mounting bracket with the washer and mounting bracket screw.
3. Put on the toilet bowl, and insert the washer⑥ in the anchor hole of the toilet bowl, then tighten the mounting screw⑦ to secure the toilet bowl and mounting bracket, then put on the cap⑧.
4. After installation, please check if the toilet bowl is firm or not, if not, please check again if all the parts are installed correctly.

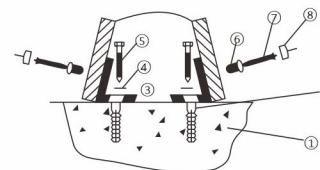


|   |                            |
|---|----------------------------|
| ① | flat concrete floor        |
| ② | anchor                     |
| ③ | mounting bracket           |
| ④ | washer                     |
| ⑤ | mounting bracket           |
| ⑥ | washer                     |
| ⑦ | toilet bowl mounting screw |
| ⑧ | cap                        |

## ② Installation of toilet

1. Apply a layer of glass glue on the upper and lower end faces of the flange ring and put it on the sewage outlet. Then align the pipe port at the bottom of the toilet with the flange ring, and gently place the toilet horizontally on the ground from top to bottom.
2. Apply a layer of glass glue at the connection between the bottom of the toilet and the ground.

## ③ Waterway connection

1. First connect the slow opening angle valve of the accessory to the filter.
2. Connect the angle valve to the wall.
3. After installing the toilet, connect the braided hose with the water inlet filter.

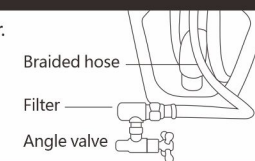


## 8

## Confirmation before use


Before using the smart toilet for the first time, be sure to confirm the following items.

## ① Confirm that the power plug is inserted into the socket

- ① Insert the power plug into the AC 110V socket, and the indicator light of the leakage protector will be on.

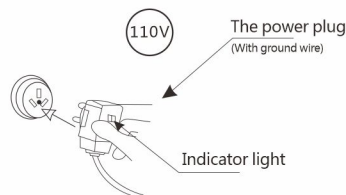

## ② Confirm that the water inlet valve is open

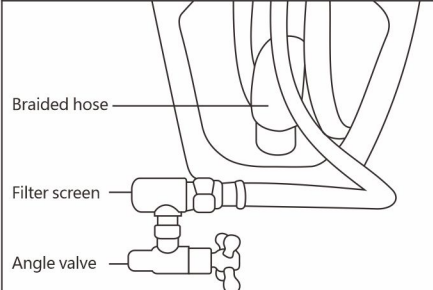


## ③ Indicator information confirmation

- ① Confirm whether the power indicator of the toilet is on.
- ② Confirm whether the water temperature indicator is on. If not, press the water temperature adjustment button on the remote control to turn on the water heating.
- ③ Confirm whether the seat temperature indicator is on. If not, press the seat temperature adjustment button on the remote control to turn on the seat ring heating.

## ④ Confirm all functions

1. Confirm whether the nozzle and its water pipe are leaking: wipe all parts of the water pipe and check with absorbent paper.

2. Check whether the nozzle cleaning (when the human body is not seated), cleaning, female use, drying and automatic deodorization are normal when the human body is seated, whether the water potential, water temperature, seat temperature and air temperature are adjusted normally, and whether the damping buffer mechanism is normal.

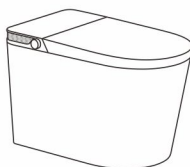

※ When checking the functions of cleaning, women's use, drying and automatic deodorization, confirm the seat sensing start. When cleaning or for women, cover the front end of the nozzle with your hand to block the spray water to avoid splashing or pulling out the nozzle.



## Warning

- Do not use power other than AC 110V.
- Please conduct wiring according to relevant regulations.

## 9

## Function adjustment and use method

## Hip cleaning

- ① When the human body enters the seat ring, press the "hip cleaning" button pasted on the remote control or this face, the hip nozzle extends to the set position, spray and wash according to the set water temperature for 120-150 seconds, and then automatically turn to the drying function, and stop after drying for 3 minutes.

★ Other functions of the buttocks cleaning button pasted on the body surface:  
Mobile cleaning: when it is in the hip cleaning mode, the button pasted on the body surface can control the opening and closing of the reciprocating massage function.

## Women's cleaning

- ① Women's washing: when the human body enters the seat ring, press the "women's washing" button pasted on the remote control or this face, the women's mouth will spray out to the set position, spray and wash according to the set water temperature for 120-150 seconds, and then automatically turn to the drying function, and stop after drying for 3 minutes.

★ Other functions of the female washing button pasted on the body surface:  
Mobile cleaning: when it is in the female cleaning mode, the button pasted on the body surface can control the opening and closing of the reciprocating massage function.

## Dry

- ① Used for drying after cleaning, lasting for 3 minutes.  
Before drying, use toilet paper to absorb water droplets first, which can speed up the drying speed.

## Stop it

- ① It is used to terminate the following functions: hip washing, women's washing, drying and nozzle cleaning will stop working.
- ② Body surface paste stop button:  
A short press is the "stop" command, which has the same function as the "stop" button on the remote control to stop the current work.

## Automatic flushing

- ① After using the toilet, it will automatically flush.  
※ In case of power failure, press the manual flushing button on the left of the machine or the stop button on the knob to flush the toilet.

## Strong and weak massage

- ① During the cleaning process, tap to turn on the strong and weak massage function, then tap to turn it off.  
When the strong and weak massage function is turned on, the water pressure is strong and weak in the cleaning process, which helps to defecate.

## Nozzle position adjustment

◎ The user does not need to move the body. It can adjust the cleaning position forward or backward according to the shape, and has the memory function. Press the "front and rear" button on the remote control to adjust the nozzle position, which can be preset or adjusted in real time. The third gear is adjustable. The first gear is the last position and the third gear is the front position.

## Water pressure regulation

◎ Water pressure adjustment can set the pressure of cleaning water according to the user's preference, with memory function. Press the "strength" button on the remote control to adjust the cleaning water pressure, which can be preset or adjusted in real time. The fourth gear is adjustable. The first gear is the lowest water pressure and the fourth gear is the highest water pressure.

## Water temperature regulation

◎ Press this key to enter the water temperature setting. The water temperature has 4 gears to adjust. Each time you press this key, the water temperature switches to another gear, the water temperature state is displayed on the remote control display screen, and the water temperature setting is saved. The corresponding water temperature of each gear is normal temperature (from water temperature), gear 1 ( $93 \pm 1$ ), gear 2 ( $96 \pm 1$ ) and gear 3 ( $99 \pm 1$ ).

## Air temperature regulation

◎ Press this key to enter the air temperature setting. The air temperature has 4 gears that can be adjusted. Each time you press this key, the air temperature will switch to another gear, the air temperature status will be displayed on the remote control display screen, and the setting of air temperature will be saved. The corresponding air temperature of each gear is normal temperature, gear 1 ( $93 \pm 5$ ), gear 2 ( $96 \pm 5$ ) and gear 3 ( $99 \pm 5$ ).

## Seat temperature regulation

◎ Press this key to enter the seat temperature setting. The seat temperature has 4 gears that can be adjusted. Each time you press this key, the seat temperature will switch to another gear, the seat temperature status will be displayed on the remote control display screen, and the setting of the seat temperature will be saved. The corresponding seat temperature of each gear is normal temperature, gear 1 ( $93 \pm 2$ ), gear 2 ( $96 \pm 2$ ) and gear 3 ( $99 \pm 2$ ).

## Lighting

◎ The body is equipped with a small night light to facilitate your toilet at night. Press this key once and the night light will be on. Press this key again and the night light will be off. Night light on and off, with memory function.

## Energy conservation

◎ Press this key once to turn on the energy-saving function and turn on the energy-saving indicator of the body. Press this key again to turn off the energy-saving function and turn off the energy-saving indicator of the body. Energy saving start. When not seated, the toilet controls the seat ring temperature (in case of non temperature range) to about  $77^{\circ}\text{F}$ . Once seated, it starts to return to the set temperature.


## Mount sensor

The seat ring is equipped with a seat sensor. When the seat is not seated within the effective sensing range of the sensor, the sensor cannot work, and many functions such as hip washing and women's washing will not start automatically.

※ If you are not seated within the effective sensing range of the sensor, please change the seating position.

## Slowly close the seat ring and seat cover

The machine is equipped with a damping buffer system, which can avoid the impact sound when closing the seat ring and seat cover.

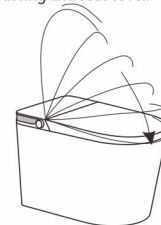

## Men's kicking or foot feeling flushing

(Please refer to the purchase model)

Specially designed for men to urinate, avoid bending over and touching the foot or sensing parts to flush.



Kick



Foot feel

## Energy saving function

The following energy saving measures can effectively:

- ※ Please close the seat cover after use.
- ※ The seat temperature and water temperature should not be set to high grade blindly, but should be adjusted so as not to affect the comfort.
- ※ Please adjust the water temperature according to the temperature in four seasons.
- ※ Please use the device with power saving function.
- ※ Please cut off the power supply when you go out for a long time.

## There is water flowing out around the nozzle

Before and after cleaning or when the nozzle is cleaned, there is water overflow around the nozzle, which is a normal phenomenon in structure and belongs to the self-cleaning function of the nozzle, not a fault.



※ In addition to the above situations, when the water flows out, close the water inlet valve, pull out the power plug from the socket, and contact the purchased business store for solution.

## Inductive flap and turn

(Please refer to the purchase model)





Note: during cleaning and maintenance, be sure to turn off the power and confirm that the power indicator on the toilet cover panel is off.

### Cleaning of the outside of the machine


- ※ When cleaning, the power plug must be pulled out first to avoid plug contact or water ingress into the socket.
- ※ When cleaning this product, please wipe it with water with a soft cloth. If it still cannot be wiped off, wet it with a soft cloth and then wipe it with cleaning agent (neutral).
- ※ Do not use unsuitable cleaning agents (banana water, bleach, benzene, diluent, decontamination powder, cresol, etc.), and do not directly wash with water or spray with shower head to avoid fire caused by short circuit of line
- ※ It is recommended to wipe with a warm cloth to prevent static electricity. The product is easy to absorb dust due to static electricity, which makes the product dirty and black and difficult to clean.

▲ The toilet cover can also be removed from the ceramic body to facilitate the cleaning of the part between the toilet cover and the ceramic body (see page 14)

### Screen cleaning

After using the intelligent toilet for a long time, if you feel that the spray intensity of the sprinkler head or the flushing intensity of the toilet is weakened, please clean the filter screen in the following order. (cleaning cycle depends on local water quality)


1. Turn clockwise to close the water inlet valve and stop the water supply.
2. Rotate the filter screen out of the filter.

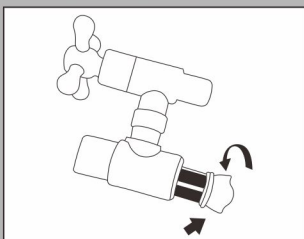

※ A small amount of water will flow out at this time. Please place containers such as washbasin below.

- When removing the filter screen, be sure to close the water inlet valve.
- When installing the filter screen, please firmly tighten the water supply hose, otherwise it is easy to cause water leakage and indoor root water.


3. Wash the dirt attached to the filter screen with a small brush and water.

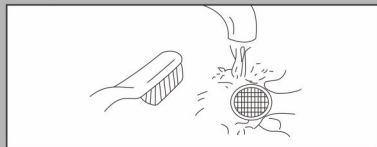

4. Put the filter screen into the filter according to the original direction, and then tighten the water supply hose to ensure it is firm.
5. Open the water inlet valve to the original position to supply water.
6. Finally, be sure to carry out the commissioning (see page 11).

### Disassembly method of toilet cover

1. Unplug the power plug from the socket.
2. Turn clockwise to close the water inlet valve and stop the water supply.
3. Unscrew the water supply hose behind the toilet cover (3 hoses in total).
4. Hold both ends of the toilet cover with both hands and lift it up with force to separate the toilet cover from the ceramic body.
5. Gently place the toilet cover on the ceramic body and clean the ceramic body.
6. After cleaning, hold both ends of the toilet cover and put it on the ceramic body from top to bottom. After placing it to the bottom, a "click" sound indicates that the installation is completed.
7. After fixing, gently shake the toilet cover from front to back, left and right to confirm whether it is locked firmly.
8. Insert the power plug into the socket and turn it counterclockwise to open the water inlet valve.

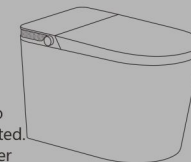

### Remote control battery replacement


- ※ When the battery is running out, the LCD of the remote control will fade or go out. At this time, you should replace the battery with a new one.
- ▲ Generally, the remote control LCD icon is bright.
- ▲ The attached battery mainly checks the operation condition during installation.
- ※ Open the back cover of the battery area of the remote control and replace it with a new battery (button battery of model cr2450).

#### Be careful

- The positive and negative poles of the battery must be consistent with those on the remote control.
- New batteries cannot be mixed with old batteries.
- Please use alkaline battery.

Model  
CR2450

### General freezing prevention measures

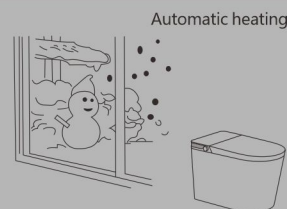


Automatic heating

In cold winter, the intelligent toilet will be damaged and leaked due to water freezing. To prevent freezing, please do the following. Do not unplug, plug in the power socket and turn on the power.

※ In order to prevent freezing, the control system will automatically heat once when the indoor temperature is lower than 41°F.

#### Be careful

1. Please do not pull the power cord or the water supply hose of the toilet.  
※ It will cause damage or water leakage.
2. When removing the toilet cover for cleaning, be sure to handle it with care.  
※ it will cause water leakage and failure.
3. Never turn the toilet cover upside down without unplugging the power supply. In addition, it cannot be placed directly on the ground.  
※ it will cause surface scratch and failure.

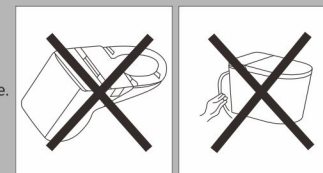



## 12 Fault analysis and troubleshooting

Please check the following items before commissioning maintenance services

| Product position or function | Phenomenon                                                            | Inspection items                                                                                                                                                                                 | Exclusion method                                                                        |
|------------------------------|-----------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|
| Organism                     | Not working at all                                                    | Is the power not turned on                                                                                                                                                                       | Please turn on the power                                                                |
|                              |                                                                       | Whether the power plug is plugged in properly                                                                                                                                                    | Please plug in the power plug again                                                     |
|                              |                                                                       | Power failure                                                                                                                                                                                    | Check again after power supply is restored                                              |
| Hip wash / Women's wash      | The nozzle cannot discharge water                                     | Whether the water inlet valve is open                                                                                                                                                            | Please open the water inlet valve                                                       |
|                              |                                                                       | Whether the water supply is cut off                                                                                                                                                              | Please stop the washing function and wait for the water supply to resume to check again |
|                              |                                                                       | Whether the nozzle is blocked by foreign matters                                                                                                                                                 | Please clean the nozzle and remove foreign matters                                      |
|                              |                                                                       | Is the sensor sensing                                                                                                                                                                            | Readjust the sitting posture and confirm that the sensor works normally                 |
|                              | Weak water potential                                                  | Is the water pressure set at the weak gear                                                                                                                                                       | Reset water pressure                                                                    |
|                              |                                                                       | Whether the water inlet channel is unobstructed                                                                                                                                                  | Please clean the inlet filter                                                           |
|                              | Stop water halfway                                                    | Set whether the cleaning time has expired (the cleaning time of this machine is 120 seconds)                                                                                                     | Please wait for 3 minutes before starting the cleaning function                         |
|                              |                                                                       | Is the sensor sensing                                                                                                                                                                            | Readjust the sitting posture and confirm that the sensor works normally                 |
|                              | Water temperature is low                                              | Is the water temperature set to low gear                                                                                                                                                         | Please press the "water temperature" button to adjust the water temperature             |
|                              |                                                                       | Is the air temperature set to low gear                                                                                                                                                           | Please press the "air temperature" button to adjust the air temperature                 |
| Warm air drying              | The warm air stops halfway                                            | Automatic drying stop time                                                                                                                                                                       | Please restart the drying function                                                      |
|                              |                                                                       | Is the sensor sensing                                                                                                                                                                            | Readjust the sitting posture and confirm that the sensor works normally                 |
|                              |                                                                       | Is the seat temperature set to low                                                                                                                                                               | Please press the "seat temperature" button to adjust the seat temperature               |
| Seat ring heating            | Insufficient seat ring temperature                                    | Is the energy saving on                                                                                                                                                                          | Readjust the seat temperature                                                           |
|                              |                                                                       |                                                                                                                                                                                                  |                                                                                         |
| Buzzer abnormal alarm        | The water temperature indicator flashes and the buzzer gives an alarm | Unplug the power plug and supply power again. If the fault still exists, please cut off the power supply and contact the manufacturer or local maintenance organization.                         |                                                                                         |
|                              | The seat temperature indicator flashes and the buzzer gives an alarm  |                                                                                                                                                                                                  |                                                                                         |
|                              | All indicator lights flash and the buzzer gives an alarm              | Turn off the power supply, check whether the water supply is cut off, and then turn on the power supply after the water supply is restored.                                                      |                                                                                         |
|                              | Body leakage                                                          | Close the water-saving valve, stop the water supply, check the water supply, check whether the water supply pipeline is damaged, and contact the manufacturer or local maintenance organization. |                                                                                         |

## 13 Product specification

| Name                  |                           |                                                                                          |
|-----------------------|---------------------------|------------------------------------------------------------------------------------------|
| Rated voltage         |                           | 110V/60Hz                                                                                |
| Rated power           |                           | 1380W                                                                                    |
| Wire length           |                           | 1.5m                                                                                     |
| Water supply pressure |                           | 0.15Mpa (dynamic pressure) ~ 0.75mpa (static pressure) (1.5 ~ 7.5kg / cm <sup>2</sup> )  |
| Cleaner               | Flushing water volume     | The maximum flow rate of hip washing is 0.75l/min                                        |
|                       |                           | The maximum flow rate of women's washing is 0.85l/min                                    |
|                       | Water pressure regulation | Hip washing and women's washing are four gears respectively, controlled by computer      |
|                       | Temperature regulation    | 4-gear adjustment (without heating, about 93 ± 1, about 96 ± 1, about 99 ± 1)            |
|                       | Heating power             | 1600W (i.e. hot type)                                                                    |
|                       | Safety device             | Water temperature sensor, overheat blocking, temperature fuse                            |
| Seat ring             | Heating power             | 45W                                                                                      |
|                       | Buffer function           | When opening and closing the toilet seat and toilet cover, put it down slowly and gently |
|                       | Temperature regulation    | 4-gear adjustment (without heating, about 93 ± 2, about 96 ± 2, about 99 ± 2)            |
|                       | Safety device             | Seat temperature sensor, temperature fuse                                                |
| Drying                | Heating power             | 270W                                                                                     |
|                       | Temperature regulation    | 4-gear adjustment (without heating, about 90 ± 3, about 93 ± 3, about 96 ± 3)            |
|                       | Safety device             | Fan locked rotor protection, overheating protection, temperature fuse                    |
| Flushing mode         |                           | Jet siphon                                                                               |
| Ambient temperature   |                           | 32-104°F                                                                                 |

Executive standard: GB-4706.1-1998 GB4706.53-2002 GB/T6952-1999

Note: when the water pressure is lower than 0.2MPa, the user is recommended to install the booster pump, otherwise your normal use may be affected.

## Product warranty card

Thank you for purchasing our products. In order to protect your rights and interests, our company guarantees the following: if you find any product quality problems, please contact the purchasing office or our after-sales service office.

|                    |                    |                  |                                   |
|--------------------|--------------------|------------------|-----------------------------------|
| Product Name       | Intelligent toilet | Product model    |                                   |
| Date of purchase   |                    | Serial number    |                                   |
| Customer name      |                    | Warranty period  | 2 years from the date of purchase |
| Contact address    |                    |                  |                                   |
| Maintenance record | Fault and handling | Maintenance date | Repair personnel                  |
|                    |                    |                  |                                   |
|                    |                    |                  |                                   |
|                    |                    |                  |                                   |

User retention copy

### Matters related to product warranty

\*When purchasing this product, please carefully fill in the content of the product warranty and keep it properly.

\*Within 30 days from the date of purchase, if the product is found to have quality problems under normal use, the company will be responsible for replacing it after being certified by the company's technicians.

\*During the warranty period, the company will repair the faults under normal use mentioned in the user manual, precautions, labels and other contents for you free.

\*For services within the scope of paid maintenance services during the warranty period, maintenance fees will be charged as appropriate.

### Paid maintenance service

\*Failure and damage due to improper use or man-made after installation.

\*Failure caused by unauthorized disassembly or modification.

\*Faults caused by fire, typhoon, flood, earthquake, lightning and other natural disasters and abnormal voltage.

\*Move the machine for installation according to the customer's requirements.

\*The service life of consumable parts has expired.

\*The product has been repaired by technicians not recognized by the company.

\*Faults and injuries caused by use outside ordinary homes (such as public places).

\*No purchase invoice.

\*The warranty card information was not filled in and the "user receipt" was not sent back to the company.

-17-

Please complete the warranty card information, tear off the "user receipt" and send it back to the company, otherwise you will not enjoy the warranty policy!

|                 |  |                    |                                                                                                           |
|-----------------|--|--------------------|-----------------------------------------------------------------------------------------------------------|
| User name       |  | Contact number     |                                                                                                           |
| Contact address |  |                    |                                                                                                           |
| Buy shop        |  | Date of purchase   |                                                                                                           |
| Product model   |  | Satisfaction       | Satisfied <input type="checkbox"/> General <input type="checkbox"/> Dissatisfied <input type="checkbox"/> |
| Serial number   |  | Customer signature |                                                                                                           |

User receipt