

VIVA

● Please check your product packaging to make Sure the included accessories are in the "list of standard accessories".if any parts are missing, please contact your local dealer immediately

● Do not allow any sharp objects to come in contact with the cabinet,as it will scratch the surface




● Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.

● Continuous and prolonged exposure to direct sunlight may cause discoloration to the wood.


● Please avoid using cleaning products that contain bleach or ammonia.

● Wood surface should only be cleaned with wood care products such as soapy water or furniture polish.

MODLE NO : TVN414-60X18WH

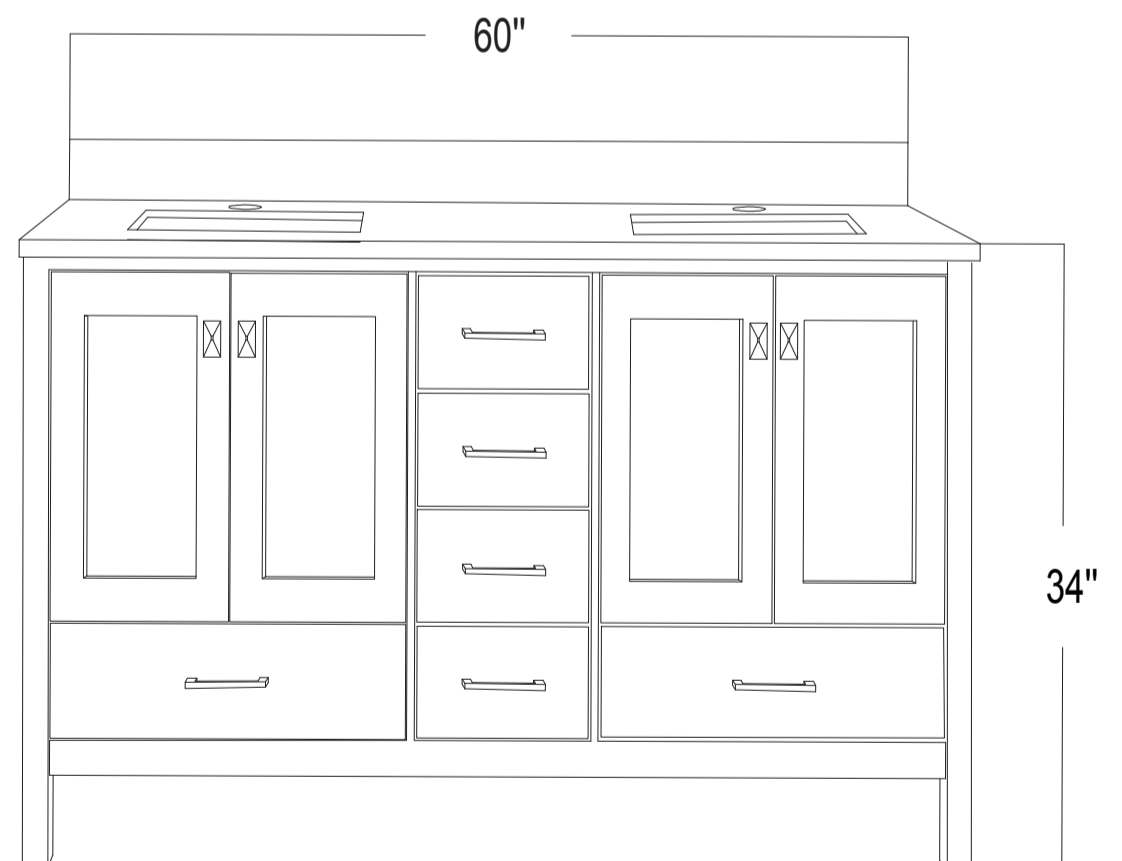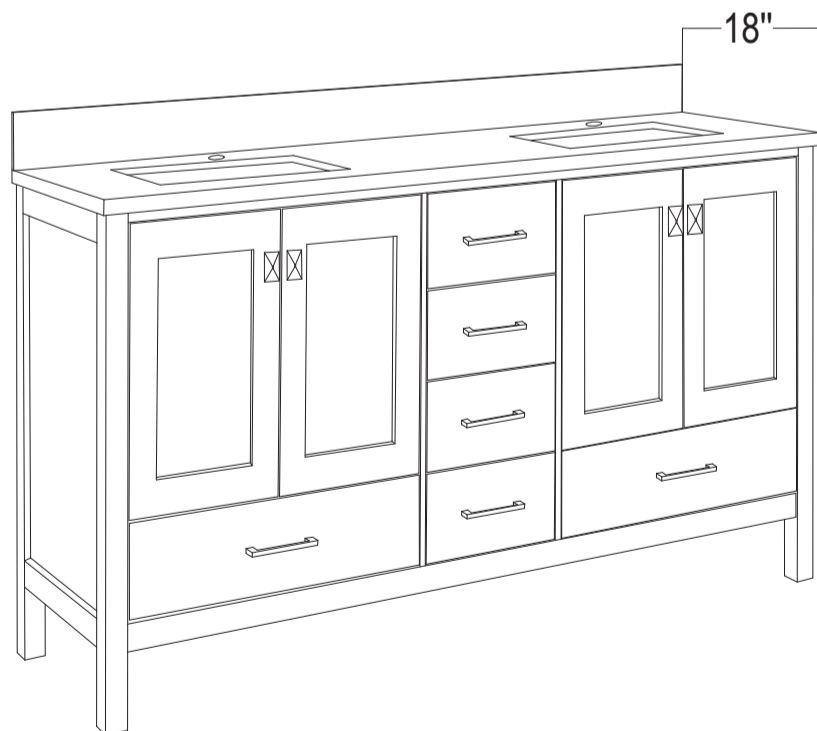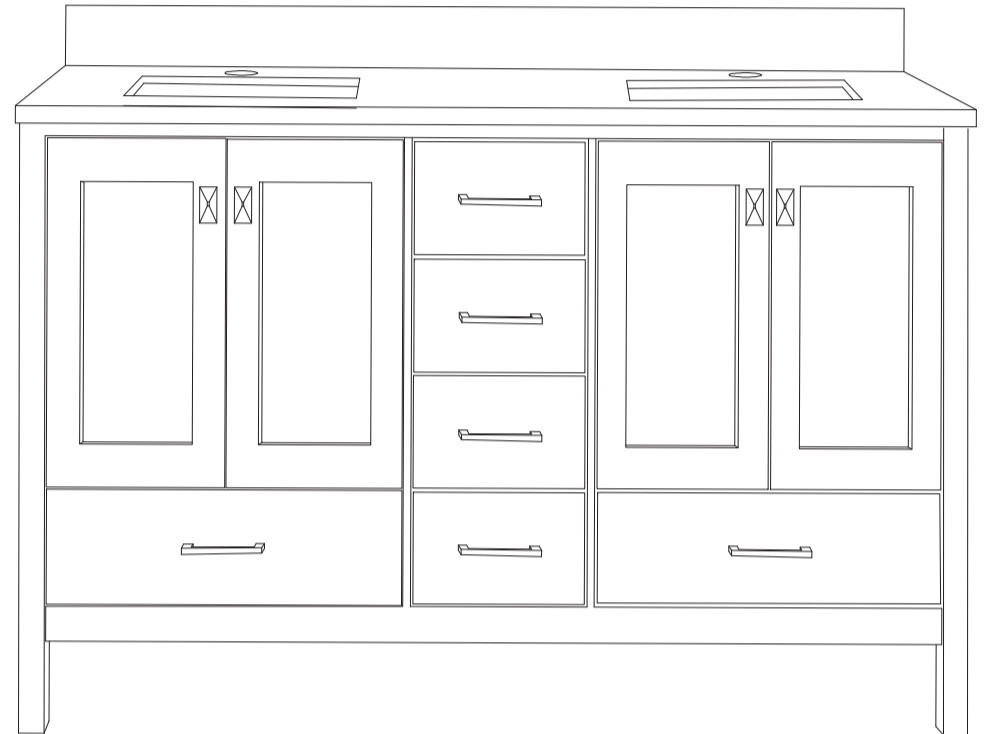

ERECTING TOOL

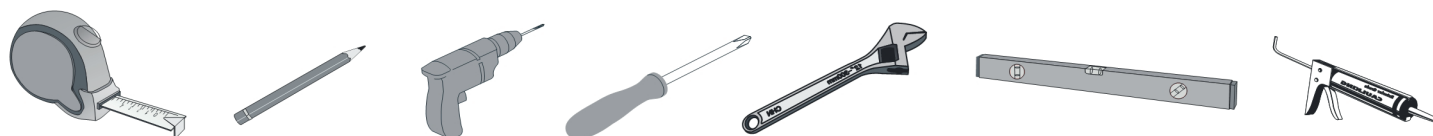

DRAWER'S ADJUST



INSTALLATION INSTRUCTIONS

