## Intelligent Toilet INSTRUCTIONS FOR THE USE OF PRODUCTS

# Wisdom knows you better Automatic Intelligent Toilet

#### Warning-To avoid electric shock



- 1.Do not place the product where it may get wet.
- 2.Do not drop the remote control into the water.
- 3.Do not spray water into the product or plug.

#### Warning: To prevent the possibility of burns, electric shocks, fires and injuries.



- 1. Young children, temperature insensitive users, when using this product, should be accompanied by others. And turn off or lower the seat temperature.
- 2. The product is limited to the function on the manual. do not use other equipments.
- 3.Do not continue to use when the product is out of order, damaged or flooded. Please send the product to the designated repair center for repair.
- 4. Please make sure that the wires are not damaged by
- 5.Do not use this product when you are out of your mind.
- 6.Do not plug the product or pipe.
- 7.Do not used outdoors.

#### Please be sure to observe the following



Please don't sprinkle urine at the essence and spray.

Pull out the plug when it thunders

Strictly forbid to directly flush with water.

Please do not wipe seat and cover with dry cloth or toilet paper.

Please do not open the seat ring or cover violently.

May cause cracking or malfunction



Please take antifreeze measures to prevent damage caused by freezing.



Please do not put heaters near this product.

- Discoloration or malfunction will occur



#### **Safety Caution**

Note: please cautiously read before using

Please read carefully before using. The cautions listed here are related to safety and please follow.

This product is an electrical product. Please do not install it in a place where it is easy to be splashed by water or high humidity. When using in the bathroom, please install a vent to keep good air flow in the bathroom.

#### The socket for power distribution should be set as follows

- The gearing position of electric outlet pleases to give examples 0.3 min the ground above, and leave bathtub as far as possible a little bit farer.
- The back track of electric outlet pleases use a high feeling and rapid type electric leakage switch(the sum certainly responds the electric current 15 mA following) or use to insulate the transformer 1.5 KVA above, the 3 KVA is following) carry on a protection.





It is not feasible (prohibited). The image on the left shows (disassembly is prohibited).



Represents something that must be (enforced). The left-hand diagram shows (must comply)

The product connects a ground of line to carry on to connect a ground of processing, if has never carried on to connect a ground of processing, may arouses to get an electric shock.

Note: the grounding treatment mentioned here means that the grounding resistance is below  $100\Omega$ , and the grounding wires of the switchboard shall be copper wires with a diameter of more than 1.6mm.

While using in the bathroom please confirm the power plug have already used silica gel to carry on a waterproof processing.

#### Notice heat burn

- Please turn the seat temperature down or off when sitting on the toilet for a long time. Please set the temperature to room temperature when the following persons use the seat to dry gently.
- Children, the elderly, the sick, the disabled, etc.
  - People who take sleeping pills, get
- drunk and get overtired.

Do not use any power source other than AC 220V/110V

- It may start a fire

Keep cigarettes and other fire kindling away from the product

- It may start a fire

Do not use loose and unstable power sockets

- It may cause fire or electric shock

#### Please don't sprinkle water or rinse on product essence or the power plug.

- May arouse a fire or get an electric shock
   May cause toilet break, damage or indoor seepage.
- When long time didn't use, please pull out the power plug.
- For safety, please pull out the power plug
- For re-use, please drain water for one minute before use.

#### Please do not flush other items except for urine and feces

- May cause then block, sewage outside overflows.

#### Do not unplug the power plug with wet hands

- It may cause electric shock

Do not distort or damage the water inlet

It may cause a leak



 
Must obey



#### Do not continue to use the product when it breaks down

When the following occurs, please unplug the power plug, close the inlet Angle valve, stop the inlet.

- Ceramic WC is leaking
- Cracks appear
  Abnormal sound and smell
- Fume-off
- Abnormal heating
- The toilet is clogged
- If continued under the condition of failure, it may cause fire, electric shock or indoor seepage problems



- It may cause a fire or electric shock

#### Do not install this product in damp places such as bathrooms

- It may cause a fire or electric shock

#### Do not damage the power cord or toilet seat cable

- Don't pullDon't processDon't heat

Don't forcibly bent
 Do not place heavy objects on the power cord and toilet seat connection line.

- May cause fire, electric shock or short circuit. If the power supply is damaged, please contact a professional for repair.

## Do not use extension wires, otherwise, it may cause a fire or electric shock

 Do not connect wires or use extension. cords, which may cause fire and electric shock.

#### Do not use unhealthy water

- May cause skin irritation and other problems

## The first use of Intelligent toilet

 
Note: To ensure the normal use of the product, please follow the instructions to text.

1.Insert the power plug into the AC (AC) 220/110V socket 2.Please confirm whether the indicator of the digital

display panel is lit

3. Confirm whether the inlet valve is take on

4. Whether the hose between the wall Angle valve and the toilet inlet valve is installed in place



Seating sensing position

## Caution-Confirmed matters before using

- 1. Check whether the sprinkler head and water pipe leak, dry all parts of the water pipe and check with blotting paper.
- 2. Press the seat around the seat sensor, whether there is a sound.
- 3. Check whether the cleaning, drying, automatic deodorization and automatic flushing are normal
- 4. Whether the Damped structure is normal.

Check the functions of cleaning, drying and automatic deodorization, make sure the sensor is on. When cleaning, cover and block the spray nozzle, so as not to splash.

## Warning - Be sure to firmly connect ground wires,



The power plug of this product is a three-phase plug (with ground wire).

There is a danger of electric shock when there is a fault or leakage of electricity.

If there is no ground plug in the socket, consult with the electrical installation company.

Do not use power supply other than AC 220V/110V, please wiring according to relevant regulations.

\*Using the wrong power supply can easily cause fire\*

- 1. Radar switches to foot cover: press the cover button on the remote control for 5 seconds,
- 2. Turn off | turn on disseat water flushing: press the automatic water flushing button on the remote control for 5 seconds
- 3. Turn off I turn on the function of flushing upon cover falling; press the cover and flushing buttons on the remote control at the same time

#### **POWER**



Press this key to open or shut off the power

#### DRYING



Press this button to start drying when you are seated. Warm air drying will stop automatically after 3 minutes.

#### STOP



You can stop the "Hip cleaning", "Female cleaning", "Drying" and other functions in operation.

#### HIP/ MOBILE



Press this button when you are seated, the Hip wash cleaning nozzle will spray at the fixed position for 2 minutes and then stop spraying automatically.

#### **FLUSH**



Press this button and will start flushing.

#### **FEMALE/ MOBILE**



Press this button when you are seated, the female cleaning nozzle will spray at the fixed position for 2 minutes and then stop spraying automatically.

#### CLEANING HEIGHTEN



It can increase the force of cleaning water pressure. It can be set to weak, medium, strong, or strongest.

#### **NIGHT LIGHT**



The night light can be turned on or off in the power-on state.

#### **FORWARD**



Press this button during the "hip" or "female" cleaning and adjust the nozzle position without the use of the removable cleaning function.

#### CLEANING HEIGHTEN



It can decrease the force of cleaning water pressure. It can be set to weak, medium, strong, or strongest.

#### NOZZLE CLEANING



Nozzle extended and water out for nozzle washing

#### **FORWARD**



Press this button during the "hip" or "female" cleaning and adjust the nozzle position without the use of the removable cleaning function.

#### **Water Tempature**



4 degrees can adjust the water tempature the tempature can be set as , one degree : the environment tempature, second degree :about 93°F, Third degree :about 96°F, Forth degree : about 99 °F

#### **Seat Tempature**



4 degrees can adjust the seat tempature the tempature can be set as,one degree: the enviroment tempature, second degree: 93°F, Third degree: 96°F, Forth degree: about 99°F.

#### Wind Tempature



4 degrees can adjust the wind tempature the tempature can be set as , one degree: the environment tempature, second degree:about 93°F, Third degree:about 96°F, Forth degree:about 99°F.

This key is only applicable to the type of sensor flip-over

#### COVER



Press this button, the seat cover will open automatically, and then press it again, the seat cover will close automatically.

#### SEAI



Press this button, the seat opens automatically, and press again to close the seat automatically.

## CODE FOR REMOTE CONTROL

Rotate the knob until the buttocks are clean and hold for about 3 seconds. After a sound, press any button of the remote control to complete the code.

Note: If the remote control has no response in the first time, it should be code.

#### Side knob instructions



Power on/off: long press the knob for more than 3 seconds

Hip cleaning: Turn the knob to the left Female cleaning: Turn the knob to the right

Stop: Press the knob once

Toilet flushing: Press the knob once before seating Warm air drying: Press the knob once when seating

#### **Description of other functions**

Flushing by foot sensor

Close to the foot sensor, turn on the scour function (manual clamshell)

Open cover and seat by foot sensor

Close to the foot sensor, automatically open/close cover and seat (automatic flip cover)

Radar automatic clamshell function

Close to the toilet, automatically open the cover, automatically close the cover after leaving and flush automatically (automatic flip cover)

#### Daily cleaning and maintenance

Note: During cleaning and maintenance, please be sure to unplug the power switch and power off

#### Smart toilet cleaning and maintenance methods

Please wipe it with a soft cloth dampened with water

- If the dirt is not removed in time, it will become difficult to clean, please wipe with water sometimes.
- Static electricity will absorb dust, resulting in the product black, dirty, water wipe can prevent the generation of static electricity.
- The ceramic body can be removed from the toilet seat to facilitate cleaning between the toilet seat and the ceramic body.



 
Unplug the power supply before maintenance

### Cleaning and maintenance of spray head

If there is dirt in the nozzle. Please clean it with a small brush such as a toothbrush.

- Do not stretch and bend the spray head.







#### Clean the dust on the power plug regularly

When cleaning, remove the power plug and wipe with a dry cleaning cloth.

Must obey - Poor insulation may cause a fire.

## Common fault diagnosis

Note: If similar fault is found, please read the following solution or contact after sales

Fault phenomenon	Fault analysis	Fault handling
Product unavailable	Check to see if the power/socket is loose	Please check the circuit
	Whether there is leakage (the display light of leakage protection plug is not on)	Remove the power plug from the socket and replug it later. Press the reset switch of the leakage protection plug. If the elbow still cannot be operated, please unplug the power plug and entrust the repair.
No water with spray	Check if water is cut off	Pending resumption of water supply
	Check that the Angle valve is closed	Open the Angle valve
	Check if the inlet filter is blocked	Clean or replace the filter
	Check the inlet pipe for bends	Exclude the intake bend
Cleaning insufficient rigidity	Check whether the cleaning pressure is at the lowest level	Refer to the instruction manual for regulating the water pressure
	Check if the inlet filter is blocked	Clean or replace the filter
Spray water disorderly	Abnormal operation	Unplug the plug for one minute and then switch it back on
water temperature is not enough	Check that the water temperature is set low	Adjust the water temperature according to the instructions
	Whether the hot and cold massage function is on	Turn off the hot and cold massage function according to the instructions
The washer often drips water	Solenoid valve failure	Please get professional maintenance technicians

Fault phenomenon	Fault analysis	Fault handling
Misoperation of remote control	Check the battery level of the remote control is it too low	Please replace the battery
Drying/seat temperature too low/no heating	Check whether the temperature is set at low or normal temperature	Adjust the temperature according to the instruction
	Whether to turn on the power saving function	Refer to the manual to choose to turn off the power saving function
Seat/ cover falling too fast	Failure of damping drop function	Please get professional maintenance technicians
The cleaning function cannot be used normally	Is there any other hard material holding it under the seat	Remove the hard objects
	Whether the body's sensing area is covered	Adjust the body sensing area of the seat cover
	Whether the power supply is restored during the power failure	Unplug the plug for one minute and then switch it back on
	The skin completely cover the human body induction area of the seat	Sensor failure, please get professional maintenance technicians
Seat/cover cannot be opened or closed * Only for automatic flip machines	Failure of automatic damping function	Disconnect the plug for one minute and switch it back on 2. The above treatment is invalid, please ask professional personnel for maintenance
Low water pressure does not flush clean	Filter mist blocking	Clean the filter according to the instruction
	Pipe bending	Observe whether the connection line bends and keep the water supply line smooth
No siphon flushing is not clean when water pressure is normal	Air escapes from the sewage outlet	Please get professional maintenance technicians
	The S-bend is blocked	Please buy water pipe dredger in the market for dredging
Flush is not clean when water pressure normal		Ask professionals for maintenance

## **Product standard**

Rated voltage	Alternating voltage 220V/110V±10%, 50HZ/60HZ			
Rated power	Water inlet temperature: 59°F Water discharge: 750ml/min Outlet water temperature: 99°F Power: 1350W			
Cleaning	Water outlet	Hip cleaning	About 700 ml/min	
		Female cleaning	About 700 ml/min	
	Outlet water temperature		Normal temperature, and 93°F/96°F/99°F(4 grades)	
	Water heating		Instant water heater	
	Heater power		Water inlet temperature: 59°F , Outlet water temperature: 99°F Water discharge: 750ml/min Power: 1350W	
Seat heating	Seat temperature		Normal temperature, and 93°F/96°F/99°F(4 grades)	
	Heater power		40W	
Warm drying	Wind temperature		Normal temperature, and 93°F/96°F/99°F(4 grades)	
Spray position			Adjustable Fore and Aft	
Water temperature			41~99°F	
Water Pressure ( With Water Tank )			The lowest pressure : 0.06 Mpa the highest pressure : 0.75 Mpa ( static)	
Water Pressure ( Without Water Tank )			0.15-0.75 Mpa (static) is about 5L of water in 15 seconds	

Due to the different printing time of the materials, the product specifications may be slightly changed. Please refer to the material object.