 
# Intelligent Toilet INSTRUCTIONS FOR THE USE OF PRODUCTS


# Wisdom knows you better Automatic Intelligent Toilet
 
# Warning-To avoid electric shock /!



- 2.Do not drop the remote control into the water.
- 3.Do not spray water into the product or plug.

# Warning: To prevent the possibility of burns, electric shocks, fires and injuries.



- should be accompanied by others. And turn off or lower the seat temperature.
- 2. The product is limited to the function on the manual, do not use other equipments.
- 3.Do not continue to use when the product is out of order, damaged or flooded.


Please send the product to the designated repair center for repair.

- 4. Please make sure that the wires are not damaged by burning.
- 5.Do not use this product when you are out of your mind.
- 6.Do not plug the product or pipe.
- 7.Do not used outdoors.

# The first use of Intelligent toilet

 Note: To ensure the normal use of the product. please follow the instructions to text.

- 1.Insert the power plug into the AC (AC) 110V socket
- 2.Please confirm whether the indicator of the digital display panel is lit
- Confirm whether the inlet valve is take on
- 4. Whether the hose between the wall Angle valve and the toilet inlet valve is installed in place



# Caution-Confirmed matters before using

1. Check whether the sprinkler head and water pipe leak, dry all parts of the water pipe and check with blotting paper.

Press the seat around the seat sensor, whether there is a sound.

3. Check whether the cleaning, drying, automatic deodorization and automatic flushing are normal

4. Whether the Damped structure is normal.

Seating sensing position

Check the functions of cleaning, drying and automatic deodorization, make sure the sensor is on. When cleaning. cover and block the spray nozzle, so as not to splash.



Note: please cautiously read before using

Please read carefully before using. The cautions listed here are related to safety and please follow.



This product is an electrical product. Please do not install it in a place where it is easy to be splashed by water or high humidity. When using in the bathroom, please install a vent to keep good air flow in the bathroom.

The socket for power distribution should be set as follows

- The gearing position of electric outlet pleases to give examples 0.3 min the ground above, and leave bathtub as far as possible a little bit farer.
- The back track of electric outlet pleases use a high feeling and rapid type electric leakage switch (the sum certainly responds the electric current 15 mA following) or use to insulate the transformer 1.5 KVA above, the 3 KVA is following)carry on a protection.

# Warning - Be sure to firmly connect ground wires



The power plug of this product is a three-phase plug (with ground wire). There is a danger of electric shock when there is a fault or leakage of electricity. If there is no ground plug in the socket, consult with the electrical installation company. Do not use power supply other than AC 110V, please wiring according to relevant regulations.



The product connects a ground of line to carry on to connect a ground of processing, if has never carried on to connect a ground of processing, may arouses to get an electric shock.

Note: the grounding treatment mentioned here means that the grounding resistance is below  $100\Omega$ , and the grounding wires of the switchboard shall be copper wires with a diameter of more than 1.6mm.

While using in the bathroom please confirm the power plug have already used silica gel to carry on a waterproof processing.

\*Using the wrong power supply can easily cause fire\*

# Please be sure to observe the following



Please don't sprinkle urine at the essence and spray. Pull out the plug when it thunders.

Strictly forbid to directly flush with water.

Please do not wipe seat and cover with dry cloth or toilet paper.

Please do not open the seat ring or cover violently.

- May cause cracking or malfunction.



Please take antifreeze measures to prevent damage caused by freezing.



Please do not put heaters near this product.

- Discoloration or malfunction



# Please read carefully before using.

The cautions listed here are related to safety and please follow.





#### Notice heat burn

- Please turn the seat temperature down or off when sitting on the toilet for a long time. - Please set the temperature to room
- temperature when the following persons use the seat to dry gently.
  - Children, the elderly, the sick, the
  - disabled, etc.
     People who take sleeping pills, get drunk and get overtired.

# Do not use any power source other than AC 110V

- It may start a fire

## Keep cigarettes and other fire kindling away from the product

- It may start a fire

### Do not use loose and unstable power sockets

- It may cause fire or electric shock

#### Please don't sprinkle water or rinse on product essence or the power plug.

- May arouse a fire or get an electric shock
- May cause toilet break, damage or indoor seepage.

# When long time didn't use, please pull out the power plug.

- For safety, please pull out the power plug
- For re-use, please drain water for one minute before use.

### Please do not flush other items except for urine and feces

- May cause then block, sewage outside overflows.

#### Do not unplug the power plug with wet hands

- It may cause electric shock

# Do not distort or damage the water inlet

- It may cause a leak

# Prohibit

# Do not continue to use the product when it breaks down

When the following occurs, please unplug the power plug, close the inlet Angle valve, stop the inlet.

- Ceramic WC is leaking
- Cracks appear Abnormal sound and smell
- Fume-off
- Abnormal heating
- The toilet is clogged
- If continued under the condition of failure, it may cause fire, electric shock or indoor seepage problems

- It may cause a fire or electric shock

#### Do not damage the power cord or toilet seat cable

- Don't pull
- Don't process
- Don't heat
- Don't forcibly bent
- Do not place heavy objects on the power cord and toilet seat connection line.
- May cause fire, electric shock or short circuit. If the power supply is damaged, please contact a professional for repair.

#### Do not disassemble, repair or transform the product without permission

#### Do not use extension wires, otherwise, it may cause a fire or electric shock

- Do not connect wires or use extension cords, which may cause fire and electric shock.

#### Do not install this product in damp places such as bathrooms

- It may cause a fire or electric shock

## Do not use unhealthy water

- May cause skin irritation and other problems

- 3 -

# Description of other functions

Note: Please read the following carefully before use

Flushing by hand conduction

Press remote or intelligent control board for flushing, start flushing function (manual open cover)

Hand conduction open over and flip function

Press remote or intelligent control board for opening cover/flip , auto open/off seat and flip (auto open cover)

Radar automatic open cover function

When approaching the toilet, auto open cover, auto off seat and finish flushing when leaving (auto open cover)

# Daily cleaning and maintenance

Note: During cleaning and maintenance, please be sure to unplug the power switch and power off

# Smart toilet cleaning and maintenance methods

Please wipe it with a soft cloth dampened with water

- If the dirt is not removed in time, it will become difficult to clean, please wipe with water sometimes.
- Static electricity will absorb dust, resulting in the product black, dirty, water wipe can prevent the generation of static electricity.
- The ceramic body can be removed from the toilet seat to facilitate cleaning between the toilet seat and the ceramic body.



Unplug the power supply before maintenance

# Cleaning and maintenance of spray head

If there is dirt in the nozzle. Please clean it with a small brush such as a toothbrush.

- Do not stretch and bend the spray head.





# Clean the dust on the power plug regularly

When cleaning, remove the power plug and wipe with a dry cleaning cloth.

- Poor insulation may cause a fire.

# Side knob instructions



**Power on/off:** long press the knob for more than 3 seconds

Hip cleaning:

Female cleaning:

Turn the knob to the left
Turn the knob to the right
Stop:

Press the knob once

Toilet flushing: Press the knob once before seating Warm air drying: Press the knob twice when seating

Power failure flushing: connect the spare battery, press the knob for 3 seconds during power failure to start flushing.

- 1. Radar switches to foot cover: press the cover button on the remote control for 5 seconds,
- 2. Turn off | turn on disseat water flushing: press the automatic water flushing button on the remote control for 5 seconds
- 3. Turn off | turn on the function of flushing upon cover falling: press the cover and flushing buttons on the remote control at the same time

# With Auto Open Cover Flip Remote Control

Note: Please read the following carefully before use

### STOP

You can stop the "Hip cleaning' "Female cleaning", "brying"and other operaation when operation

## SPRAY/MASSAGE

<u>(</u>

Press this button when you are seated, the Hip wash cleaning nozzle will spray at the fixed position for 2 minutes and then stop spraying automatically.

## BIDET/MASSAGE



Press this button when you are seated, the female cleaning, nozzle will spray at the fixed position for 2 minutes and then stop spraying automatically.

# **DRYER**

ہہ

Press this button to start drying when you are seated. Warm air drying will stop automatically affer 3 minutes.

# FORWARD

 $\wedge$ 

Press this button during the "hip" or. "female" cleaning and adjust the nozzle position without the use of the removable cleaning function

Press this button, the seat opens

automatically, and press again to close the seat automatically.

# CLEANING HEIGHTEN



It can increase or decrease the force of cleaning water pressure. It can be set to weak, medium, strong, or strongest.

## OPEN COVER



Press this button, the seat cover will open automatically, and then press it again, the seat cover will close automatically.

# OPEN SEAT



FLUSH



Press this button and will start flushing.

#### WATER



4 degrees can adjust the water tempature, the tempature can be set as, one degree: the environment tempature, second degree: about 93°F, Third degree: about 96°F, Forth degree: about 99°F

# SEAT



4 degrees can adjust the seat tempature the tempature can be set as,one degree: the environment tempature, second degree: about 93°F, Third degree: about 96°F, Forth degree: about 99°F.

## WIND



4 degrees can adjust the wind tempature the tempature can be set as , one degree: the environment tempature, second degree: about 93°F, Third degree: about 96°F, Forth degree: about 99°F.

### <u></u>

Remote control pairing

Switch the knob to the hip cleaning for about 3 seconds ,when you hear a sound , press any button of the remote ,then can pair the remote to the toilet .

# BABY WASH



After the baby is seated then press the baby wash button ,it will start the hip cleaning automaticly , and the washing pressure will be adjust to the lowest level automaticly ,it will change to mobile cleaning when press one more time , and auto close the baby washing when you press the "stop" button

#### AUTO



Nozzle extended and water out for nozzle washing

# LIGHT



The night light can be turned on or off in the power-on state.



# Common fault diagnosis

Fault phenomenon	Fault analysis	Fault handling	
	Check to see if the power/socket is loose	Please check the circuit	
Product unavailable	Whether there is leakage (the display light of leakage protection plug is not on)	Remove the power plug from the socket and replug it later.Press the reset switch of the leakage protection plug. If the elbow still cannot be operated, please unplug the power plug and entrust the repair.	
No water with spray	Check if water is cut off	Pending resumption of water supply	
	Check that the Angle valve is closed	Open the Angle valve	
	Check if the inlet filter is blocked	Clean or replace the filter	
	Check the inlet pipe for bends	Exclude the intake bend	
Cleaning insufficient	Check whether the cleaning pressure is at the lowest level	Refer to the instruction manual for regulating the water pressure	
rīgidity	Check if the inlet filter is blocked	Clean or replace the filter	
Spray water disorderly	Abnormal operation	Unplug the plug for one minute and then switch it back on	
water temperature is not enough	Check that the water temperature is set low	Adjust the water temperature according to the instructions	
	Whether the hot and cold massage function is on	Turn off the hot and cold massage function according to the instructions	
The washer often drips water	Solenoid valve failure	Please get professional maintenance technicians	
Misoperation of remote control	Check the battery level of the remote control is it too low Please replace the battery		
Drying/seat temperature too low/no heating	Check whether the temperature is set at low or normal temperature	Adjust the temperature according to the instruction	
	Whether to turn on the power saving function	Refer to the manual to choose to turn off the power saving function	
Seat/ cover falling too fast	Failure of damping drop function	Please get professional maintenance technicians	
The cleaning function cannot be used normally	Is there any other hard material holding it under the seat	Remove the hard objects	
	Whether the body's sensing area is covered	Adjust the body sensing area of the seat cover	
	Whether the power supply is restored during the power failure	Unplug the plug for one minute and then switch it back on	
	The skin completely cover the human body induction area of the seat	Sensor failure, please get professional maintenance technicians	
Seat/cover cannot be opened or closed * Only for automatic flip machines	Failure of automatic damping function	Disconnect the plug for one minute and switch it back on     The above treatment is invalid, please ask professional personnel for maintenance	
Low water pressure does not flush clean	Filter mist blocking	Clean the filter according to the instruction	
	Pipe bending	Observe whether the connection line bends and keep the water supply line smooth	
No siphon flushing is not	Air escapes from the sewage outlet	Please get professional maintenance technicians	
clean when wăter pressure is normal	The S-bend is blocked	Please buy water pipe dredger in the market for dredging	
Flush is not clean when water pressure normal	Flush valve failure Ask professionals for maintenance		

Due to the different printing time of the materials, the product specifications may be slightly changed.Please refer to the material object.

# Product standard

Rated voltage	Alternating voltage 110V±10%, 50HZ/60HZ			
Rated power	Water inlet temperature: 59°F Outlet water temperature: 99°F Water discharge: 750ml/min Power: 1350W			
Cleaning	Water outlet	Hip cleaning	About 700 ml/min	
		Female cleaning	About 700 ml/min	
	Outlet water temperature		Normal temperature, and 93°F/96°F/99°F(4 grades)	
	Water heating		Instant water heater	
	Heater power		Water inlet temperature: 59°F , Outlet water temperature: 99°F Water discharge: 750ml/min Power: 1350W	
Seat heating	Seat temperature		Normal temperature, and 93°F/96°F/99°F(4 grades)	
	Heater power		40W	
Warm drying	Wind temperature		Normal temperature, and 93°F/96°F/99°F(4 grades)	
Spray position			Adjustable Fore and Aft	
Water temperature			41~99°F	
Water Pressure ( With Water Tank )		Vater Tank )	The lowest pressure : 0.06 Mpa the highest pressure : 0.75 Mpa ( static)	
Water Pressure ( Without Water Tank )			0.15-0.75 Mpa (static) is about 5L of water in 15 seconds	