



Product Name: Intelligent Toilet
■ Model: ST03 Pro

Thank you for purchasing our product. Please read this manual before installation and use to ensure that your product will function at peak performance.
Read this manual thoroughly and store in a safe place for future references.

IMPORTANT SAFEGUARDS

When using electrical products, especially when children are present, basic safety precautions should always be followed, including the following:
READ ALL INSTRUCTIONS BEFORE USING

WARNING– To reduce the risk of burns, electrocution, fire, or injury to persons.

- 1. Close supervision is necessary when this product is used by, on, or near children or i
nvalids.
- 2. Use this product only for its intended use as described in this manual. Do not use
attachments not recommended by the manufacturer.
- 3. Never operate this product if it has a damaged cord or plug, if it is not working properly,
if it has been dropped or damaged, or dropped into water. Return the product to a service
center for examination and repair.
- 4. Keep the cord away from heated surfaces.
- 5. Never block the air openings of the product or place it on a soft surface, such as a bed
or couch, where the air openings may be blocked. Keep the air openings free of lint, hair,
and the like.
- 6. Never use while sleeping or drowsy.
- 7. Never drop or insert any object into any opening or hose.
- 8. Do not use outdoors or operate where aerosol (spray) products are being used or
where oxygen is being administered.
- 10. Connect this product to a properly grounded outlet only. See Grounding Instructions.

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This product should be grounded. In the event of an electrical short circuit, grounding
reduces the risk of electric shock by providing an escape wire for the electric current. This
product is equipped with a cord having a grounding wire with a grounding plug. The plug
must be plugged into an outlet that is properly installed and grounded.

DANGER– Improper use of the grounding plug can result in a risk of electric shock. If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire. Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded. This product is factory equipped with a specific electric cord and plug to permit connection to a proper electric circuit. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product. Do not modify the plug provided — if it will not fit the outlet, have the proper outlet installed by a qualified electrician. If the product must be reconnected for use on a different type of electric circuit, the reconnection should be made by qualified service personnel. If it is necessary to use an extension cord, use only a three wire extension cord that has a three-blade grounding plug, and a three-slot receptacle that will accept the plug on the product. Replace or repair a damaged cord.

The functions may vary from different part no.

	<div>Part no.</div> <div>Functions</div>	ST03 Pro	
Remote	Remote control		●
	Unlimited wash		●
Cleaning	Feminine Wash		●
	Posterior Wash		●
	Aerated wash		●
	Auto wash		●
	Oscillating wash		●
	H/C massage		●
	Adjustable water pressure		●
	Adjustable water temperature		●
	Adjustable nozzle position		●
	Detachable nozzle		●
	Nozzle self-cleaning		●
	Nozzle Clean		●
	Heated seat		●
	Warm dryer		●
Convenience	Soft close		●
	Adjustable seat temperature		●
	Adjustable dryer temperature		●
	Night light		●
	Instant heating		●
	Auto flush		●
	Drying with flush		●
	Emergence flush		●
	Remote flush		●
	Kick flush		●
	Seat sensor		●
	Digital display		●
	Auto open lid		●
	Remote open lid/seat		●
	Kick open lid/seat		●
	Pre-wet		●
	Auto deodorization		●
	UV sterilization		●
	Memory mode		●
	Auto-start		●
Others	SUS filter		●
	Air isolation		●
	Backflow prevention		●
	Easy clean glaze		●
	Eight protections		●
	Anti-bacterial seat		●
	Fire and heat resistant		●
	Factory reset		●
	Energy-saving mode		●

※ Power outage flush battery not included, battery must be purchased separately.

User Friendly Design

New features to offer you an enjoyable experience



Contents



Parts Information	1	Before use
Overview	1	
Remote Controller	2	
Warnings and safety	3	
Warning	4	
Attention	6	
Installation	7	Functions
Before you Install	8	
Installing Your Product	9	
Function Explanations	13	
Maintenance	16	
Troubleshooting	18	troubleshooting
Power button	18	
Wash functions	18	
Dryer	19	
Heated Seat	19	
Remote Control	19	
Toilet Bowl	19	
Specifications	20	

Intelligent
Toilet


Parts Information

Overview, Remote controller

Overview

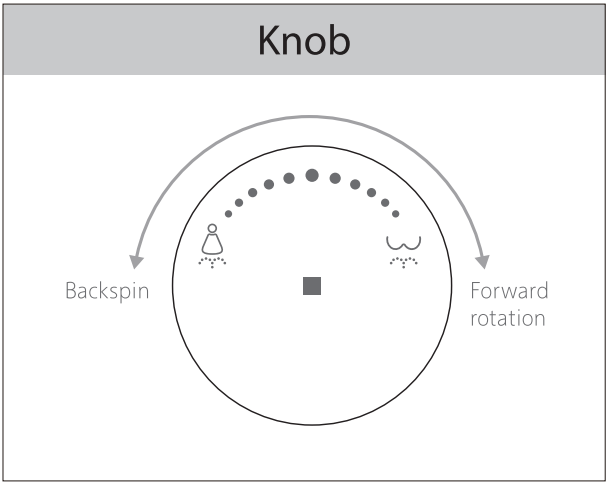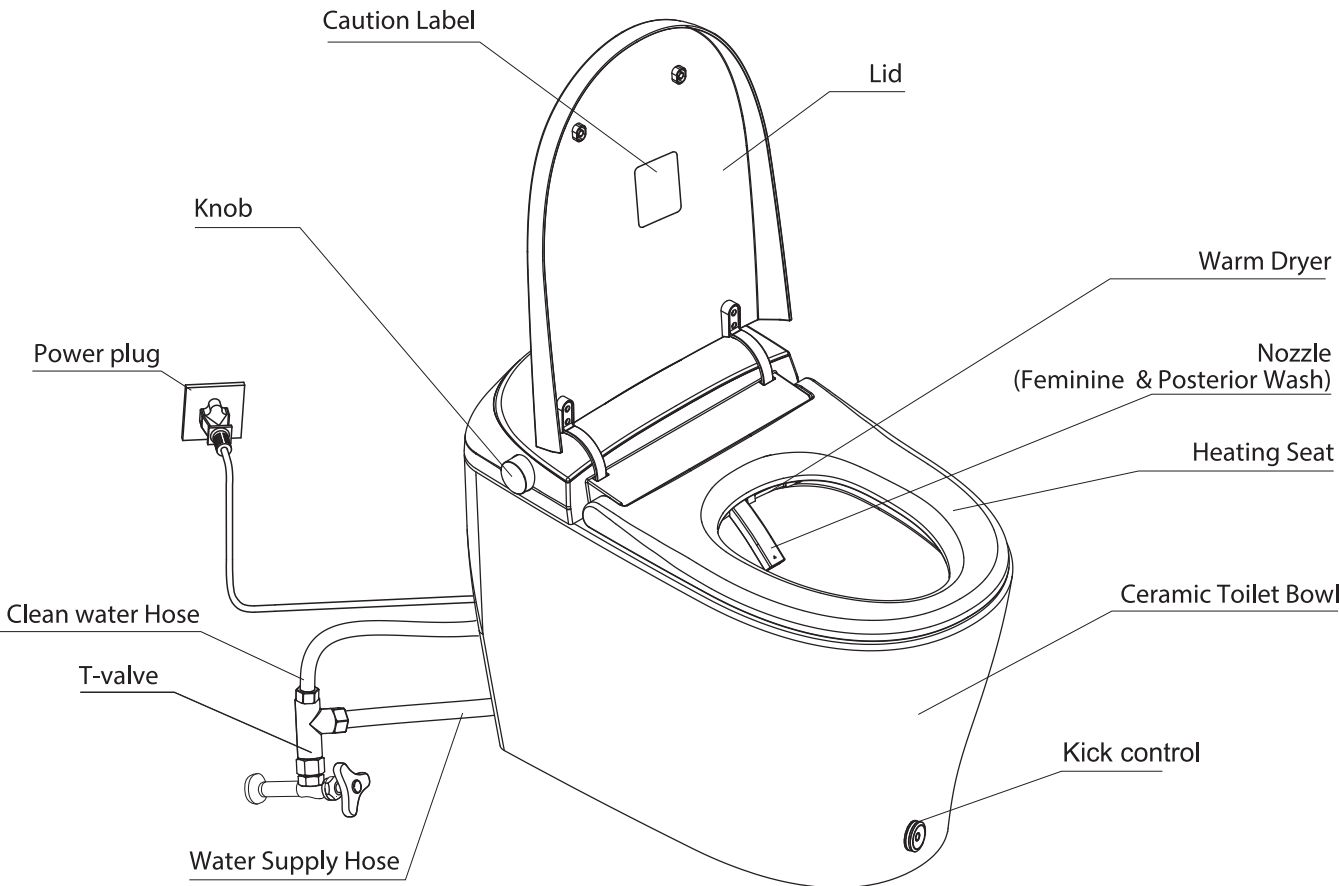

■ Remote Controller

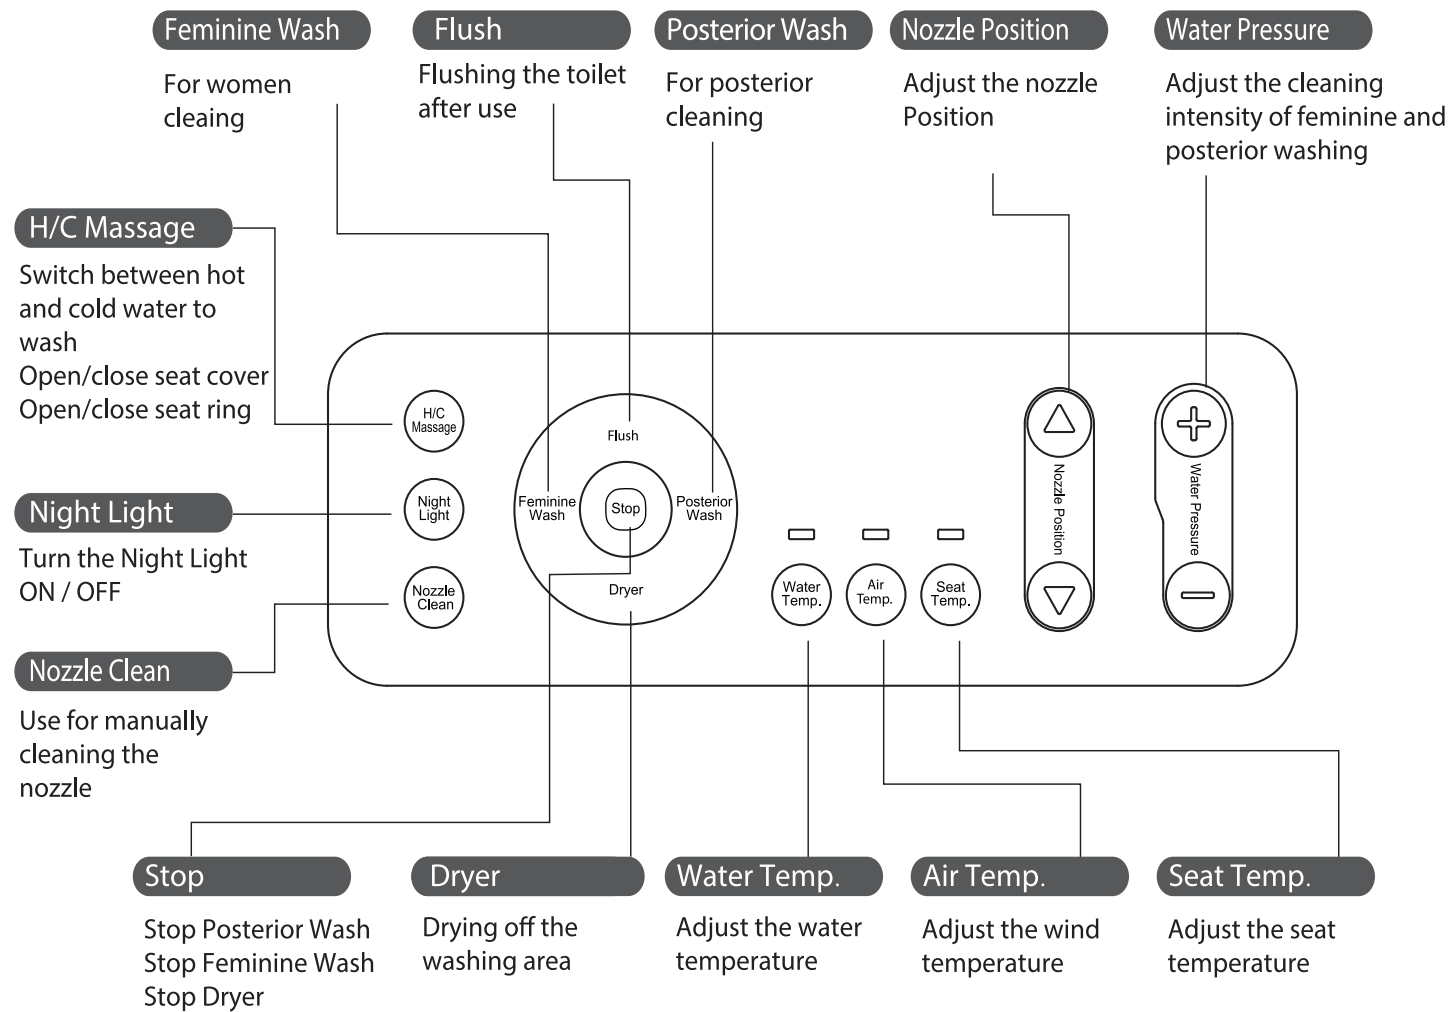

- ※ When away from the seat, short press "H/C Massage " to achieve remote control flip flap function.
- ※ Long press "H/C Massage " + "Flush" to realize the mute mode switch.
- ※ Long press "Seat Temp" + "Flush" to realize the pre-wet switch.
- ※ Long press "Nozzle Clean" + "H/C Massage " to realize microwave switch.
- ※ Press and hold "Night Light" to switch on the energy saving mode.

Warnings and Safety

Please read thoroughly

First of all, thank you for purchasing our product. To ensure proper and safe use of this product, carefully read this section prior to any usage. Afterwards, store this manual in a safe place for any needed future reference.

The hazards and warnings listed herein are important to our user's safety. Significant consequences may result from failure to heed warnings. The company will not be held liable for any injuries to the user and damages to the product due to improper usage and/or failure to heed safety warnings.

Explanation of Terms and Symbols

Warning . . . 「Indicates possible injury resulting from improper usage due to negligence of this sign.」

Attention . . . 「Indicates human injury or property loss that may result in improper usage due to negligence of this sign.」

- ⚠ 「Note」 When used with the above "Warning" and "Attention" signs, indicates a strict request to follow noted precautions.
- 🚫 「Prohibits any individual from performing any action with this symbol」
- 🔧 「Prohibits any individual from dismantling product.」
- 🚰 「Keep product away from any wet environments, including, but is not limited to, humid environments, close proximities to baths, showers or sinks. 」
- 🚫 「Do not touch!」
- 🚫 「Do not touch with a wet hand!」
- 🔥 「Keep away from any extreme heat or fire!」
- ⚠ 「Operate only as instructed! 」
- 🔌 「Pull out the power plug! 」
- 🌐 「Protective grounding 」

Warning

This product needs to be properly grounded.

※Risk of electric shock
※If unsure, contact an electrician.
electrical installation company.




Do not touch, insert or pull out the power plug with a wet hand.

※Risk of electric shock.




Do not use a power socket in poor condition or a damaged power plug.

※Risk of fire and/or electric shock.

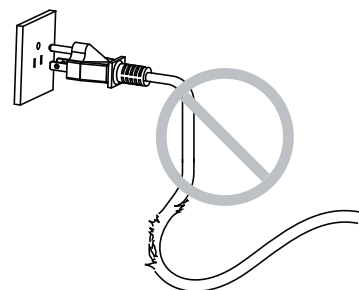

The power socket in use should be within the specified range (AC120V).

※Risk of fire and/or electric shock.

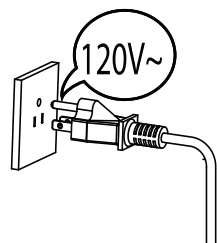

Do not pull, damage, bend, twist, stretch, roll, bundle, clamp or squeeze the power cable. Do not place anything on power cable.



※Risk of fire and/or electric shock

If the power cord is damaged, to prevent any injuries or accidents, it should be replaced by a professional.



※Risk of fire and/or electric shock

Do not place a lit cigarette along with other burning objects into the unit.

※Risk of fire.



Do not use during thunderstorms (pull out the power plug during storms).
※Failure in doing so may lead to injury or fault in the product.



When the seat ring or the cover plate is damaged, to avoid any harm, be sure to pull off the power plug, close the water source and contact your local distributor for replacement.



※Risk of fire or electric shock.

Regularly pull out the power plug and wipe off any dust on the power plug using a clean dry cloth.

※Risk of fire.



Any person with a disability, the elderly, and children, should be using this product with the supervision of another individual.



※Be advised that sitting on the heated seat for an extended amount of time may result in burns.

This product is not a toy. Advise children not to play with product.

※Risk of injury.



Do not dismantle, repair or alter this product on your own. Call in a professional for further advice.



※Risk of fire, electric shock, and/or other accident that may lead to injury.

Warning

For cleaning or maintenance of plastic parts, do not use any harsh cleaning agents. (These include, but are not limited to products such as: concentrated sulfuric acid, concentrated nitric acid, glacial acetic acid, carbon tetrachloride, chloroform, acetone, butanone, benzene, methylbenzene, phenol, methylphenol, dimethylformamide, methyl ether, soybean oil, acetate, 40% nitric acid, thick salt acid, 95% alcohol, gasoline, kerosene or brake oil, etc).
※Risk of damaging parts that can lead to accidents and injuries




Do not use polluted water or water meant for industrial.

※Risk of urocystitis or dermatitis.
Untreated water may also cause corrode inner workings of unit and may cause electrical shock or a fire.



Do not apply any force to the unit's seat and lid. Do not stand on the lid or open or close the lid and the seat forcefully.

※This may result in product damage and/or user injury.

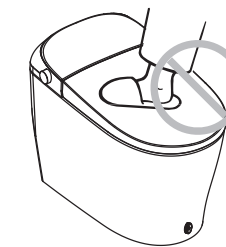


Do not add water or detergent into the unit or on to the wireless remote. Do not soak the product with water or cleaner.

※Risk of fire and/or electric shock.



Do not place your hand or any other object into the dryer trap, and do not cover the dryer and dryer trap during product use.

※Risk of fire, electric shock, and/or other accident that may lead to user injury.

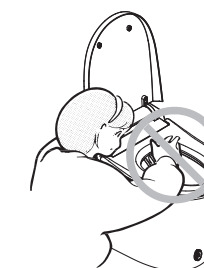

Do not install product in a humid environment or a soak room. Do not spray or soak this product with any form of liquid to prevent any damage to the product.

※Risk of fire and/or electric shock.



Do not spray urine at the dryer trap.

※Risk of electric shock.



Read the following for proper battery usage.

- Properly install the battery according to its correct polarity.
 - Remove the battery during long periods without use.
 - Replace the battery before it reaches the end of its usage. Failure to do so may result in interrupted control signals.
 - Cover the battery with tape before disposal.
- ※This will prevent battery fluid leaks that may cause fire and/or other damages.



Warning

- Place the battery out of children and infant reach.
- ※ If battery is swallowed, contact a doctor immediately.
- If battery fluid leaks onto user, quickly rinse off area using water.
- If battery fluid gets into eyes, do not rub your eyes. Quickly rinse it with water and consult a doctor immediately.
- ※ May result in vision impairment or blindness.

When the battery is in use, do not do the following operations.

- Do not hold or store with metal objects (such as a necklace or a watch).
- Do not mix new and old batteries.
- Do not pull battery apart battery or throw it into water and/or fire. Battery fluids may cause a fire.

Attention

Do not use the heated seat or warm dryer temperature for an extended amount of time.

※ Extended use may result in burns.

While using this product, make sure that the skin is in contact with the seat sensor area. Otherwise, product may not operate correctly.

※ Children and smaller individuals may have trouble staying in contact with sensor area.

Do not spray urine in the direction of the bidet nozzle.

※ Doing so may result in blockage to the bidet nozzles and cleaning area.

Do not use your old hose component. Use the one provided with your product. Anything else connected to the older hose may need to be replaced.

※ Risk of water leakage and/or property loss/damage.

In case of sudden power failure, remove the power plug and close the angle valve to prevent water leakage.

※ Risk of water leakage and/or property loss/damage.

Avoid direct sunlight or heat.

※ Risk of product discoloration.

Do not supply electricity with an external switch. I.e: connecting the universal part to a timer switch.

※ Run the risk of issues caused by improperly resetting the thermal breaker.

Pull out the power plug when the product is in disuse for an extended amount of time. Make sure to shut off the water and remove the water inside the product.

※ Risk of fire, leaks, and product damage.

When storing or transporting in cold climate, make sure to remove all water from the unit. Product may crack and other damages may occur due to freezing water.

※ Risk of fire, leaks, and product damage.

Installation


Tools required for installation

Required tools

Required tools for installation. Please have these tools prepared prior to installation.




Drill
(Dia. 0.24in)

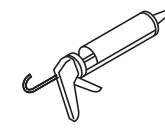


Silicone gun



 
Teflon tape




Knife

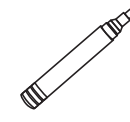


Marking pen

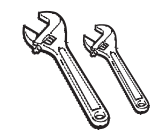

 0.91 - 0.98 in
(Spanner model varies for different pipes)



⊕ ⊖ screw driver

 

Measuring tape




Measuring cup

Item list (Confirm that all below items are inside the box)

Intelligent toilet(1 pc)




T-valve(1 pc)

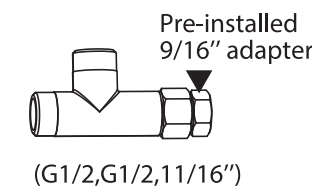


(G1/2,G1/2,11/16")

Remote controller set(1 pc)

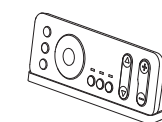


(holder 1pc,screw 2pcs)

 
Two AAA Battery




Wax ring(1 pc)

 

Installation Book & User Manual

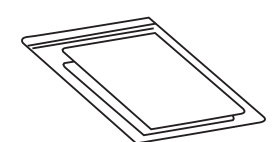

Mounting Template(1pc)

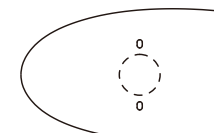

Floor flange(1pc)



Toilet bolt (2pcs)



Hexagon bolt(4pcs)



Hat head (2pcs)



Nylon sleeve (8pcs)



Tegillum (2pcs)



bolt(4pcs)



Mounting bracket (2pcs)



Washer (8pcs)

※ Please confirm all the aforementioned items are inside the package. If there are any omissions, please contact our customer service.

※ Illustrations above are for references only, Actual objects may look different in person.

※ If your water valve is 9/16", you could directly connect the T-valve; If your water valve is 11/16", please screw off the adapter, then connect it.

Before you Install

Water pressure check, dimensional drawing


Confirmation of water pressure

- The lowest working water pressure is 11.6psi, the highest water pressure is 108psi, the toilet can not reach the best clean situation when the lowest water pressure can not reach 11.6psi.
- ※ Product built-in water tank pump, ceramic scouring effect is not affected by external flow, water pressure and other environmental parameters.

Confirm dimensions of product with installation space

Wall

Unit: inches

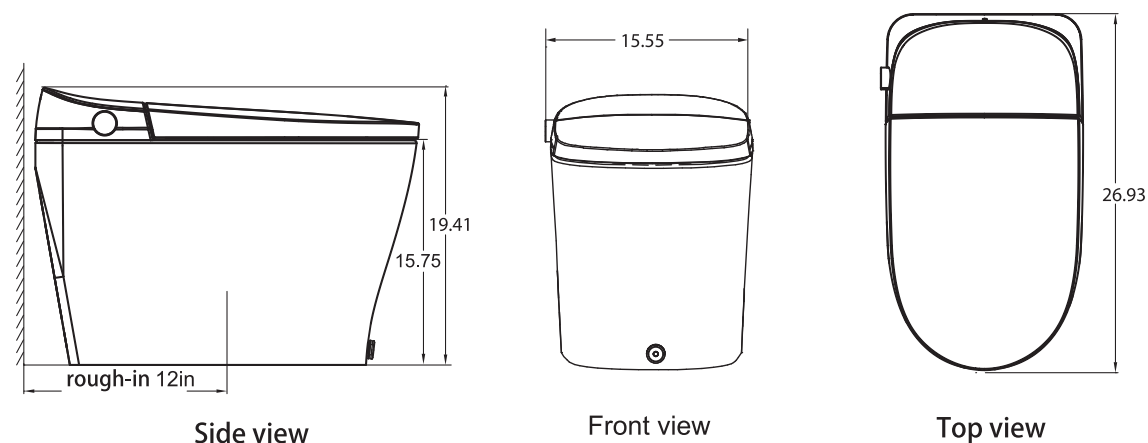

Side view

Front view


Top view

Installing your product

Install your unit using the following steps

1 Open the box right side up



Remove the accessories first, then remove the unit from the top, as shown in the diagrams below.

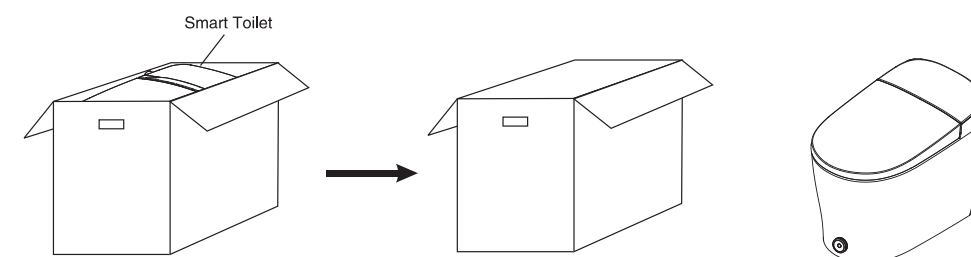



2 Mark your drainage hole with a cross

1. place the installation template on the ground while being sure to properly align the drain hole.

2. Mark eight mounting holes on the ground with a pencil. Also outline the template edge to mark toilet placement later on.

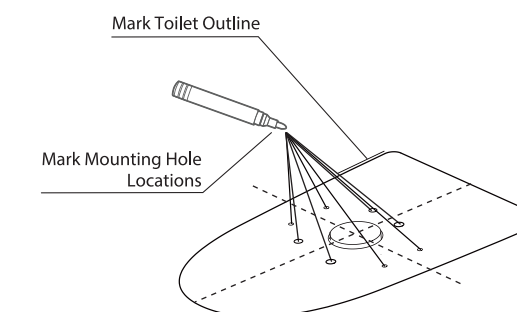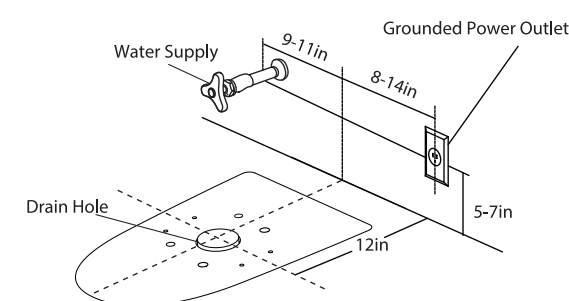


3 Remove the installation template and drill eight holes at the marked positions.

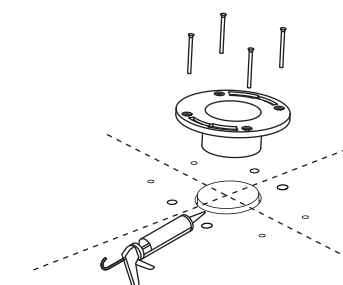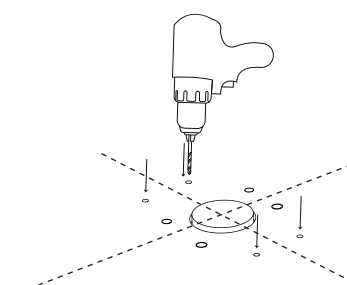


4. Apply an even ring of sealant around the drain opening. Then, place the flange over the drain hole and bolt to the ground.

5. Place the fixing block on the drain hole.

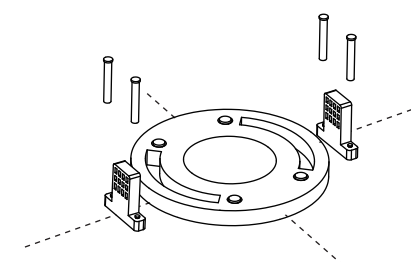


4 Install the ceramic body, water supply hose, T-valve


1. Place the wax ring on the drain hole at the bottom of the ceramic.

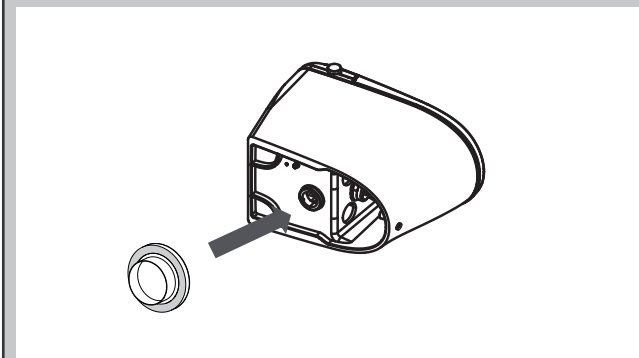


2. Align the ceramic drain with the drain hole on the ground, and press down to make the wax ring fully contact with the ground.

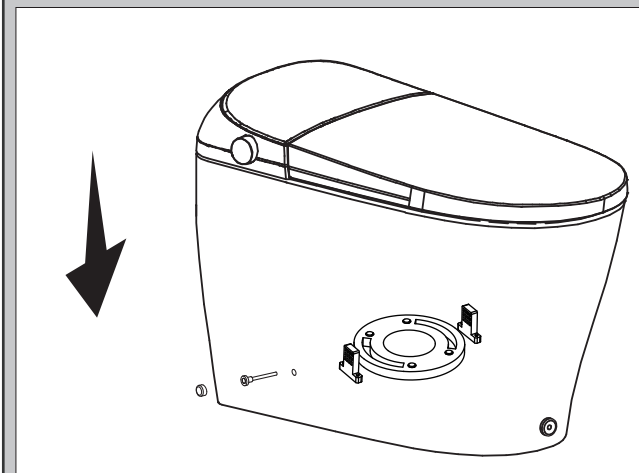


3. Fix the two sides of the ceramic with two bolts, and finally install the cap.

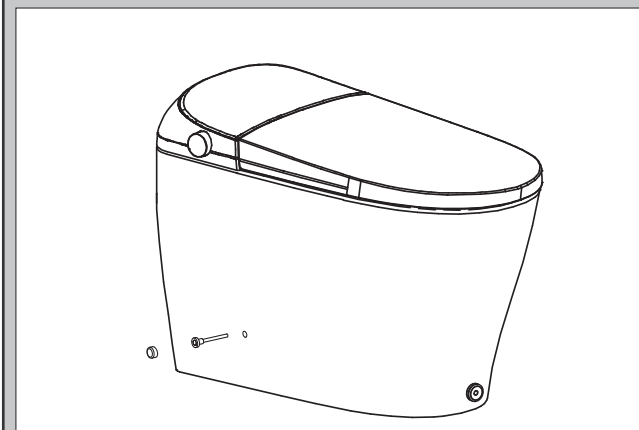


4. Attach the flush water hose to the T-valve and tighten.

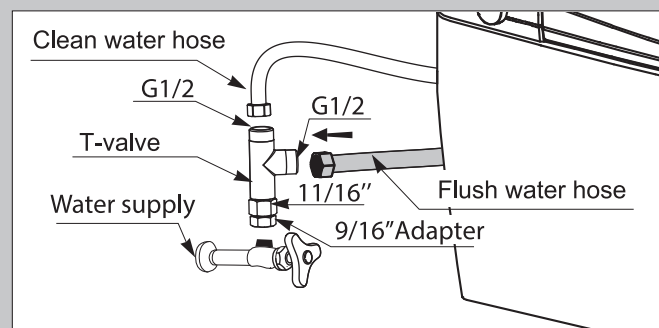

5. Attach the clean water hose to the T-valve and tighten.

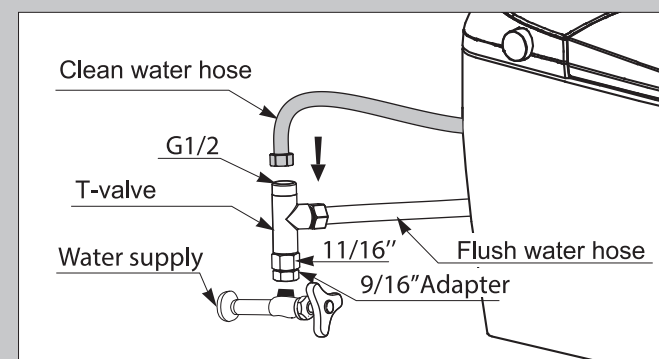

6. Connect the T-valve to the water supply and tighten. Use gasket to prevent water leakage. (Available in 9/16" and 11/16" connectors.)

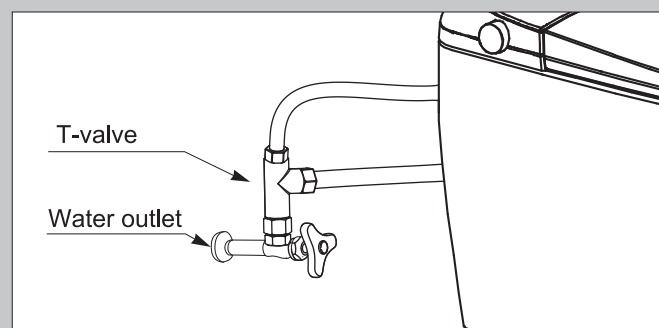

7. Finish installation.

5 Installing the remote


1. Drill two 6mm(0.24 inch) diameter holes on the wall (about 1.77 in deep)
2. Knock the anchors into the hole with a hammer.
3. Secure the holder with anchors.
4. Use the screws to secure the holder to the wall.
5. Remove the battery cover from the backside of the remote to install batteries
6. Once finished, remote is ready to be placed in its holder.

Detailed steps shown in the diagram below:

- ※ Please use proper mounting tools for special wall surfaces (such as wood, HDF, etc.)
- ※ The remote control holder should be installed away from the bidet's spray trajectory.
- ※ The remote control holder should be installed within reach when seated on unit.
- ※ Make sure there is nothing to block the transmission between the toilet and its remote.



Steps:

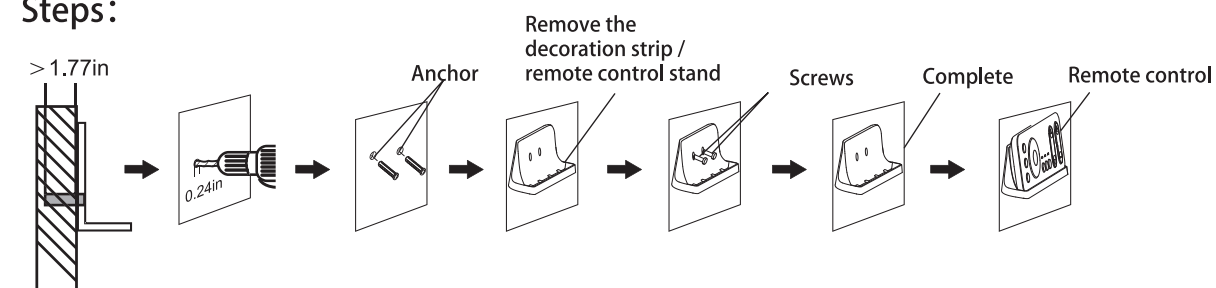


6 Installing and replacing the battery box

- ※ Batteries need to be purchased separately.


Installing the external battery box

1. Remove the connecting cables from the position where indicated.
 2. Connect the waterproof DC power plug and tighten the waterproof cap.
 3. Place the battery box in a suitable position as shown.
 4. For any questions, please call the customer service center or your local dealer.
- ※ The battery should be placed out of the reach of children.
 - ※ Some batteries and connecting wires may have slots. Please do not forcibly insert, otherwise, it will lead to product damage.

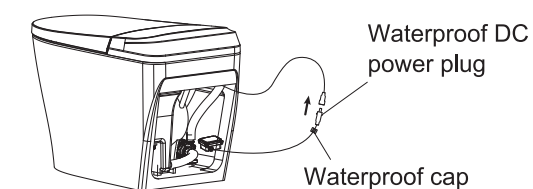


Replacing the external battery box

1. Unscrew the waterproof cap at the connection of the waterproof DC power plug.
 2. Pull out the waterproof DC power plug.
 3. Replace the battery box assembly with a new one, which can be used after installation.
 4. For any questions, please call the customer service center or your local dealer.
- ※ The waterproof grade of battery box for power failure and flushing is ipx6, and a single battery box can meet the power failure and flushing times of about 200 times.

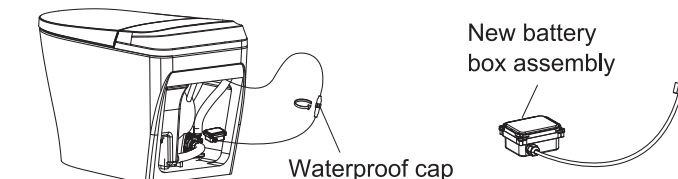

7 Testing water flow

1. Open the water supply angle valve to maximum as shown in the figure.

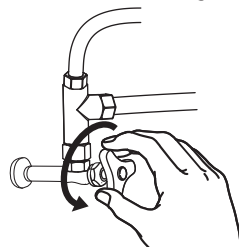


2. Confirm various connecting parts are not water leaking.

※ In case of water leaking, unfasten the nuts again and install them again.

8 Connecting power

1. Connect to the grounding.
2. Plug in AC 120V power plug.

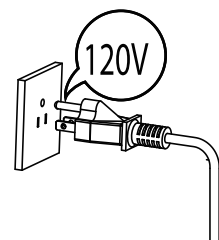

- (1). Check to see if the power is on.
- (2). Press the side power button, confirm the toilet is power on.

Testing the product


● Are all the functions working properly?

Posterior Wash, Front Wash (Including water pressure & nozzle position adjustment), Heated Dryer, Water & Seat temperature Adjustment, Nozzle cleaning, remote control.

All functions listed above should be tested.

● Checking Rear Wash


Please use your hand to hold the seat sensor area, turn the knob forward or press the "Posterior Wash" button on the remote controller, and use your hand to cover the front of the nozzle to block the flow of wash water to avoid spraying water on your body or clothing.

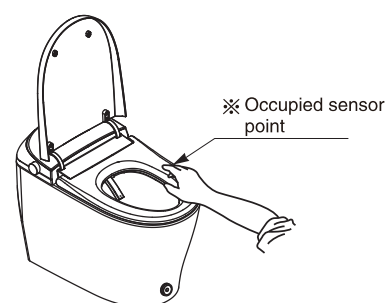


Matching your remote control code

※ When the product leaves the factory, the remote control and the product are connected, if the remote control went failure, please re-connect the code as following methods.

1. Unplug the product's plug, press the stop key for few seconds until the level light is flickered.

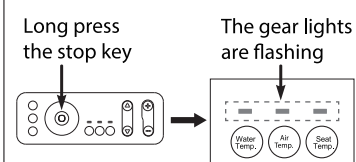


2. Plug the attaching plug when the remote control get closer to the product.

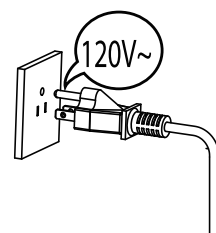

3. The level light stops flickering, and then it is lighted on.

 All the level light (red) is lighted on




4. Codes are matched properly when all lights are on.

《Function Explanations》

■ Power/Stop

Stand by: Press it for 3s to activate it.
Activated: Press and hold for 3s to shut down. under the hip cleaning, female washing, drying mode, press it for short time to stop it, and press it for 3s to enter to the drying mode.

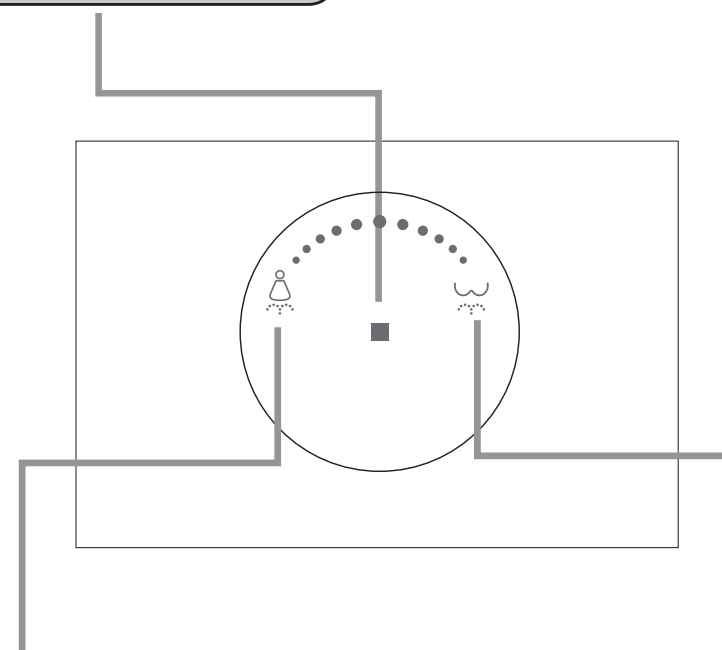

■ Feminine

Under no cleaning and drying mode, and seating the toilet.

"Rotated backward", rotated it backward for 45° to enter into the Feminine wash mode, which the mode is defaulted to cleaning moving. The cycle of operation: Feminine wash 1.5mins + drying 4mins + flushing when drying for once.
When the function of Feminine wash is activated, rotates the switch forward to increase the cleaning strength, switch backward to decrease the cleaning strength.

■ Posterior

Under no cleaning and drying mode, and seating the toilet.


"Rotated forward", rotated it forward for 45° to enter into the Posterior wash mode, which the mode is defaulted to cleaning moving. The cycle of operation: Posterior wash 1.5mins + drying 4mins + flushing when drying for once.
When the function of Posterior wash is activated, rotates the switch forward to increase the cleaning strength, switch backward to decrease the cleaning strength.

※ When starting up, short press the knob to send ceramic flushing command when there is no function.

■ Auto flush

When the seat sensor no longer detects a user, it will automatically flush.

The toilet will only flush once.

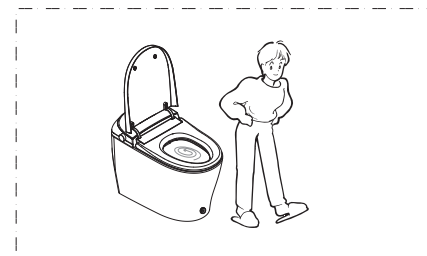


■ Drying flush

Press the "Dryer" button.

The warm air function is activated and a flush is performed.

※Posterior/feminine wash is not available during flushing.

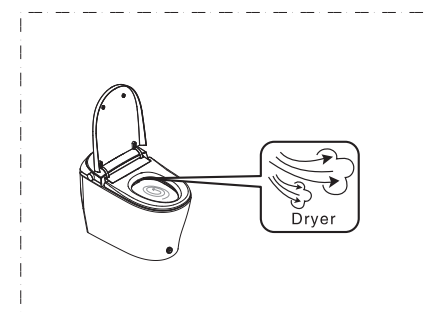


■ UV sterilization

Irradiation at the nozzle.

10s after user unseats, UV sterilization will initiate automatically to work for 3 minutes. During this time, either press "stop" button or activate seat sensor can quit UV sterilizing.


※Ultraviolet lamp device is installed on smart toilet.

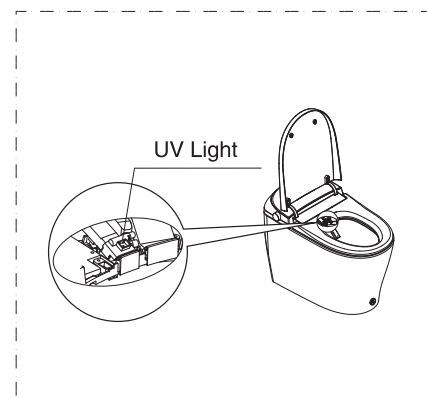

■ Kick flush

Tap the "Kick Button" with your foot for easy, manual flushing.

Note that the "Kick Flush" function is not available when user is sitting on the toilet seat.

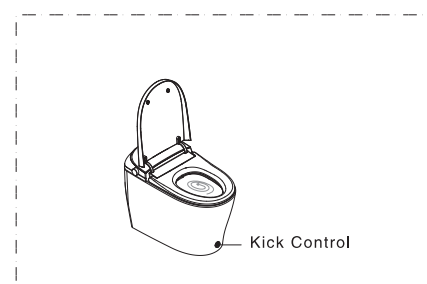


■ Kick to open lid / seat

Tap the "Kick Button" with your foot to raise your toilet lid / seat.

Tap the kick button once: Lid opens.
Tap the kick button twice: Seat raises.
Tap the kick button three times: Seat and Lid.
Will close and toilet will flush.

※Please do not touch the button forcefully.
※Rear / front wash is not available during flushing.

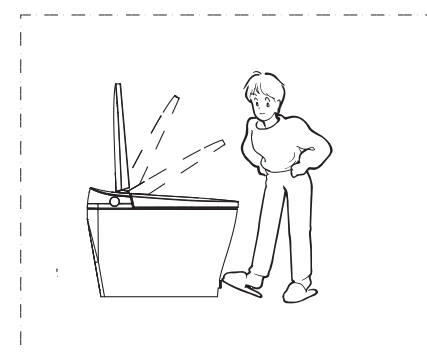

■ Microwave induction

Microwave will detect any user within a 3ft radius.


Lid will open automatically for any user within a 3ft radius.

Close automatically when it no longer detects a user.



■ Digital display

When setting different functions of temperature adjustment, the corresponding function indicator lights up.

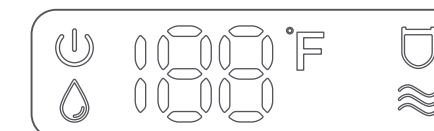

■ Emergency Flushing

When the product is not powered-on, short press the rotated switch button on the side of the product or slightly touch the "Kick Control" button. It can achieve emergency flushing function.

※If the above operation does not work, you need to replace the battery or contact your local dealer.

※To use this feature, contact your local dealer to purchase batteries.

■ User-friendly Design

- Pre-wet
After seating, the product will flush once towards the seat to ensure that the seat wall is moistened.
- 8 Layers of safety
8 different built-in safety features to protect the user and product.
- Memory mode
After power failure, water temp, water pressure, seat temp, and wand position are all restored to mid-range after power failure. Night light is turned on by default after power failure. On / off, keep the last memorized setting state.
- Antibacterial Seat
Antibacterial material is used for the seat.
- Energy-saving mode
When the energy saving mode is enabled, the user is out of the seat, and the seat temperature surface is maintained at 86°F. When the user is detected to be seated, the temperature will be restored to the setting temperature of the seat temperature (Except for high gear, which is heated to 98.6°F) .

Maintenance


Regular maintenance is required to ensure normal use

Note


- Cut off the power and water supply before maintenance.
- Direct water wash to the entire product is prohibited.

Maintenance of product surface and ceramics

- Wipe dust or stains with a soft wet cloth
- A wet soft brush, cloth or sponge may be used to clean the ceramic area
- ※ Do not use abrasive cleaning solutions, such as alcohol, bleach, paint thinner, cresol, benzene, gasoline, etc.

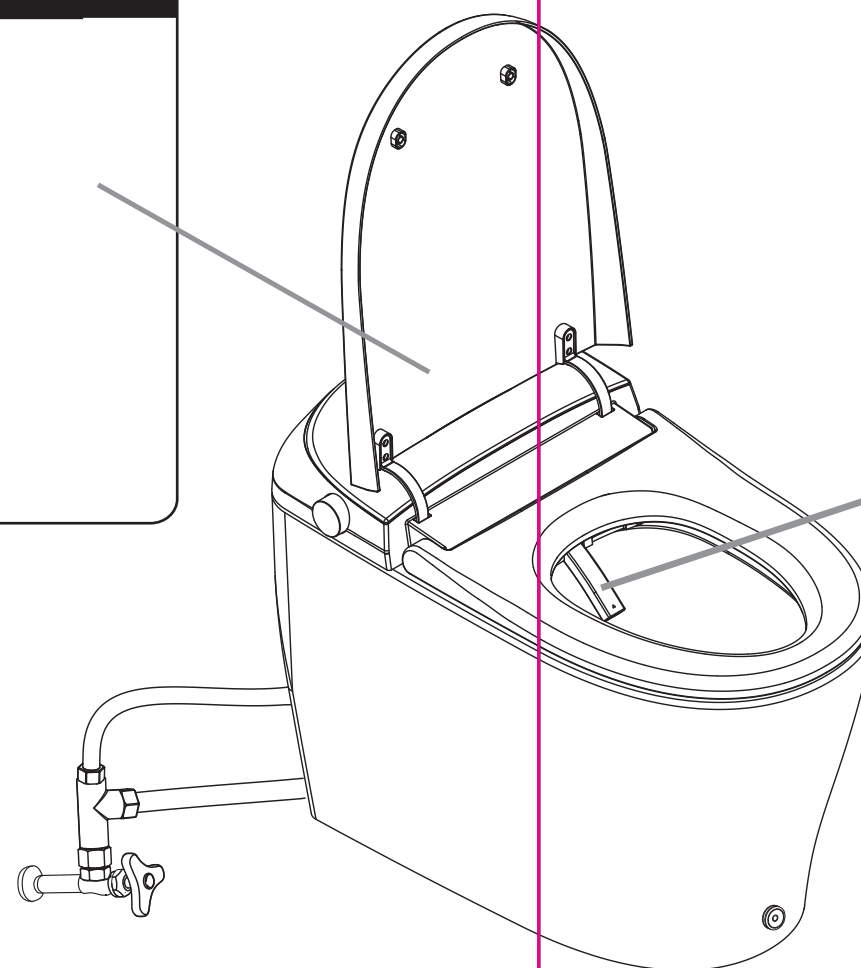

Maintenance of the nozzle

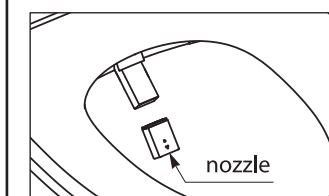


Press the "Nozzle Clean" button on the remote control without occupying the seat. The nozzle will extend. Proceed to clean with a soft toothbrush.

- ※ Do not forcefully hold the nozzle, otherwise it may break.
- ※ Please change the spout if it blocked.

WARNING

Do not spray water or detergents on the toilet, remote control or the power cord. Doing so may cause electric shock or fire.

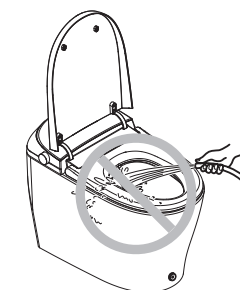

Note

■ Maintenance during Winter Season

During winter season, the water inside may freeze after long periods of storage and non-usage. Please take measures to prevent.

- Before connecting the product to the water supply and electrical outlet, allow it to defrost for 30 mins in a warm indoor environment.
- In cases of extreme cold/freezing/nozzle stuck in place, wrap the water input line with a warm towel. Never pour hot water or use a hot dryer directly on the toilet.

Troubleshooting

Experiencing issues with your product?

If the user should run into any issues, please consult the troubleshooting guide below. If problem persists, please contact a professional.

Power button		
Phenomenon	Fault Diagnoses	Solutions
Not working	Check whether the attaching plug is loose or not	Please check the circuit
	Check whether the power is switching on or off (the power light is not on)	Press rotated switch for 3s, the power light is on.
	Check whether there is any electric leakage or not (the light of leakage protection plug is not on)	Unplug the attaching plug from the socket, plug it again later. Press the reset switch of the leakage protection plug, if it is still not working, please unplug the attaching plug and contact with local distributor to repair.
Wash functions		
Phenomenon	Fault Diagnoses	Solutions
No water from the spout	Check whether or not the water supply cuts off	Wait for the water supply restoring
	Check whether or not the angle valve switches off	Open the angle valve
	Check whether or not the water filter is blocked	Clean the filter mesh or change the water filter
	Check whether or not the inlet pipe is flexed	The inlet pipe must be straight
The intensity of cleaning is not strong enough	Check whether or not the water pressure of cleaning switch to low level or not	Regulate the water pressure according to the instruction manual
	Check whether or not the inlet filter is blocked	Clean the filter mesh or change the water filter
Unusual water flow from the spout	Abnormal operation	Unplug the attaching plug for one minute and then plug it again
The water temp is not warm enough	Check whether or not the water supply switches to low level	Regulate the water temp according to the instruction manual
The cleanser is always leaking	Solenoid valve no longer has any effect	Please contact with our qualified maintenance personnel for repairing
The cleaning function is not working normally	The human induction system of the toilet seat no longer has any effect	Please contact with our qualified maintenance personnel for repairing

Dryer		
Phenomenon	Fault Diagnoses	Solutions
The dryer blows cold air	Check whether or not the dryer switches off	Regulate the temperature of dryer according to the instruction manual
	Check whether or not the heating element of dryer is damaged	Please contact with our qualified maintenance personnel for repairing
Heated seat		
Phenomenon	Fault Diagnoses	Solutions
The seat temp is too low or is not hot	Check whether or nor the temp of toilet seat is on the "off" position	Regulate the temperature of toilet seat according to the instruction manual
Remote Control		
Phenomenon	Fault Diagnoses	Solutions
The blue light of water temp is flickered	Low battery	Please replace a new battery
Remote control is not working	Check whether or not there is any water on the remote control	Wipe off water by dry towel
Toilet Bowl		
Phenomenon	Fault Diagnoses	Solutions
The product is not flushed clean	No power supply	Power restoration
	No water from the spout	Please contact with our qualified maintenance personnel for repairing
	No water but have the sound of flushing	Check whether or not the pipeline is blended or not, please keep the water supply pipeline open and smooth
	have water all the time	Please contact with our qualified maintenance personnel for repair if there is any unusual from the water inlet valve.

Specifications

Power rating		120V~
Frequency		60Hz
Rated power input		1050W(When inlet water temp in 59°F)
Seat and dryer temperature range		95°F ~131°F
Source water temperature range		41°F ~104°F
Water supply type		DN15(G1/2")
Water Inlet	Minimum pressure	11.6psi, ensuring a flow of water at least 3.65 GPM.
	Maximum pressure	108psi (static state)
Toilet	Flush type	Tornado flush
	Rough-in	rough-in 12in
Flushing	Way for heating	Transient heating
	Temp pf warm water	Off/about 93.2°F ~102.2°F (4 levels)
	Safety devices	Thermostat series, thermal fuse, flow detection device
Warm wind	Warm wind temp	Off/about 95 °F ~131°F (4 levels)
	Wind speed	Above 4m/s
	Safety devices	Bimetal thermostat series, thermal fuse
Seat ring	Seat ring temp	Off/about 93.2 °F ~102.2°F (4 levels)
	Safety devices	Thermal fuse
Remote control	Dimension	7.09in(L) * 2.48in(W) * 0.6in(H)
	Battery	Two AAA Batteries
Emergency flushing battery		One alkaline 9V Batteries
Power cable length		Appx. 47.2in
Product dimension		26.93in(L) * 15.55in(W) * 19.41 in(H)