




Installation instructions

Pre Rinse Faucets

2315300C

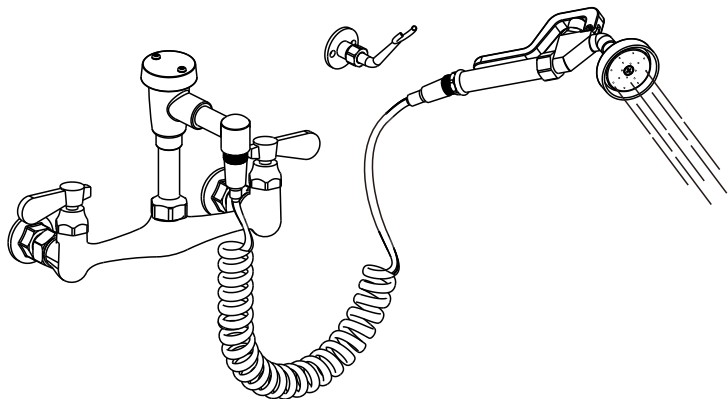


unit:inch (mm)

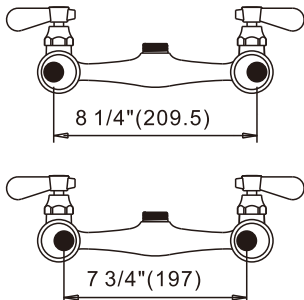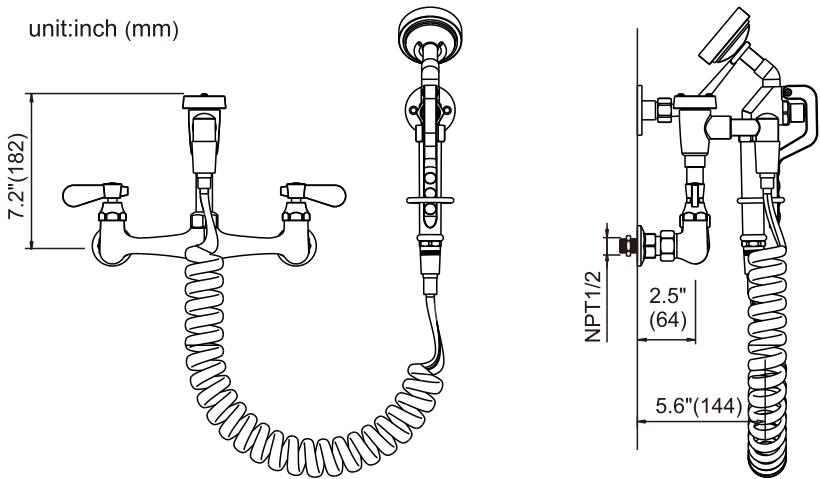


Attach supply lines (not included).

8 inches adjustable center hole distance.


Wall mounted faucet using a pair of G1/2" female inlets with 2" flanges. those inlets can adjust from 7 3/4" (197mm) to 8 1/4" (209.5), allowing you to fit them directly onto your facility's water lines with ease.

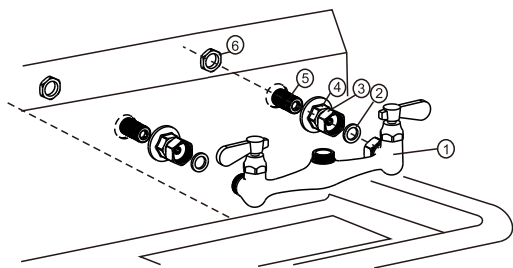


1. Connect the two flanges (3) into the two inlets (5) . Screw them tightly.
2. Connect the body (1) to the flanges (3),do remember the gaskets (2) inside.
The two flanges (3) are adjustable inlets.
- Unscrew the hexagon nut (4) on the flange (3) , rotate the flange(3) to the right the distance and screw the hexagon thread back tightly.
You can adjust the distance from 7 3/4"to8 1/4".
3. Turn out the hexagon (6),
Use the hexagon nut to lock the faucet and sink

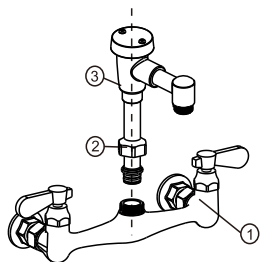

4. Insert the short riser with the add-on faucet (3) to the body (1) ,
Screw the thread (2) tightly.

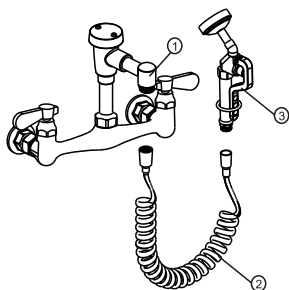

5. Attach hose (2) to the add-on faucet (1) ,
Take care of the gasket (pre-installed in the conical nut) ,
6. Attach hose (2) to hand shower(3) ,
Take care of the gasket (pre-installed in the conical nut)

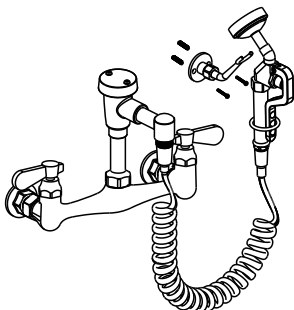

7. Fix one side of the wall bracket onto the wall .
8. Screw the hook,
9. Hang the sprayer on holder.

FLUSH SYSTEM/CHECK FOR LEAKS.
Turn on hot and cold water supplies and
flush water lines for one minute.
Check all connections at arrows for leaks.
Retighten if necessary, but do not overtighten.