









INSTALLATION INSTRUCTIONS

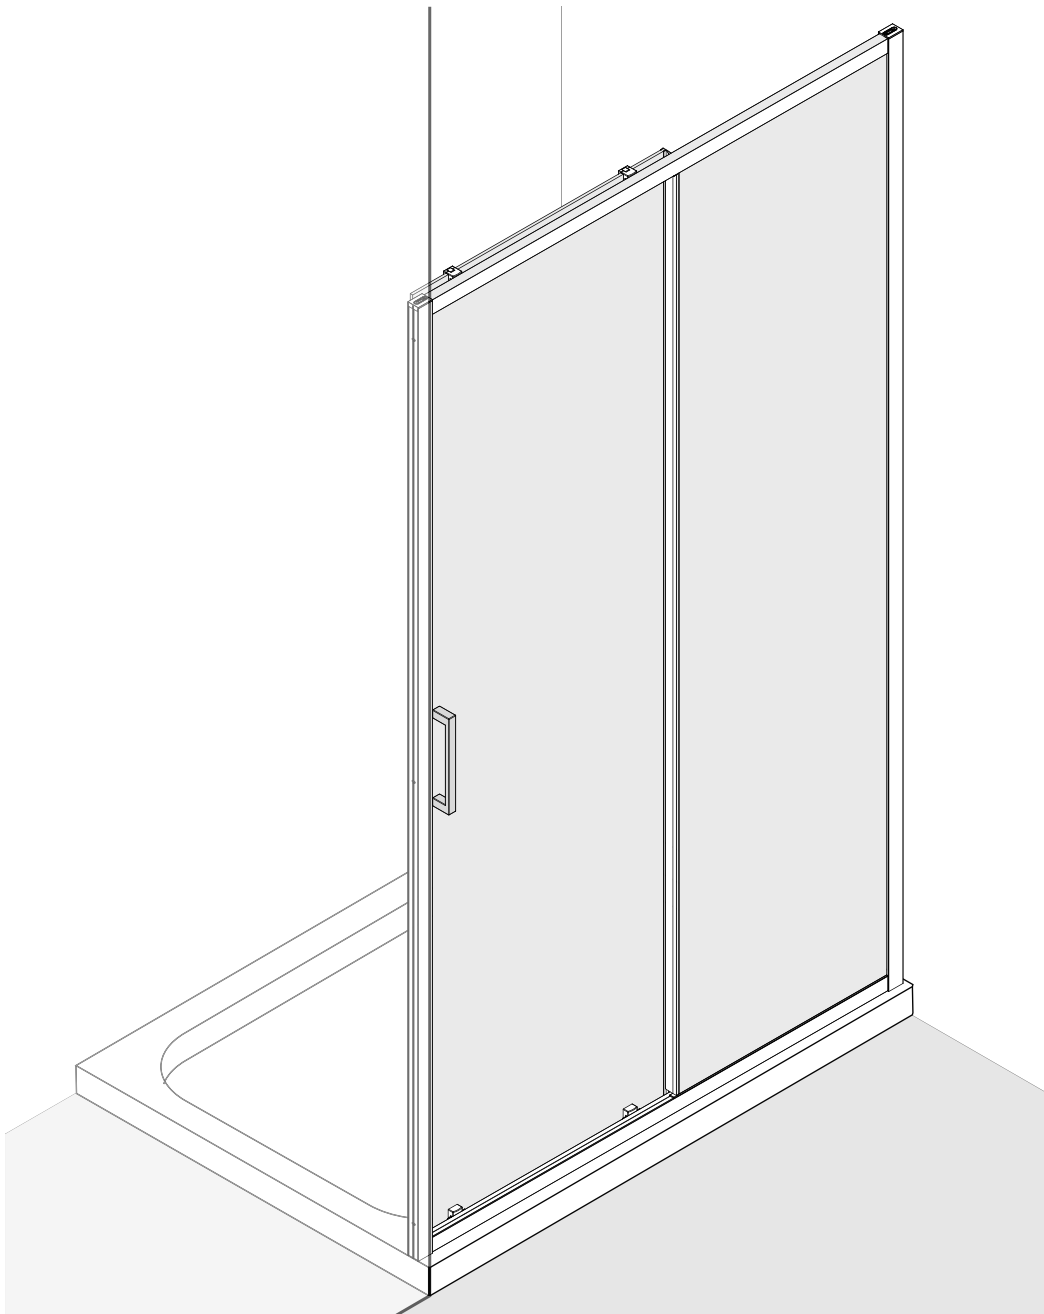


TT01




Parts List

ITEM		Quant.
(H)		1 Pc
(I)	 4x30	6 Pc
(J)		6 Pc
(K)	 5x14	2 Pc
(L)		2 Pc
(M)	 2.5+3mm	2 Pc
(N)		2L+2R Pc
(O)		2L+2R Pc

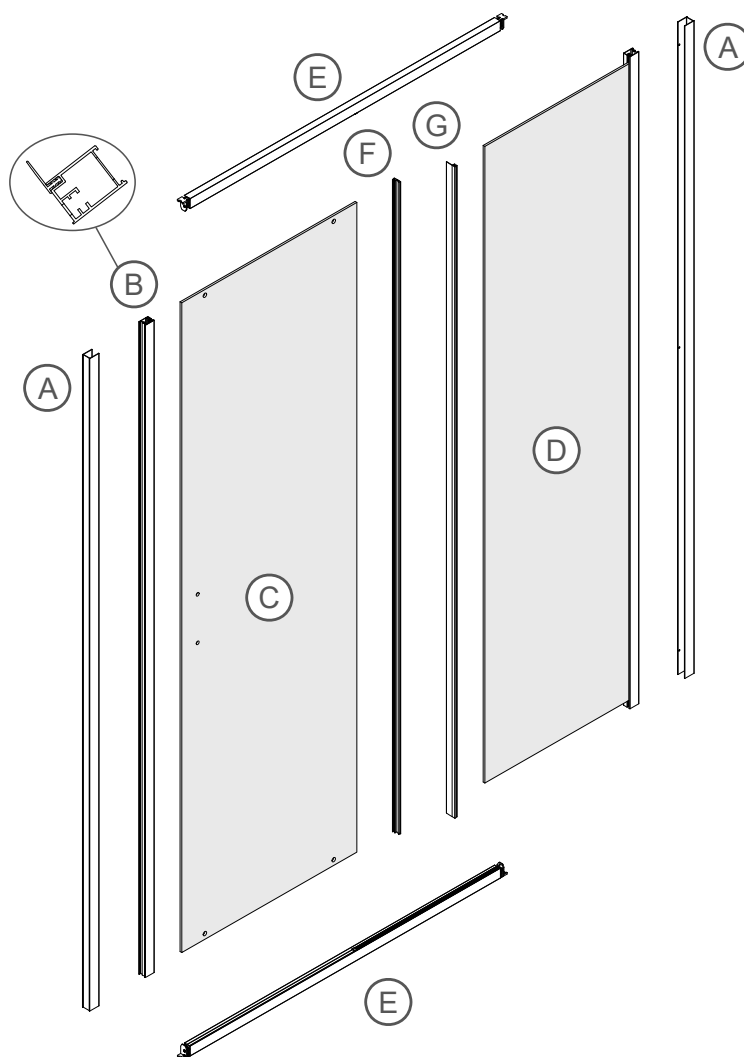

Tools Needed

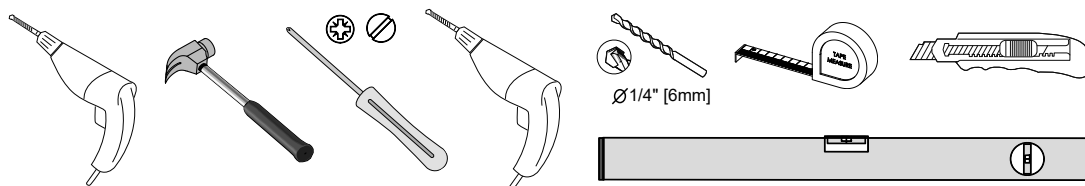

General Information


Please inspect the product immediately upon receipt for transit damage, missing packs/parts or manufacturing fault. Damage reported later cannot be accepted. Please handle the product with care avoiding knocks and shock loading to all sides and edges of the glass.

Notes: Safety glass can not be re-worked.


After use, your shower should be cleaned with soap and water. This is particularly important in hard water districts where insoluble lime salts may be deposited and allowed to build up. Cleaners of a gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.

Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question. Please keep these instructions for aftercare and customer service details.

LEFT OPEN

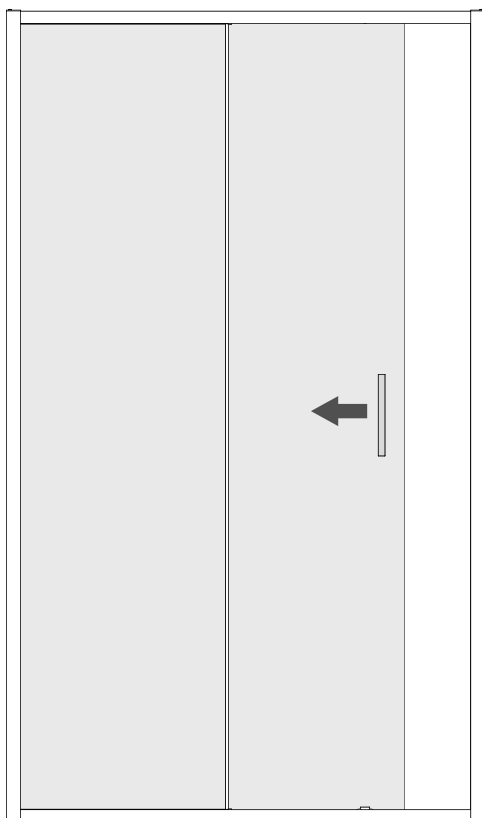


RIGHT OPEN

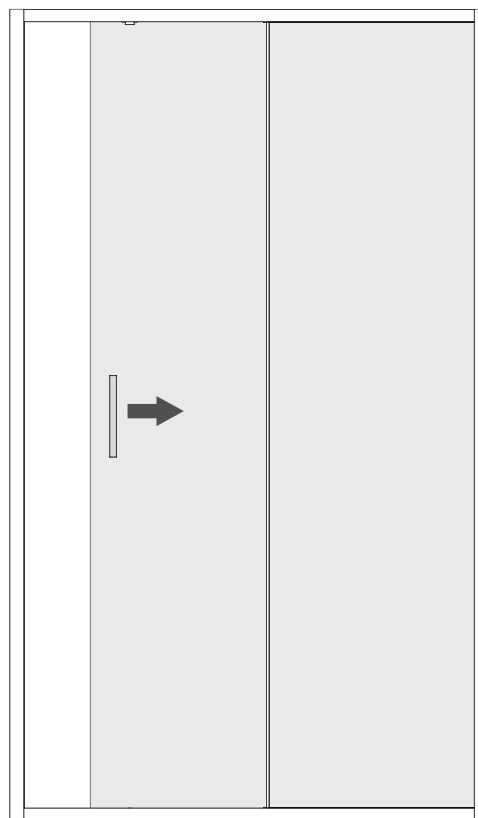



In this guide, this model is used to demonstrate this installation.

Step 01: Make sure the tray is 100% level and properly sealed in all directions.

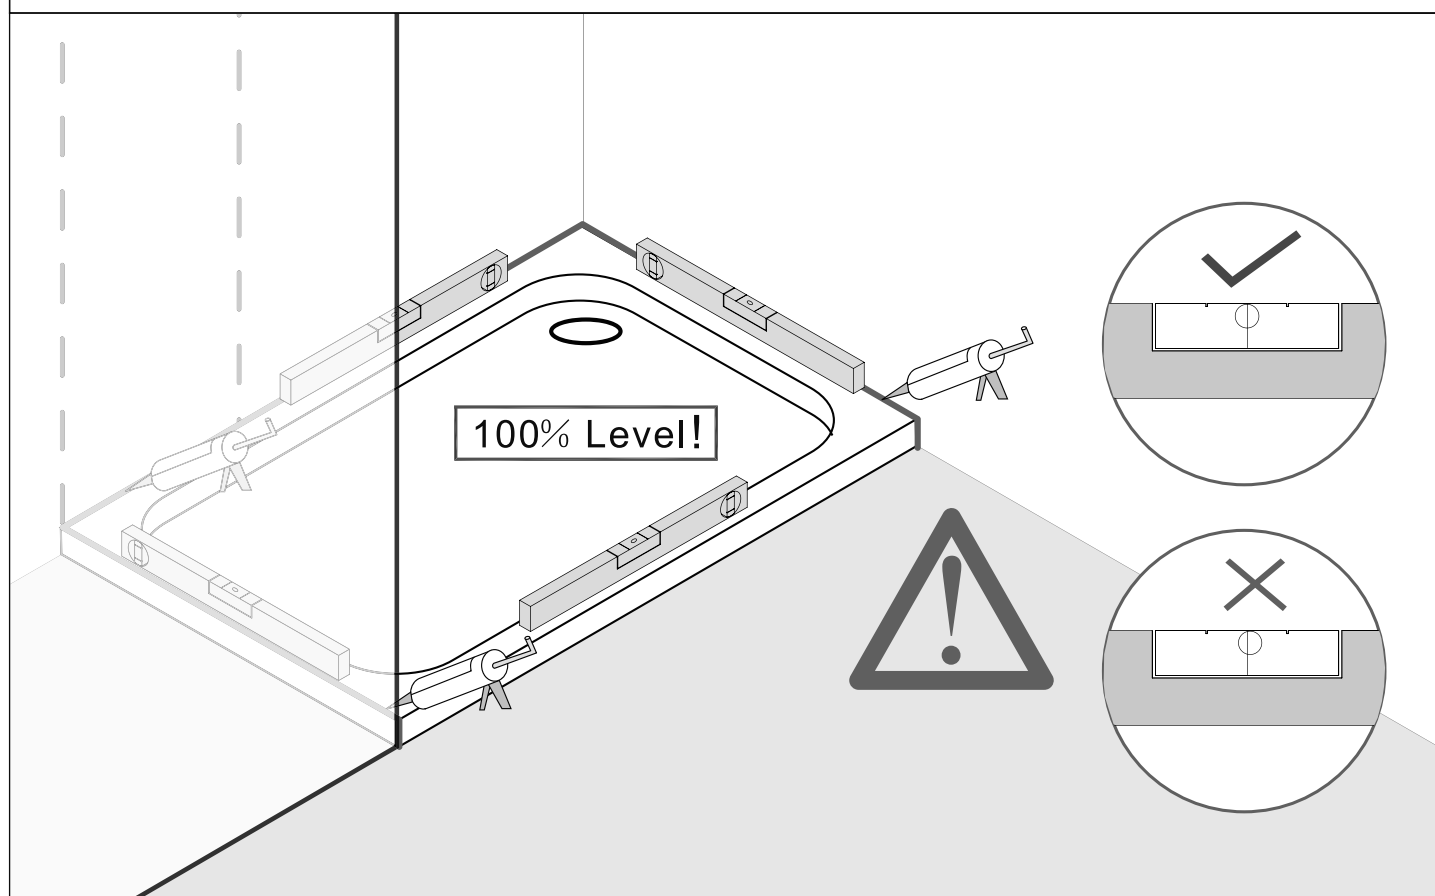

Step 02: Measure width 'X' of the installation site. Make sure the space fit for the purchased product!

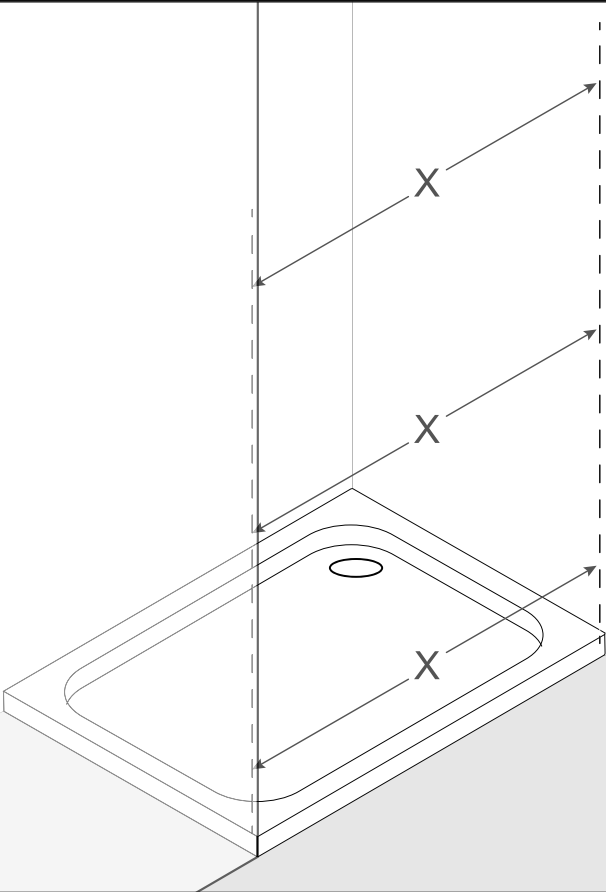

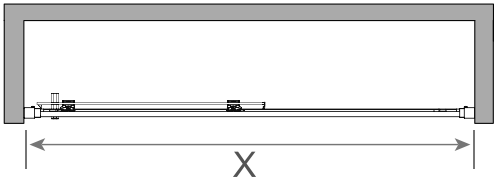






Measure X to make sure it is within the adjustment range!


Size	X
48" [1219mm]	46 7/16" - 48" [1179-1219mm]
54" [1372mm]	52 7/16" - 54" [1332-1372mm]
60" [1524mm]	58 7/16" - 60" [1484-1524mm]


Step 03: Place the wall jambs(A) against the wall and let their exterior surface 3/8"(10mm) away from the tray edge. Make sure wall jambs are plumb then mark screw hole positions. Put wall jambs aside.
* Drill screw holes, and put wall plugs(J) in if needed.*

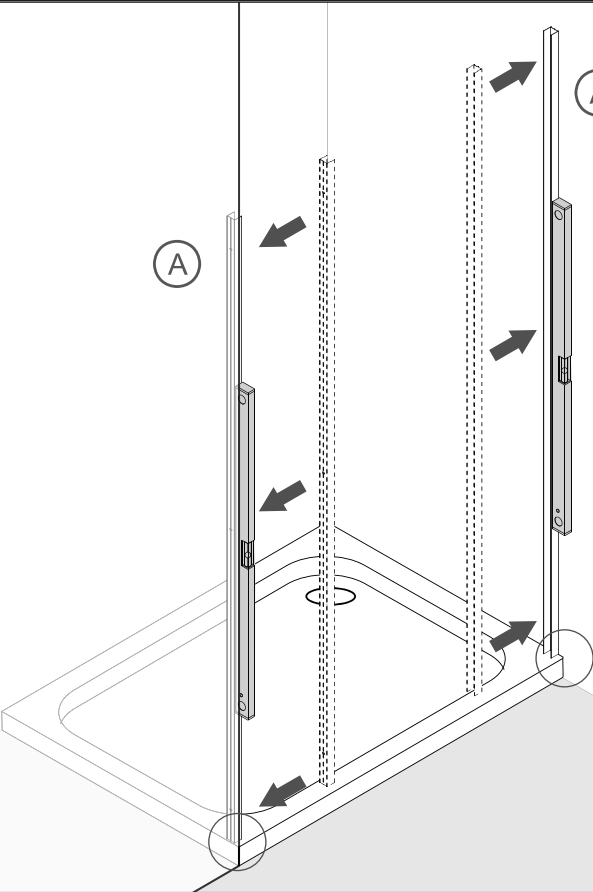


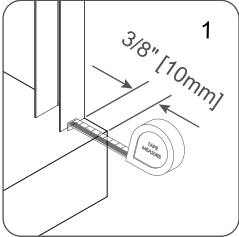

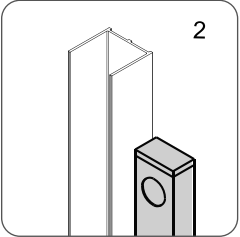

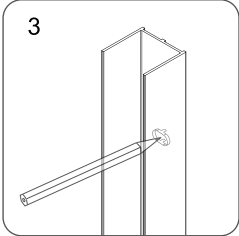

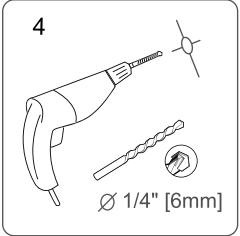

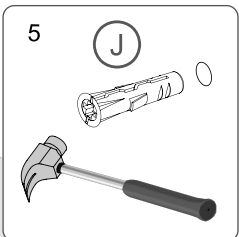





After inserting wall plug, cut any protruding part of it with knife!

Wall plugs(J) are optional according to installation conditions!


Step 04: Place the bottom rail(E) first, put wall jambs(A) back in positions where were marked, and secure them with screws(I).

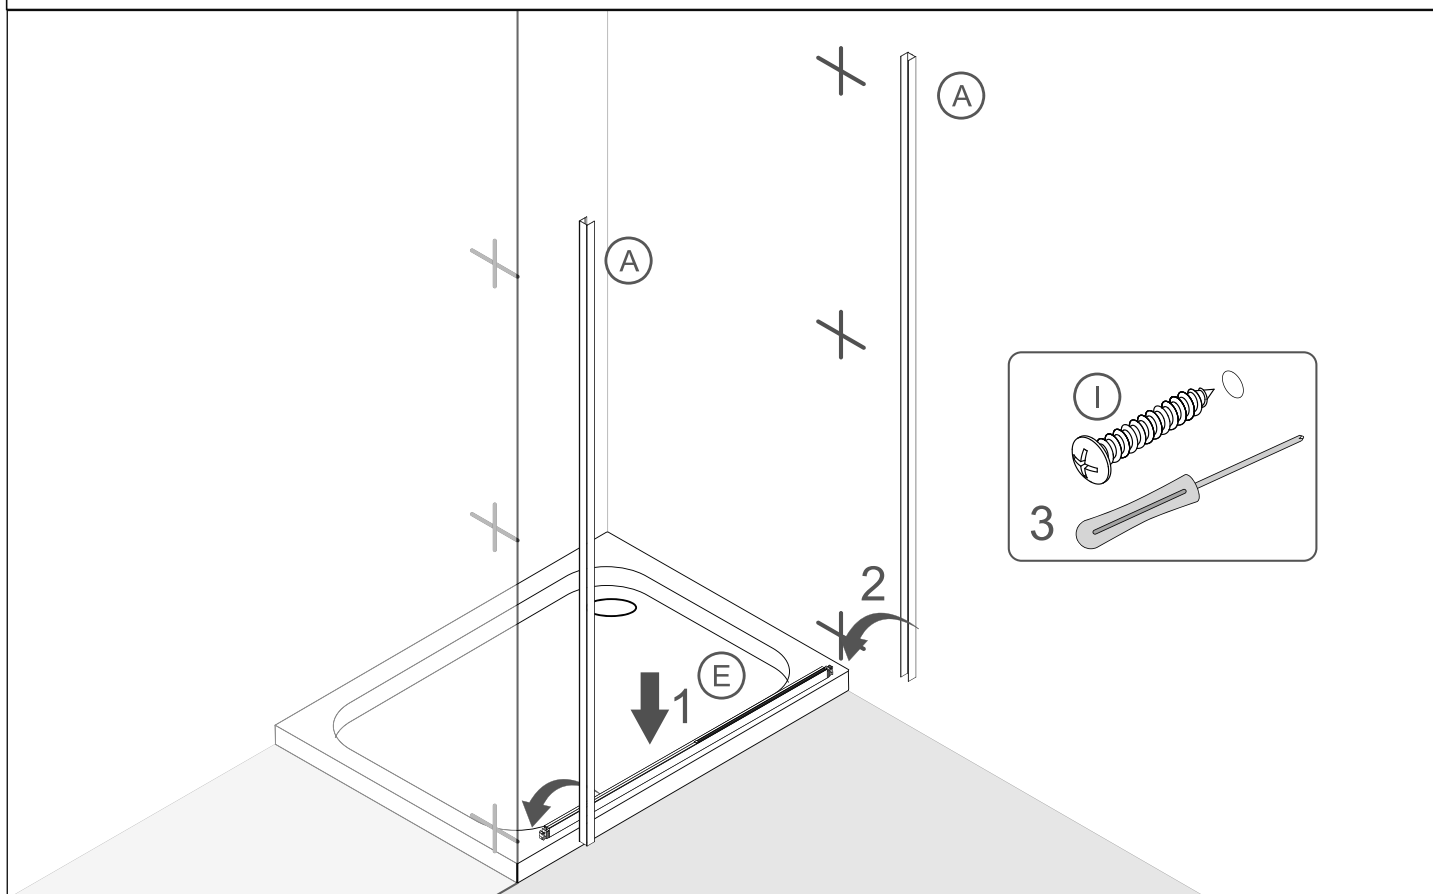


Step 05: Remove protectors on the profiles. Install fixed panel(D). Pay attention to the correct direction.

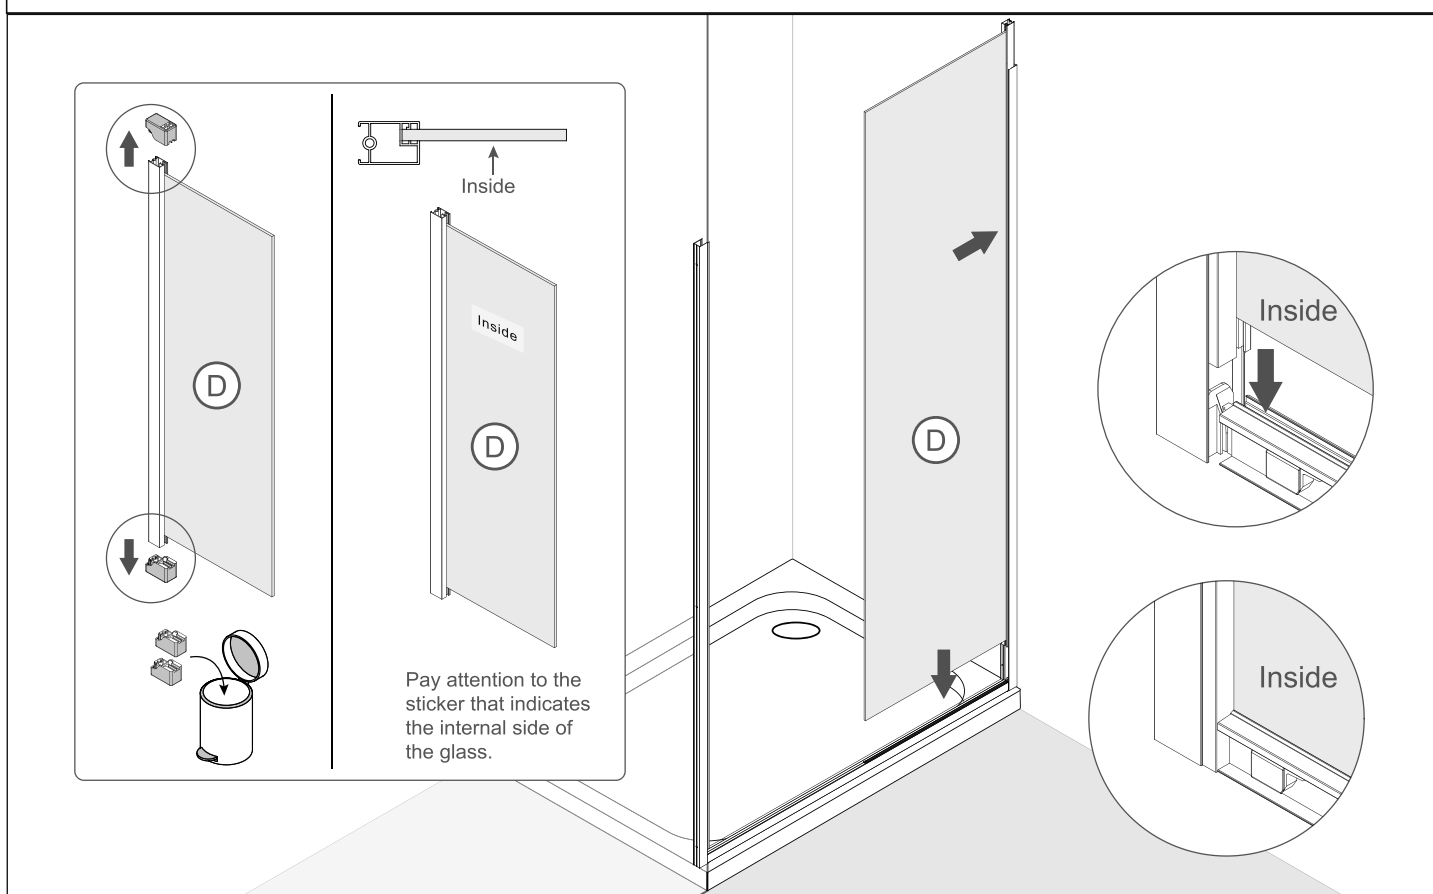


Step 06: Install vertical profile(B) on closing side. Pay attention to the correct direction.

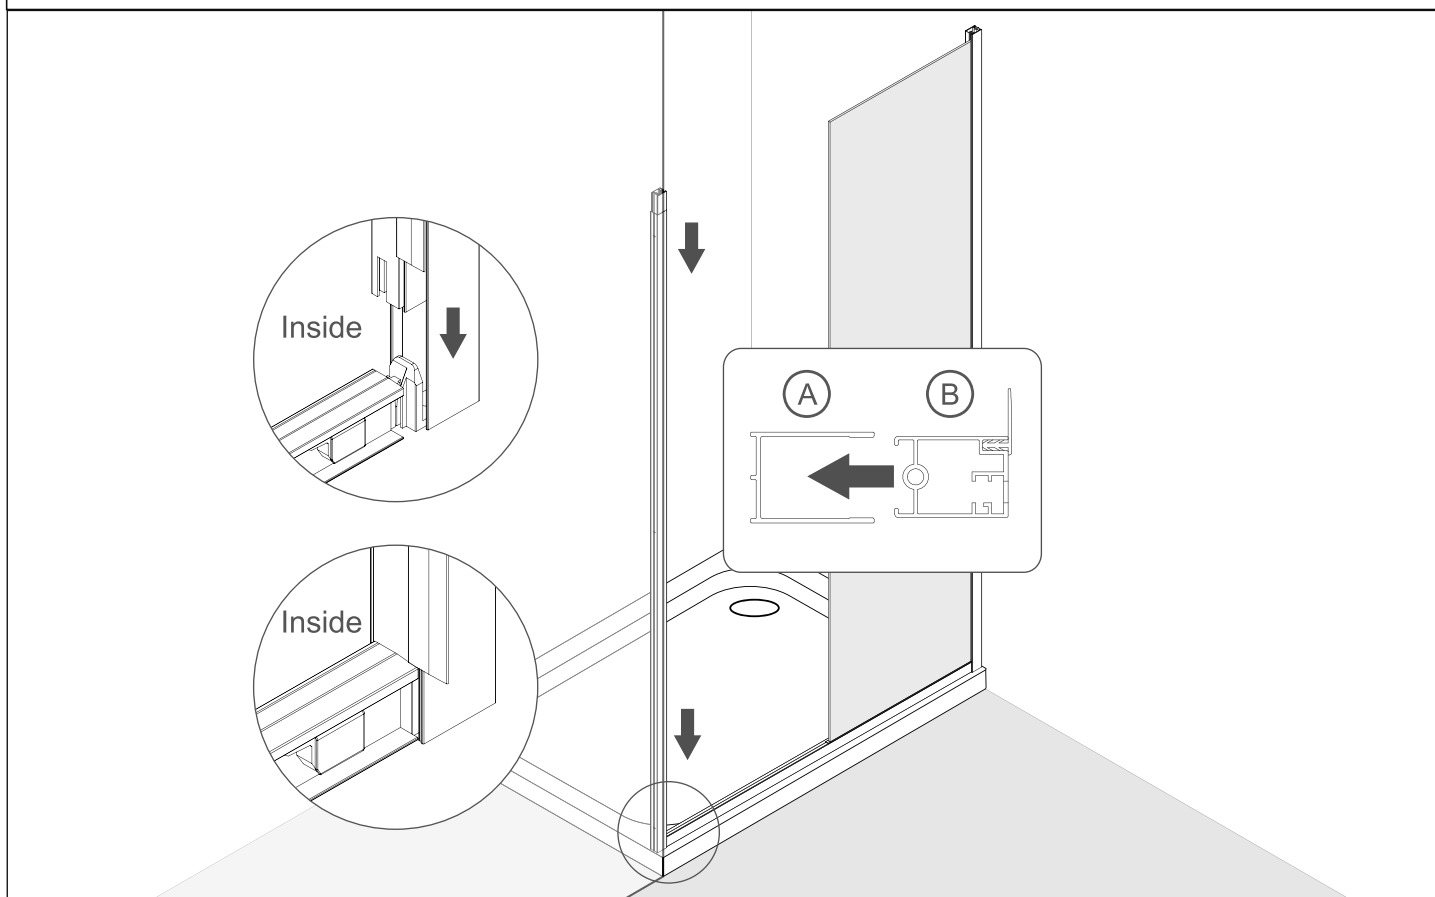


Step 07: Fit the top rail(E).

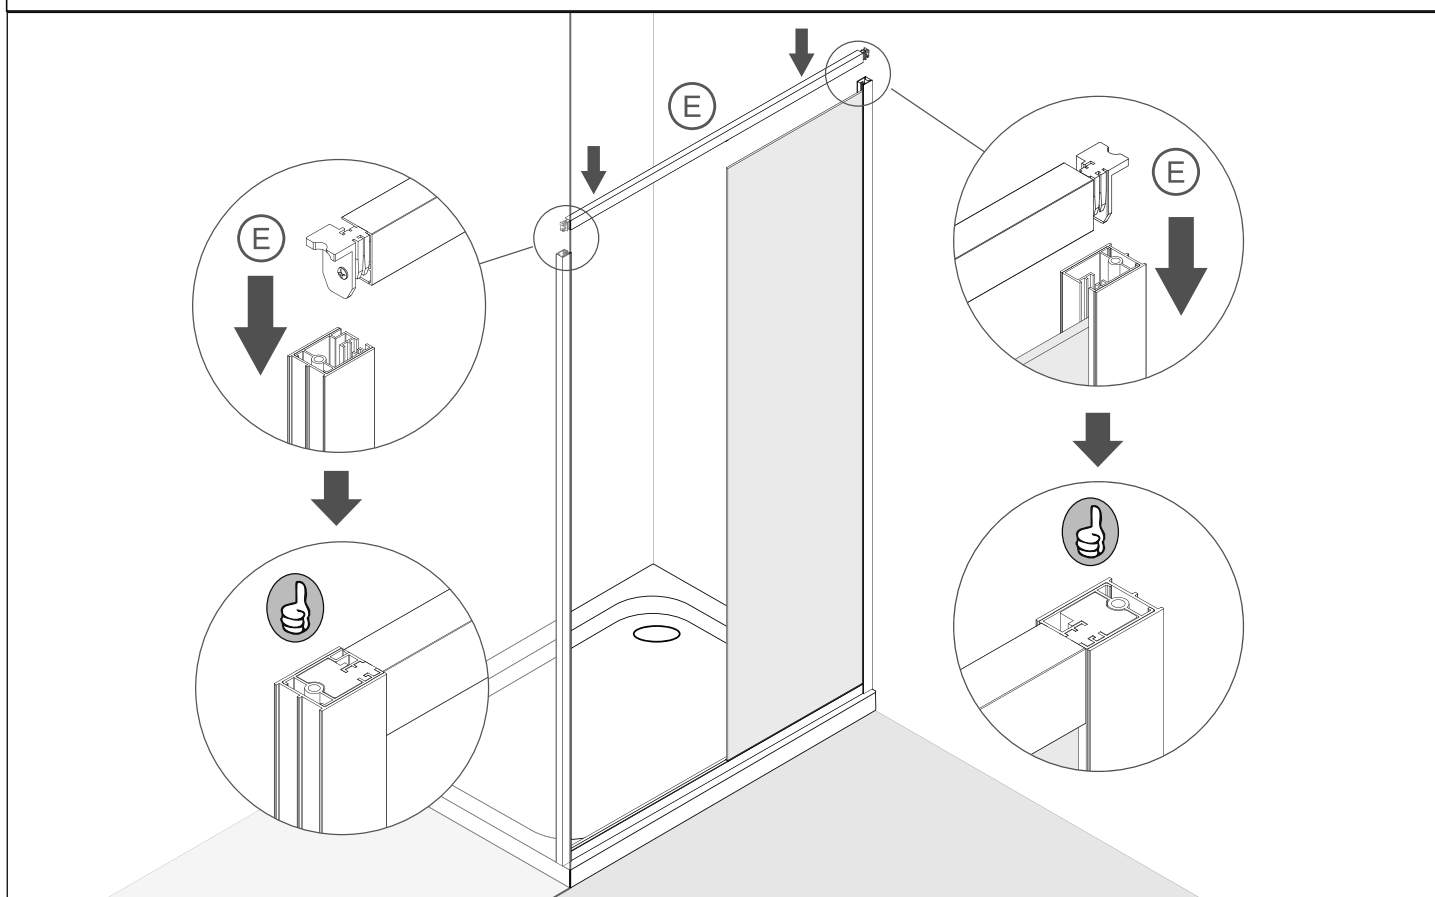


Step 08: Adjust the whole frame. Make sure to have even gaps of 0"-3/4"[0-20mm] on both sides. Use allen key(M) to tighten screws(K) to secure top caps(L).

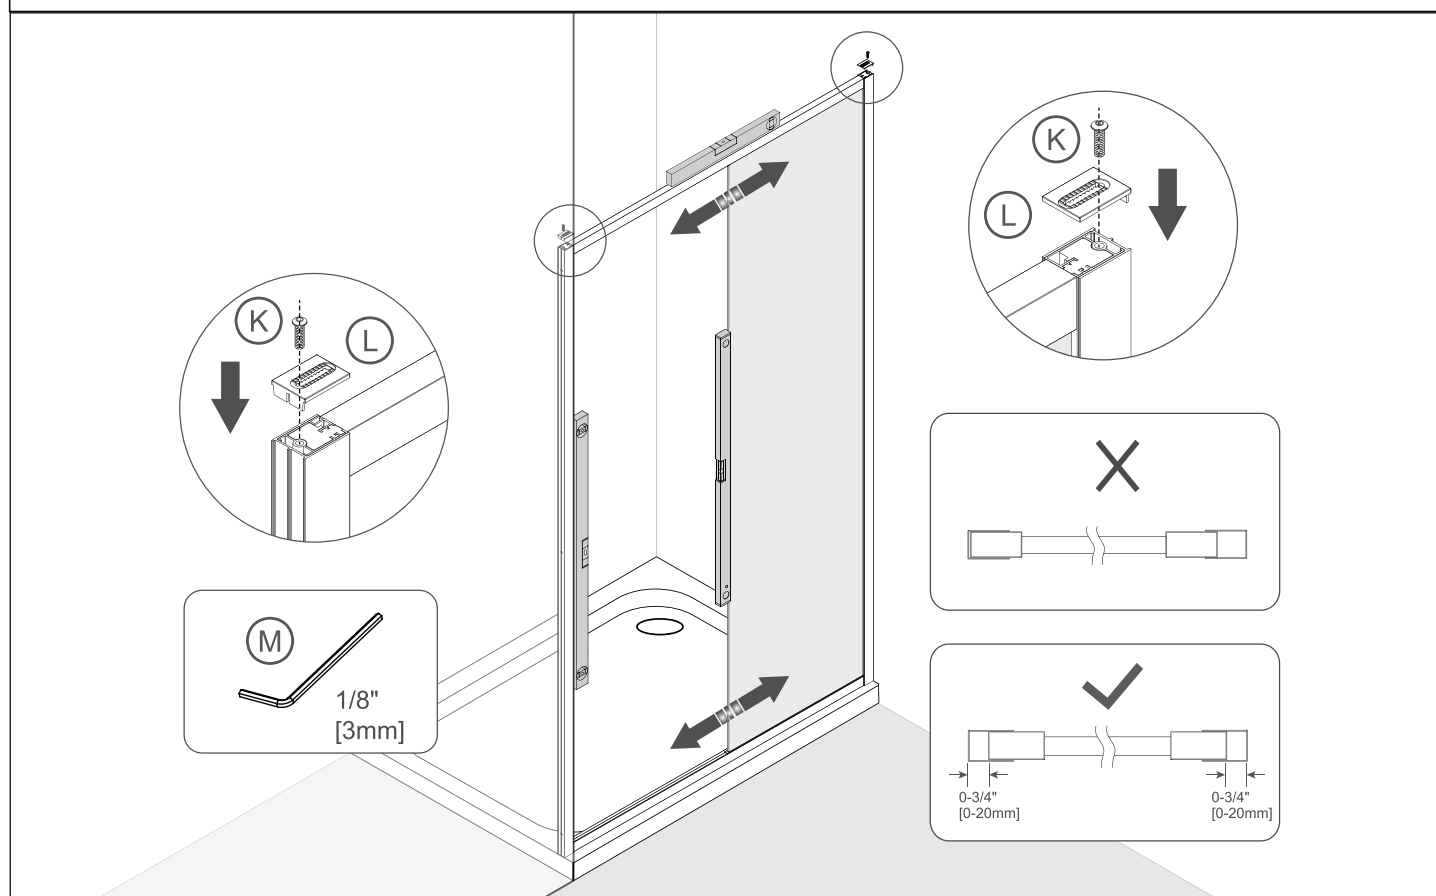


Step 09: Install top rollers(N) and bottom rollers(O) to mobile glass. Pay attention to the correct direction.

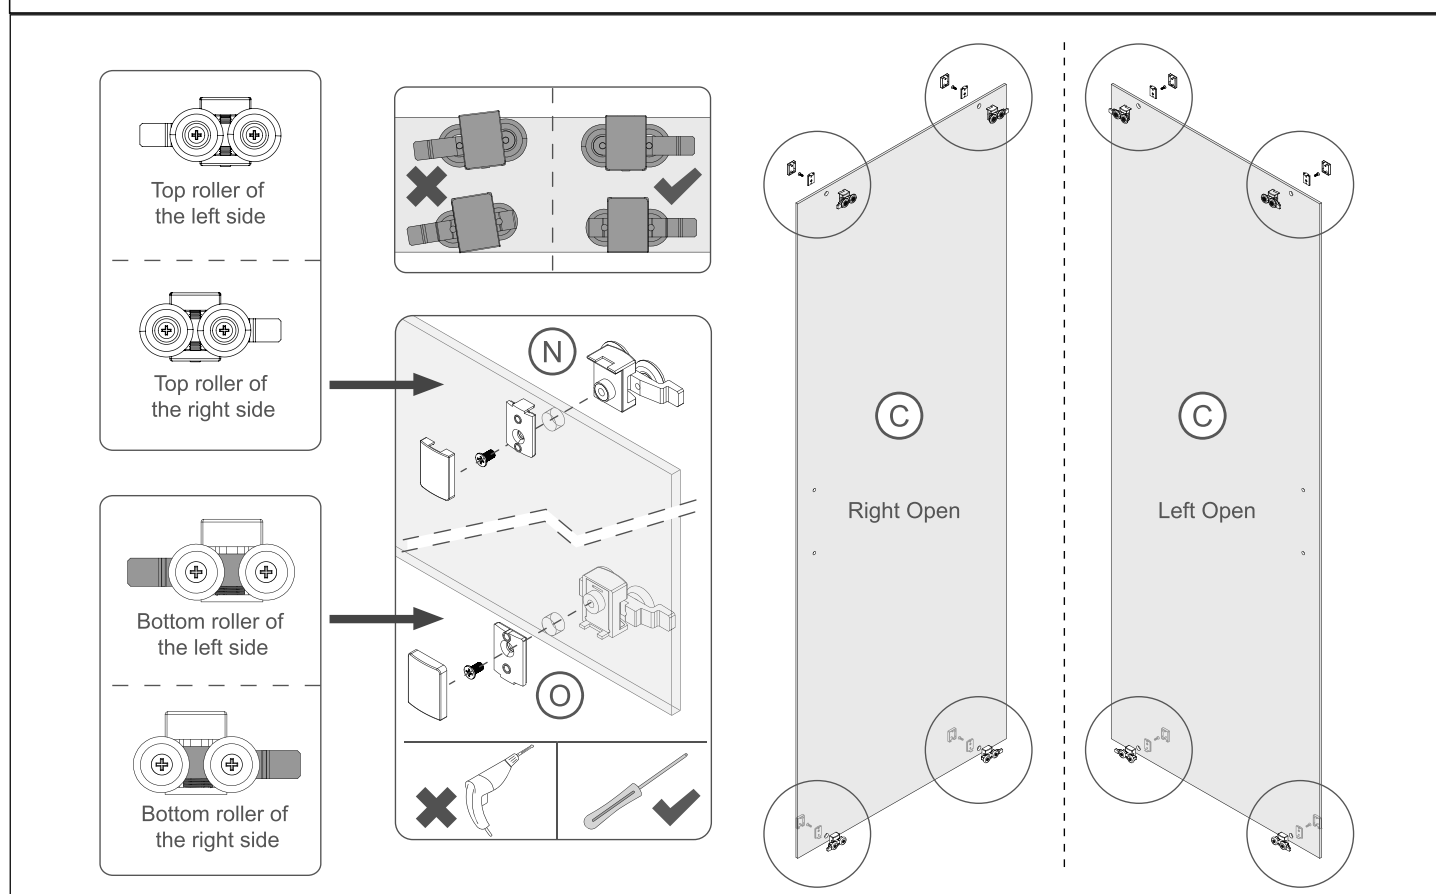


Step 10: Hang door glass to the top rail. Press the wheel arms to let bottom rollers go into the bottom rail.

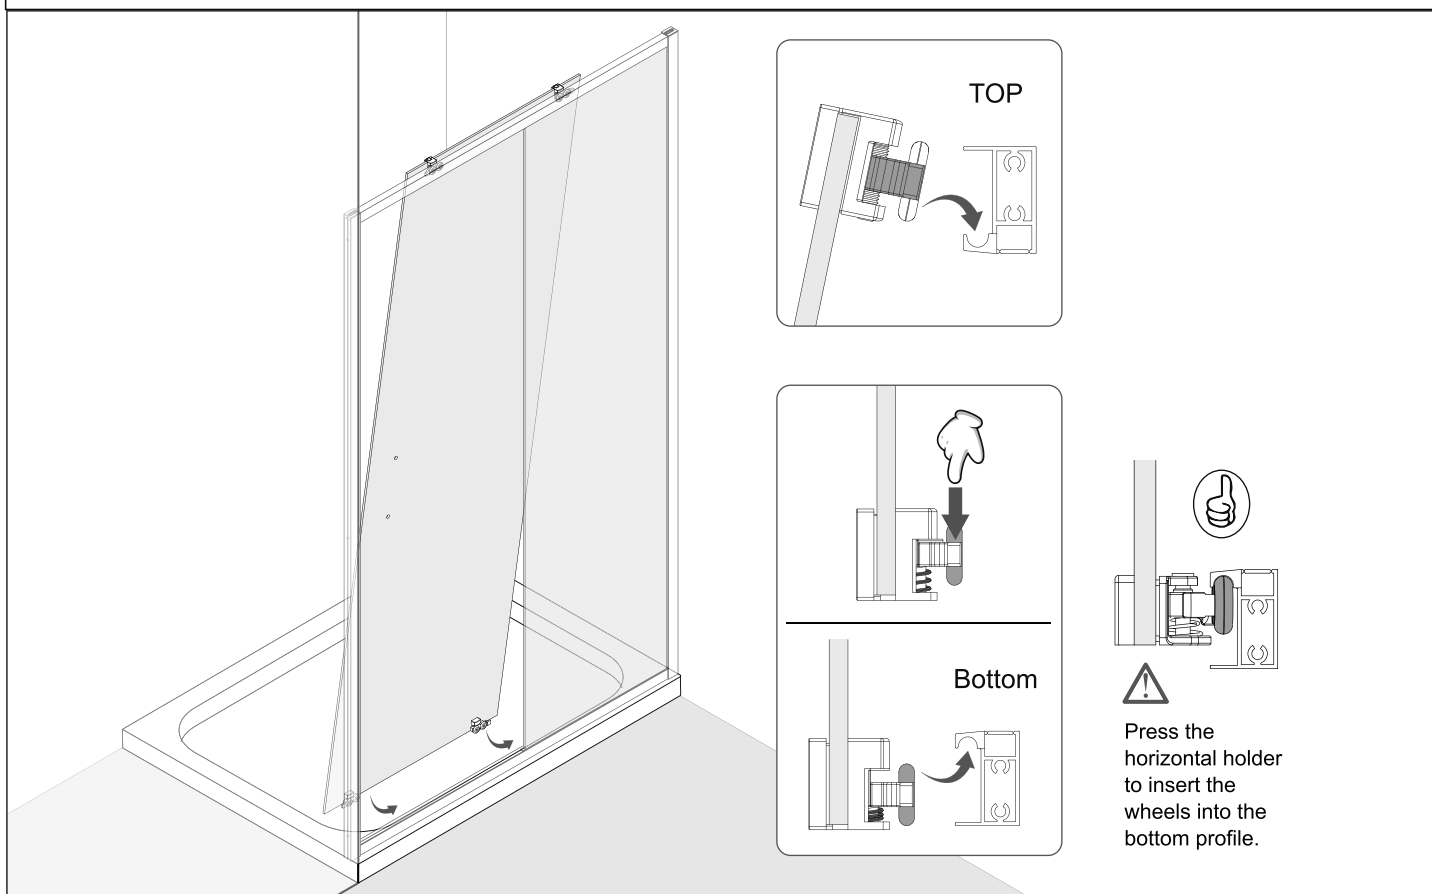

Step 11: Fit middle seal(F) to door glass from the bottom up. Fit the handle(H). Caulking the bottom where fixed glass and the small plastic piece meet. Fit the middle seal(F) to fixed glass from the bottom up.

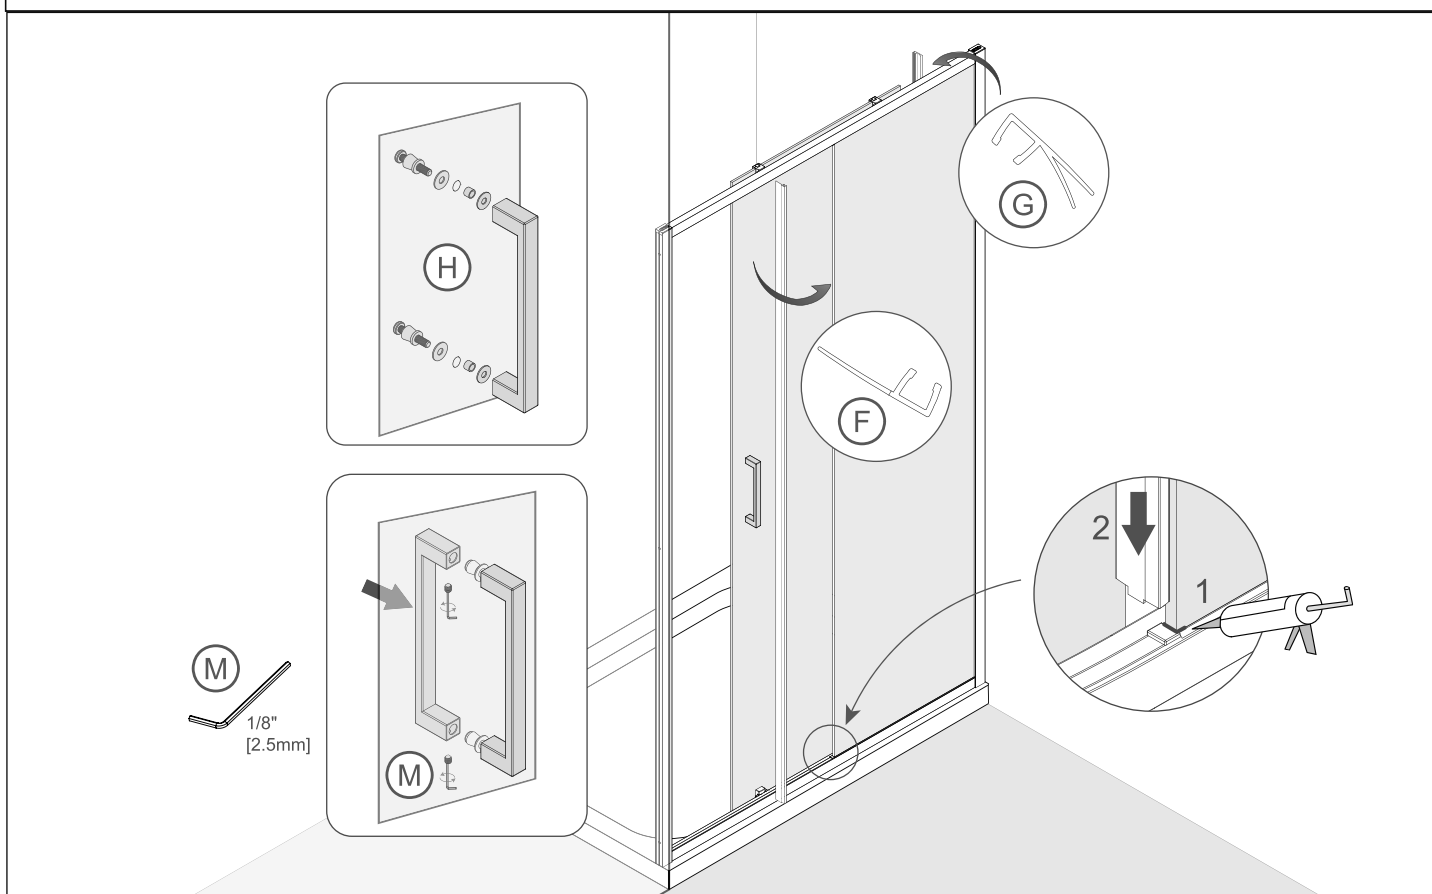

Step *12: If door glass does not align with vertical profile, follow below steps to adjust.

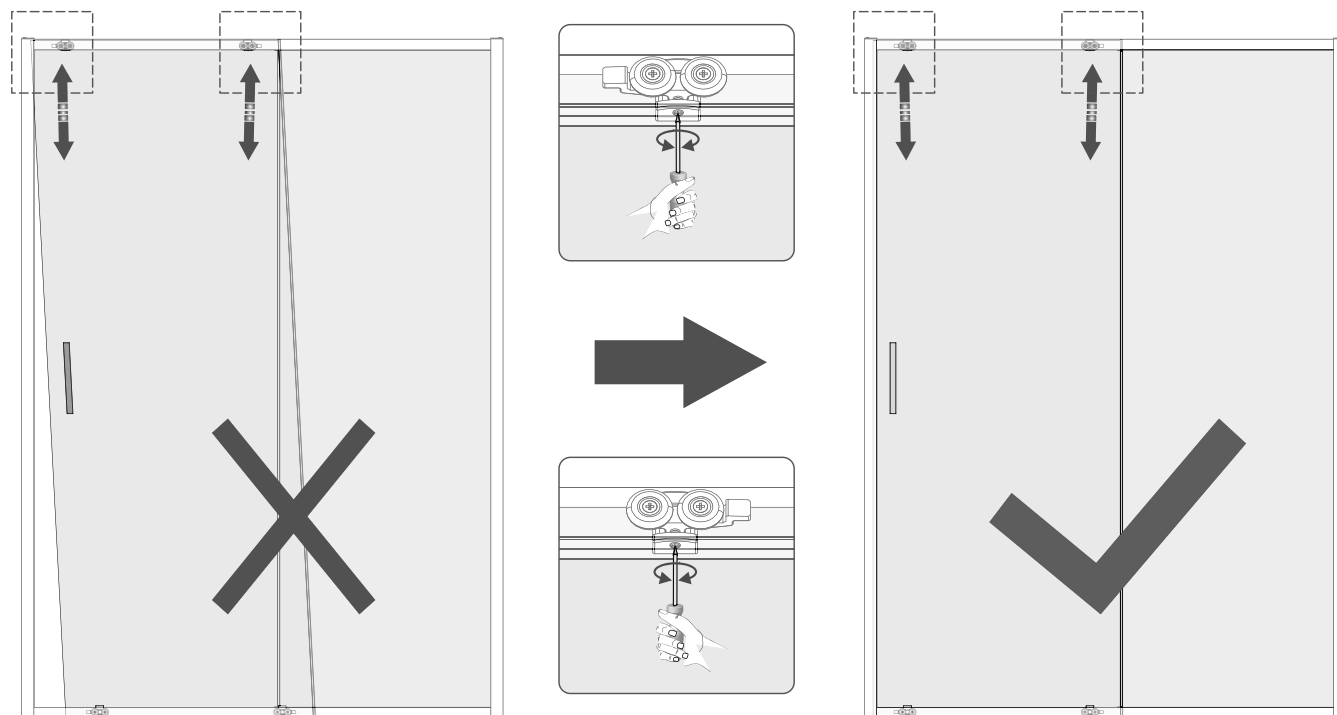

Step 13: Before caulking make sure all surfaces are clean, dry and free from any residue such as grout. **Attention:** Do not use the enclosure and keep it dry for 24 hours.

