



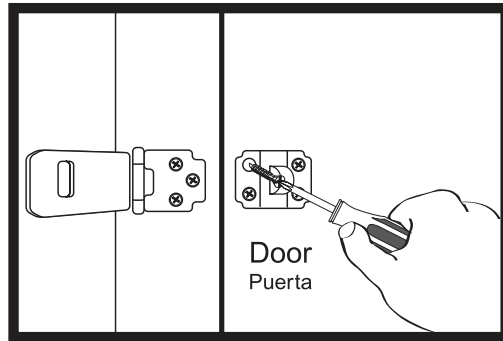

Wear Safety Goggles
Utilice Gafas Protectoras

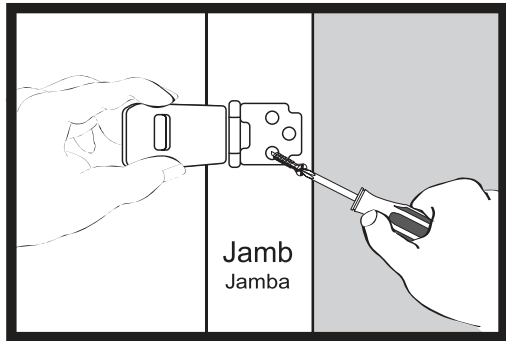

English

Ideal for securing doors, cabinets and gates.

Instructions:

1. Place hasp on desired location on jamb and mark screw holes.
2. Drill 3/32" pilot holes.
3. Install and tighten screws.
4. Place latch opposite of hasp and mark screw holes.

Note: Position to compensate for sag.

5. Drill 3/32" pilot holes.
6. Install and tighten screws.

Español

Ideal para asegurar puertas, gabinetes y portones.

Instrucciones:

1. Coloque el pasador en la ubicación deseada de la jamba y marque los orificios para los tornillos.
2. Perfore orificios guía de 3/32" (2.4mm).
3. Instale y ajuste los tornillos.
4. Coloque el pestillo del lado contrario del pasador y marque los orificios para los tornillos.

Nota: Posición a compensar para la holgura.

5. Perfore orificios guía de 3/32" (2.4mm).
6. Instale y ajuste los tornillos.

MADE IN CHINA
HECHO EN CHINA

Distributed by
Home Depot U.S.A., Inc.
2455 Paces Ferry Rd. NW
Atlanta, GA 30339