






Ultrabond
ECO[®] 222


**Cork Underlayment
Adhesive**

**Adhesivo para
contrapisos
de corcho**



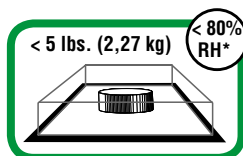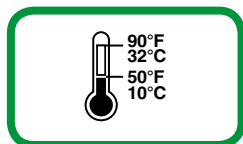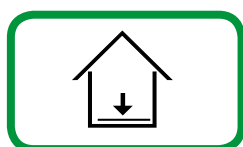

* RH = relative humidity /
humedad relativa

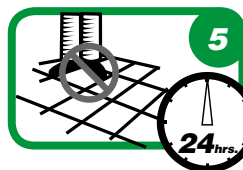

APPROXIMATE COVERAGE / COUVERTURE APPROXIMATIVE / COBERTURA APROXIMADA

Cork underlayment up to 1/2" (12 mm) thick
Contrapiso de corcho de hasta 12 mm
(1/2 de pulgada) de grueso
1/8" x 1/8" x 1/16" (3 x 3 x 1,5 mm)
260 – 340 sq. ft. / 4 U.S. gals.
(24,2 – 31,6 m² / 15,1 L)



Smooth-backed carpet and felt-backed sheet vinyl
Alfombra con entramado suave y pisos laminados
de vinilo con entramado de fieltro
1/16" x 1/16" x 1/16" (1,5 x 1,5 x 1,5 mm)
500 – 740 sq. ft. / 4 U.S. gals.
(46,5 – 68,7 m² / 15,1 L)





For the most current product data and BEST-BACKEDSM warranty information, visit www.mapei.com.

DESCRIPTION

Ultrabond ECO 222 is a standard, high-tack, latex-based adhesive that is designed for the installation of cork underlayment that is used for sound dampening under tile and stone. *Ultrabond ECO 222* can also be used to install felt-backed vinyl sheet flooring and ActionBac carpet.

SURFACE PREPARATION

- All substrates must be properly prepared, structurally sound, dry, solid and stable.
- The substrate should be clean and free of dust, dirt, oil, grease, paint, curing agents, concrete sealers, loosely bonded toppings, loose particles, and any other substance or condition that may prevent or reduce adhesion.

CLEANUP

- Promptly clean any adhesive smudges from tools and the underlayment/flooring material's surface with water while the adhesive is still fresh/wet.

PROTECTION

- Protect from traffic for at least 24 hours.

Refer to technical and safety data sheets as well as MAPEI's Website for more information regarding uses, application, limitations and safety.



Para los datos del producto más actuales y la información de la garantía BEST-BACKEDSM, visite www.mapei.com.

DESCRIPCION

Ultrabond ECO 222 es un adhesivo estándar con base de látex y de agarre rápido que está diseñado para la instalación bajo losetas y piedra de contrapisos de corcho usados para amortiguar el sonido. *Ultrabond ECO 222* puede usarse también para instalar pisos laminados de vinilo con entramado de fieltro y alfombras ActionBac.

PREPARACION DE LA SUPERFICIE

- Todos los sustratos deben estar preparados adecuadamente, con una buena estructura, secos, sólidos y estables.
- El sustrato debe estar limpio y libre de polvo, suciedad, grasa, pintura, agentes de curado, selladores de concreto, capas finales mal adheridas, partículas sueltas y cualquier otra sustancia o condición que pudiera prevenir o reducir la adhesión.

LIMPIEZA

- Limpie rápidamente con agua los rastros de adhesivo dejados por las herramientas y en la superficie de los pisos o contrapisos mientras el adhesivo esté fresco/húmedo.

PROTECCION

- Protéjase del tráfico por al menos 24 horas.

Consulte las Fichas de seguridad así como el sitio de Internet de MAPEI para más información sobre los usos, aplicación, limitaciones y seguridad.