E-mail: eakyhom@outlook.com

211/211B/211G

Check carefully affter opening the box.Make sure there are no missing pieces and the shower doors do not have any cracks.During installation.please be careful with the corners of the glass doors. They are very fragile.After the shower doors are installed, the sliding doors should be parallel to each other to open and close smoothly, without gaps or water seepage, and the shower and the bottom basin should be sealed with silicone between them

Parts list

A-1×2 Internal accessories length：35mm	A-2×2 Internal accessories length：25mm	B-1×2 Internal accessories length：40mm	B-2×2 Internal accessories length：30mm	 C×2 Internal accessories Nail bit	 D×1 Internal accessories Guide Block	 E×2 Internal accessories Aluminum Cover-Right
 F×1 Internal accessories Anti-splash Threshold	G×2 Internal accessories Glass Bracket	 H×2 Internal accessories length:190mm	 I×2 Internal accessories Guide Rail Bracket	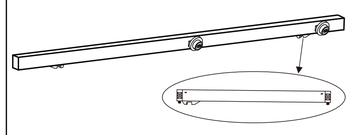 J×1 Internal accessories Upper Guide Rail	 K×2 Internal accessories Water blocking	Aluminum Cover-Right  L×1 Internal accessories Water blocking
M×1 Internal accessories Handle	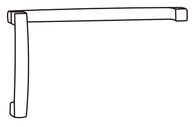 N×1 Internal accessories Handle	 O×1 Internal accessories Glass	P×1 Internal accessories Glass	Q×1 Internal accessories Nail bit	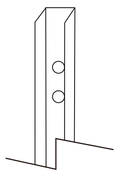 R×1 Aluminum material Measuring Tool	

Tools Not Included

Phillips screwdriver Tools needed	Assorted Drill Bits Tools needed
Glue gun Silicona Nail bit	 Adjustable Wrench Nail bit
 Internal accessories Tools needed	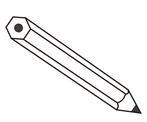 Internal accessories Tools needed
Percussion Drill Tools needed	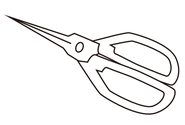 Internal accessories Tools needed
Level Tools needed	

The following instructions will guide you through the installation of a sliding shower door.

*Glass doors can be installed on either side.
Frame parts will need to be flipped over to install the sliding door on the left or right side.

Package contents

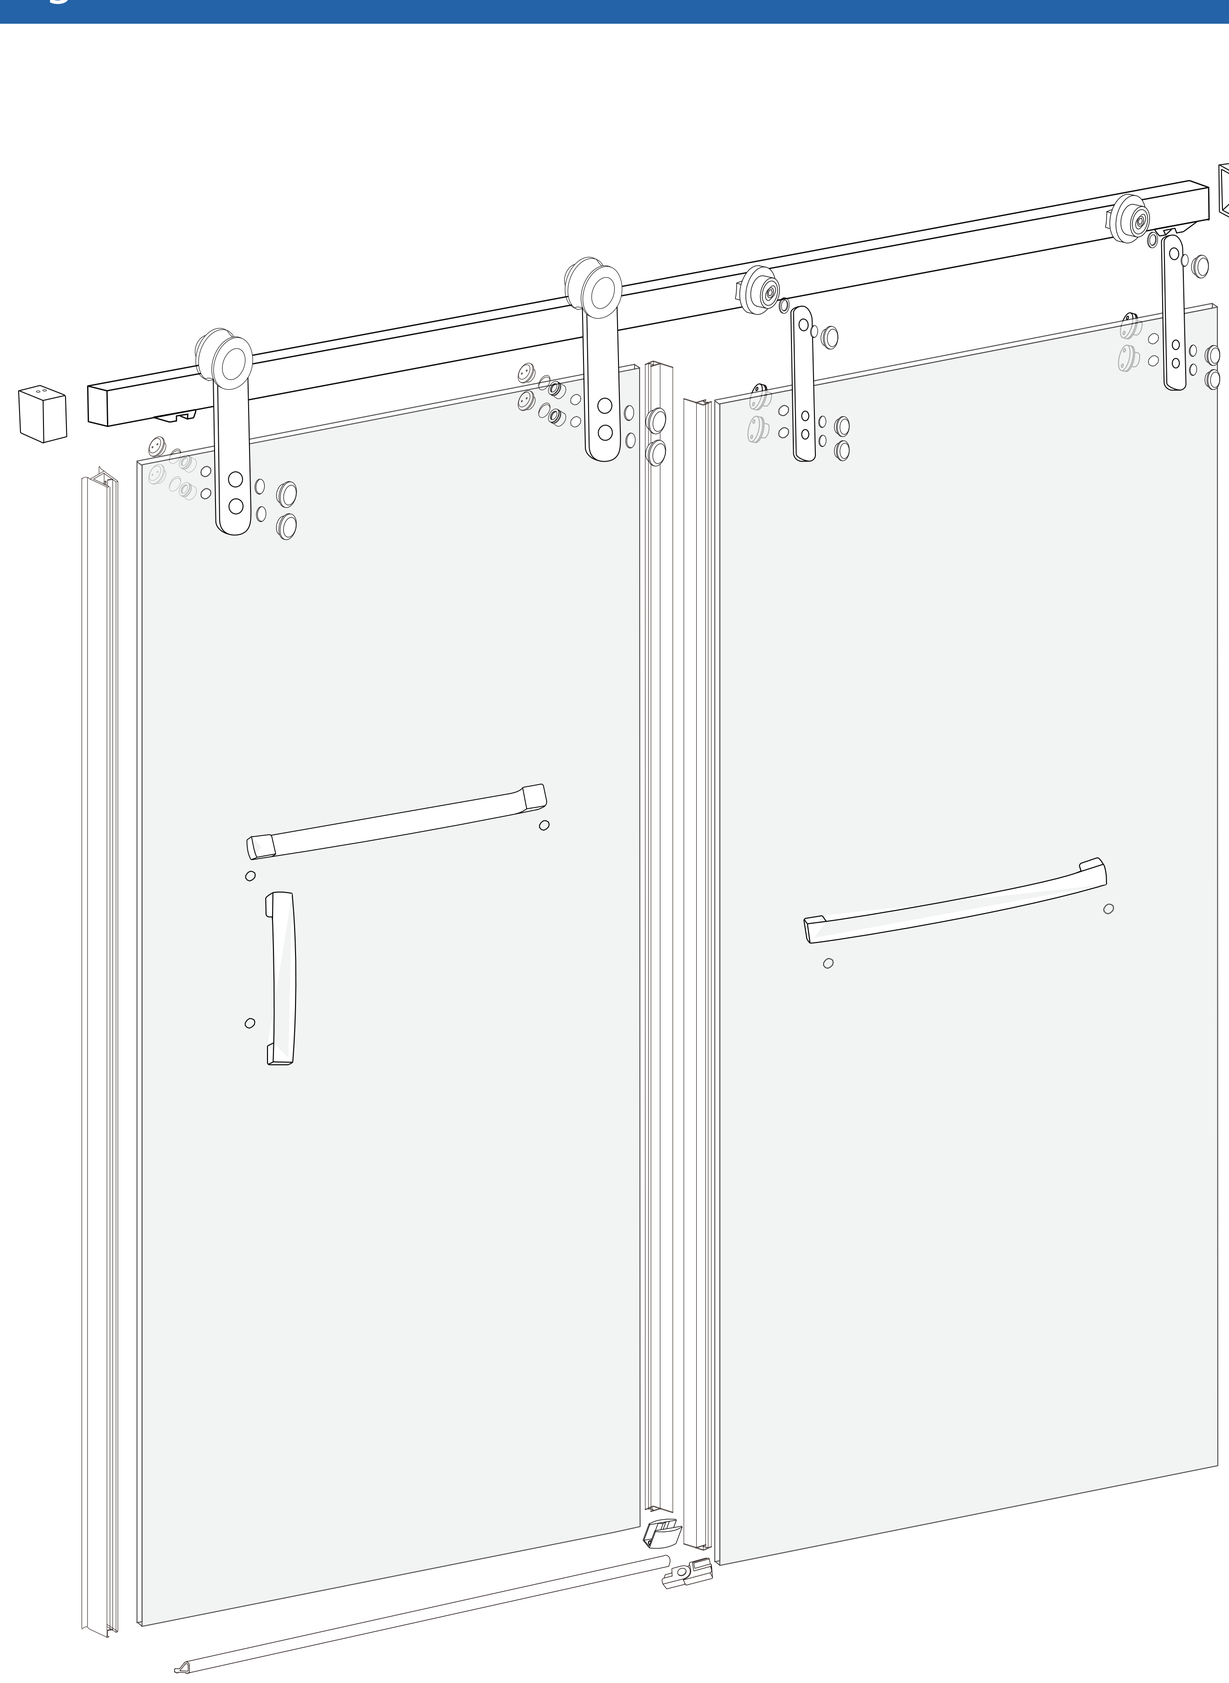

Step 01

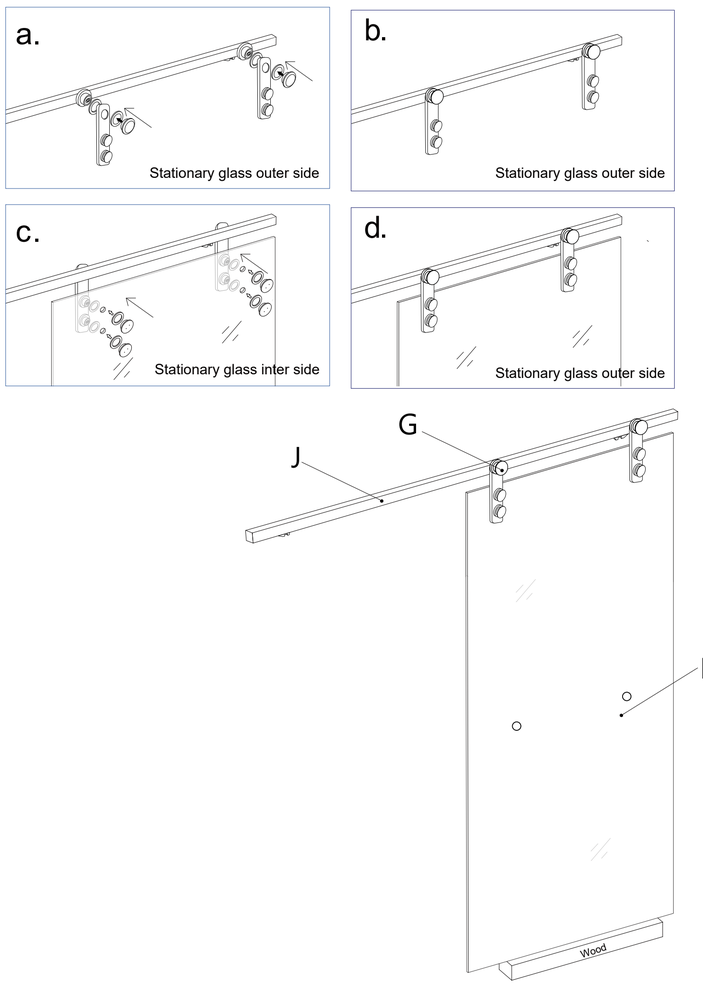

Step 02

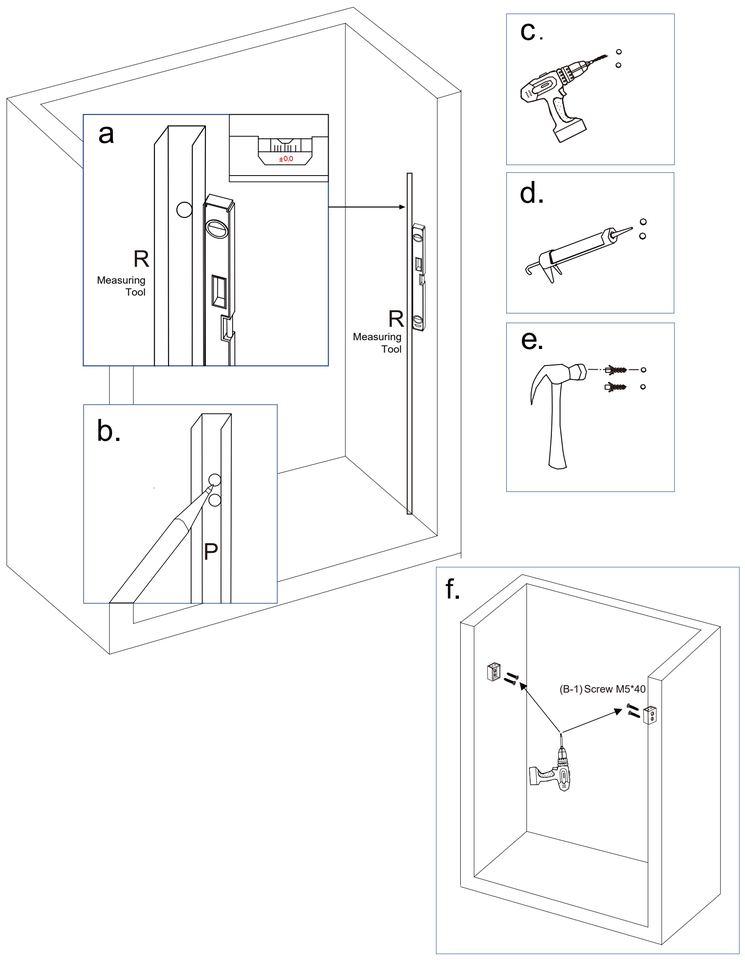

Step 03

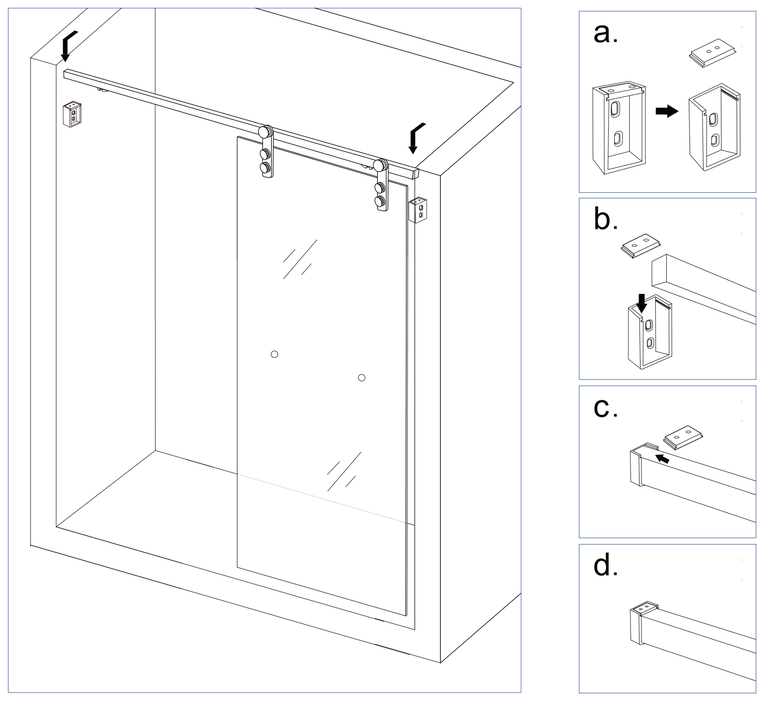

Step 04

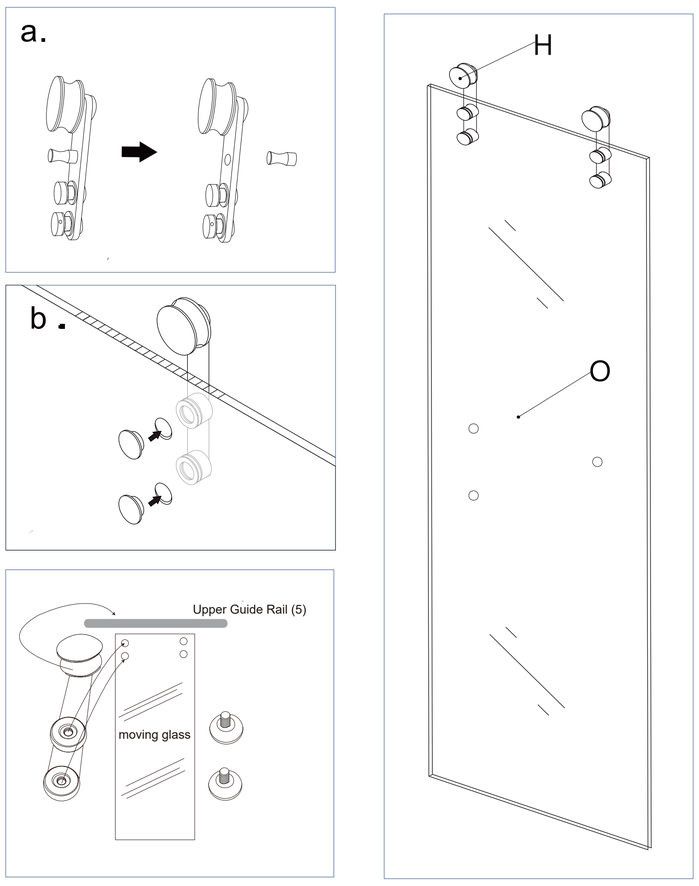

Step 05

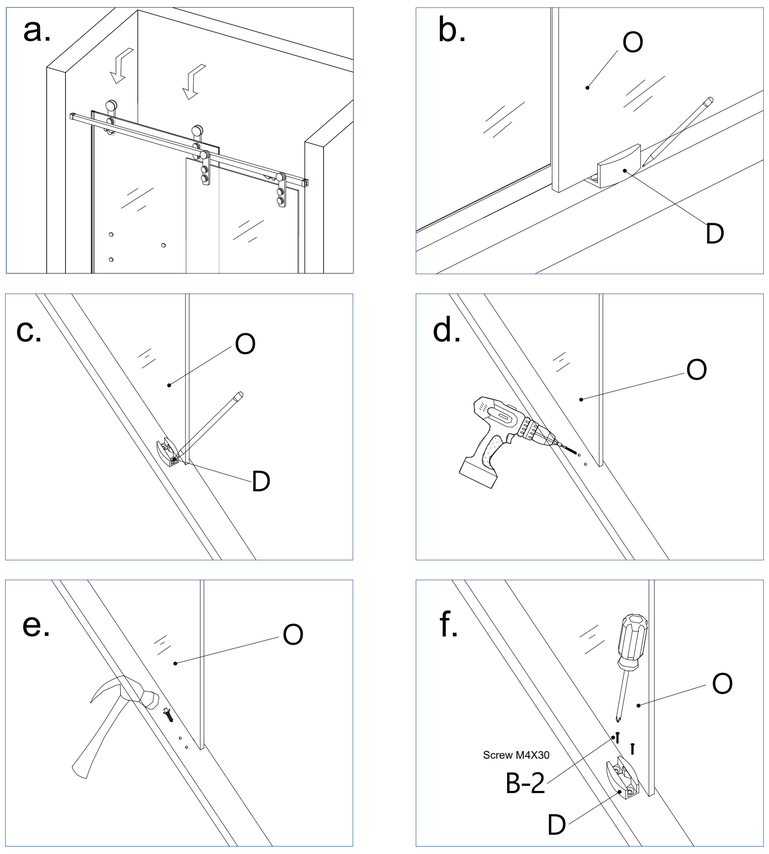

Step 06

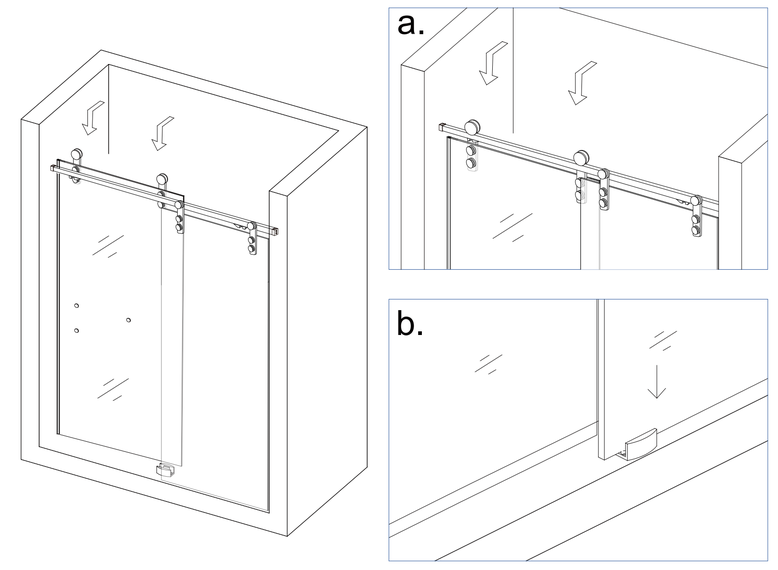

Step 07

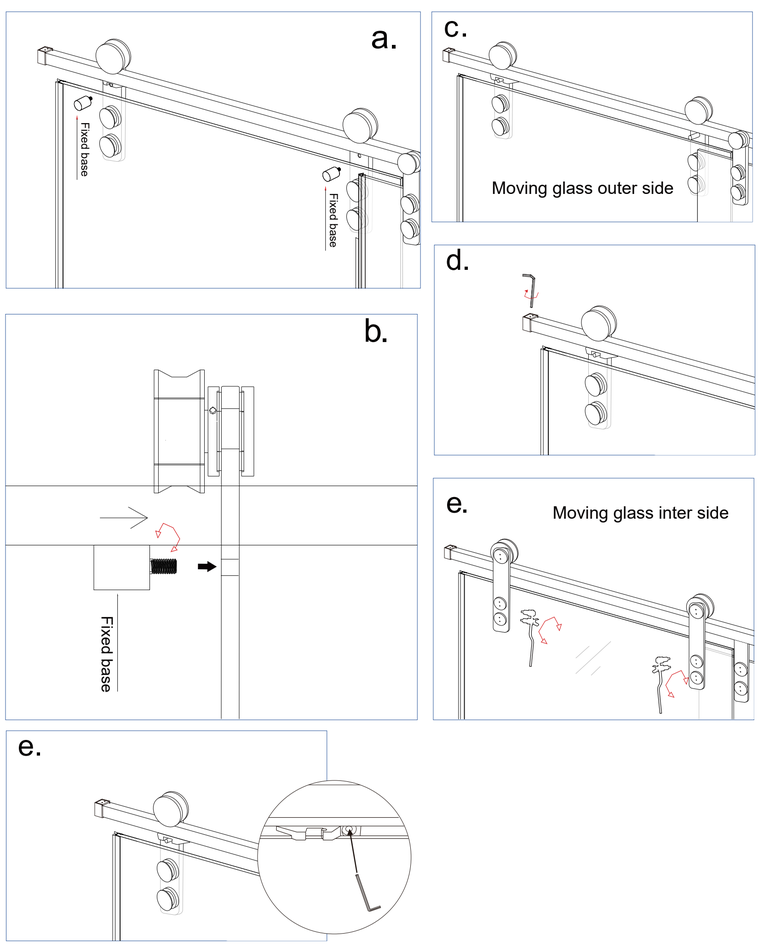

Step 08

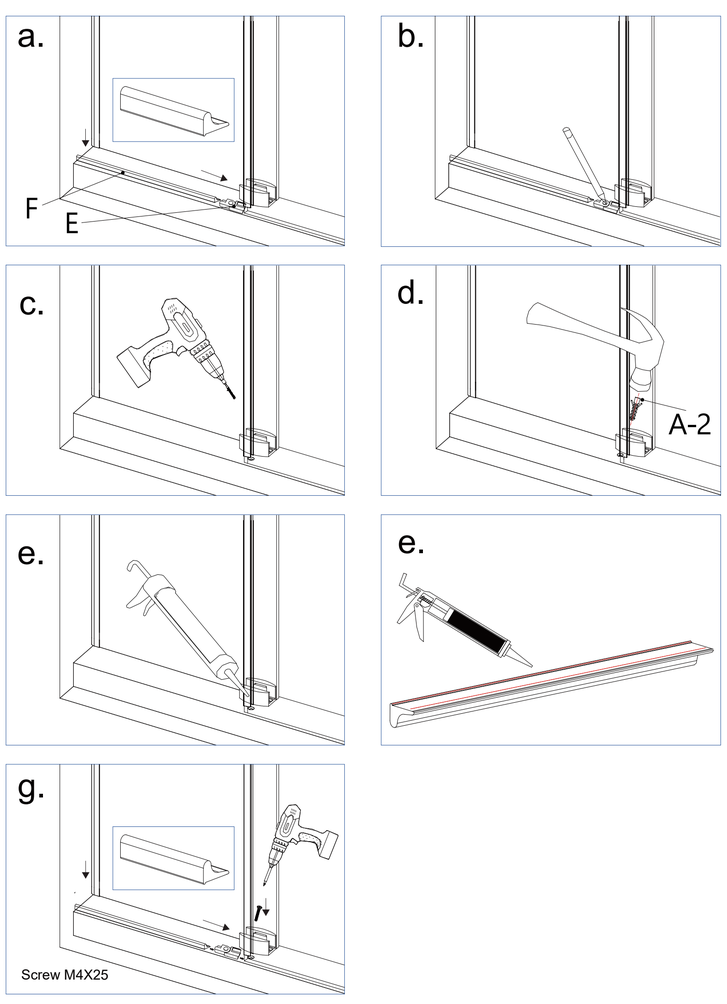

Step 09

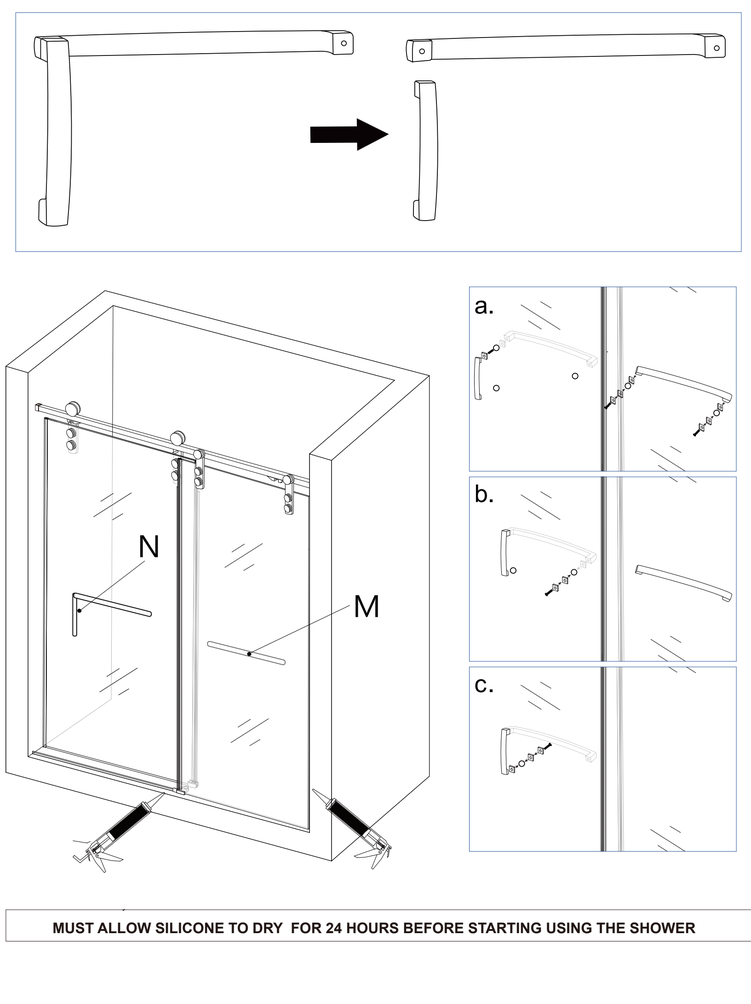

MUST ALLOW SILICONE TO DRY FOR 24 HOURS BEFORE STARTING USING THE SHOWER