

BATHROOM MEDICINE CABINET

INSTALLATION MANUAL


CONTACT US

After opening the package, please inspect the product immediately and see if there is any damage or missing parts. If there is, please feel free to **contact us** by CRM@ZRIttechservice.com, and we will reply within 24 hours.


BEFORE INSTALLATION

Thank you for choosing our products. To ensure the best possible experience, **please read carefully and follow the instructions provided below before assembling and installing the product.**

INSTALLATION TOOLS




Electric Drill




Hammer




Marker Pen



Tape Measure



Level



Phillips Screwdriver



Safety Goggles


HOW TO CLEAN

When cleaning the mirror, please follow these steps:

- ① Use a soft, non-abrasive cloth to clean the mirror. Avoid using rough or abrasive materials that may damage the surface.
- ② Do not use any cleaning agents that may cause irritation or damage to the mirror's finish. Instead, use any of the recommended cleansers to remove dirt and grime:
 - ☑ Gentle liquid detergents
 - ☑ Colorless cleansers
- ③ If any adhesive residue left, please wipe it off with a cloth dipped in water (instead of detergents).





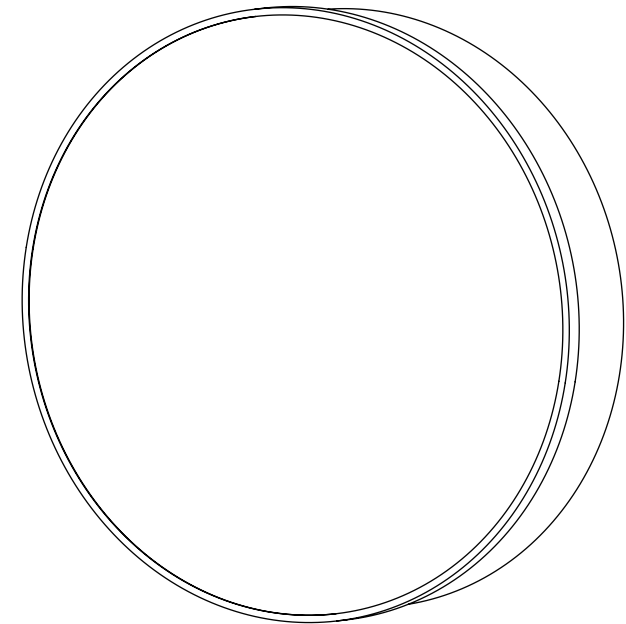







Warranty

A two-year warranty from the date of your purchase.




If you have any questions, please feel free to contact us via CRM@ZRIttechservice.com

PACKING LIST

	 Wall anchor-A	 Wall anchor-B	 Short screw	 Long screw	 Spout plug	 Bubble level
	4+1	4+1	4+1	4+1	1	1
	4+1	4+1	4+1	4+1	1	1
	4+1	4+1	4+1	4+1	1	1
	4+1	4+1	4+1	4+1	1	1
	4+1	4+1	4+1	4+1	1	1
	4+1	4+1	4+1	4+1	1	1


INSTANLLATION: SURFACE-MOUNTED



1. Place the medicine cabinet against the wall and mark spots on the wall.

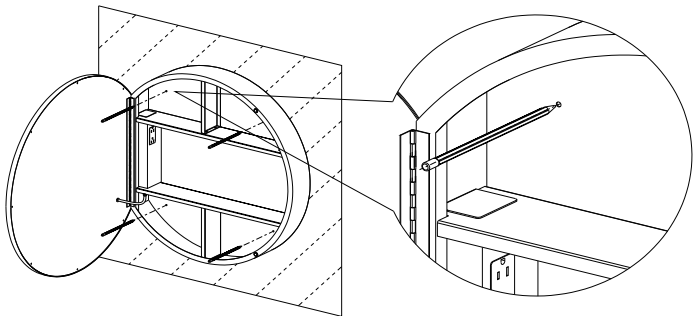

Note: Please hang the cabinet at least 3 inches above the faucet.


2. Put the medicine cabinet down, drill at the marked spots (①) and apply a wall anchors (②).

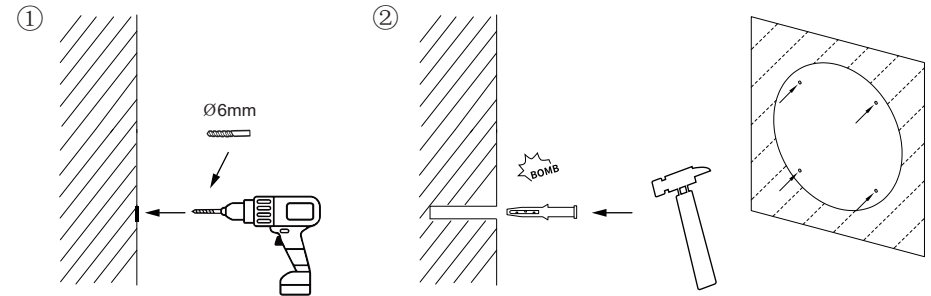

Thickness of Wall :	Recommended Drill Bit :
>5/8" (16mm)	1/4" (6mm) drill bit, drilling depth in 1 31/32" (50mm) 
5/16" (8)-5/8" (16mm)	25/64" (10mm) drill bit 
<5/16" (8mm)	Unapplicable

Note: Please hang the cabinet at least 3 inches above the faucet.

3. One person lifts up the medicine cabinet and aligns it to the screw holes , while the other person secure the medicine cabinet to the wall with four screws.

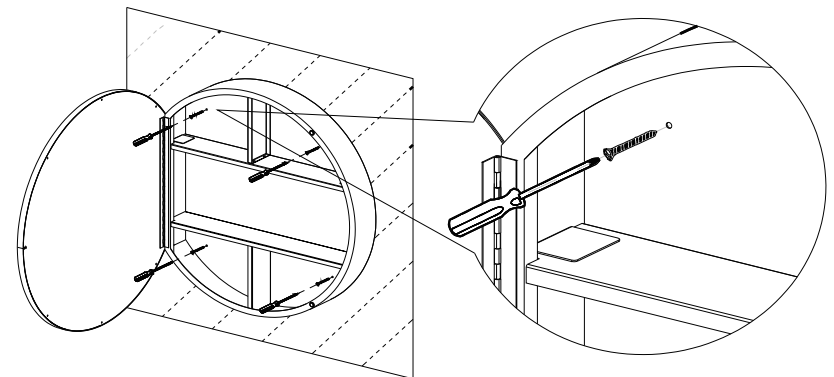

4. Done, enjoy !