

4-Fold BathScreen Installation Instructions



ella
by ella's bubbles

- Please read these instructions in full before installing.




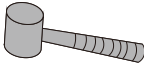



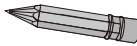


IMPORTANT

- Check that the bath has been installed to the manufacturer's instructions.
- Opening wall adjustments
4-Fold Bath Screen - adjustment =44"-42"(1108-1118mm)


GENERAL SAFETY INSTRUCTIONS

- Do not fix the wall profile to newly plastered, painted or papered walls as chemical reaction may cause discolouration to the surface finish.
- Important: The wall plugs included in this pack are for solid walls only. If the product is to be mounted on a partition or stud wall, specialised fixings should be purchased separately.
- Fixing tips; A piece of insulating tape or a couple of layers of masking tape applied to the wall before marking out the fixing holes will help stop the drill from wandering, particularly on tiled surfaces.
- When working near a basin or bath insert the plug into the waste, this will help you avoid losing small parts. Also take care not to drop accessories or tools onto the bath or basin, use a towel or bathmat to protect delicate surfaces.
- CAUTION!
Before drilling into any walls check that there are no hidden cables or pipes. Exercise great care when using power tools near water. The use of a residual current device (RCD) or cordless drill is recommended. Always double check the positioning and measurements before drilling holes.
- This product is heavy and requires two people during lifting and operations.
- Glass is delicate, support on cardboard to minimise risk of damage.









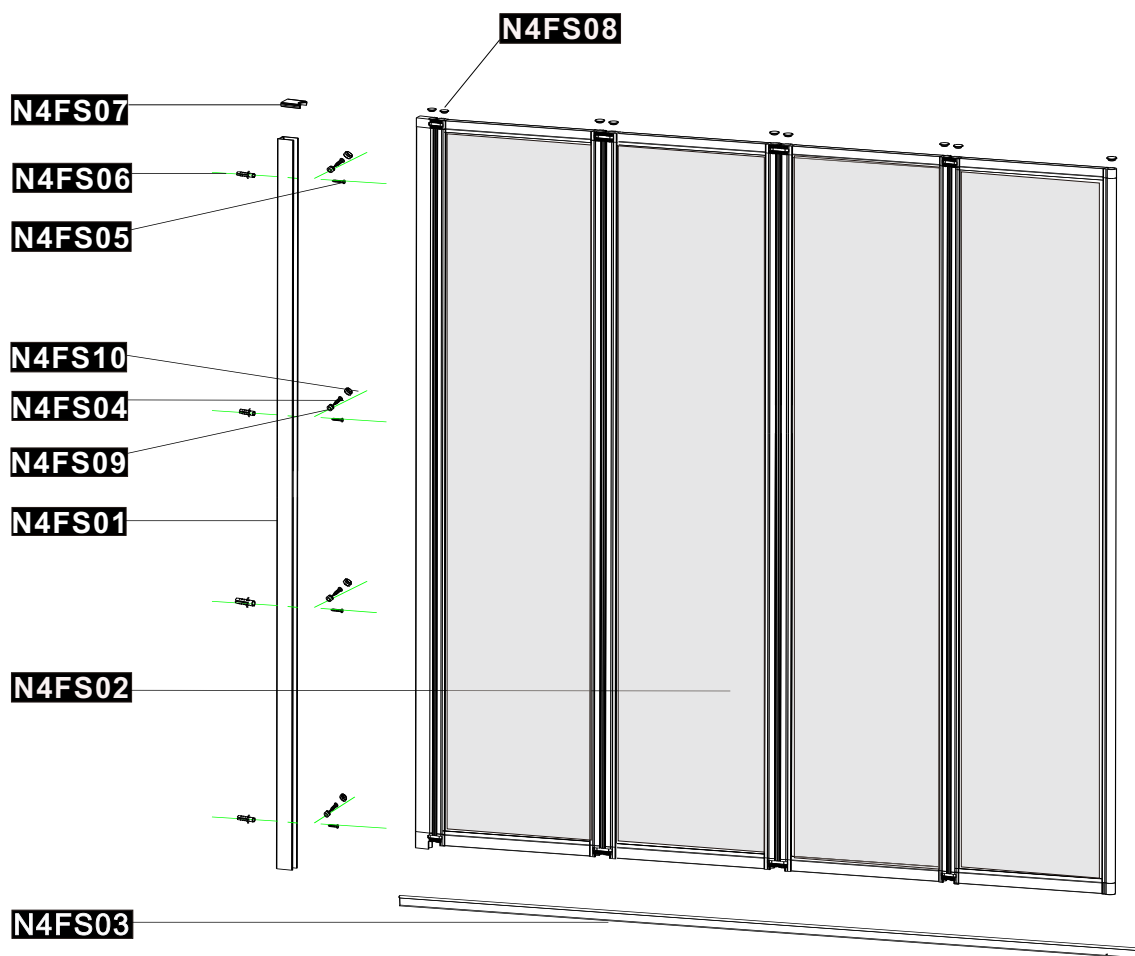


Tools required (not supplied)


Electric drill		Tape measure	
Drill(Ø3.2mm)		Rubber hammer	
Drill(Ø6mm)		Knife	
Cross head screw driver		Pencil	
Spirit level		Silicone sealant	

IDENTIFICATION OF PARTS




Fixings & fittings supplied

Item No.:	Part	Quantity	Item No.:	Part	Quantity
N4FS01		x 1	N4FS07		x 1
N4FS02		x 1	N4FS08		x 9
N4FS03		x 1	N4FS09		x 4
N4FS04	 ST4X10	x 4	N4FS10		x 4
N4FS05	 ST4X40	x 4	N4FS11	 SILICONE GREASE	x 1
N4FS06		x 4			

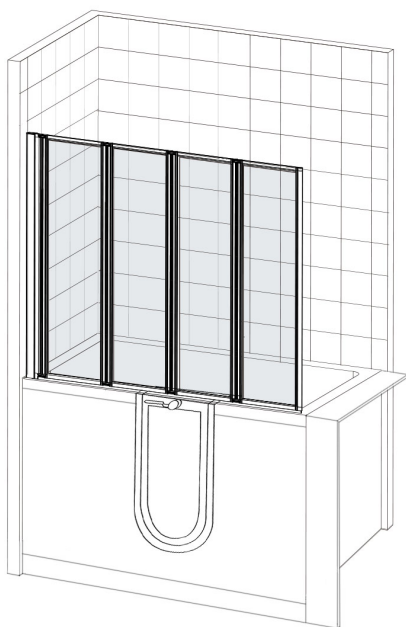

LH

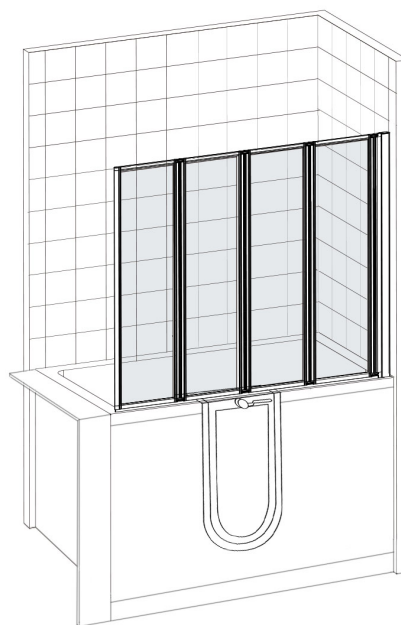

RH

Four fold bath screen is ok to be installed in left hand or right hand. Below steps are based on left hand. For right hand, please follow below steps in mirror direction.

1.

N4FS08





9X

N4FS02




1X

- Put top cover(N4FS08) on the top of the pivot of the screen frame(N4FS02).

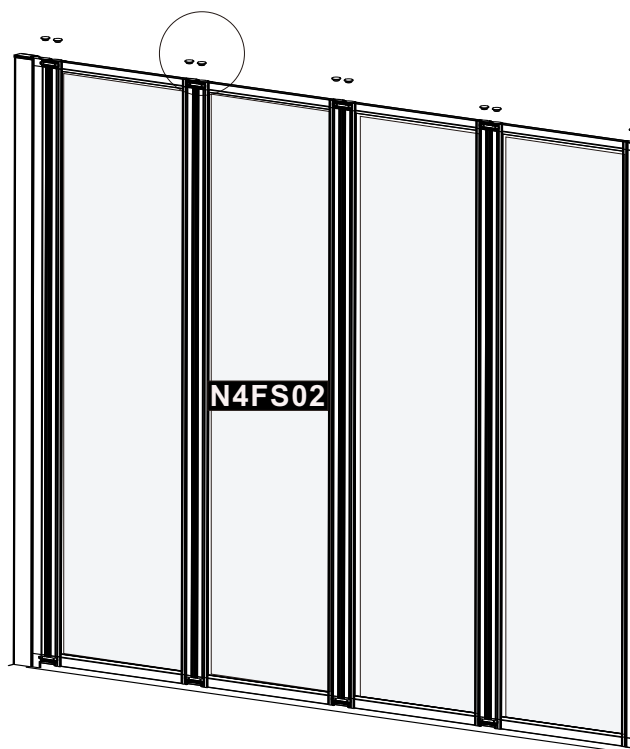
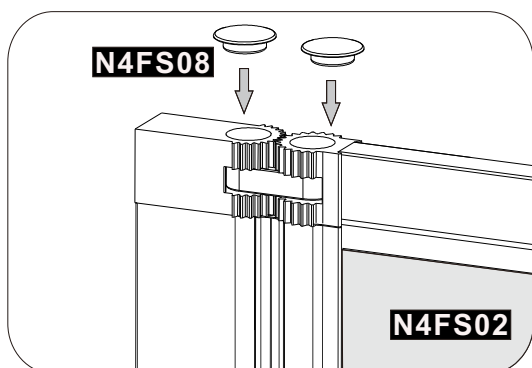


2.

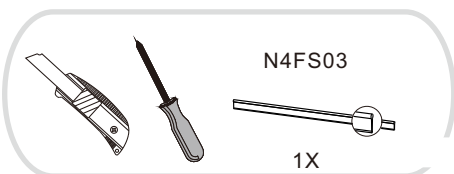


- Loosen the screw in the bottom of the vertical profile, remove the bottom bracket.
- Cut the soft edge of the seal N4FS03 by 3"(75mm) on one end.
- Insert the seal into the bottom aluminum frame.
- Tie off the end of the seal keep it from moving.
- Put the bottom cap on the vertical profile, fix it with screw.



Note: Please observe cut required.

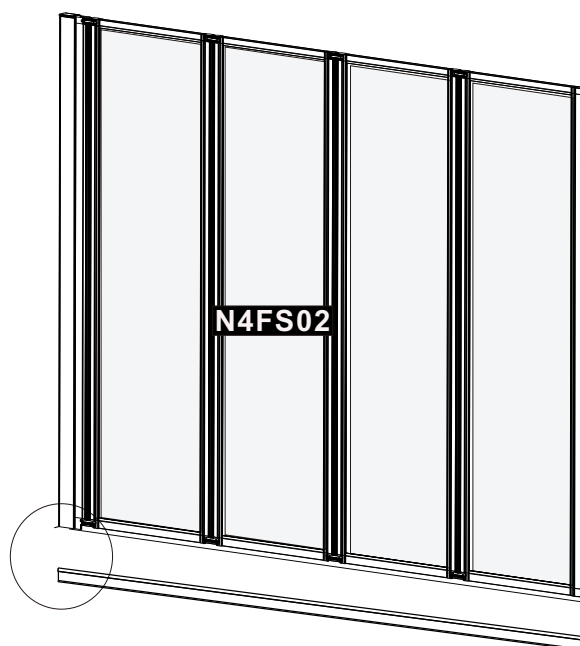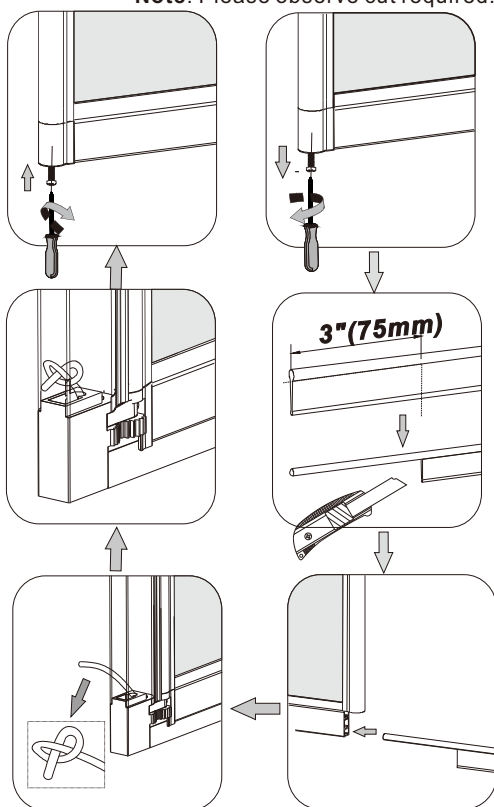


3.

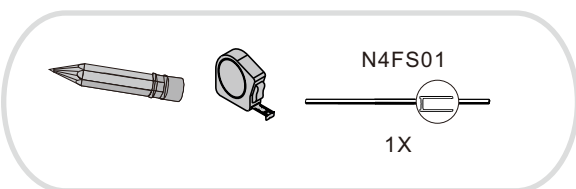



- Put the wall profile(N4FS01) against the wall and ensure it is vertical using a spirit level.
- Recommended gap between profile and bath edge is between 10-15mm.
- Mark the holes on the wall.

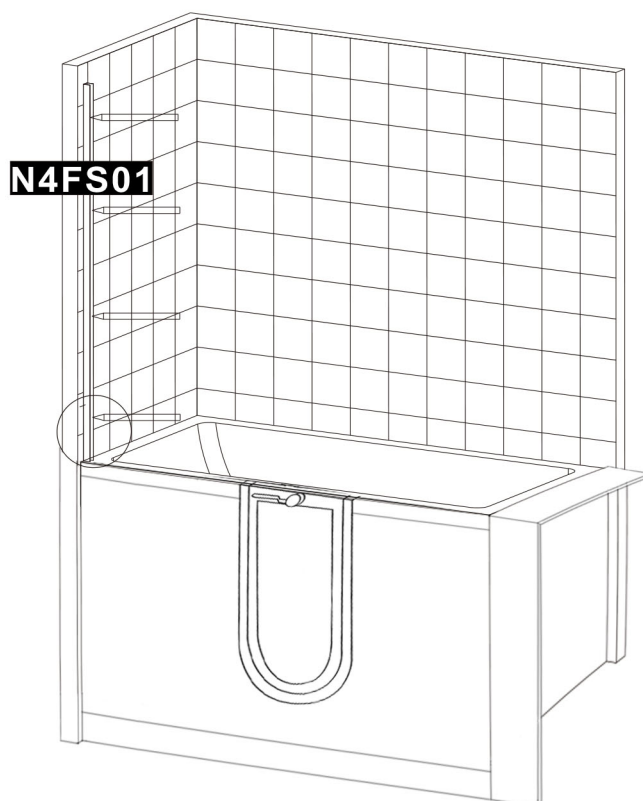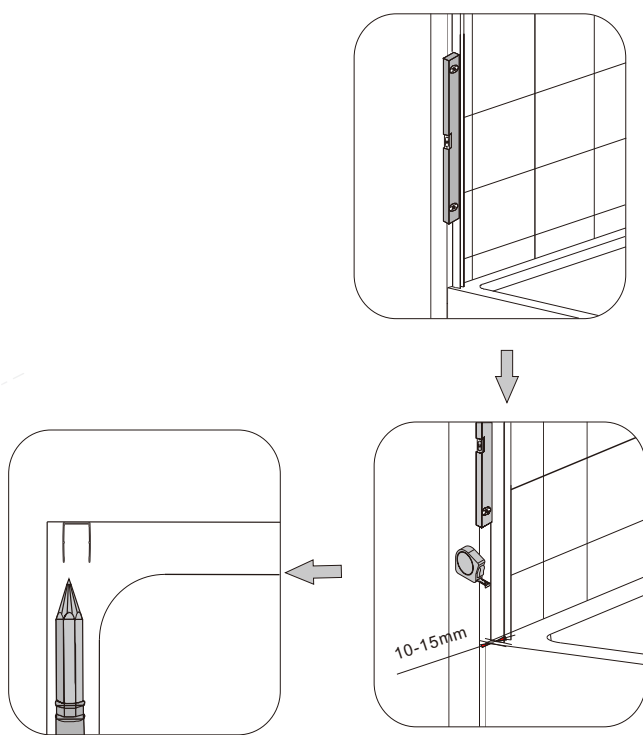


4.

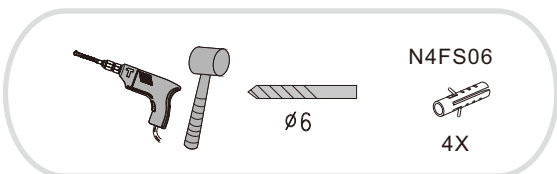



- Drill the holes(Ø6mm) according to the marks and insert the wall plugs(N4FS06) into the holes.

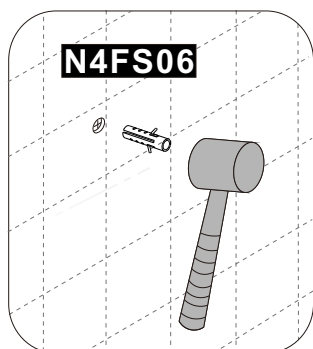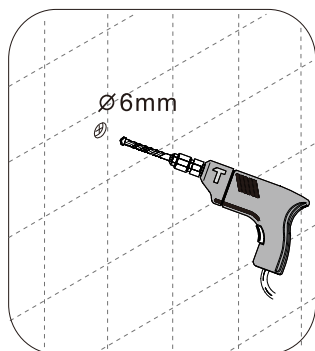

5.


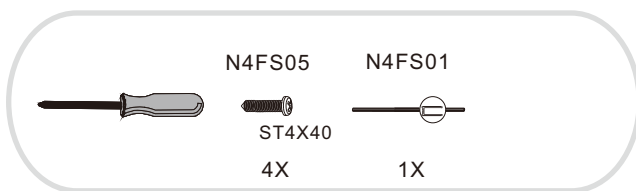


- Fasten wall profile(N4FS01) on the wall with screw (N4FS05).

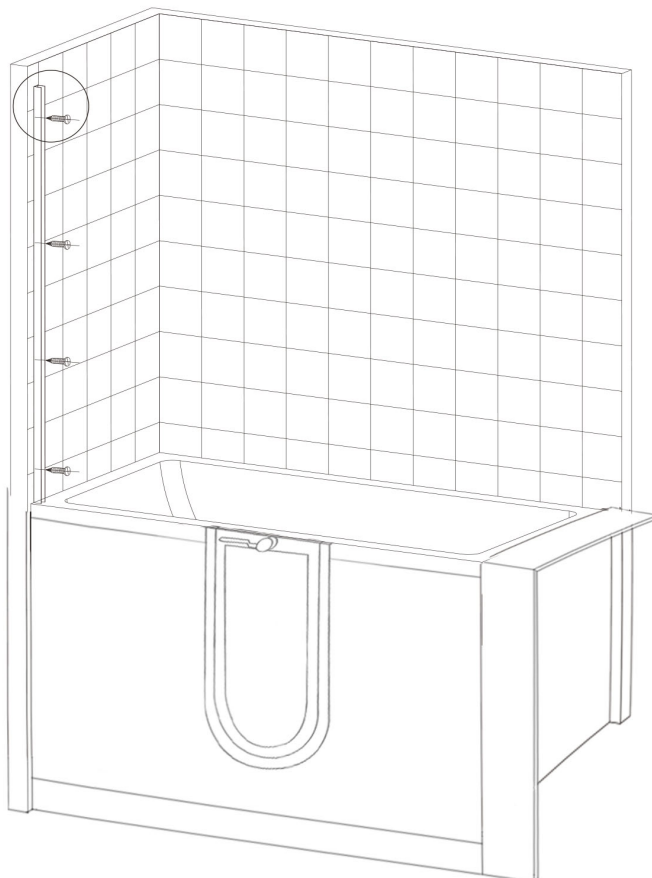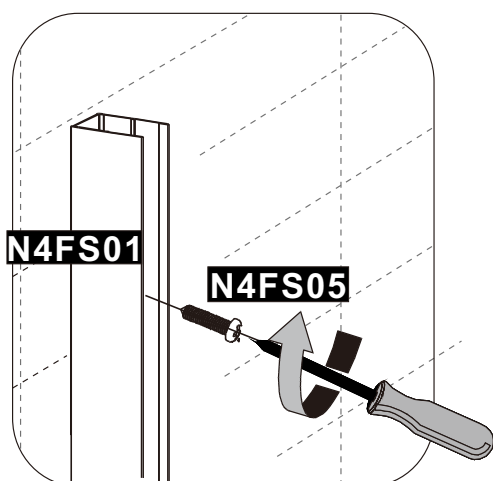


6



- Insert screen panel into wall profile.
- There is 0.39"(10mm) adjustment between panel and wall profile for any out of true walls.
- Adjust the screen panel in correct position and make sure glass panel fits parallel to the bath edge, but does not sit down directly on bathtub edge.

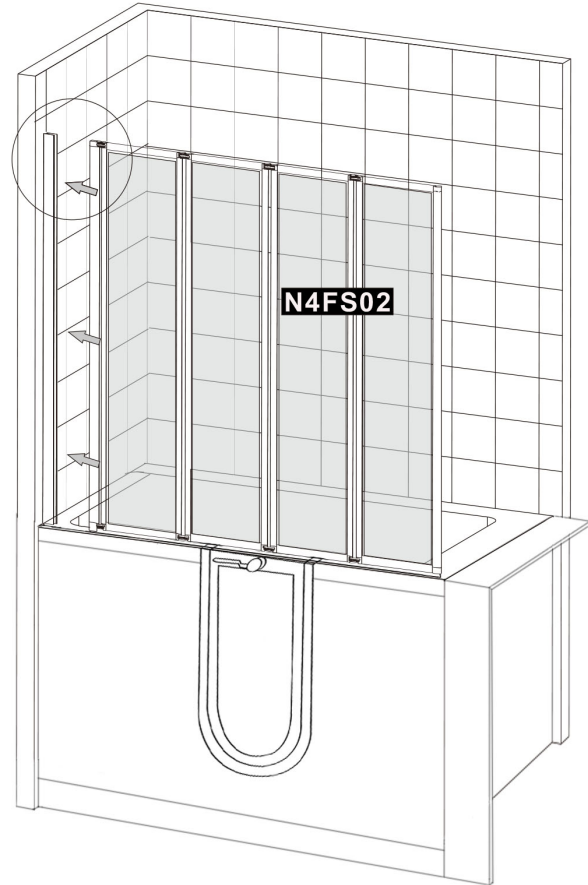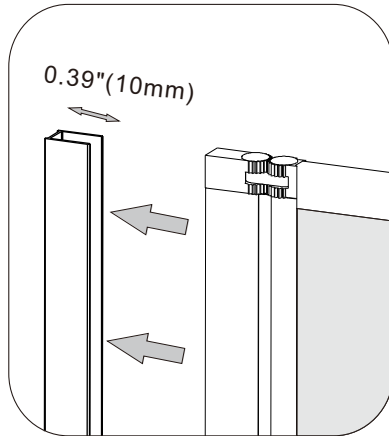

7.

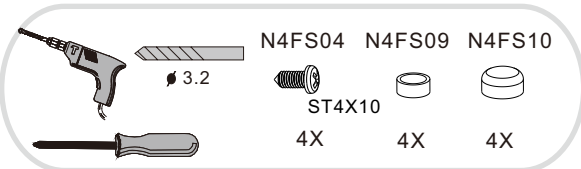

- From inside drill through the vertical profile and into wall profile where shown, using a 3.2 mm drill.
- Fix the wall profile (N4FS01) and frame together with screw (N4FS04), washer (N4FS09) and screw cap (N4FS10).

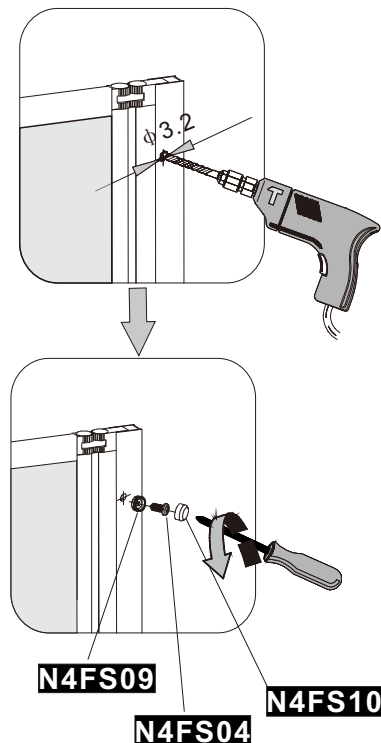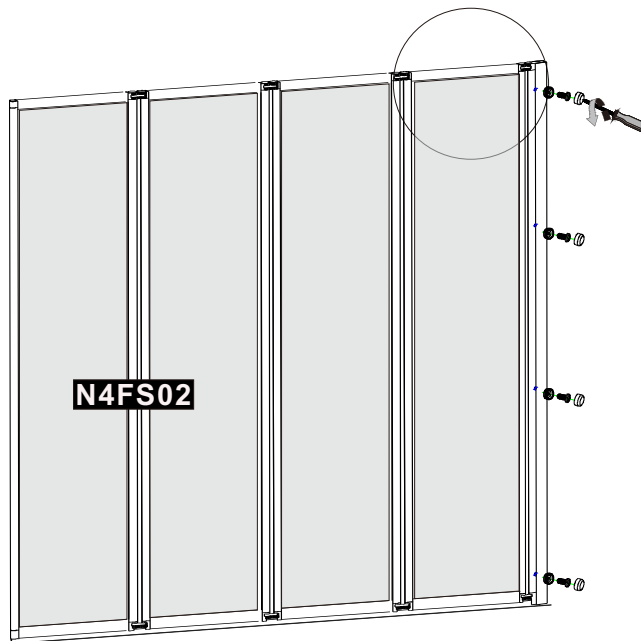


8.

N4FS07




1X

N4FS07

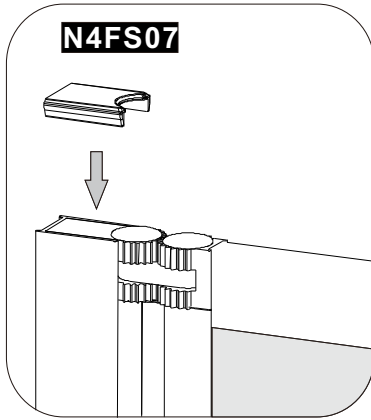

- Put top cap N4FS07 on the top of wall profile.

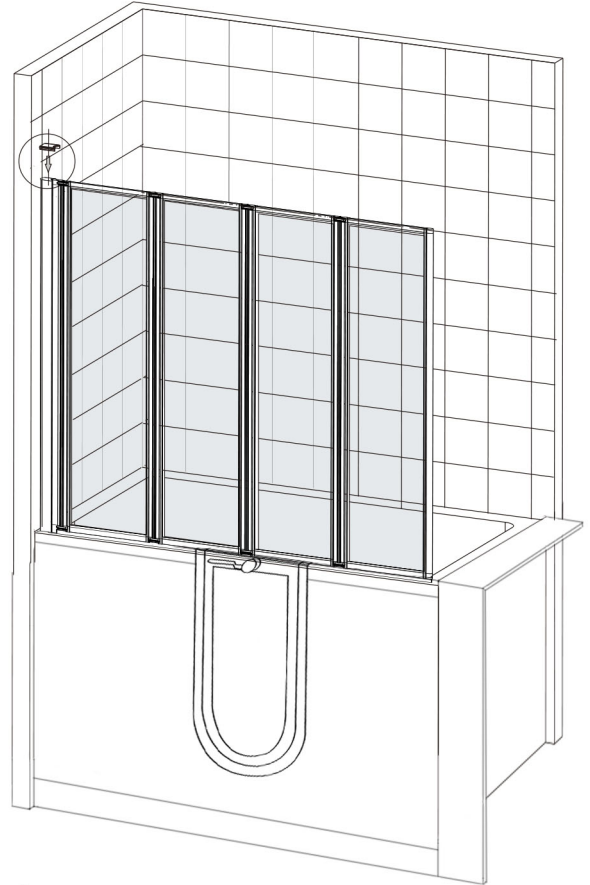


9.



- Apply silicone sealant to the outside of the enclosure.
Please note: Do not apply silicone sealant to the inside of the enclosure.



Sealant drying times may vary in cold damp conditions and will be extended where thicker beads of sealant are applied. Allow sealant to dry completely before exposing to water.

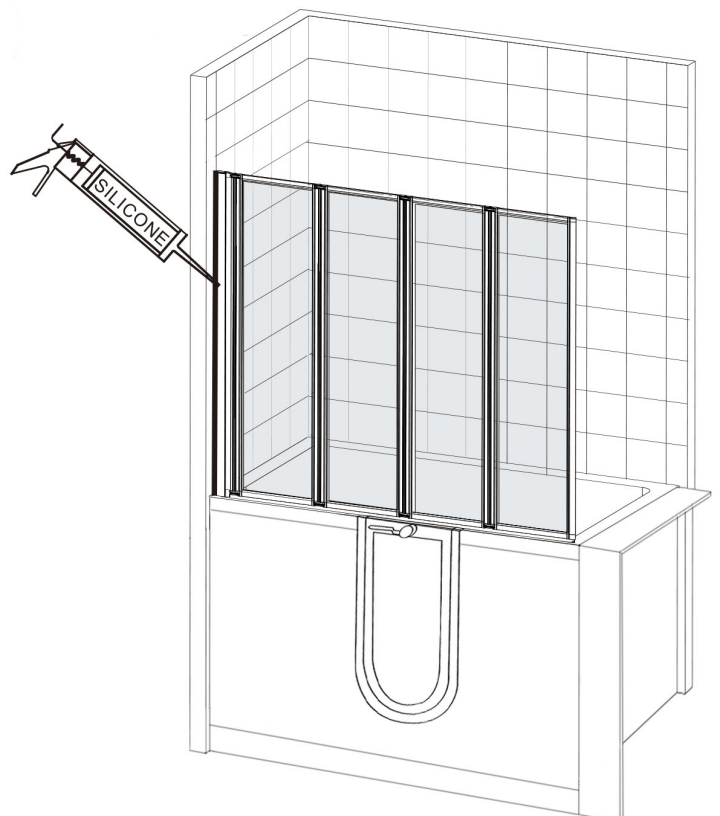


10.

N4FS11



1X

- Before the first use, apply the silicone grease on each joint part as below drawing to make the opening and closing smoothly.

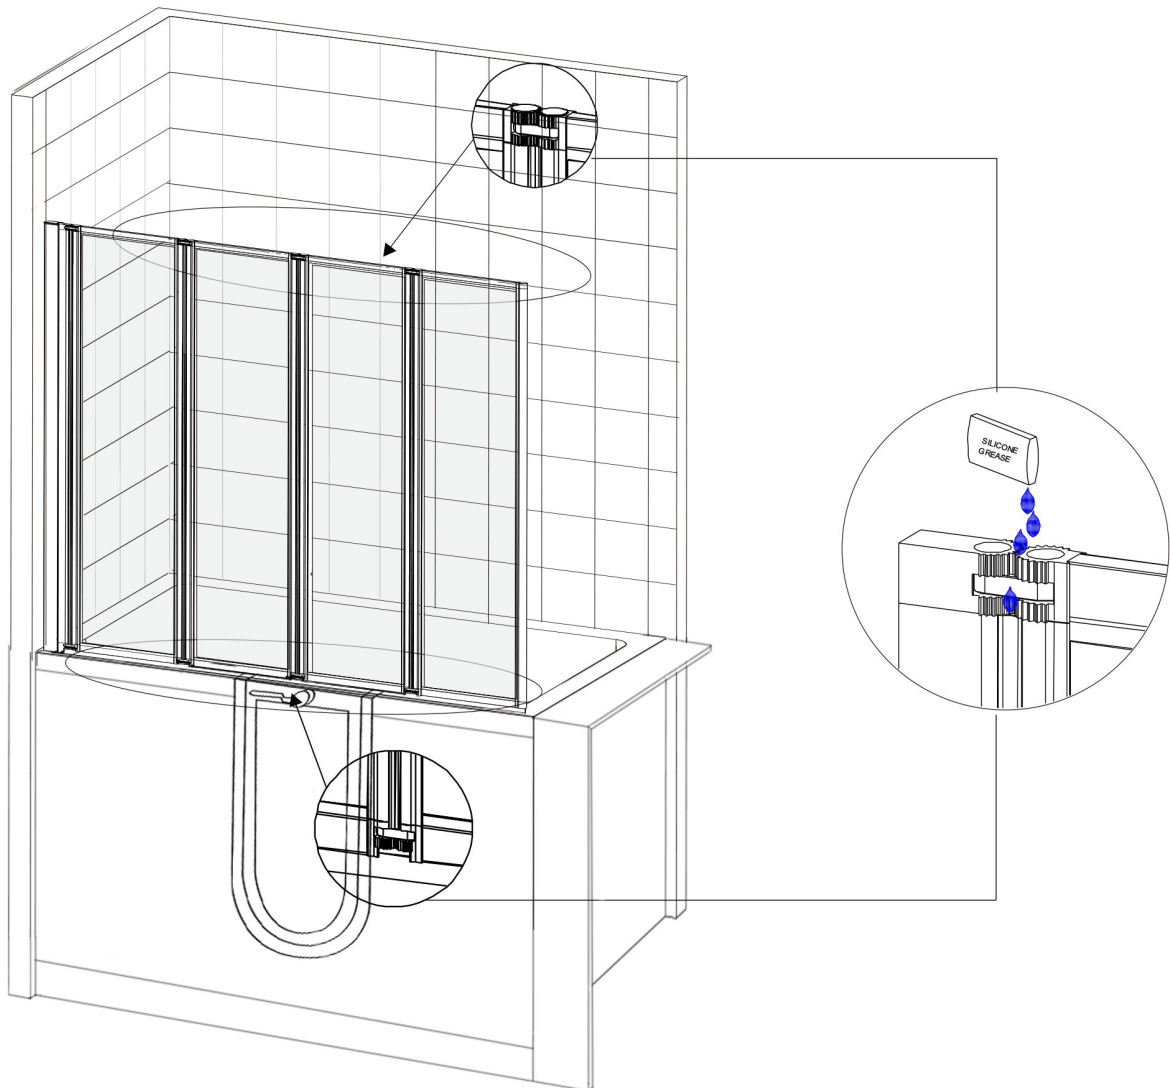

Cleaning and Maintenance:

Please do not use abrasive or strong cleaning solutions on the shower enclosure, such as alcohol, petroleum liquids or any other chemical cleaner.

Should there be any dirty stains on the shower enclosure, please clean it with a soft lint free cloth and warm soapy water. Please rinse it with clean water afterwards.

We have taken great care to ensure that this product reaches you in perfect condition. However should any parts be damaged or missing please contact your point of purchase. This does not affect your statutory rights. In addition if you require replacement parts your point of purchase will be happy to assist.