

ASSEMBLY INSTRUCTIONS

ITEM #: WF316368

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small Hardware which may have come loose inside the carton during shipment. Identify and count all hardware and compare with the hardware list below


ASSEMBLY INSTRUCTION :

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior start of assembly.
3. Please follow attached instruction in the same sequence as numbered to assure fast and easy.



WARNING !

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.
3. Two persons are required for assembly.
4. Approximate assembly time: 1/2 hours
5. Component parts and fittings contained in the box.
Please sort out all parts before you begin to assemble the item.
This is to make sure you always use the correct part
6. It is **STRONGLY RECOMMENDED** that you **ANCHOR** this product.
Toppling furniture can cause serious injuries and death.
This product has not been fitted with an anchor strap.
To prevent your furniture from tipping forward it is strongly recommended that you securely attach this product to a wall or other solid surface, using the anchor straps provided and appropriate fixings.

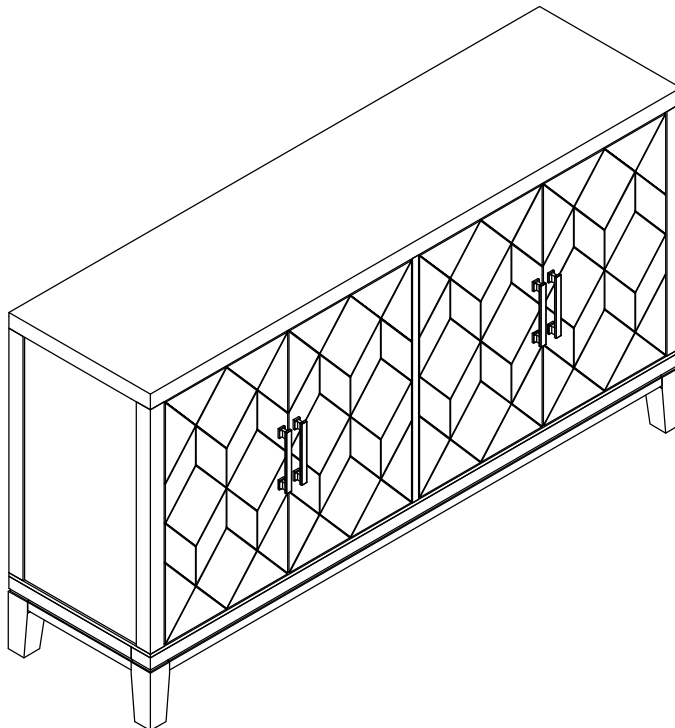


TOOLS NEEDED: Phillips Screwdriver



Wall Drill




Hammer




ASSEMBLY INSTRUCTIONS


PART LIST

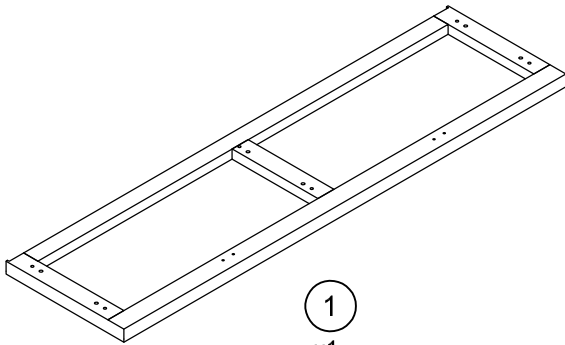


①
x1
Top panel

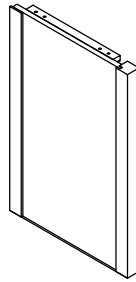


②
x1
Left side panel

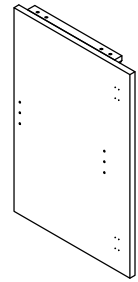


③
x1
Middle panel

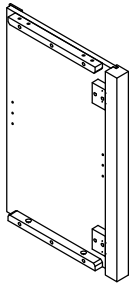


④
x1
Right side panel

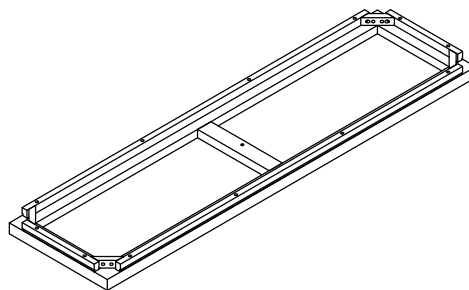


⑤
x1
bottom panel

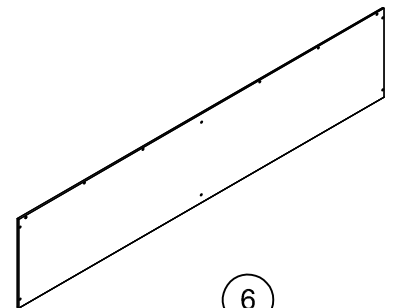


⑥
x1
Back panel

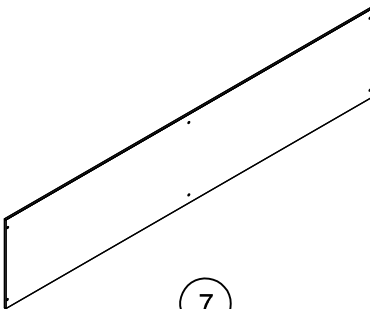


⑦
x1
Back panel

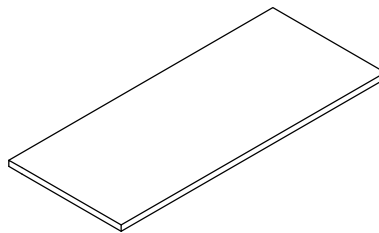

⑧
x2
Shelf panel

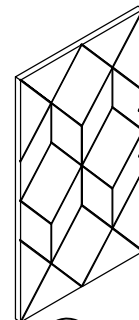


⑨
x4
door panel



⑩
x2
BLOCKING DOOR



⑪
x1
bottom panel



⑫
x4
bottom panel

ASSEMBLY INSTRUCTIONS

HARDWARE LIST




(A)
x4
Hook




(B)
x4
Anchor



(C)
x2
Plastic tie




(D)
x4
Screws




(E)
x4
Screws

1/4 Φ12* 1



(F)
x12
Bolts
Flat Washer
Spring Washer

5/16 Φ12* 1 5/8"



(G)
x8
Bolts
Flat Washer
Spring Washer

4mm




(H)
x1
Allen Key

Φ8*1



(I)
x4
Screws

Φ8*5/8



(J)
x18
Screws

Φ8*3/4



(K)
x12
Dowels




(L)
x8
Shelf supports

1/4*20



(M)
x4
increase and decrease below




(N)
x4
Handles

5/32"* 5/8"




(O)
x8
handle bolts

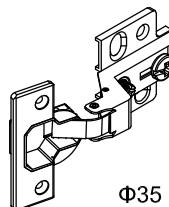

Φ35
(P)
x8
Large curved hinge
(big curvy)


Φ8*5/8



(Q)
x48
Screws

ASSEMBLY INSTRUCTIONS


ITEM #: WF316368



2

x1


Left side panel



3

x1


Middle panel



4

x1

Right side panel

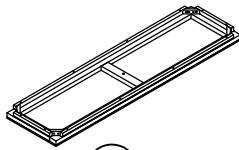

5

x1

bottom panel



11

x1

bottom panel



12

x4

bottom panel

1/4 Φ12* 1



F

x6
Bolts
Flat Washer
Spring Washer

5/16 Φ12* 1 5/8



G

x8
Bolts
Flat Washer
Spring Washer

4mm



H

x1
Allen Key

Φ8*3/4



K

x6
Dowels


1/4*20




M

x4
increase and
decrease below

STEP 1

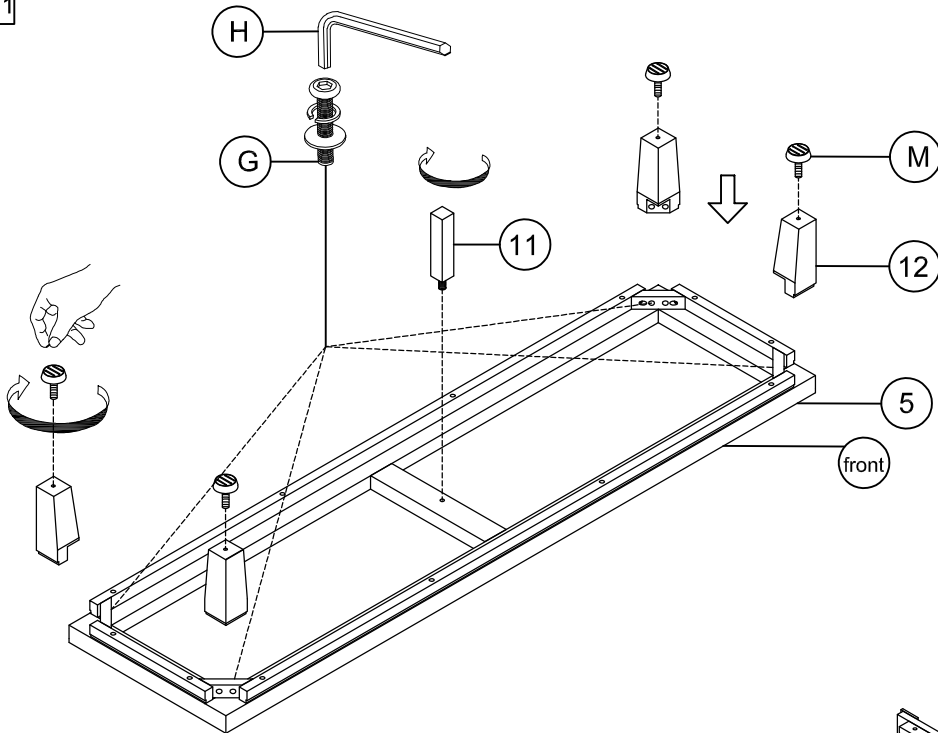

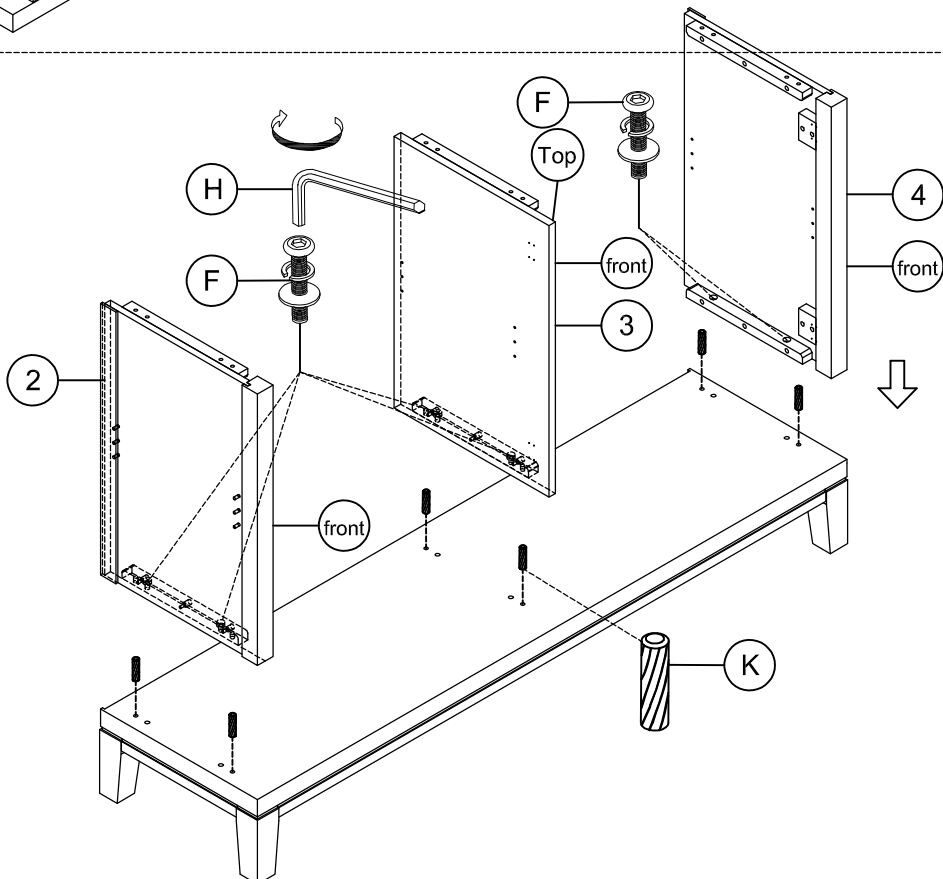





STEP 2




MADE IN VIET NAM

Page 4/10

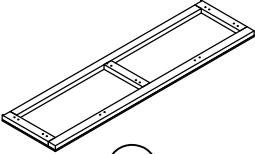
ASSEMBLY INSTRUCTIONS
ITEM #: WF316368

						
1 x1 Top panel	10 x2 BLOCKING DOOR	F x6 Bolts Flat Washer Spring Washer	H x1 Allen Key	I x4 Screws	K x6 Dowels	

STEP 3

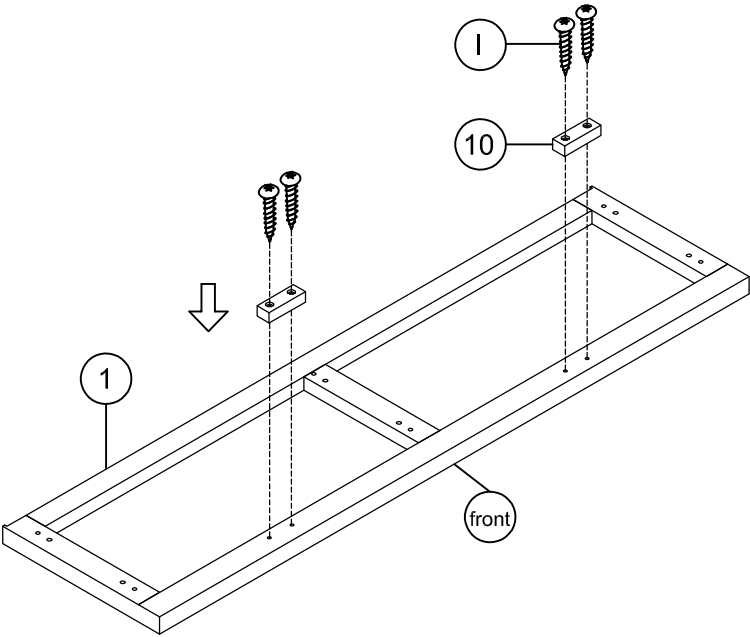


STEP 4

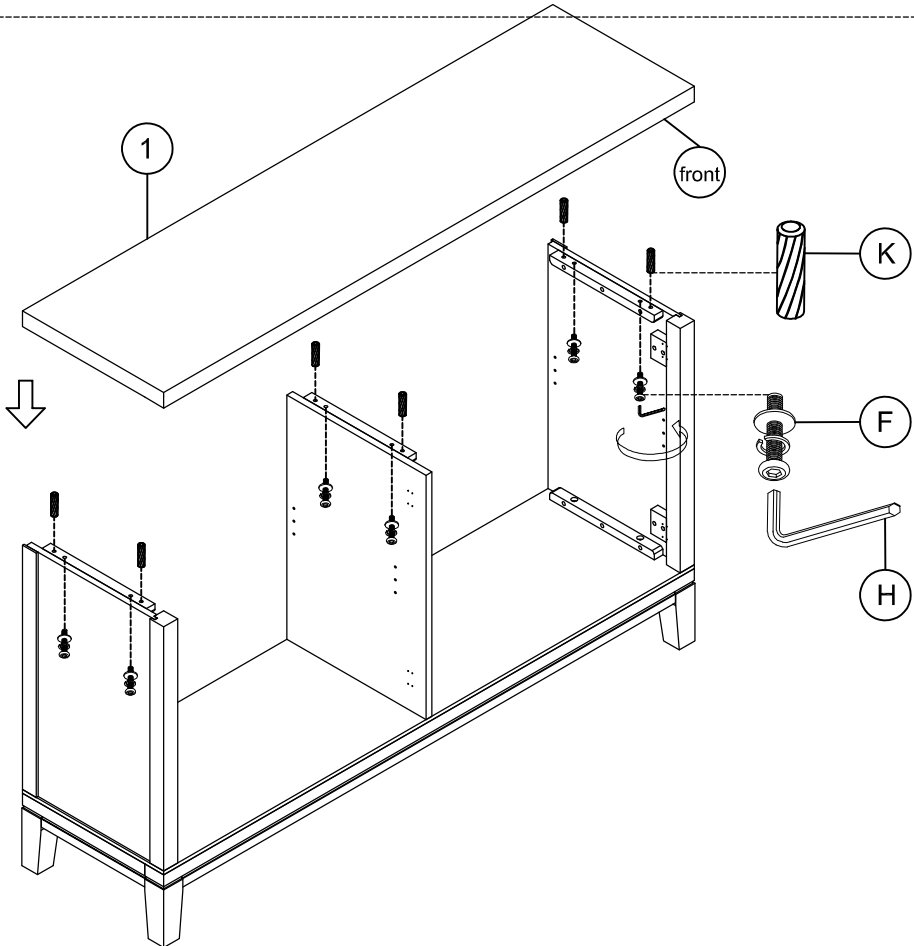


ASSEMBLY INSTRUCTIONS


ITEM #: WF316368

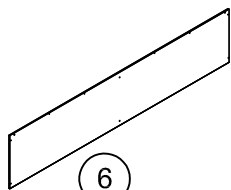

6
x1
Back panel

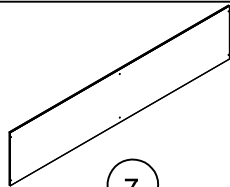

7
x1
Back panel

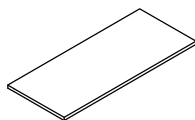

8
x2
Shelf panel

Φ8*5/8



J


x18
Screws




L

x8
Shelf supports

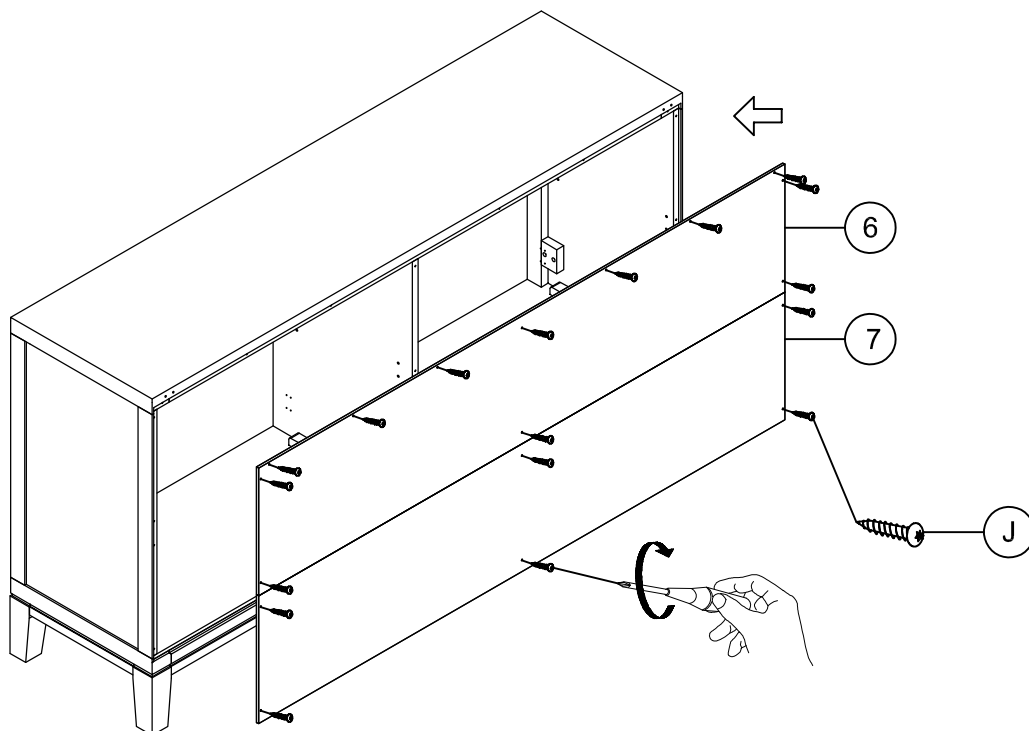




STEP 5

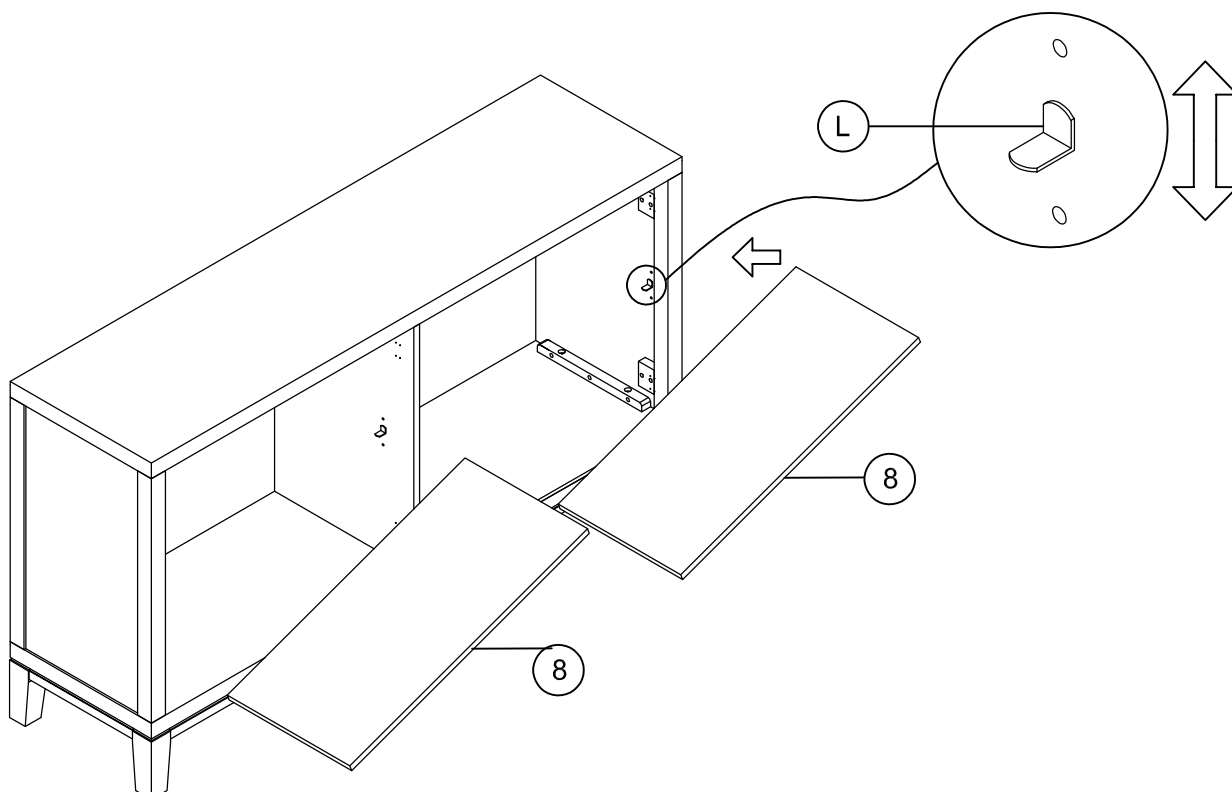


STEP 6




ASSEMBLY INSTRUCTIONS
ITEM #: WF316368

 x4 door panel	 x4 Handles	 x8 handle bolts	 x8 Large curved hinge (big curvy)	 x16 Screws	
--	--	---	--	--	--

STEP 7

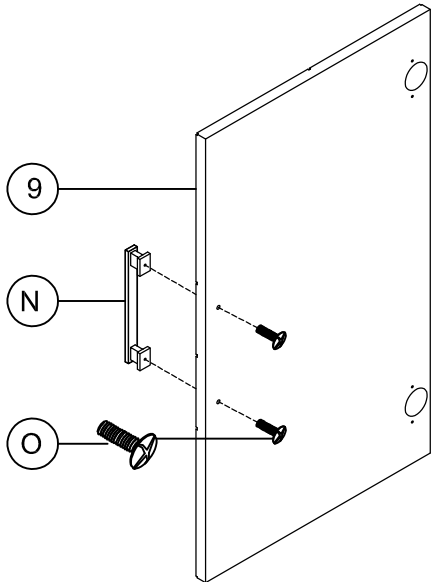


STEP 8

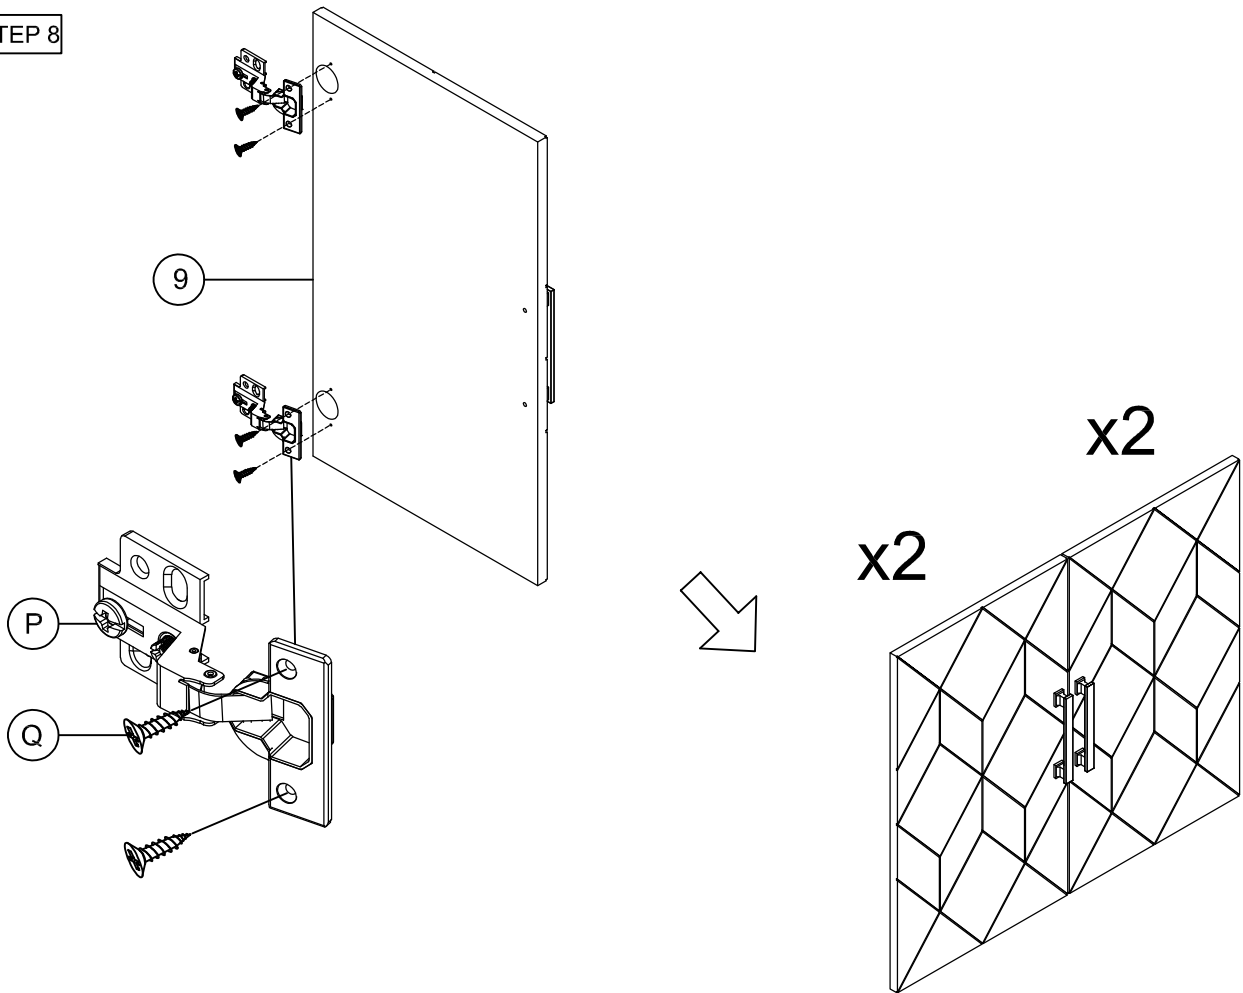

ASSEMBLY INSTRUCTIONS


ITEM #: WF316368

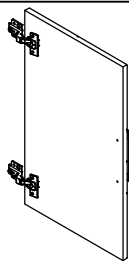

9

x4
door panel


Φ8*5/8



Q

x32
Screws




STEP 9

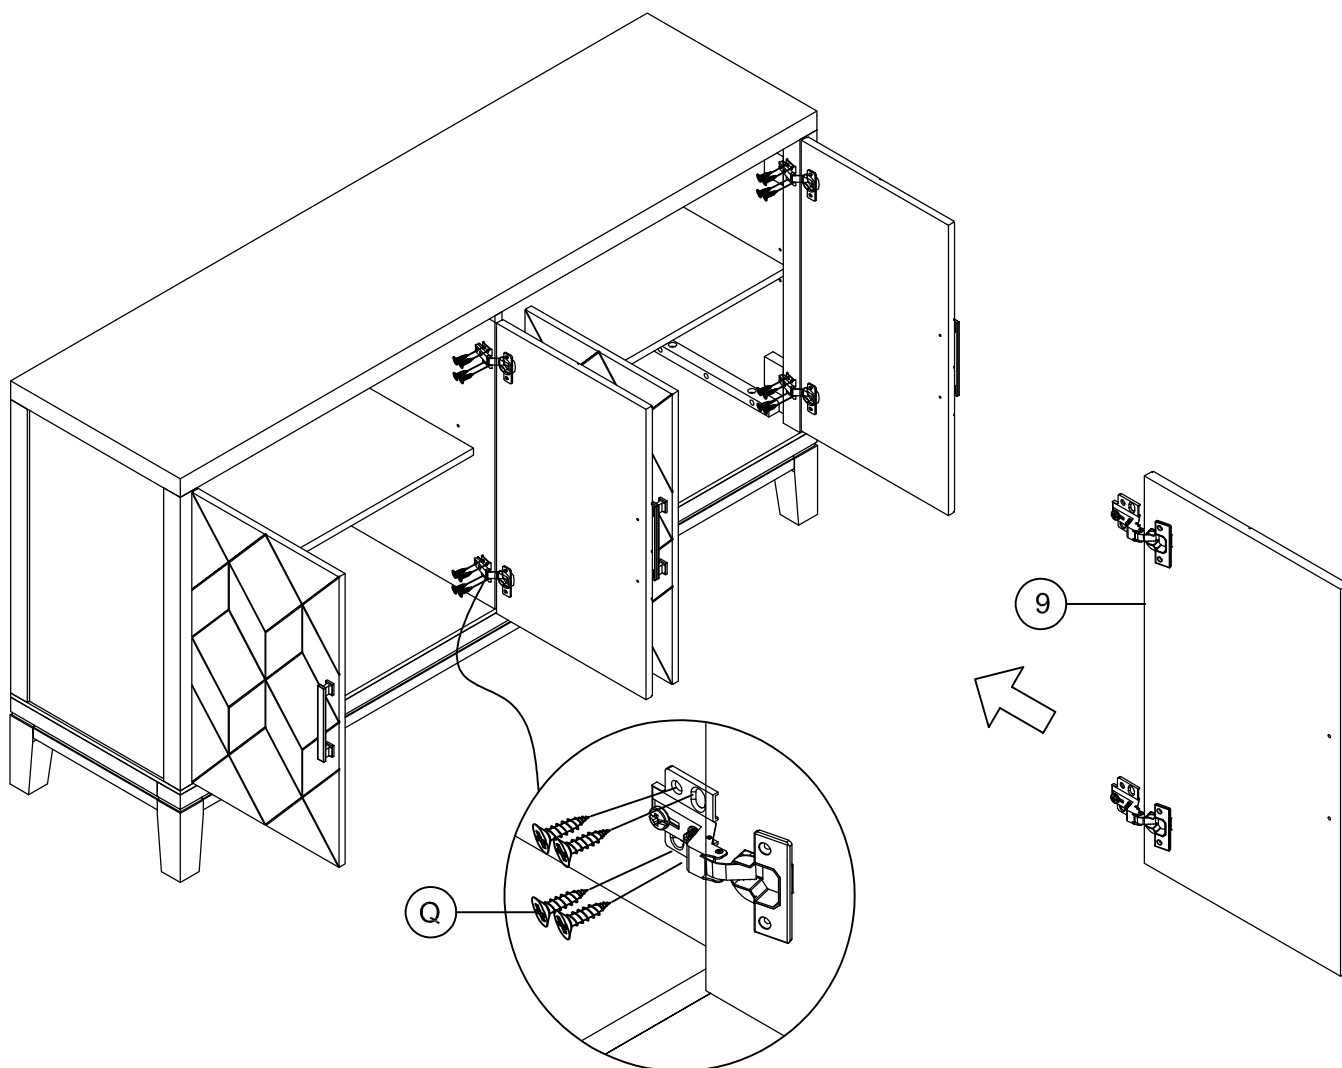

ASSEMBLY INSTRUCTIONS

ITEM #: WF316368

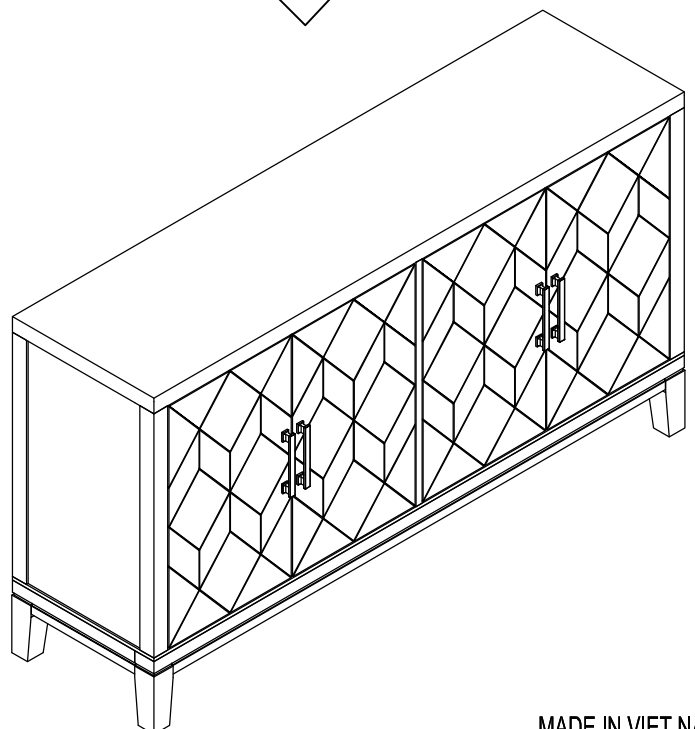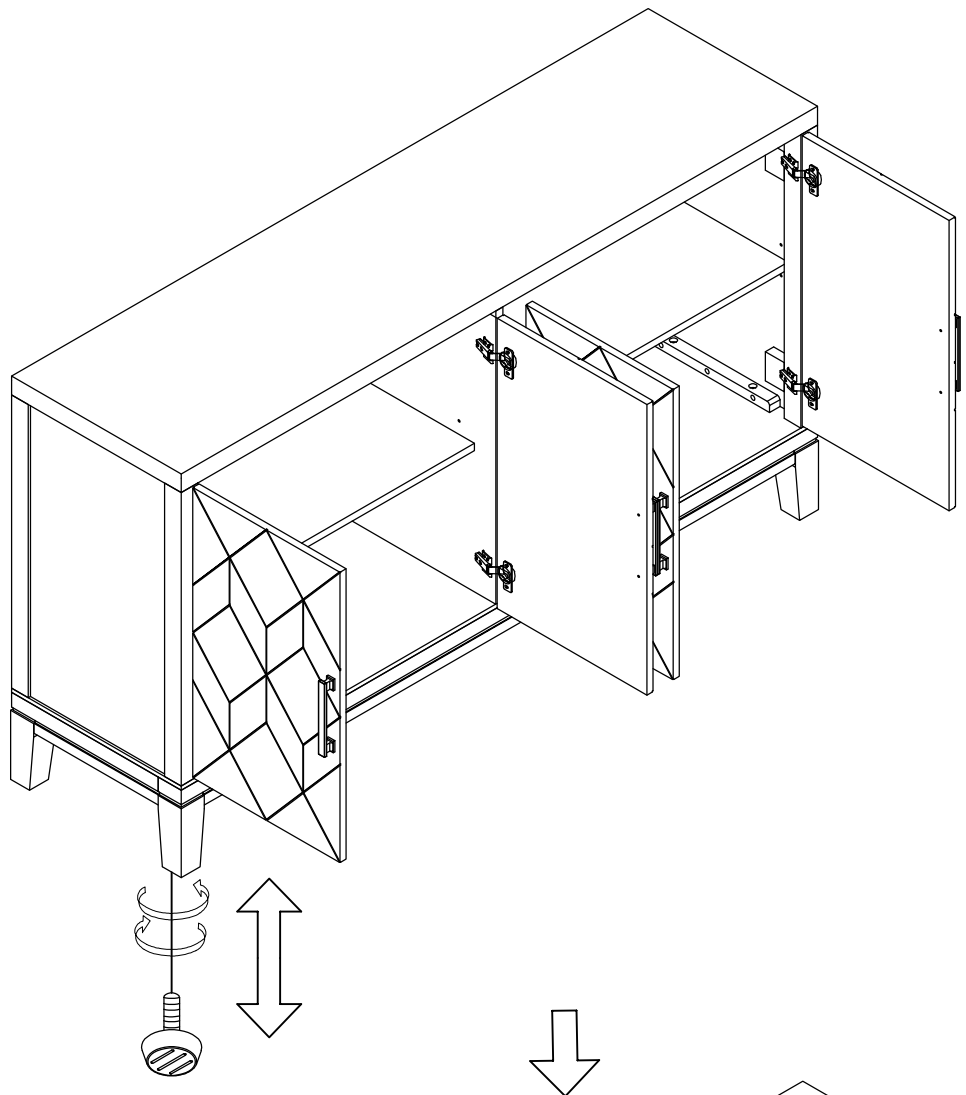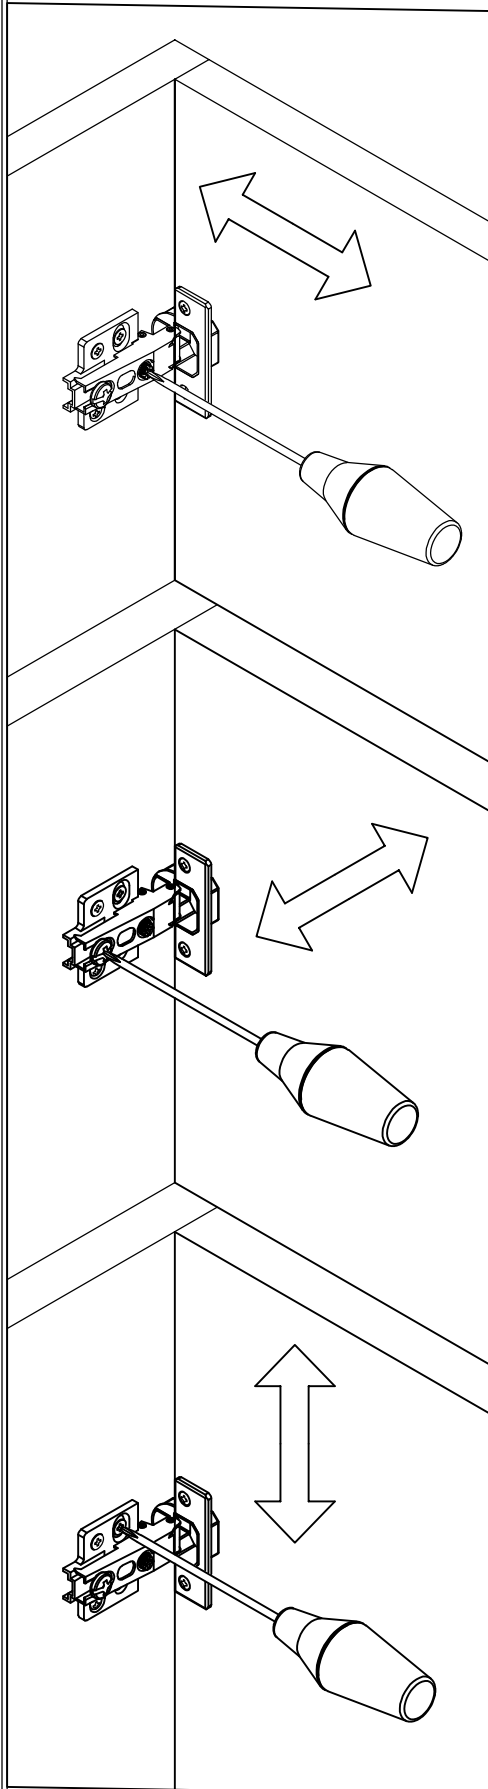




STEP 10





ASSEMBLY INSTRUCTIONS

ITEM #: WF316368


STEP 11

				
(A)	(B)	(C)	(D)	(E)
x4 Hook	x4 Anchor	x2 Plastic tie	x4 Screws	x4 Screws


Place the Cabinet in the desired location against the wall. Mark the position of the attached Hooks on the wall and remove the Cabinet. Using one of the remaining Hooks (A) as a template, Place the Hook (A) under the marks on the wall and mark the two hole positions. Drill the holes for the Anchors (B) and insert the Anchors (B) into the wall. Attach the remaining Hooks (A) to the Anchors (A) with Screw (D). Fully tighten the screws. Return the Cabinet to the selected position and connect the Hooks (A) together with Plastic Tie (C). Assembly is now complete.

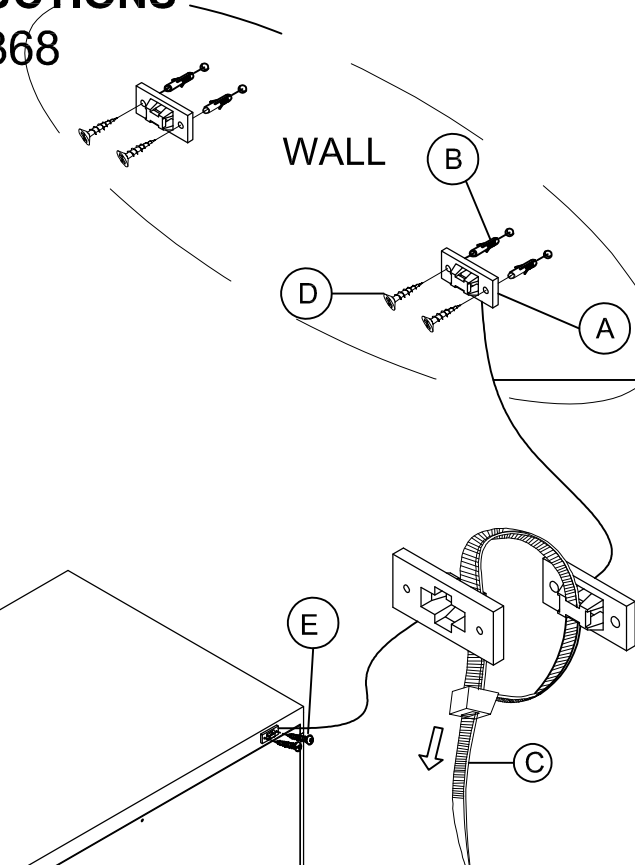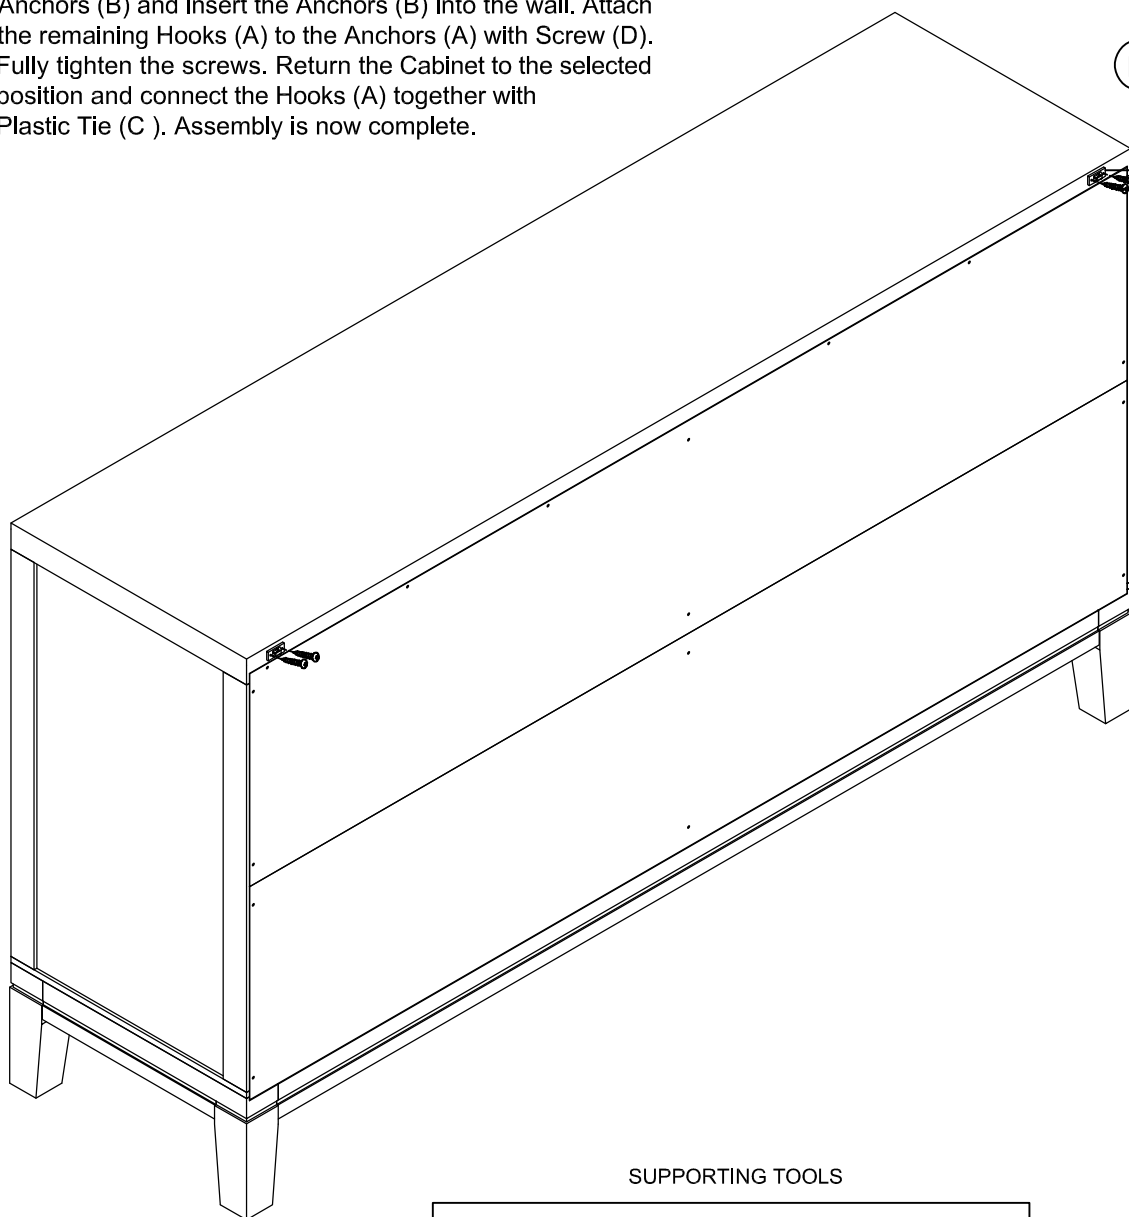

SUPPORTING TOOLS

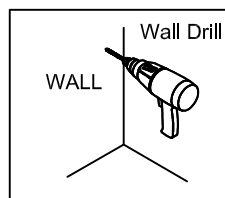

NOT INCLUDED

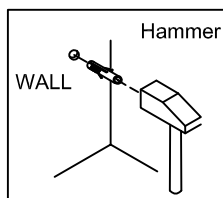

NOT INCLUDED