
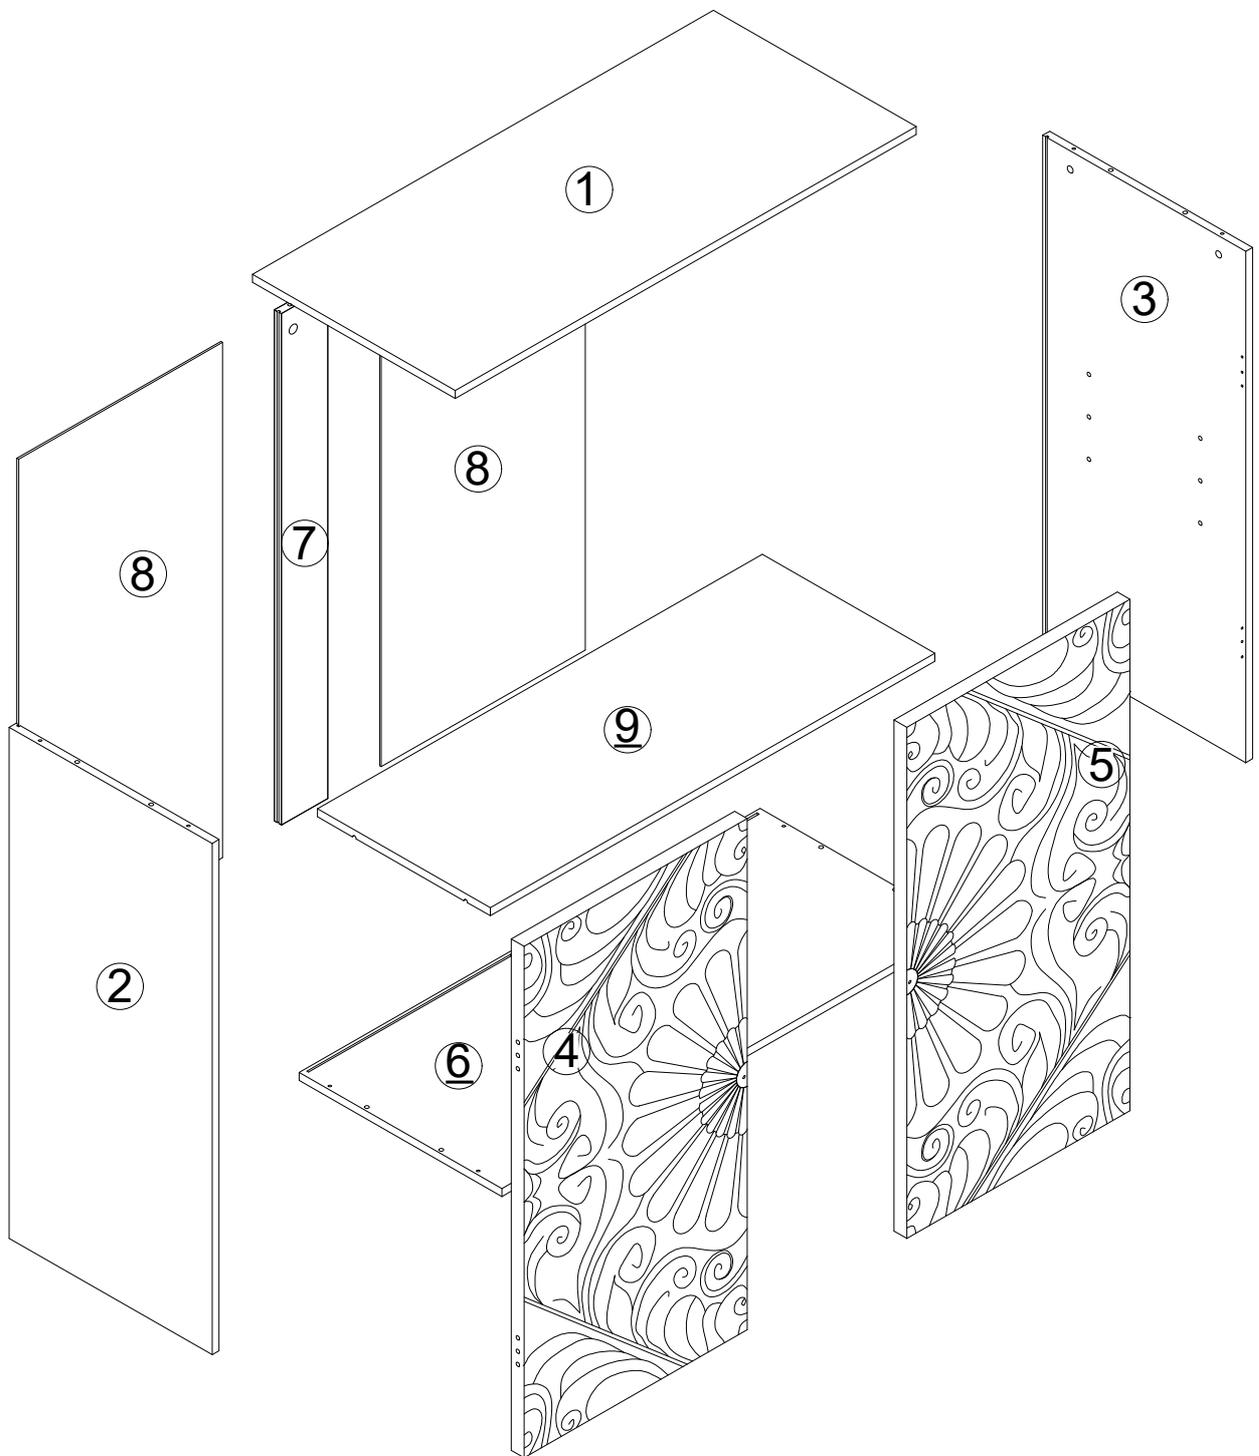






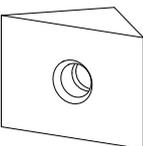

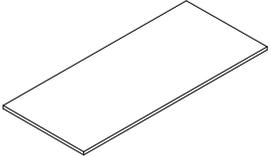
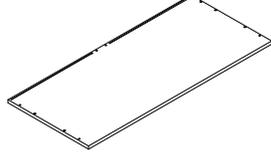
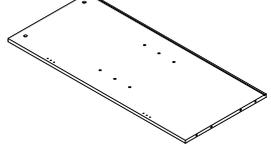

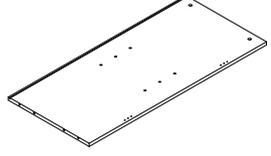
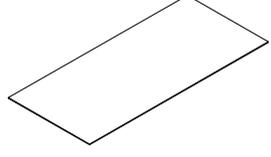
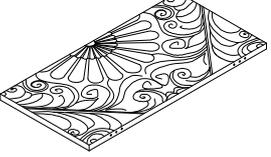




ASSEMBLING INSTRUCTION

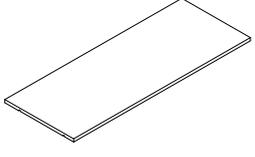

A	 	X6	K	 	X4
B	 Ø15*10mm	X6	L	 	X2
C	 Ø6*30mm	X8	M	 	X2
D	 M4*35mm	X6	N	 	X2
E	 M3*12mm	X24	O	 M4*12mm	X16
F	 	X4	P	 M4*25mm	X20
G	 M3*16mm	X4	R	 	X1
H	 	X4	S	 	X2
I	 	X4	T	 M3.5*12mm	X4
J	 	X4			


①		X1	⑥		X1
②		X1	⑦		X1
③		X1	⑧		X2
④		X1	⑨		X1
⑤		X1			


Step:1

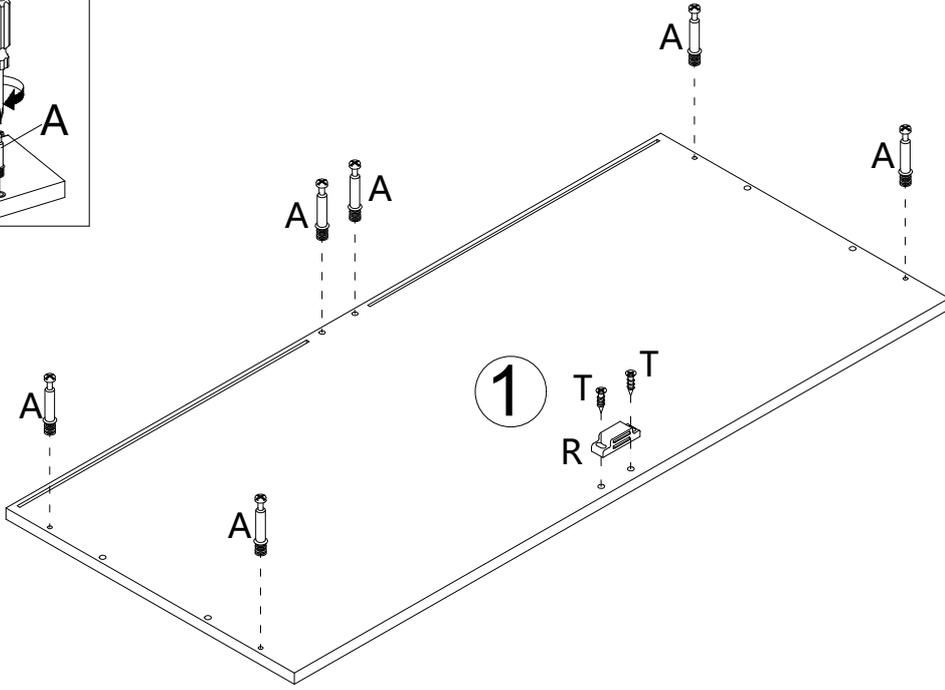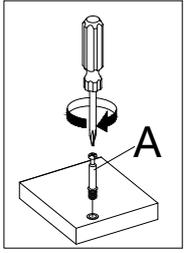


A		X6
R		X1
T	 M3.5*12mm	X2

Step:2

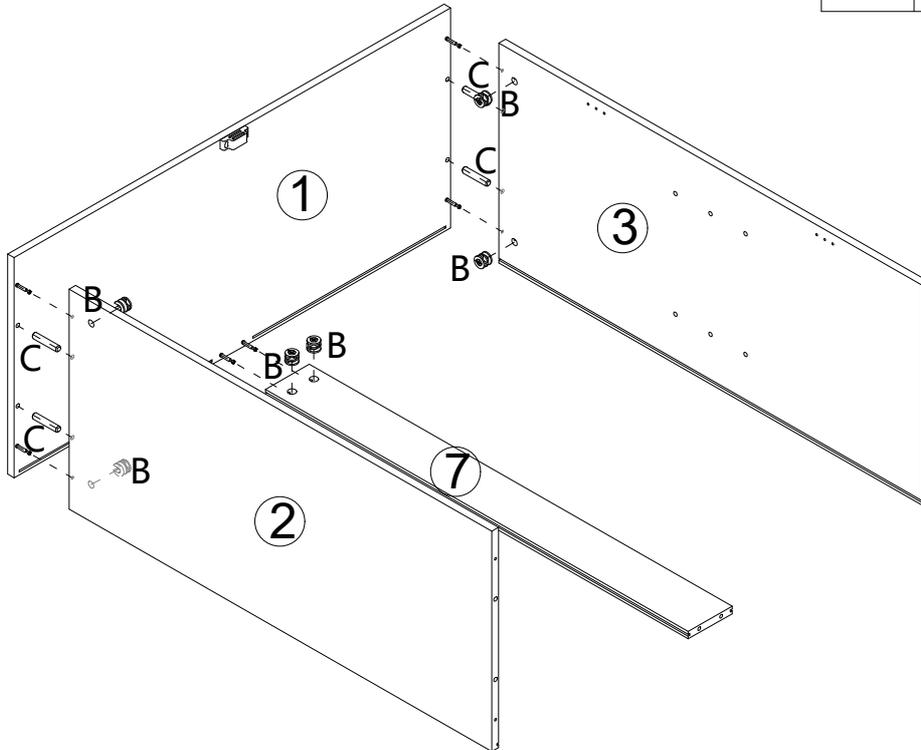


B	 Ø15*10mm	X6
C	 Ø6*30mm	X4

Step:3

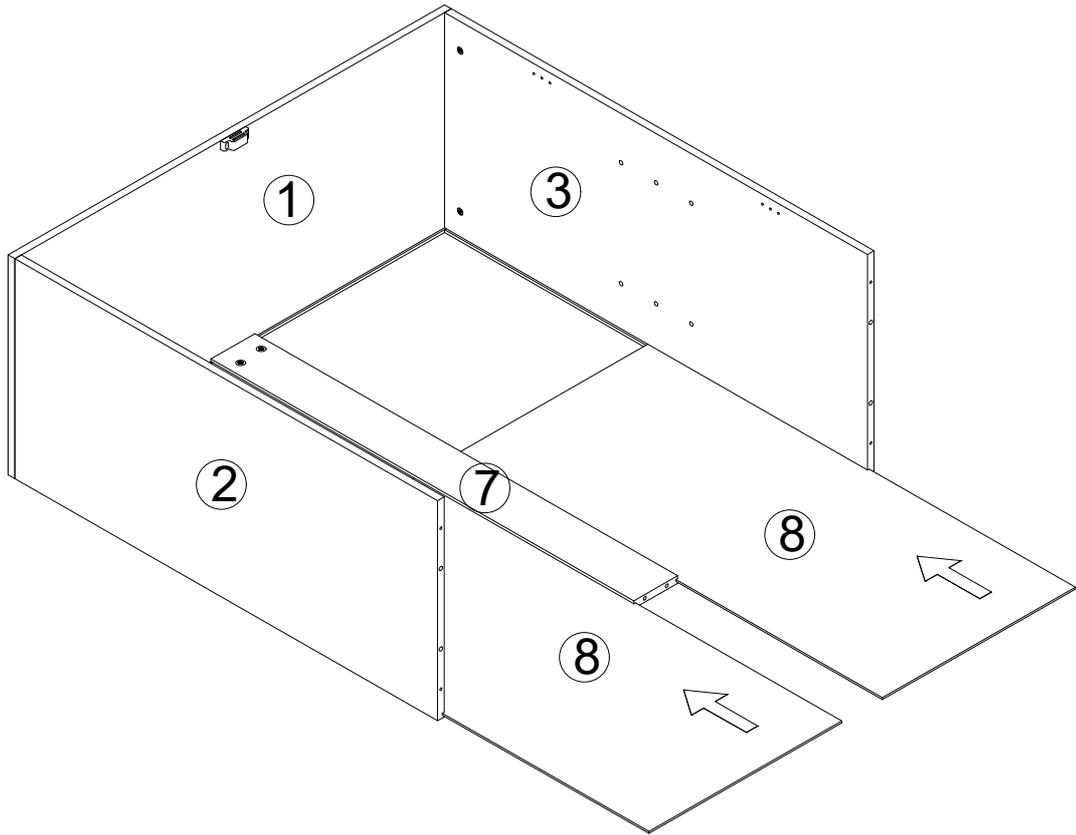

Step:4

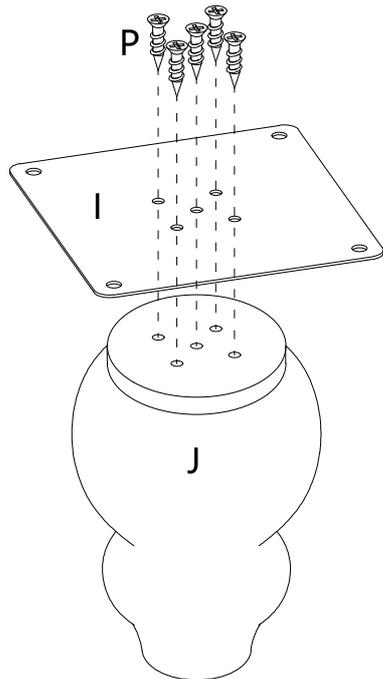


I		X4
J		X4
P	 M4*25mm	X20

X 4


Step:5

O	 M4*12mm	X16
---	---	-----

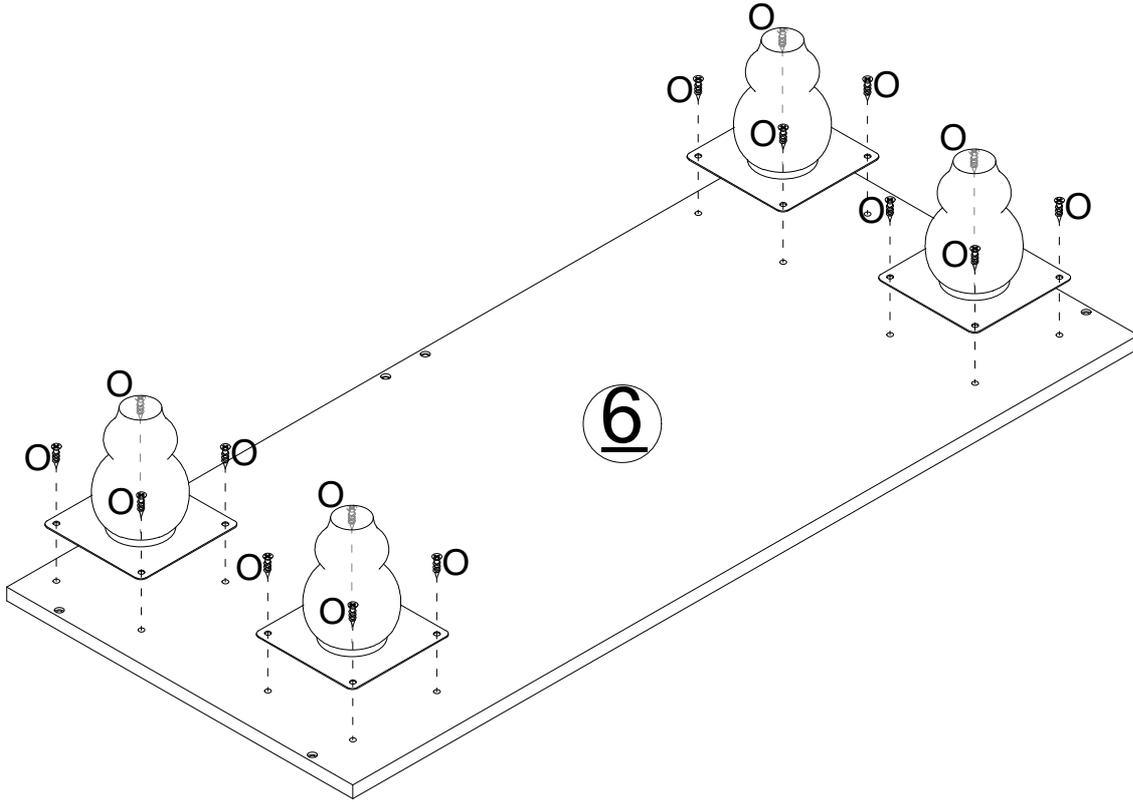


Step:6

D	 M4*35mm	X6
C	 Ø6*30mm	X4

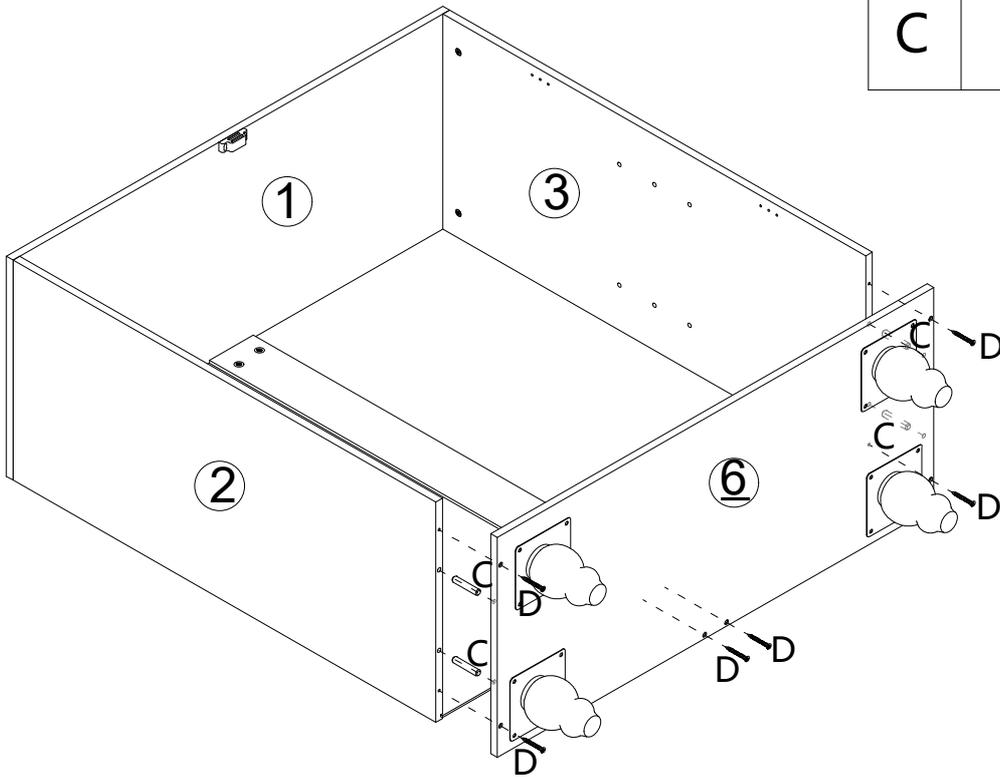



Step:7

E	 M3*12mm	X12
K		X4
S		X2
T	 M3.5*12mm	X2

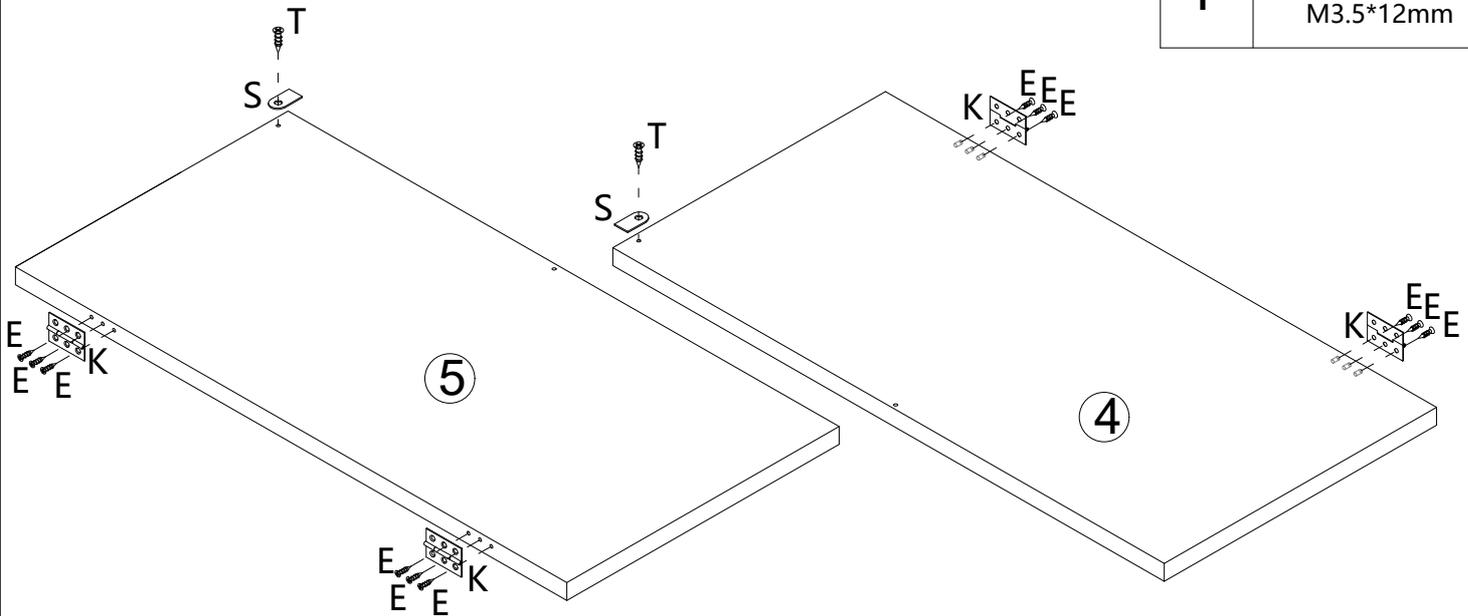


Step:8

E	 M3*12mm	X12
---	--	-----

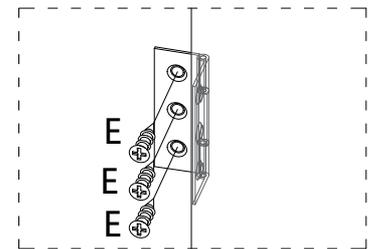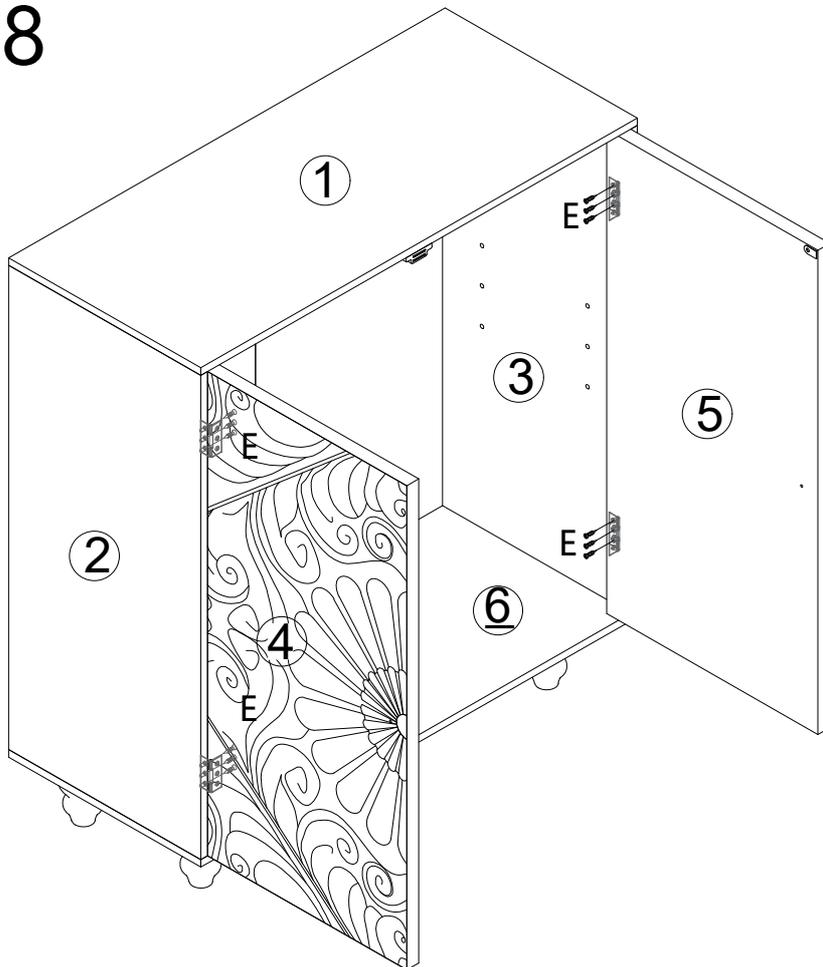


Step:9


F		X4
---	---	----

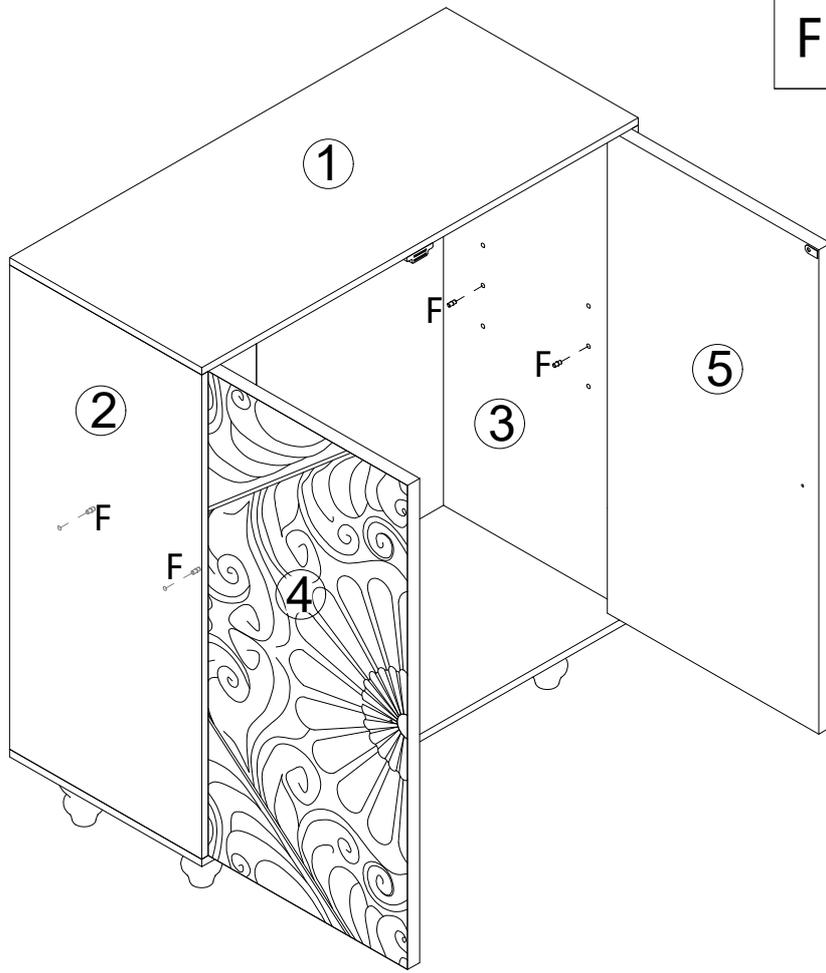

Step:10

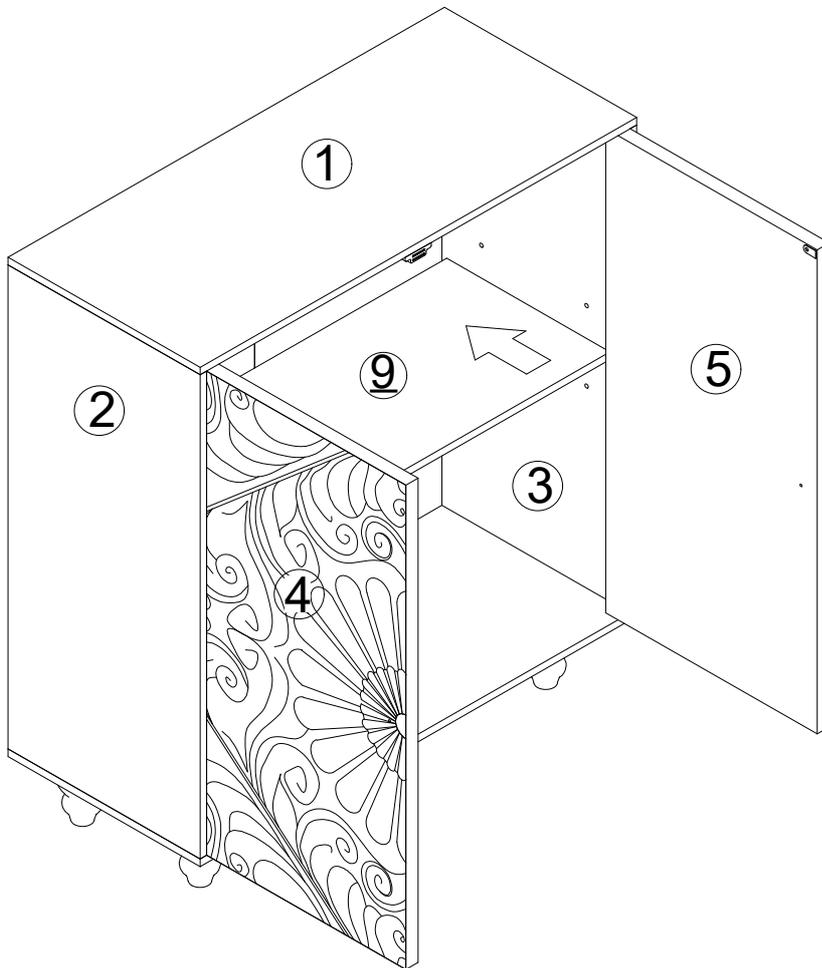


Step:11

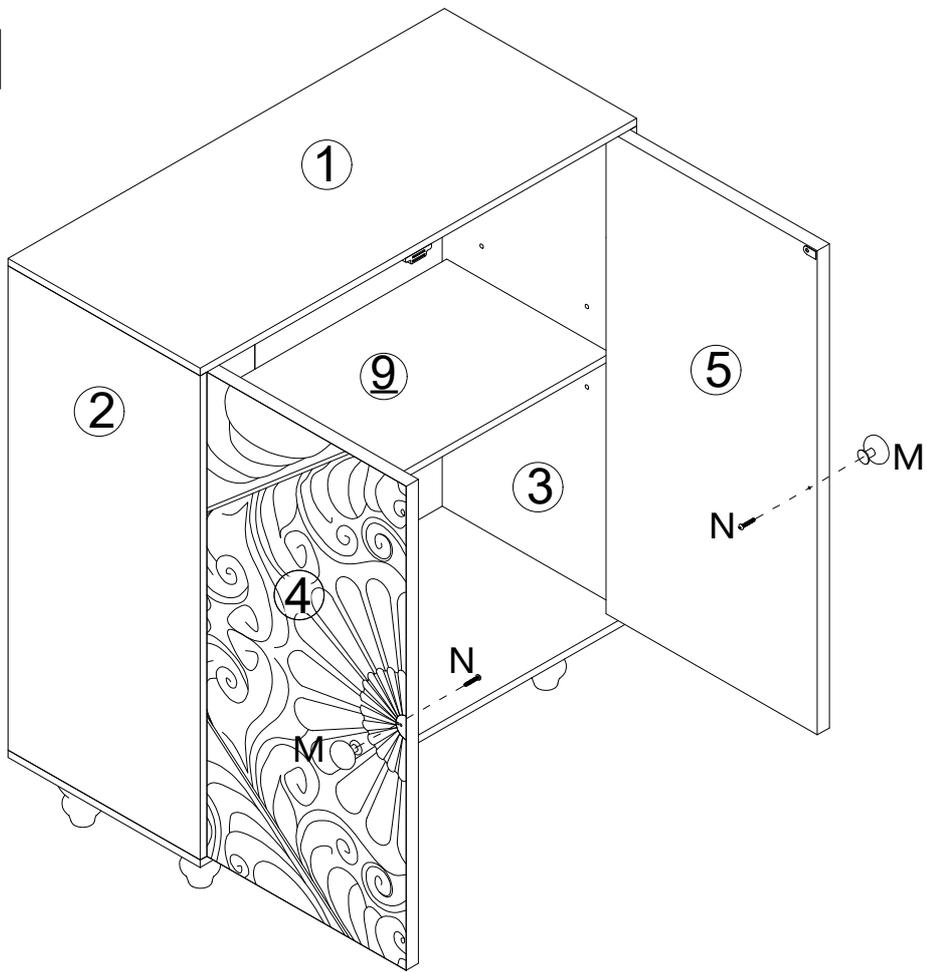


M		X2
N		X2

Step:12

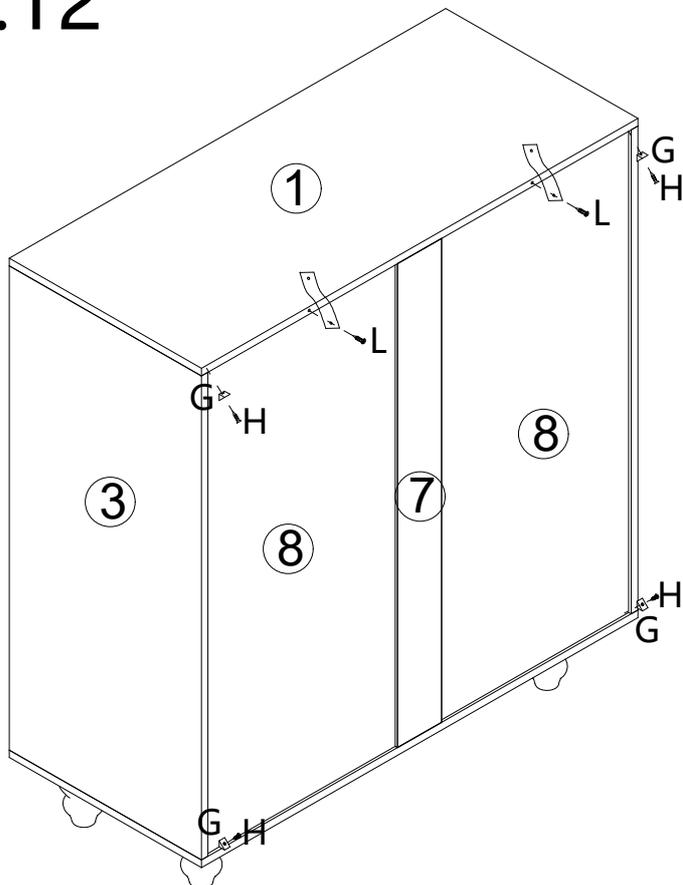

G	 M3*14mm	X4
H		X4
L		X2

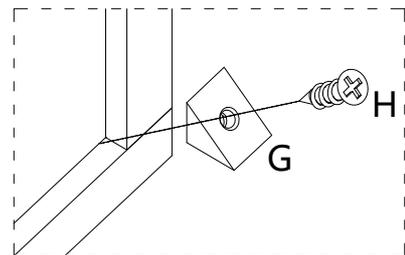

Step:13

L		X2
---	--	----

