

# ASSEMBLY INSTRUCTION

## WALL CABINET


### MODEL#

W0930 W1230 W1530 W1830 W2130


W0936 W1236 W1536 W1836 W2136

Estimated Assembly Time: 30 - 40 minutes

2-person assembly recommended

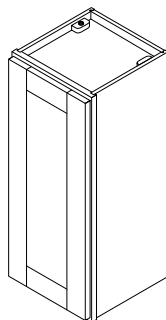


### TOOLS REQUIRED

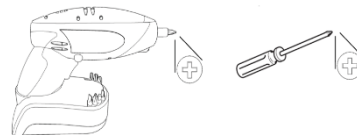

| PART | DESCRIPTION            | QTY | PART | DESCRIPTION             | QTY |
|------|------------------------|-----|------|-------------------------|-----|
| A1   | Box side panel - left  | 1   | D    | Face frame & door panel | 1   |
| A2   | Box side panel - right | 1   | K    | Adjustable shelf        | 2   |
| B    | Box bottom panel       | 1   | L    | Box top panel           | 1   |
| C    | Box back panel         | 1   |      |                         |     |

## HARDWARE CONTENTS

**DD** Rubber bumper x 2




**EE** Adjustable shelf clip x 8




**FF** 1" Flat head phillips screw x 4




1

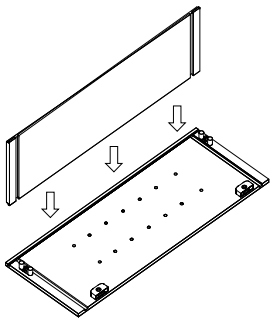


2

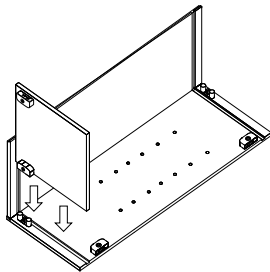


3

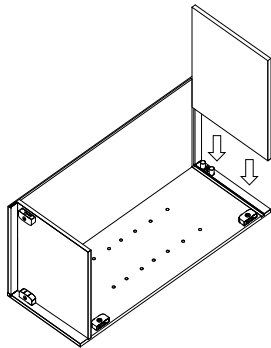


4

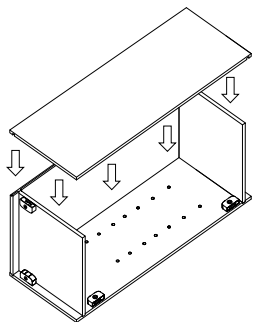


5

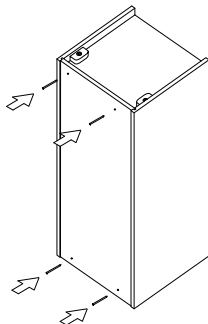


6

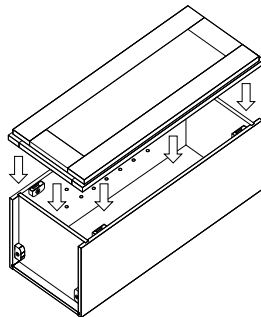

7

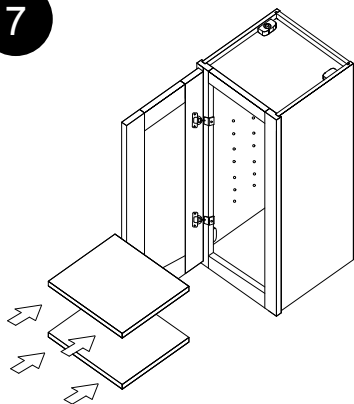



8

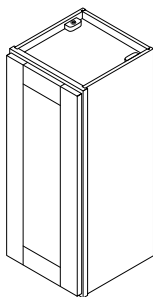


## CAMLOCK CONNECTION

---

1. Insert the camlock to the locker.

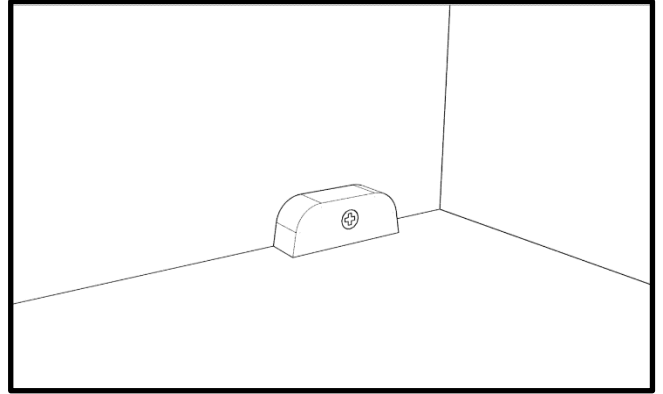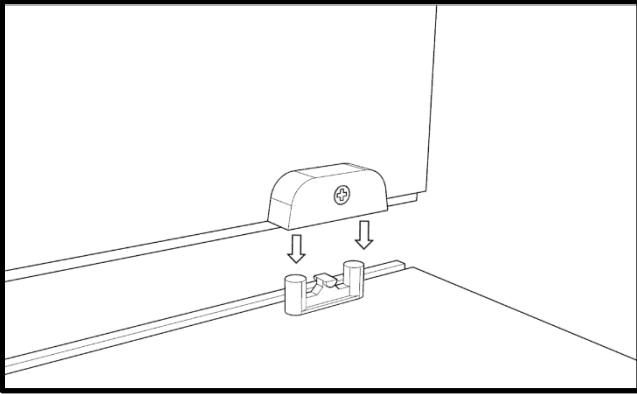


2. Turn the nut clockwise to latch two parts.


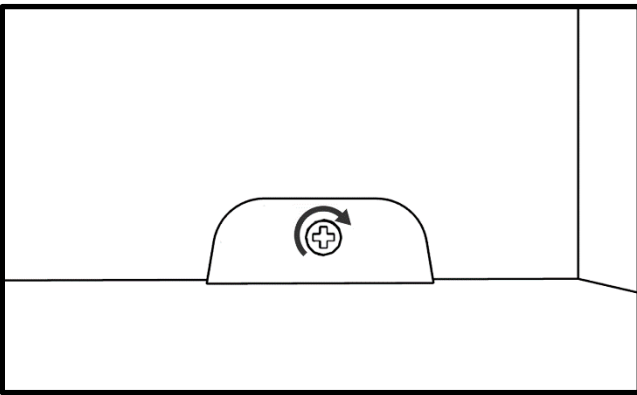


## ADJUSTABLE SHELF INSTALLATION

1. Insert four shelf clips into the pre-drilled holes on the inner side of cabinet box side panels at the same height for one shelf.

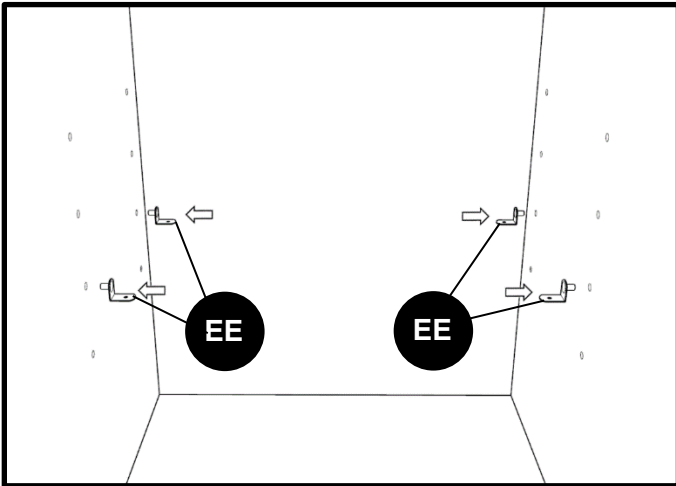


2. Insert the adjustable shelf at a tilted angle.

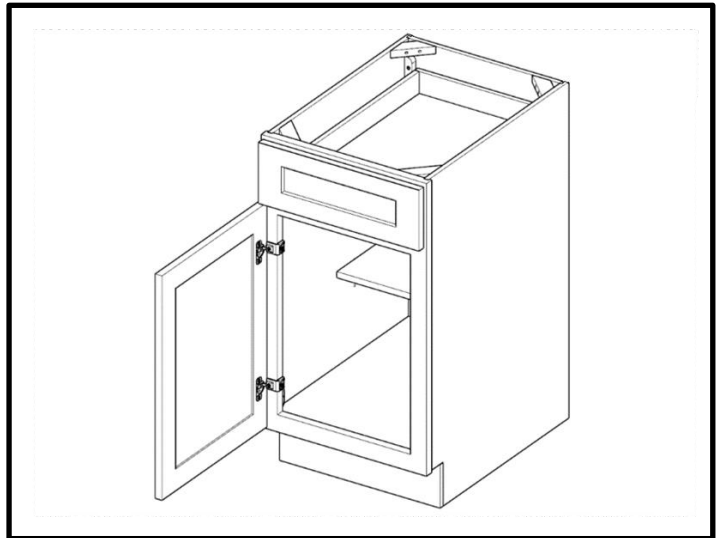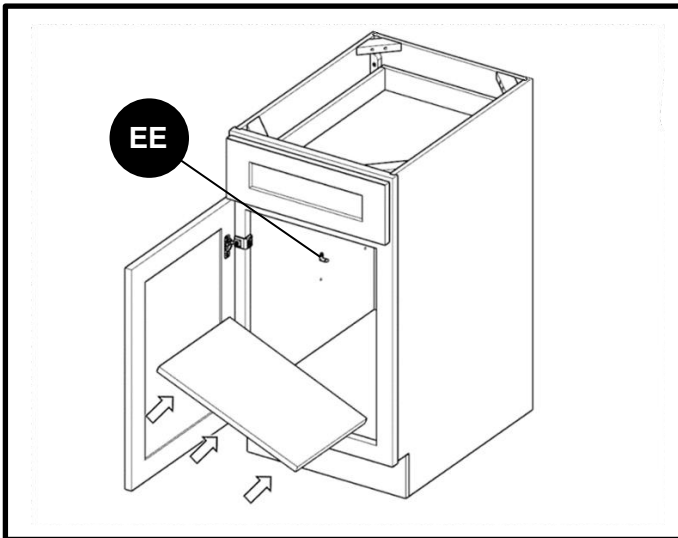

## FASTEN BOX BOTTOM PANEL AND BOX BACK PANEL

1. Drill 1" flat head Phillips screw to the predrilled holes and fasten box bottom panel with box back panel

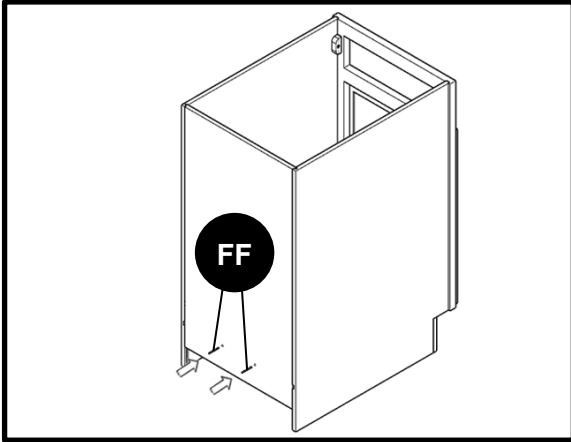

## RUBBER BUMPER INSTALLATION

1. Attach rubber bumpers to 4 corners of each drawer face panel and 2 outside corners of each door panel.

