## B33,B36,B42

ASSEMBLY INSTUCTIONS

## Getting started:

prepare a protection layer, a screwdriver

STEP 1: Joint side panel with back panel

STEP 2: Joint bottom panel with side panel


STEP 3: Joint side panel with bottom & back panel

STEP 4: Attach frame on and toekick board

STEP 5: Joint the drawer together, then install the drawer guide.


STEP 6: Attach the wood block on the top corner, and put on the adjustable shelf


STEP 7: Fix drawer head on the drawer front and fix door onto the frame and adjust the cover-space

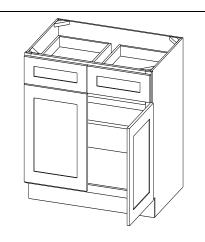


PARTS LIST			
NO.	Description	QTY	
Α	BACK PANEL	1	
В	SIDE PANEL	2	
С	TOP&BOTTOM PANEL	1	
D	TOE KICK	1	
Е	FACE FRAME	1	
F	DRAWER BOX FRONT AND BACK	4	
G	DRAWER BOX SIDE	4	
Н	DRAWER BOX BOTTOM	2	
I	ADJUSTABLE SHELF	1	
J	DRAWER HEAD	2	
K	CABINETS DOOR	2	

11	1 1/2" SOFTCLOSE HINGE	4	1 1/2" hinge	
10	3/4" ROUND HEAD SCREW	4	3/4* Tound head screw	
9	BUMPER	12	Bumper	
8	1" ROUND HEAD SCREW	8	1" round head screw	
7	Selfclose slider	2	Seliciose sider	
6	SHELF CLIP	4	Shelf clip	
5	9/16"ROUND HEAD SCREW	44	9/16" round head screw	
4	CLEAT	11	(a) Cleat	
3	1"FLAT HEAD SCREW FOR CARCASS	4	1* flat head screw	
2	WOOD BLOCK	4	Wood block	
1	1" FLAT HEAD SCREW FOR WOOD BLOCK	8	1" flat head screw	
NO.	Description	QTY	PICTURE	
HARDWARE LIST				
<u> </u>				

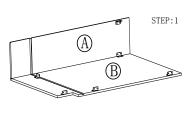



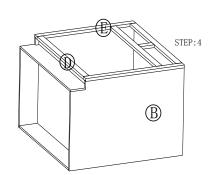

(A)

STEP:2

