





P.01

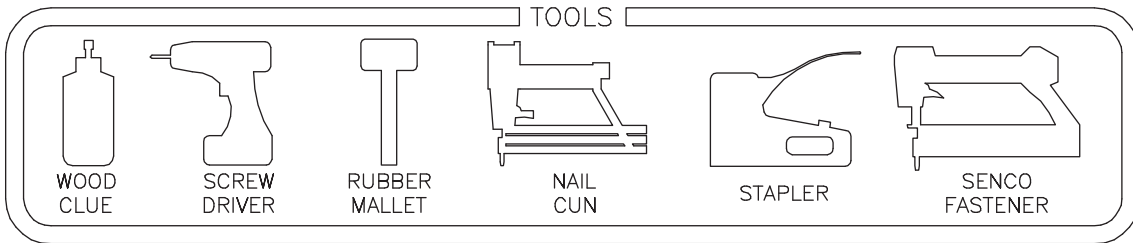



Lazy Susan

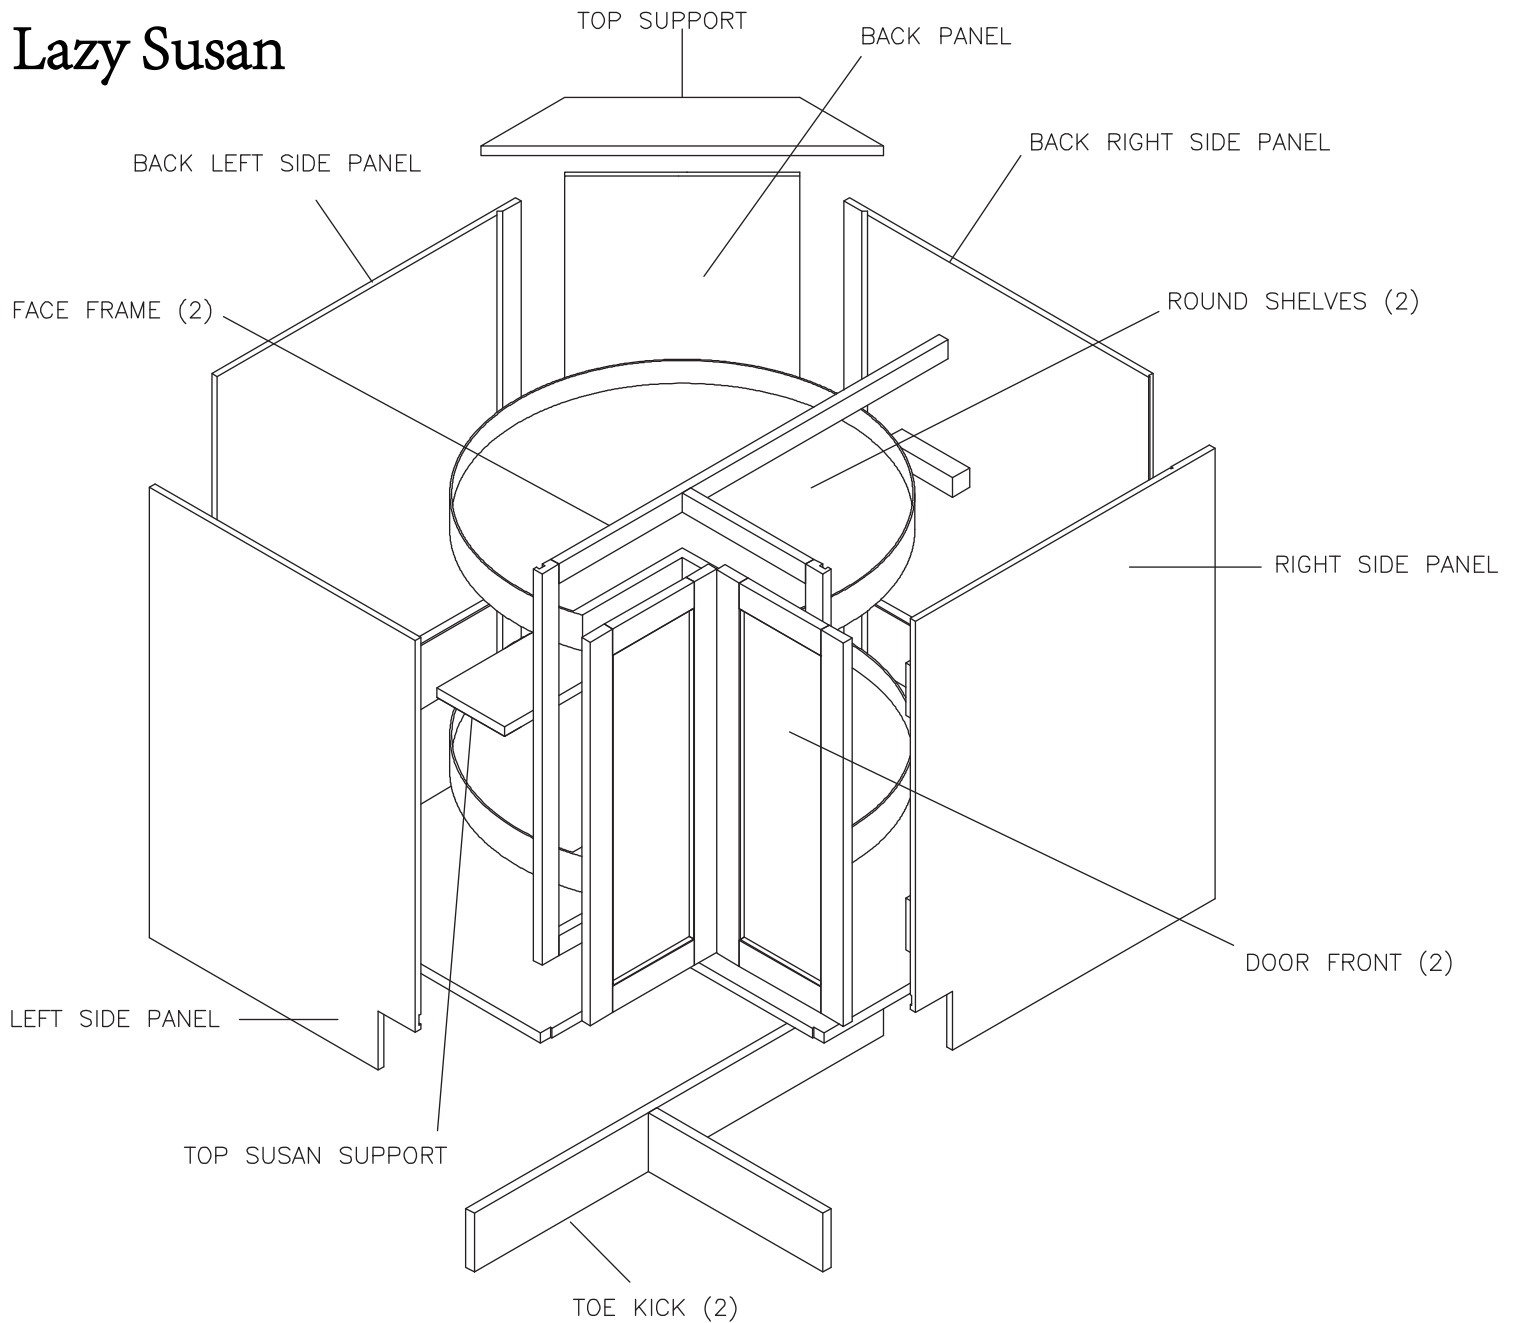


TURNPLATES (2) METAL BRACKETS (4) BIFOLD HINCE (2)


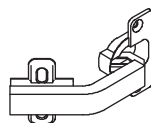
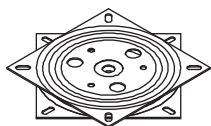


BOT SUSAN SUPPORT (1) 170° HINCE (2)







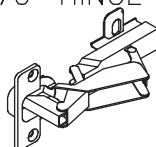
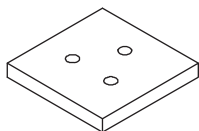


SCREWS






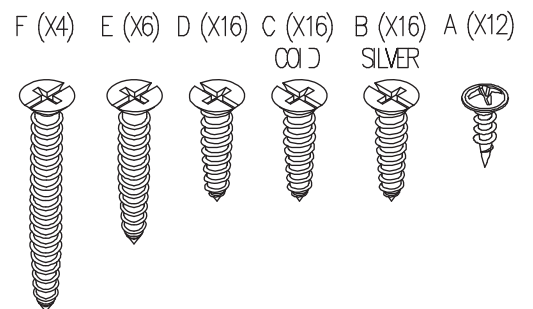




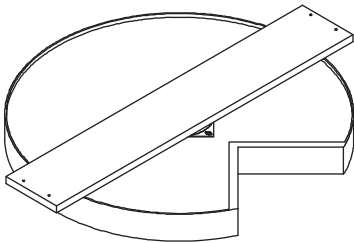
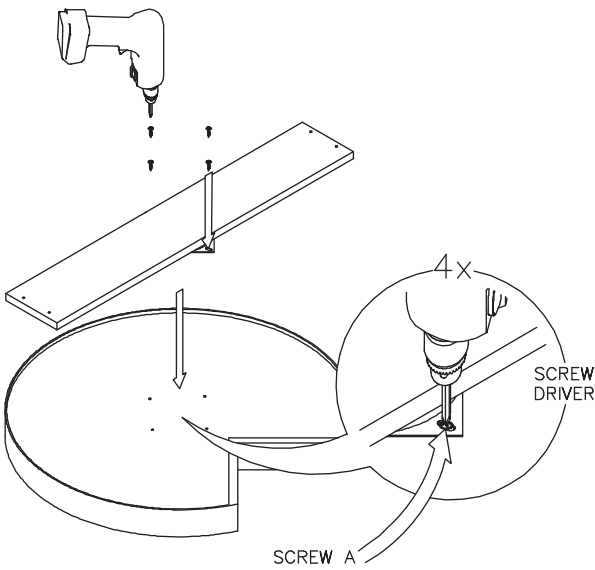
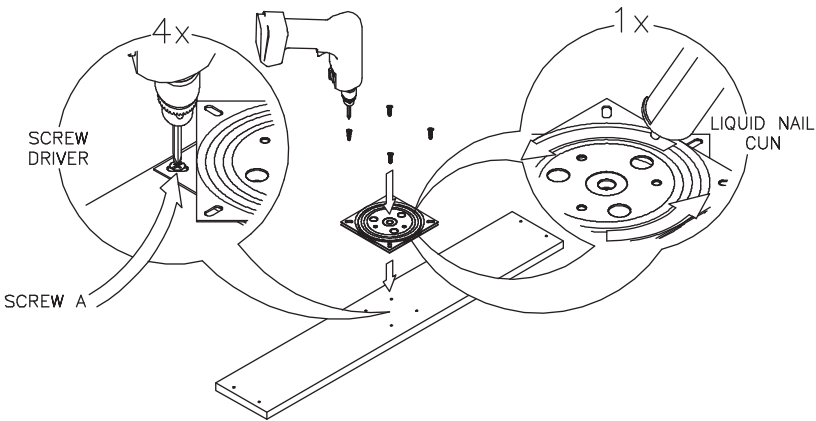


P.03

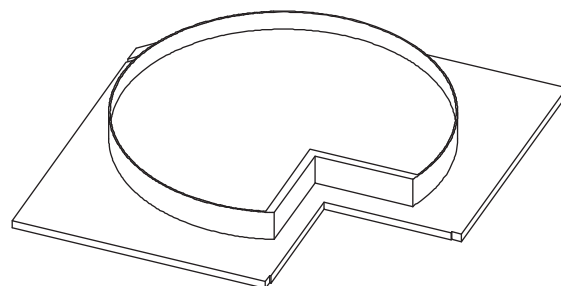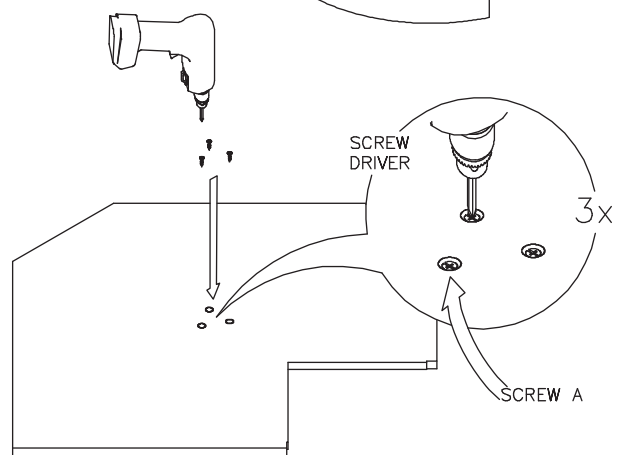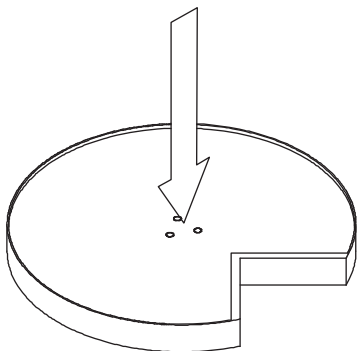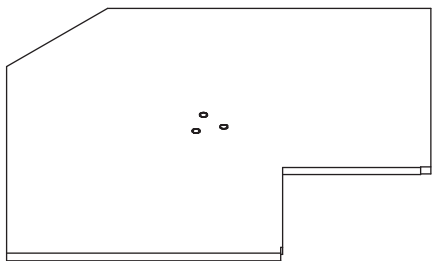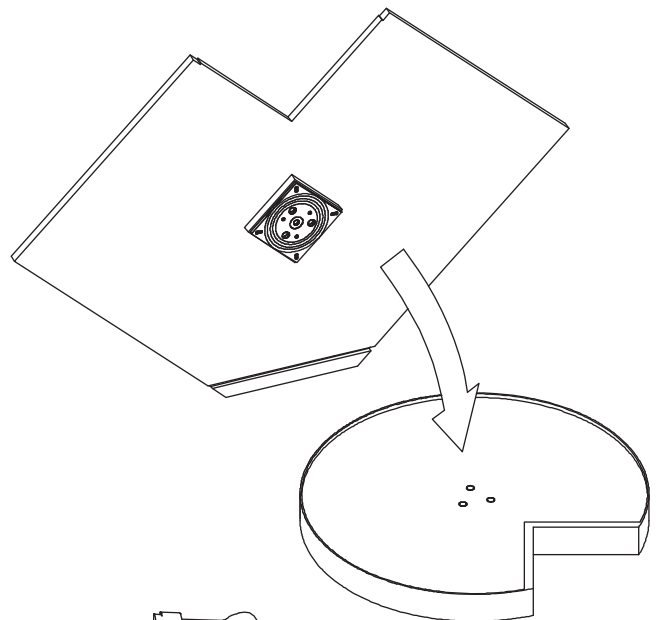
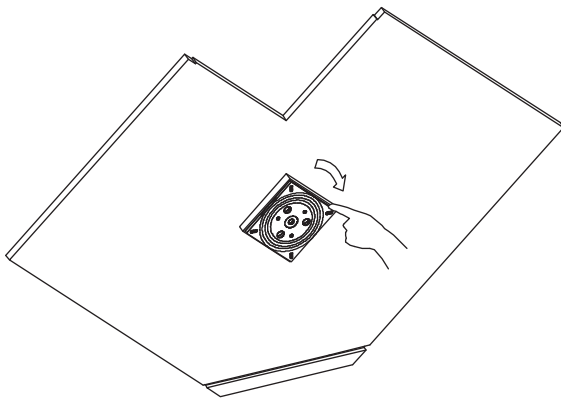
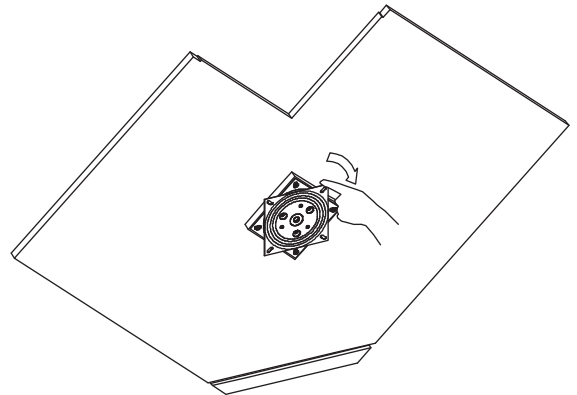
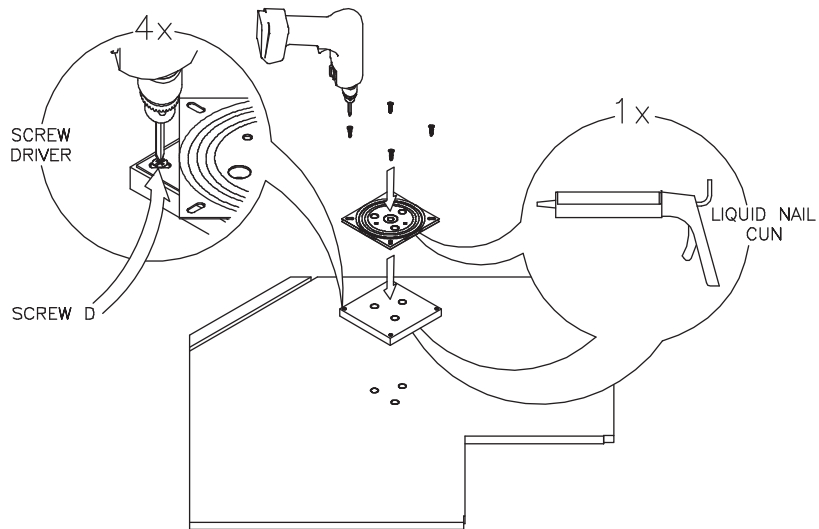


P.04

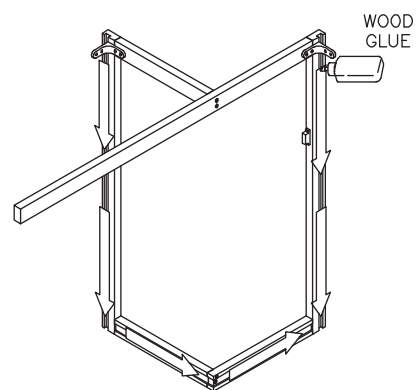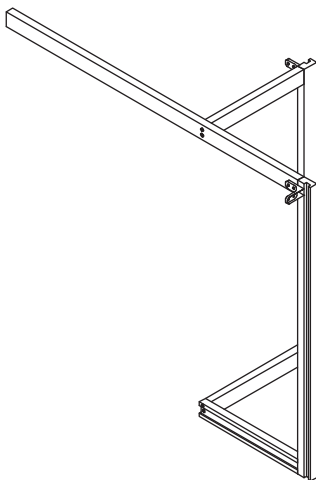
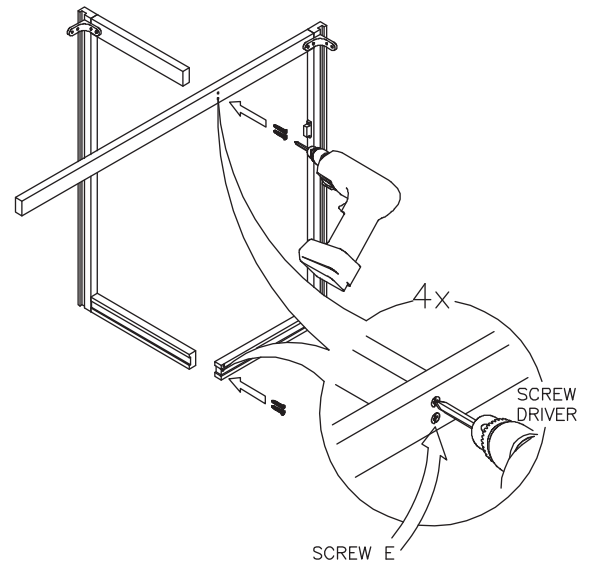
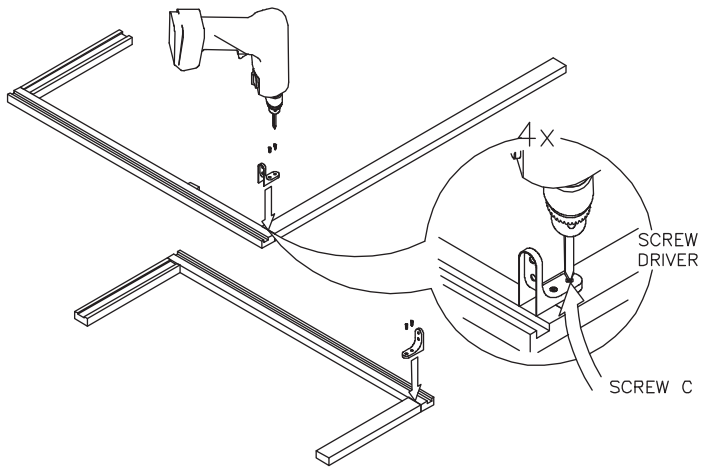
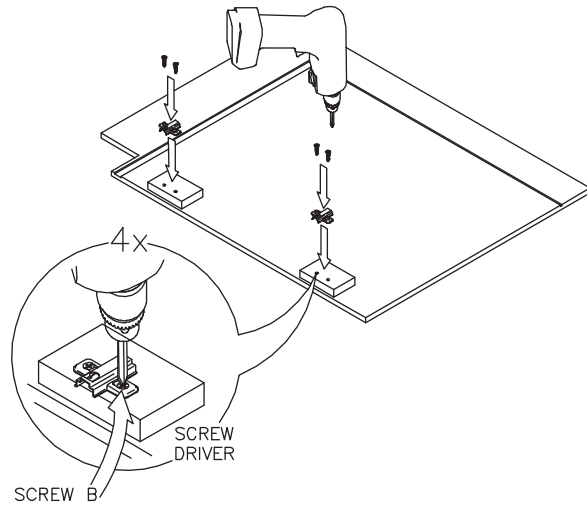
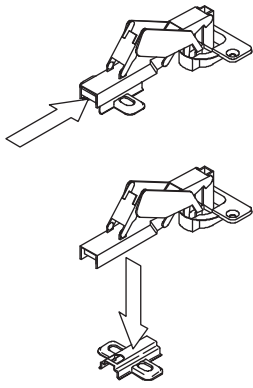


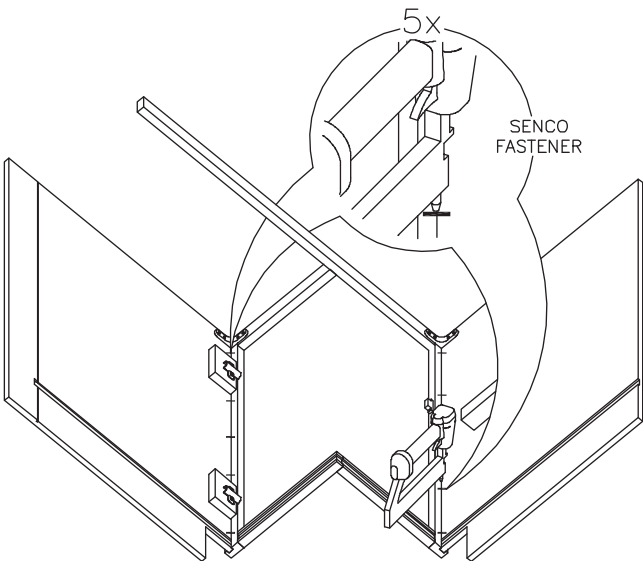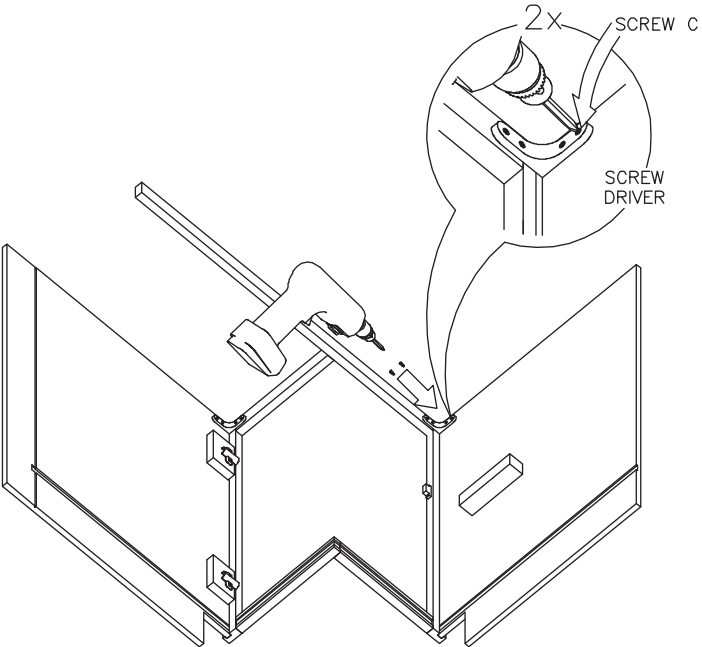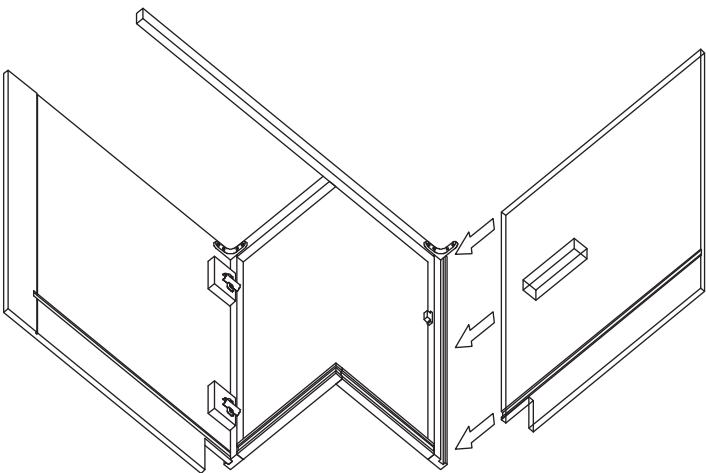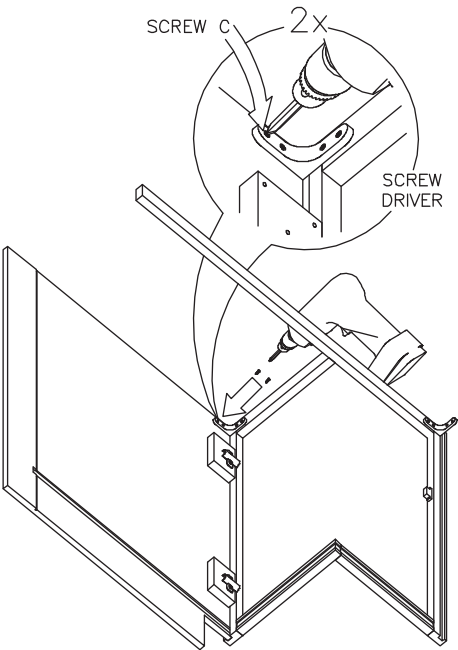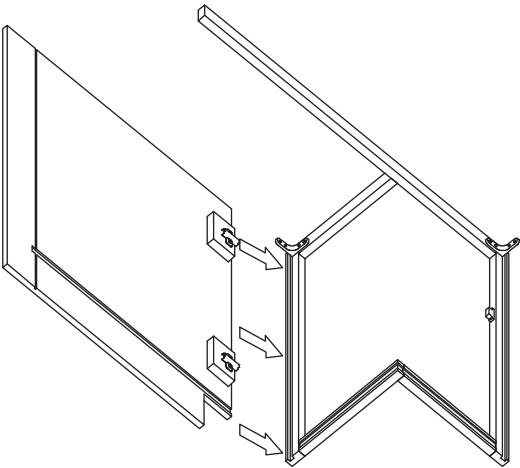






P.06

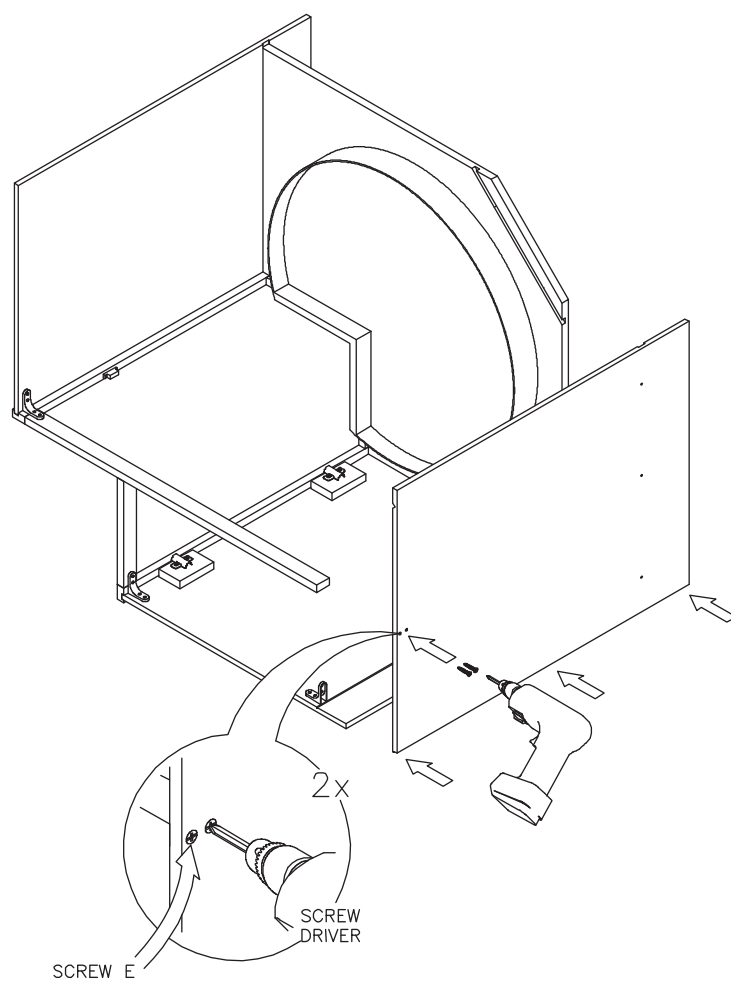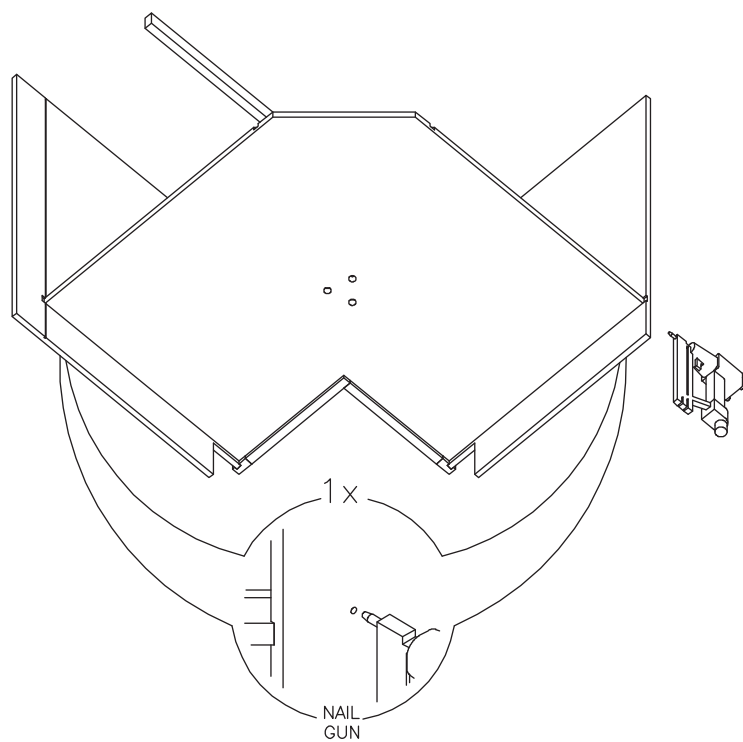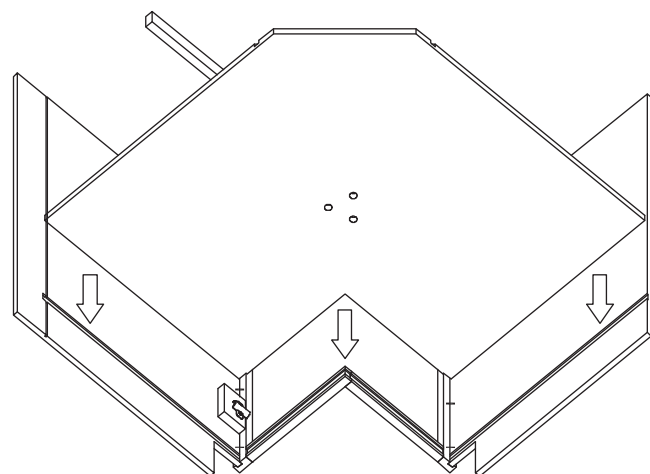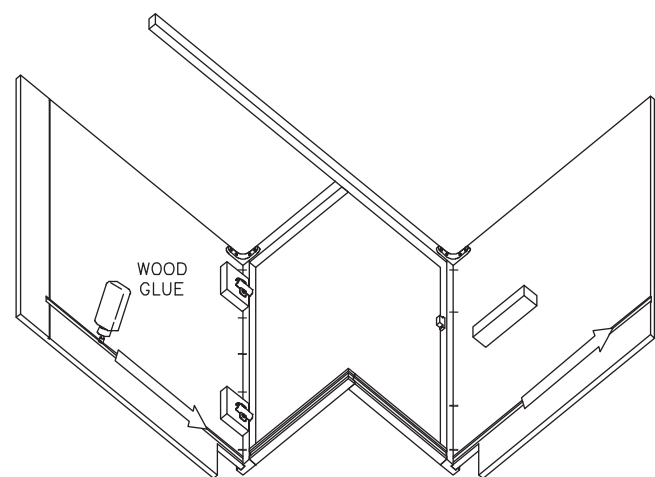

P.07

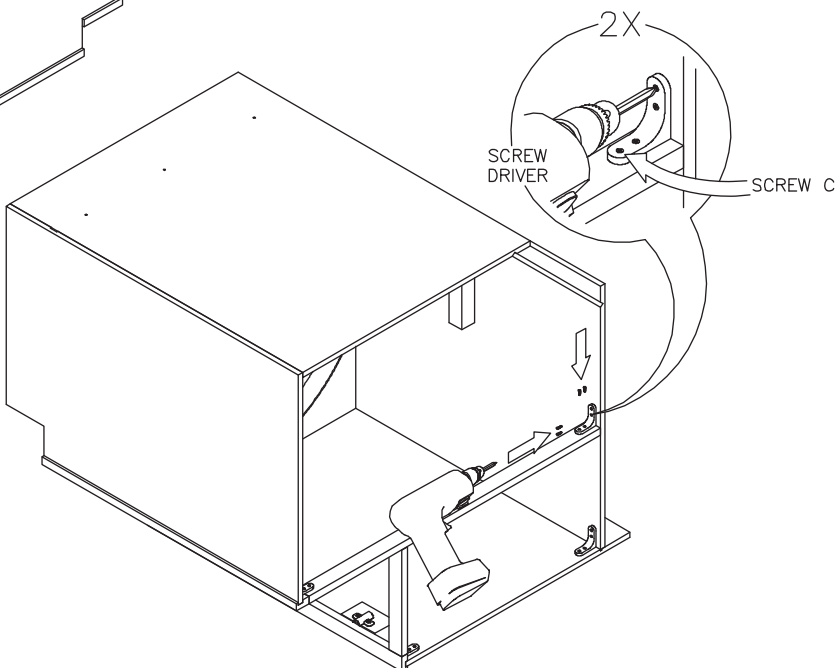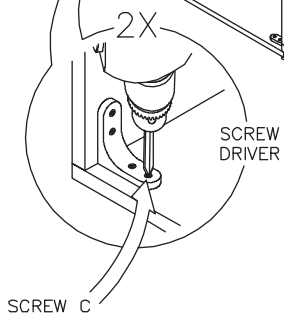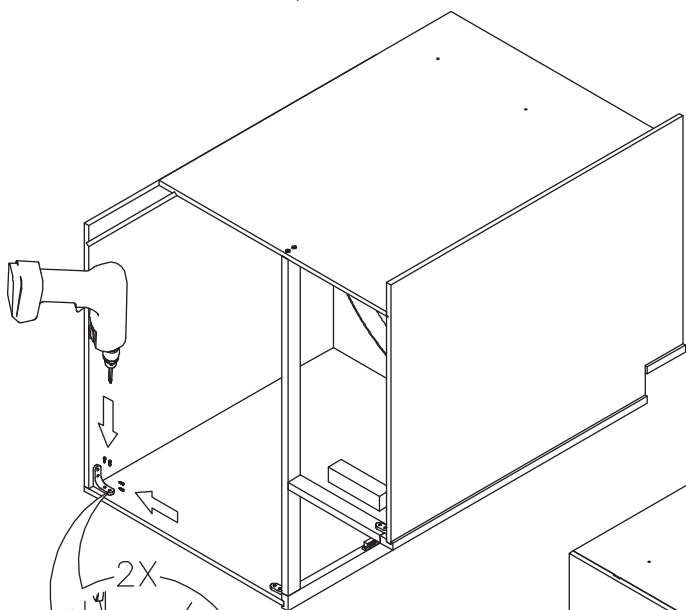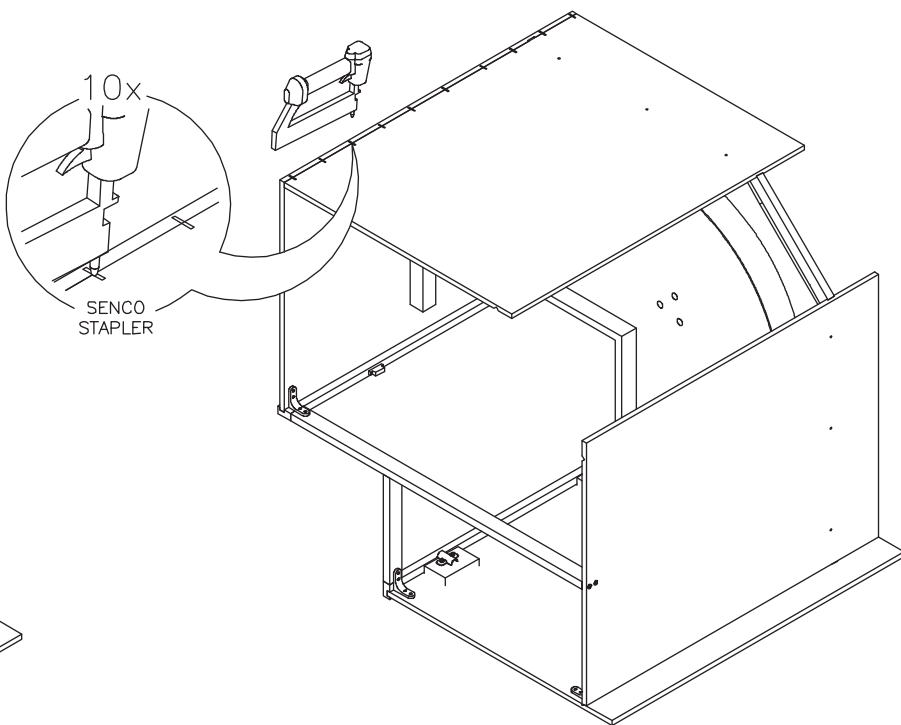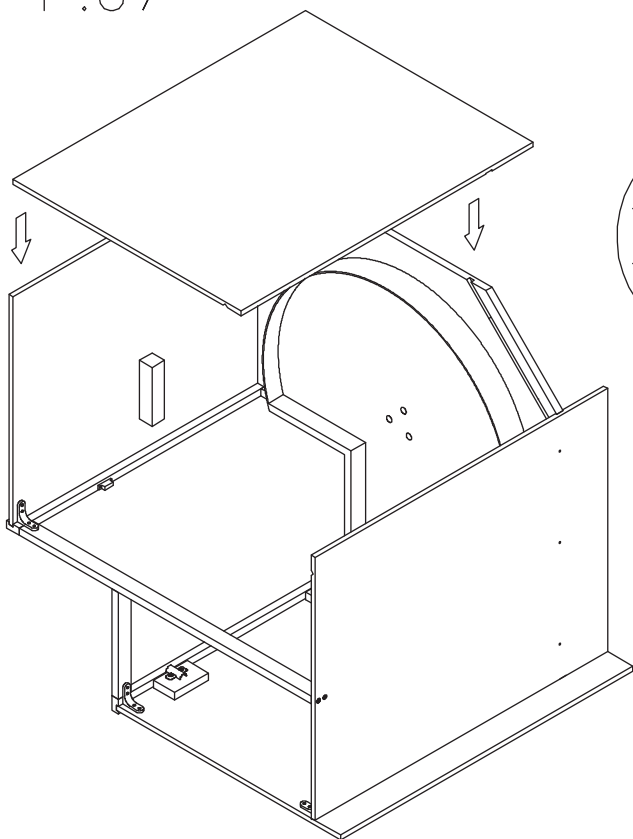

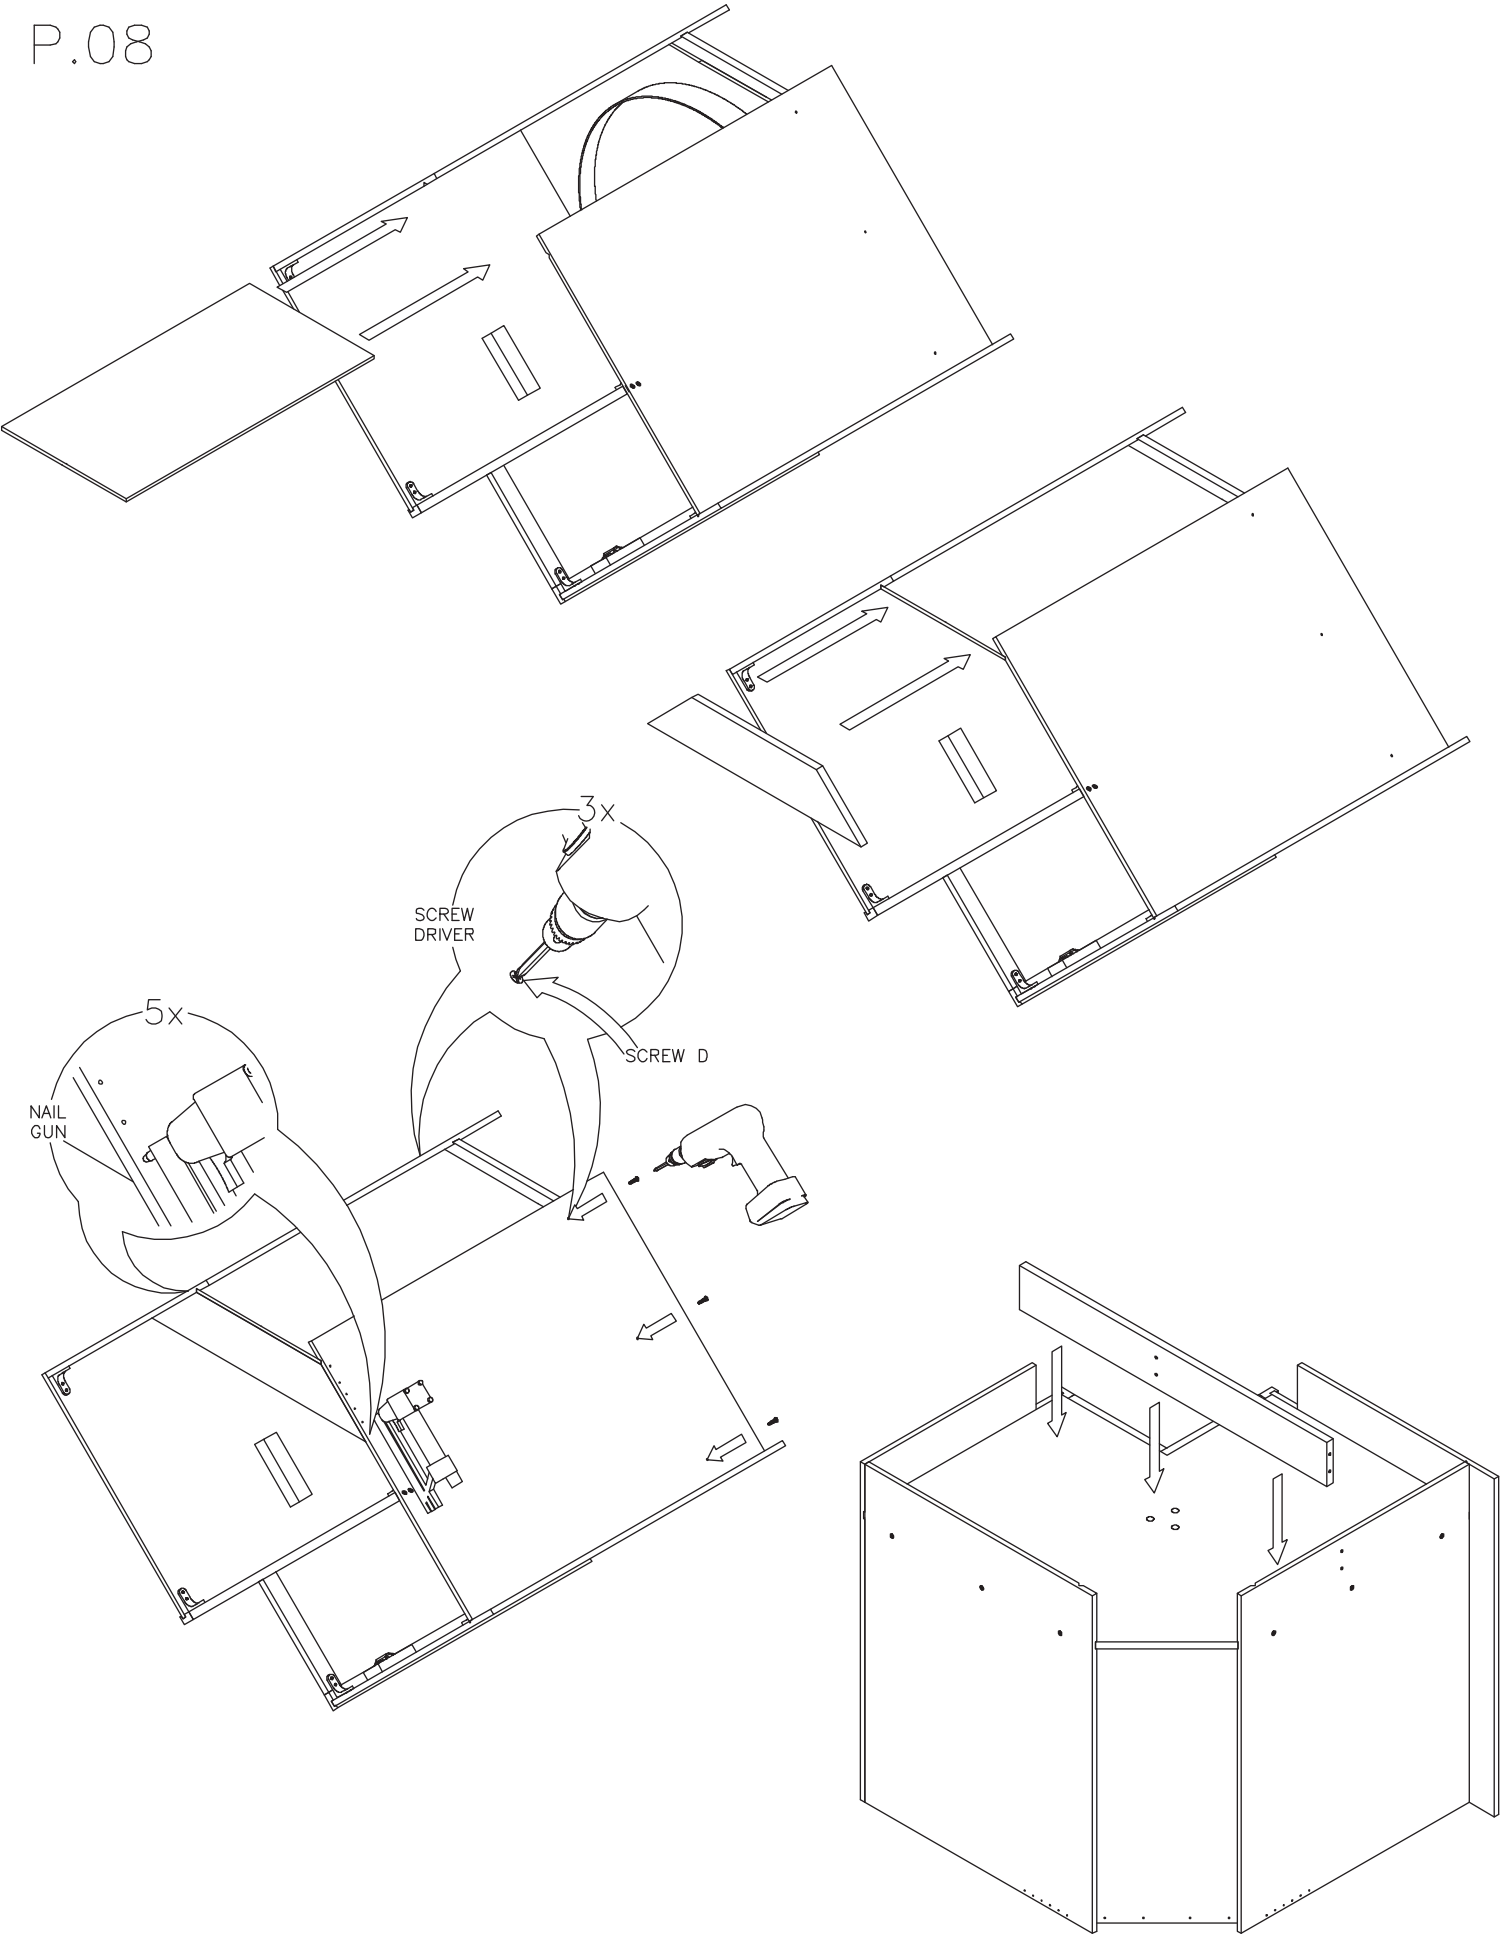

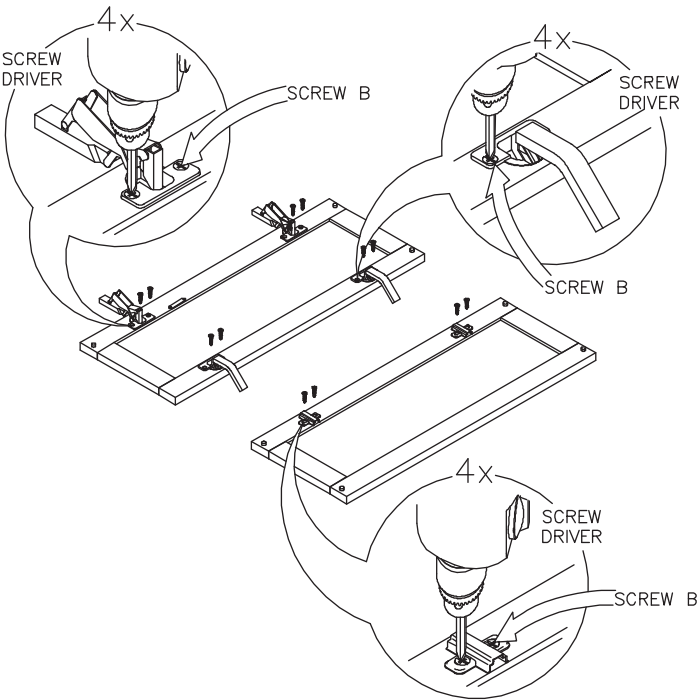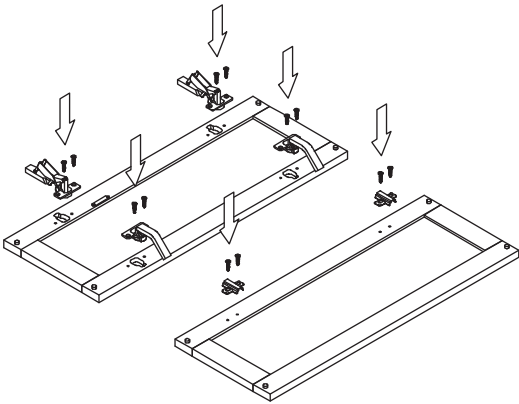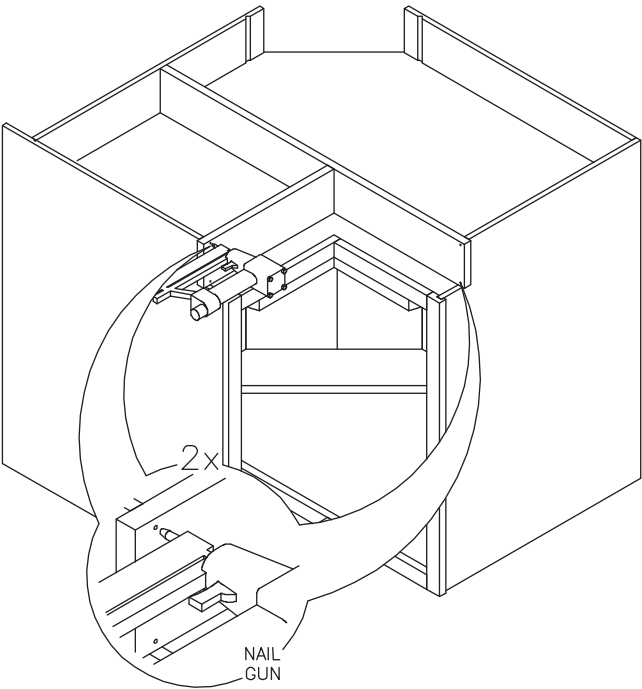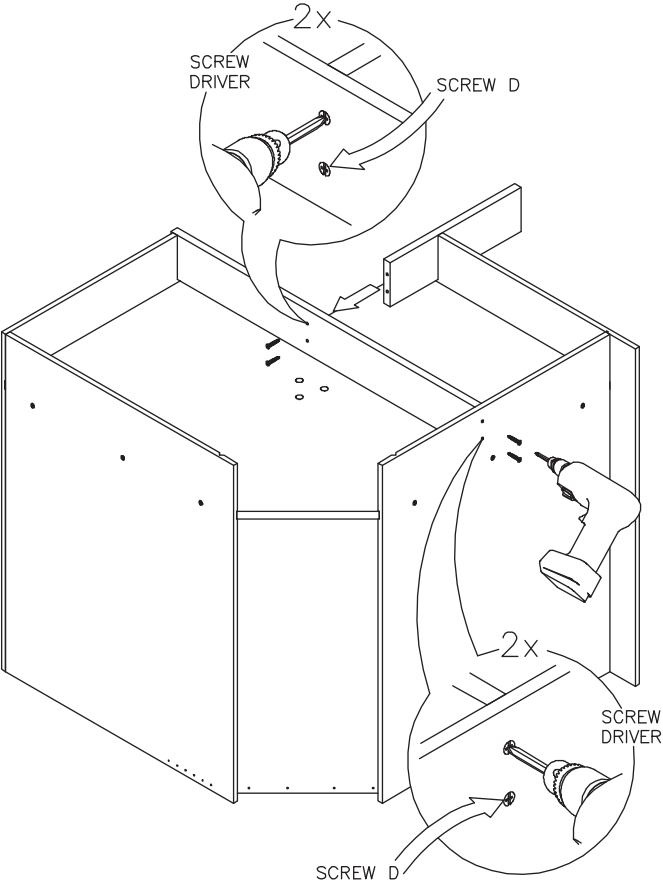

P.10

