



ASSEMBLY INSTRUCTIONS





<<Before assembling, read all instructions>>

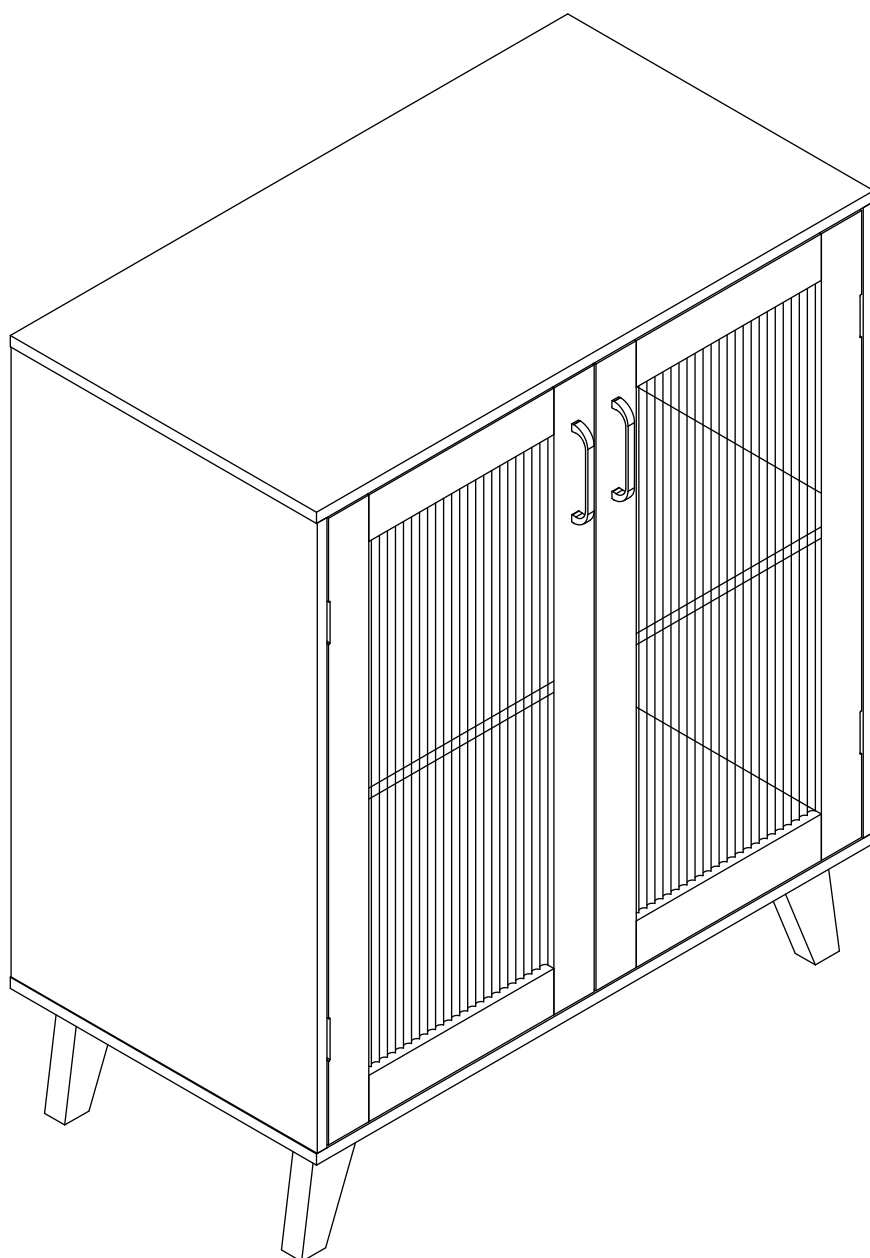



Exploded View

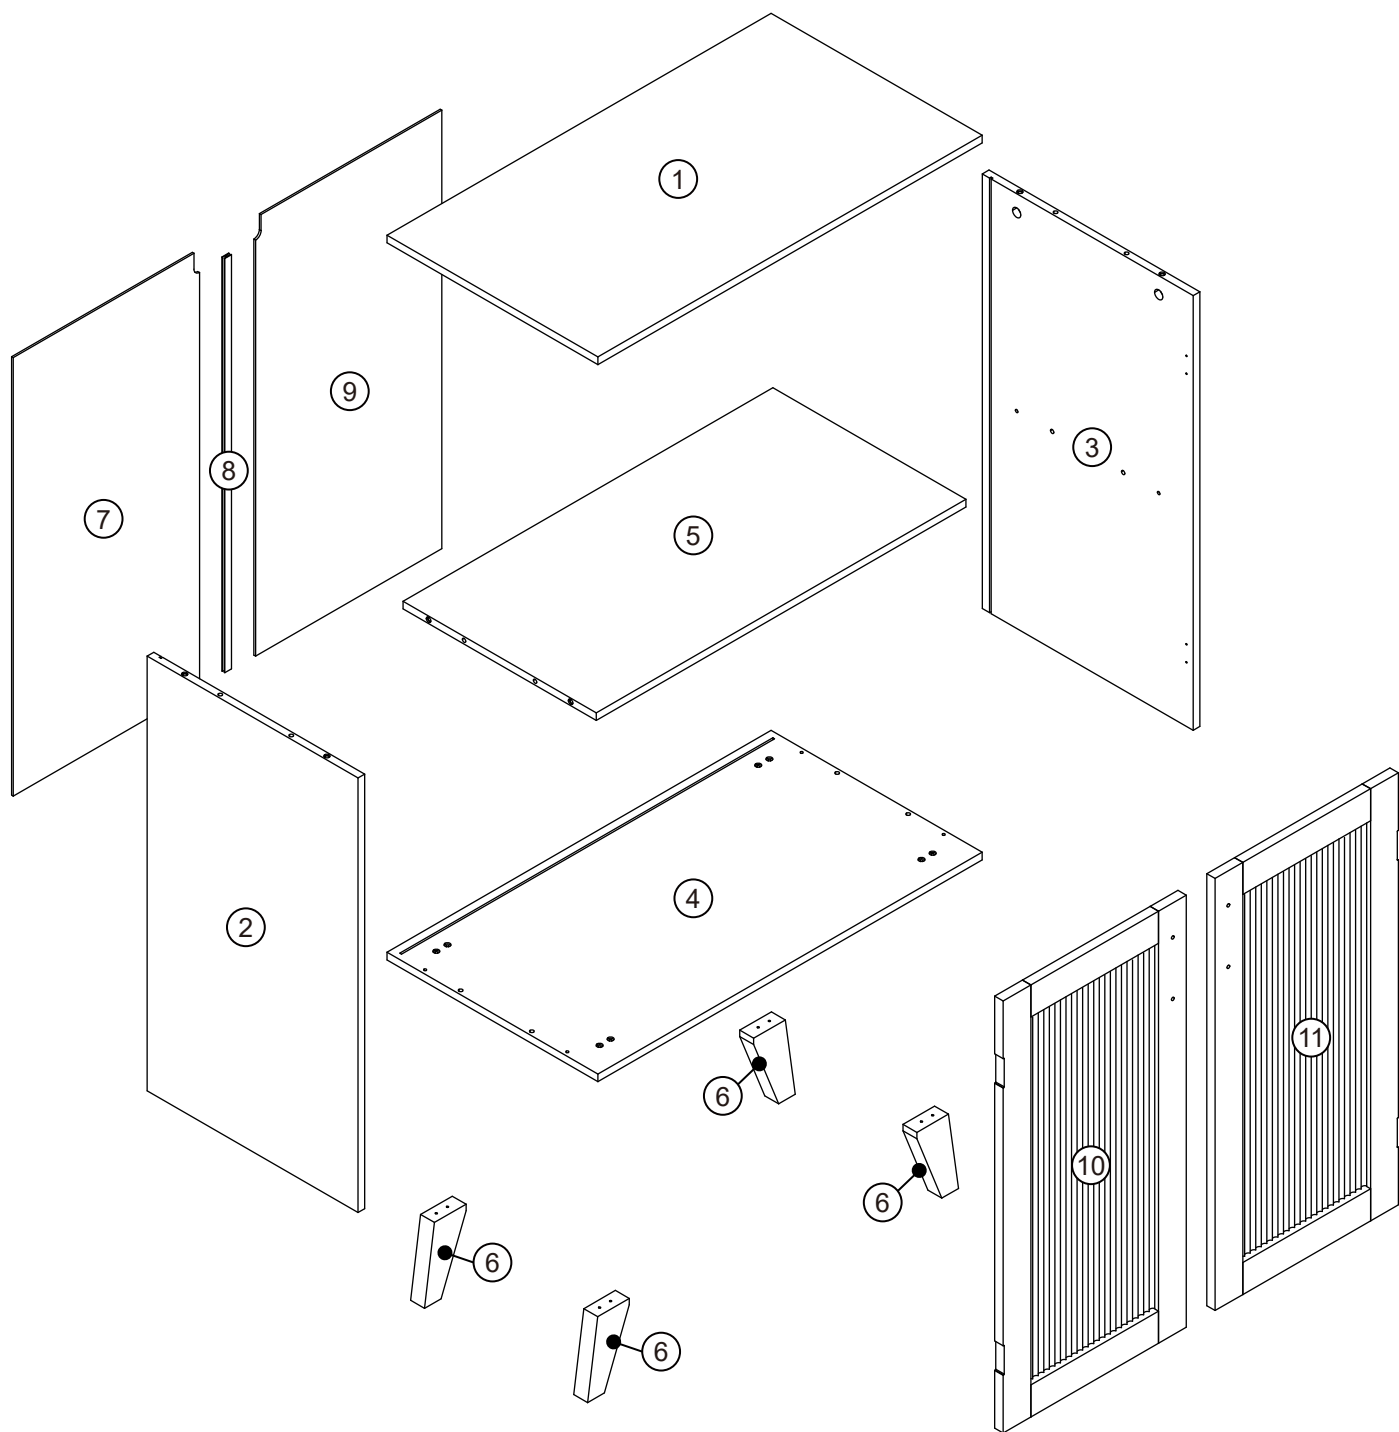






Fittings

 A x 8 M6 x 35 mm	 B x 8 φ15 x 9.5 mm	 C x 12 φ6 x 30 mm	 D x 4 φ4 x 35 mm	 E x 16 φ3 x 12 mm
 F x 4	 G x 2	 H x 10	 I x 1	 J x 1
 K x 8 M5 x 35 mm	 L x 1 M4	 M x 1	 N x 2	




Step 1

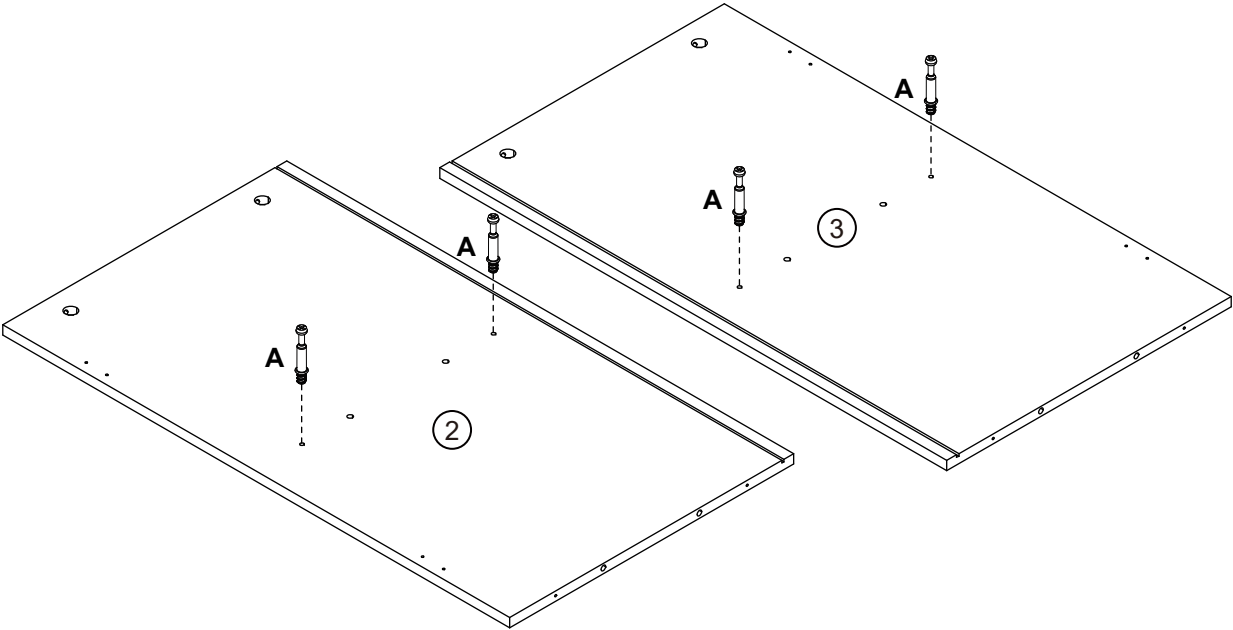




Step 2

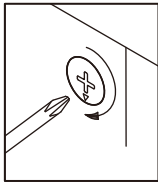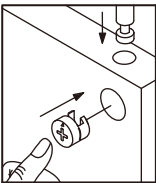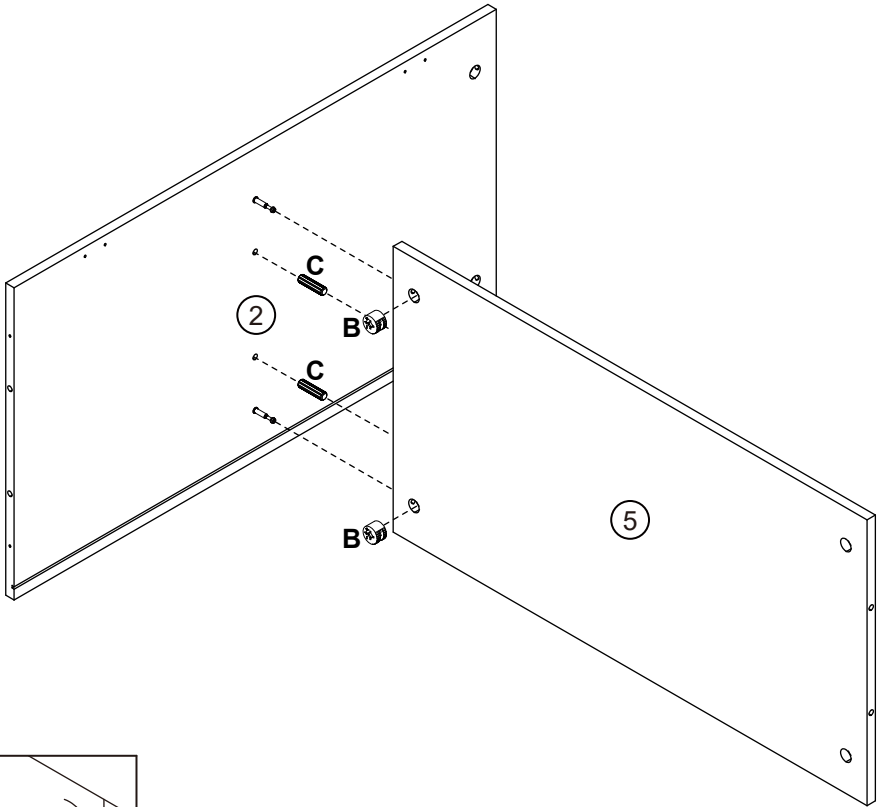


Step 3

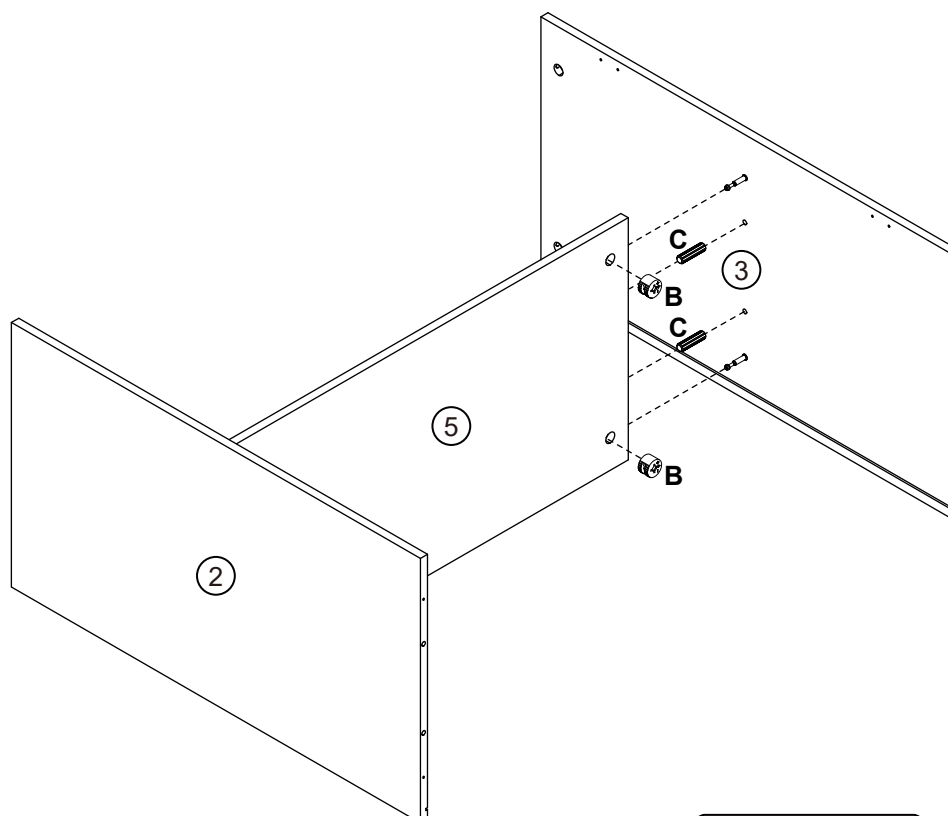


Step 4

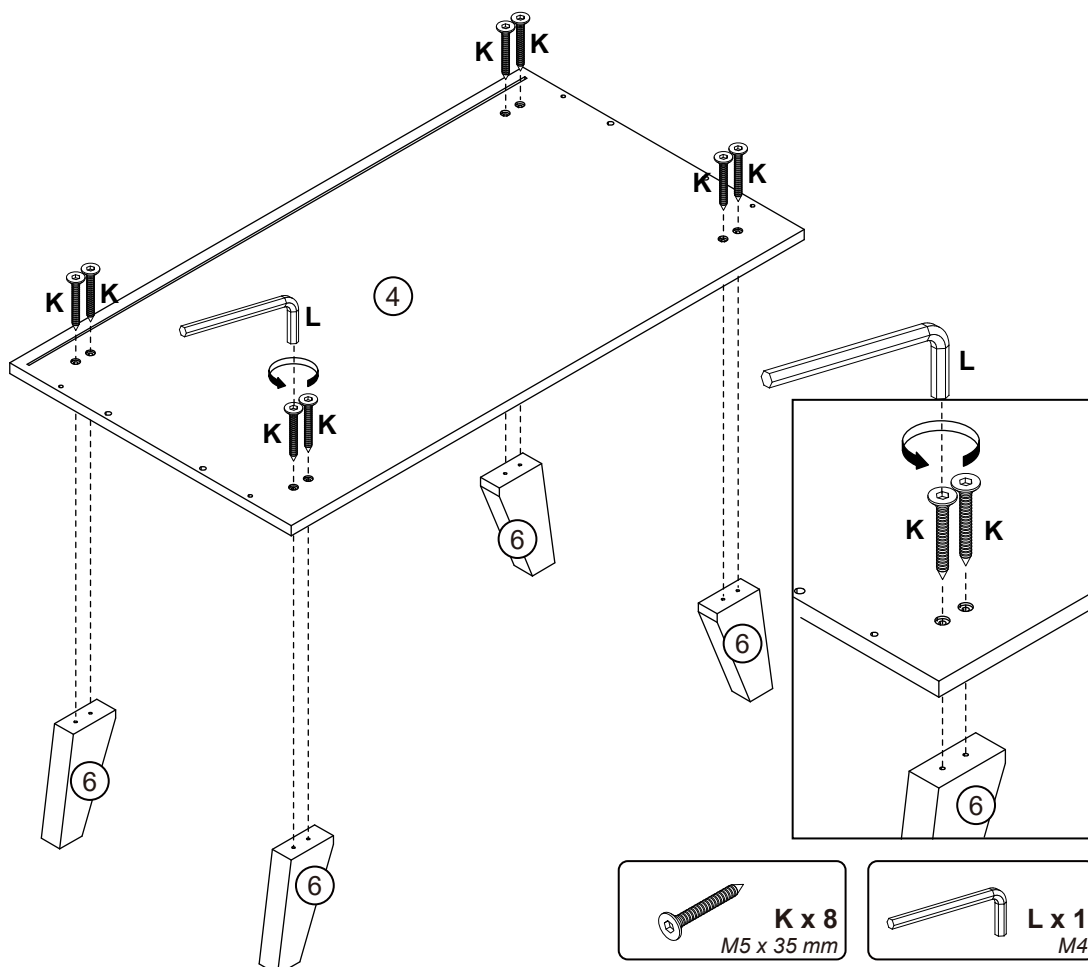




Step 5

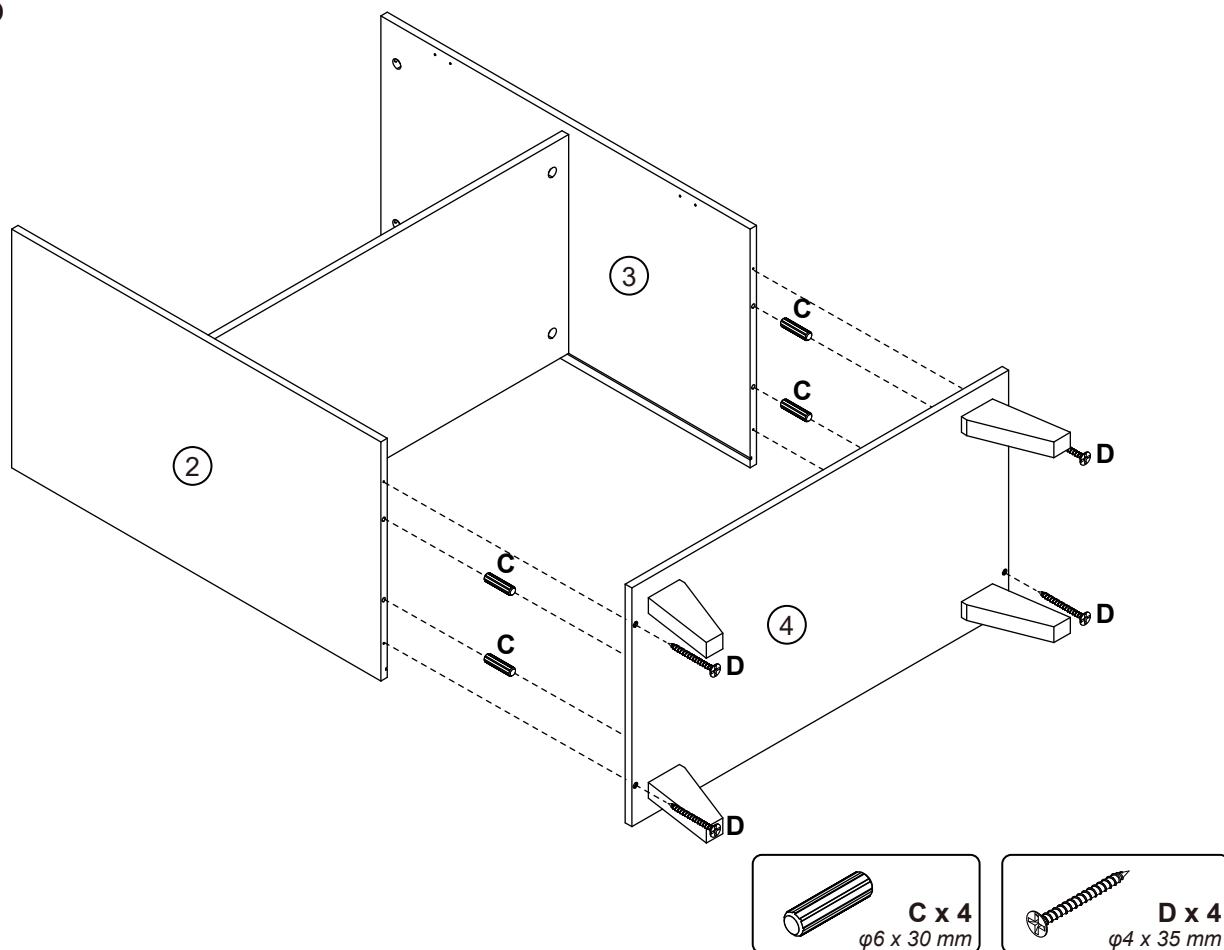

Step 6

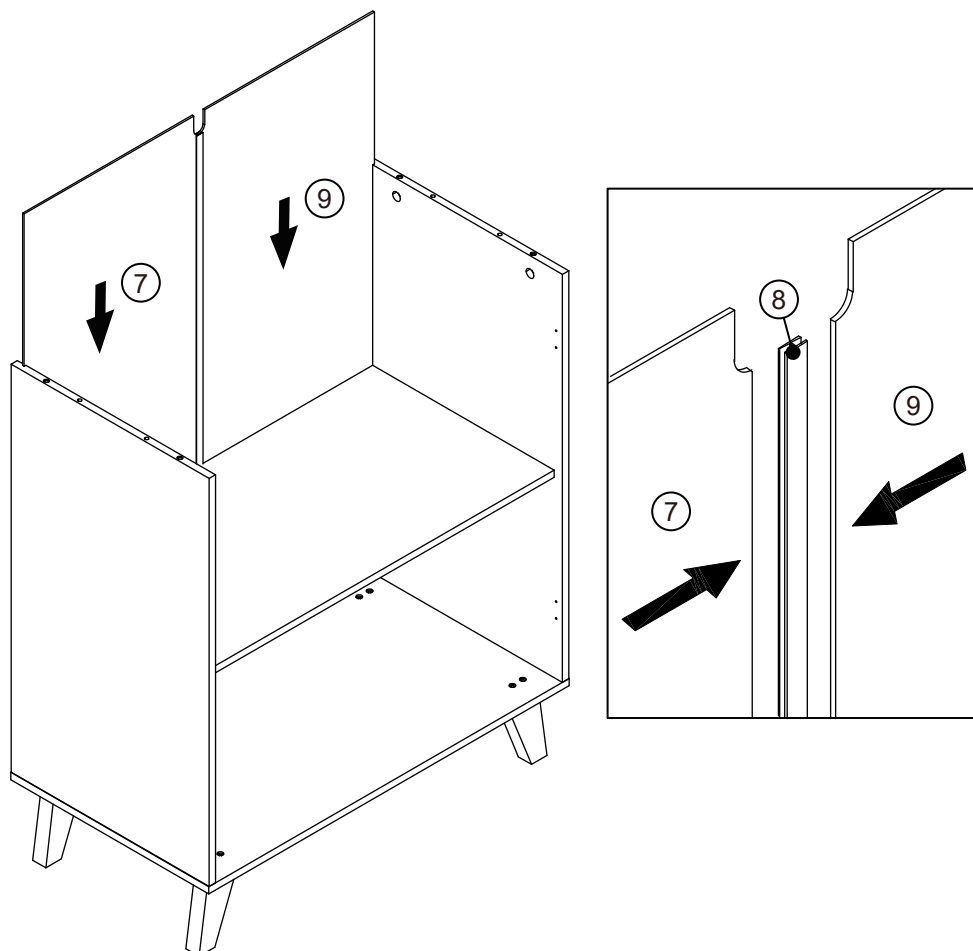

Step 7

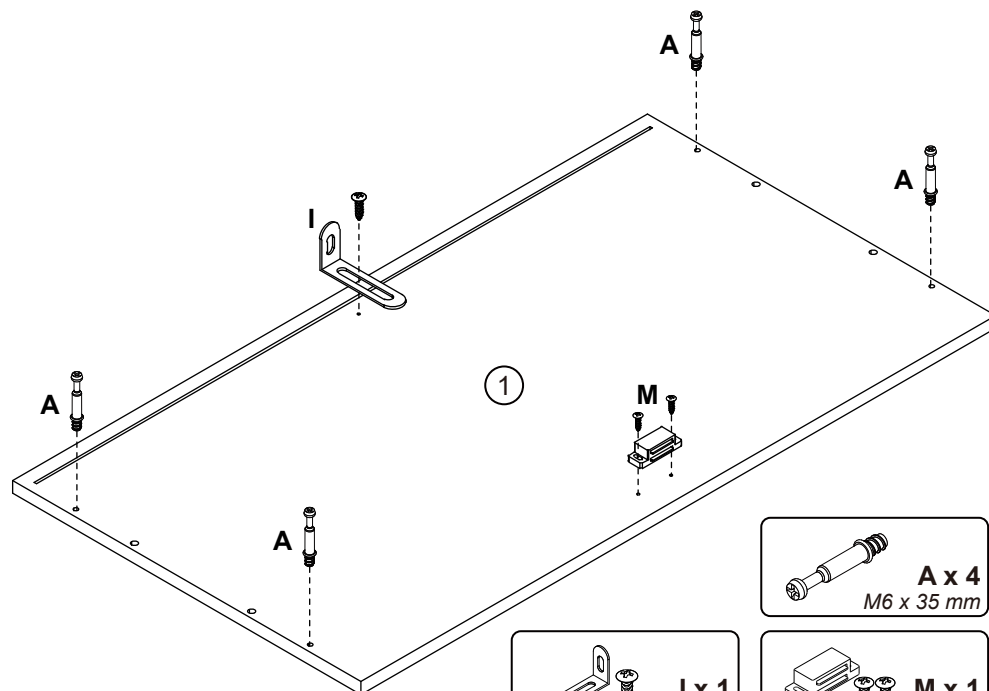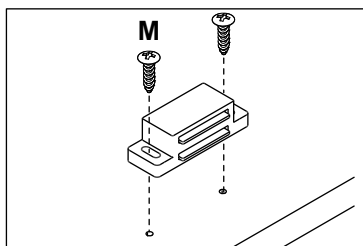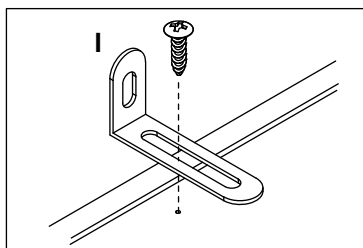


A x 4
M6 x 35 mm

I x 1

M x 1


Step 8

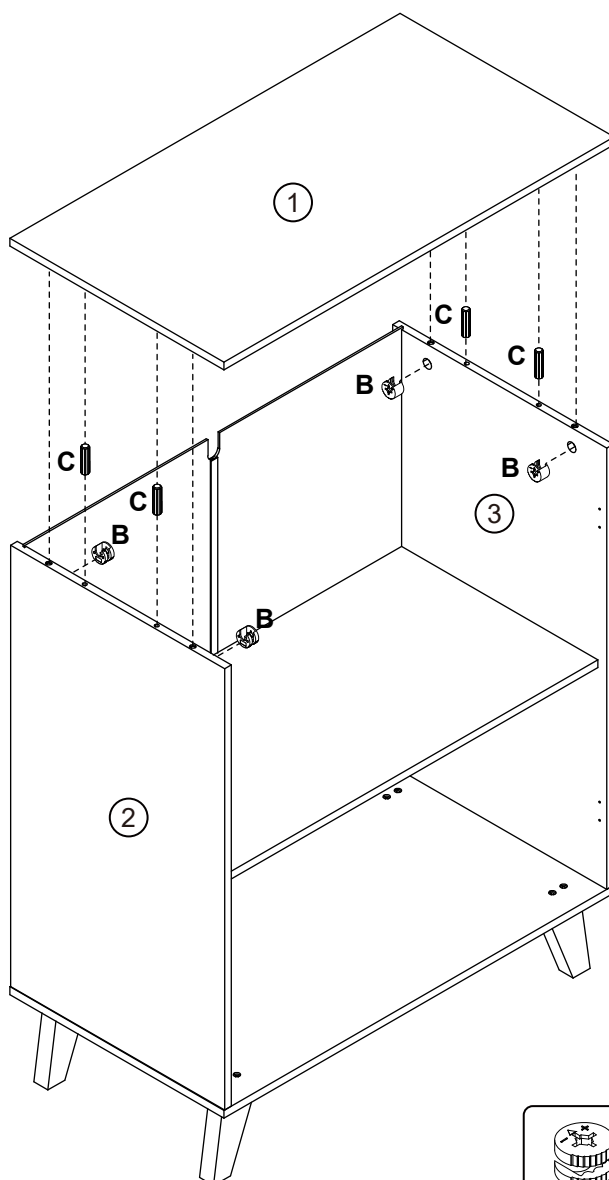


B x 4
φ15 x 9.5 mm

C x 4
φ6 x 30 mm



Step 9

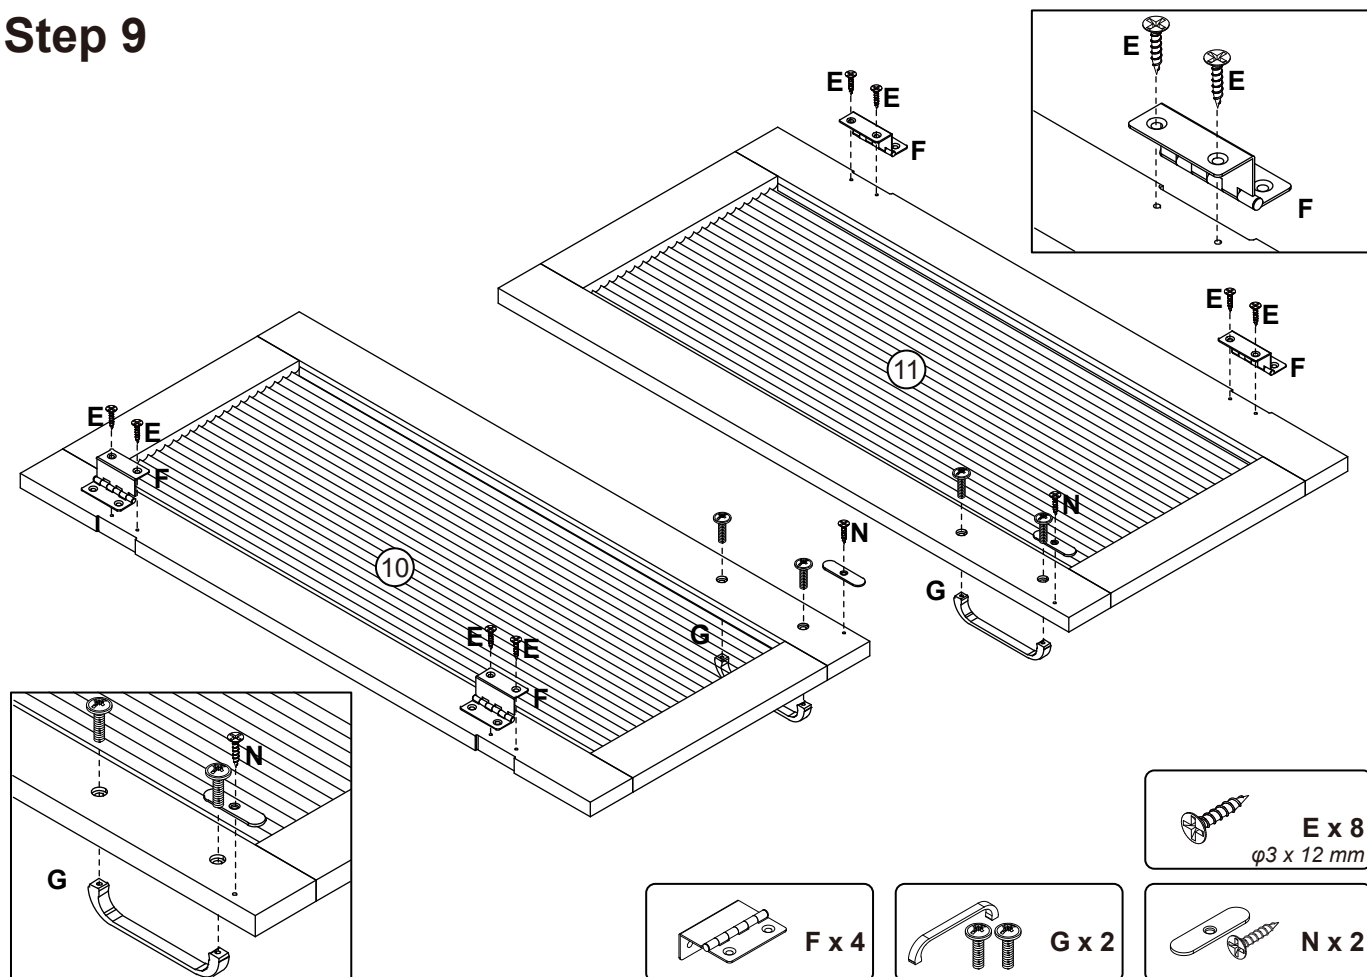

Step 10

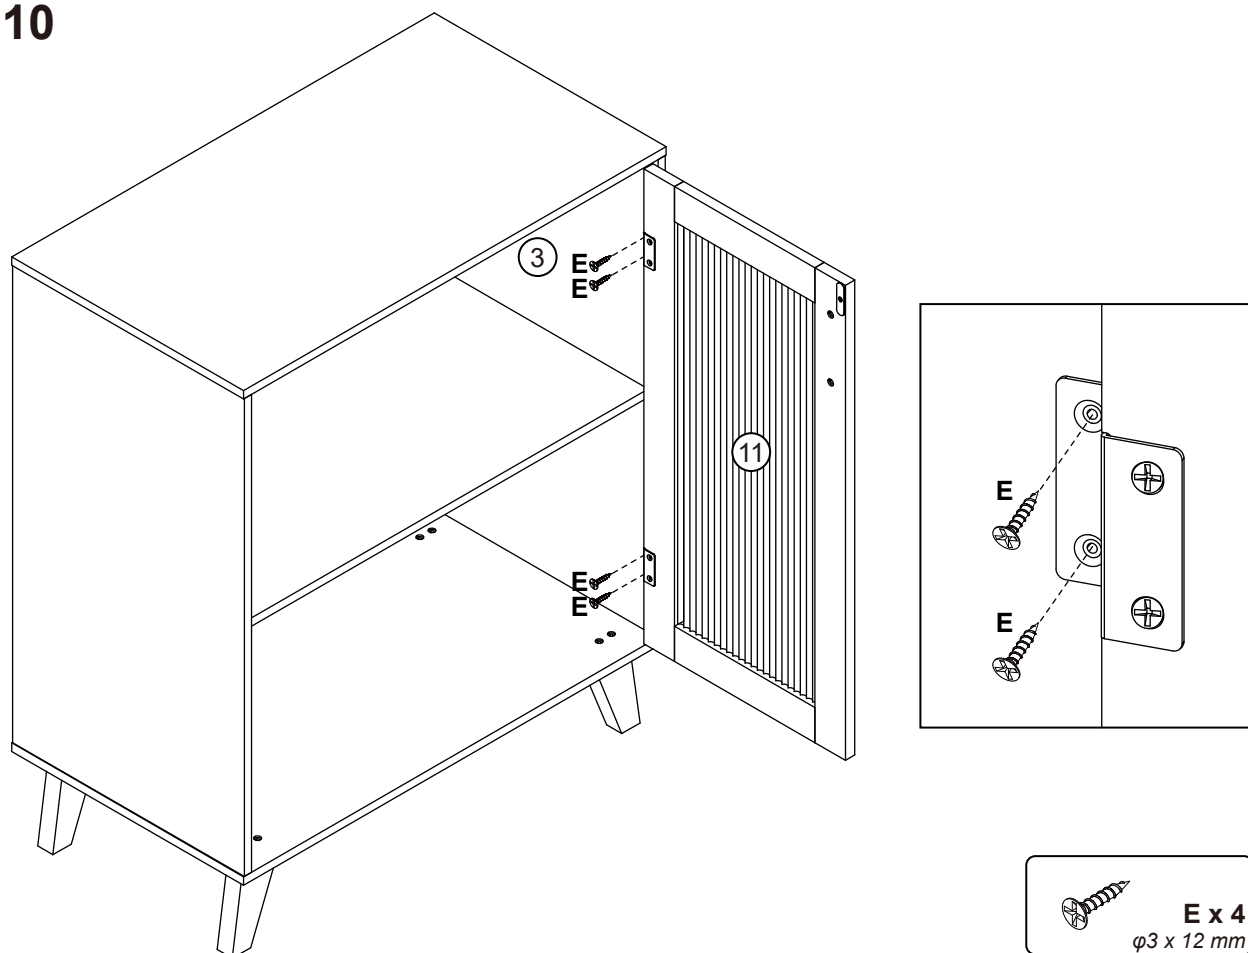


Step 11

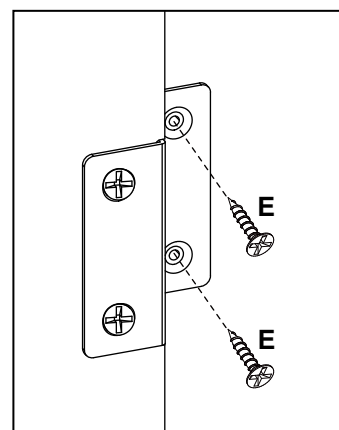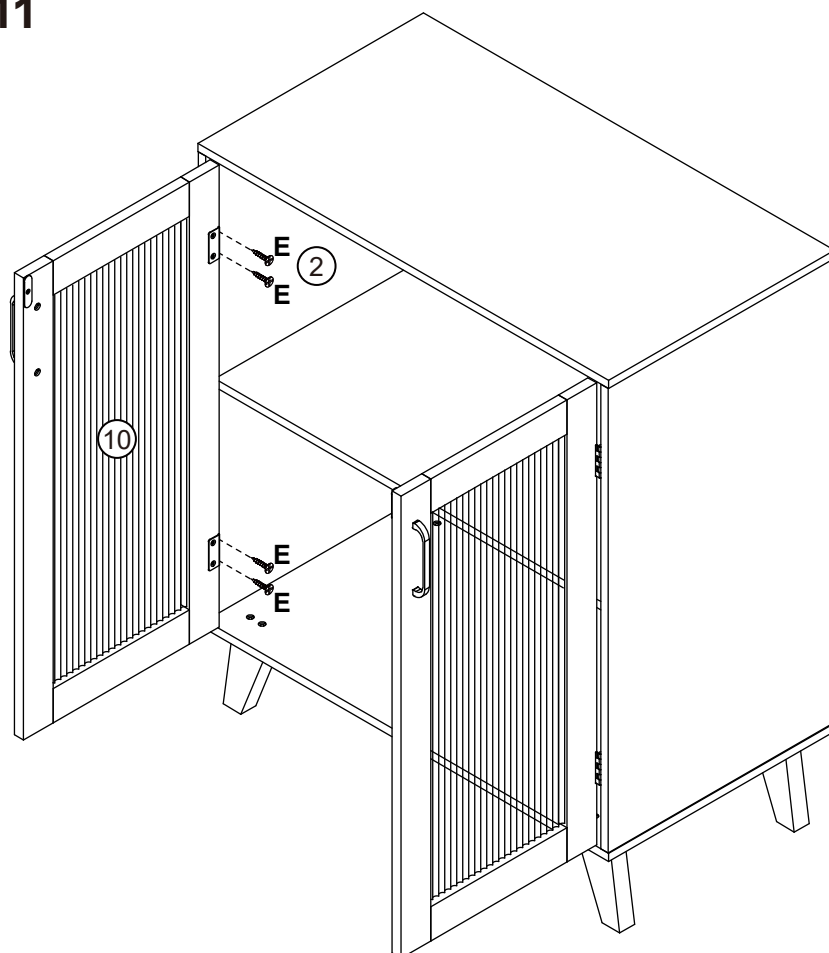



E x 4
 $\varnothing 3 \times 12 \text{ mm}$

Step 12

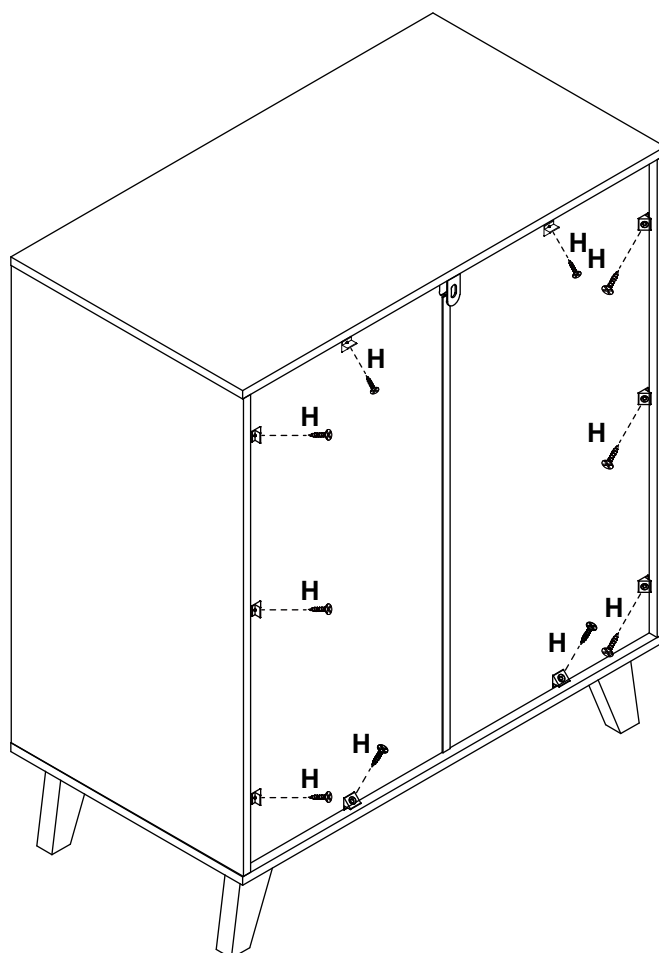

H x 10

Step 13

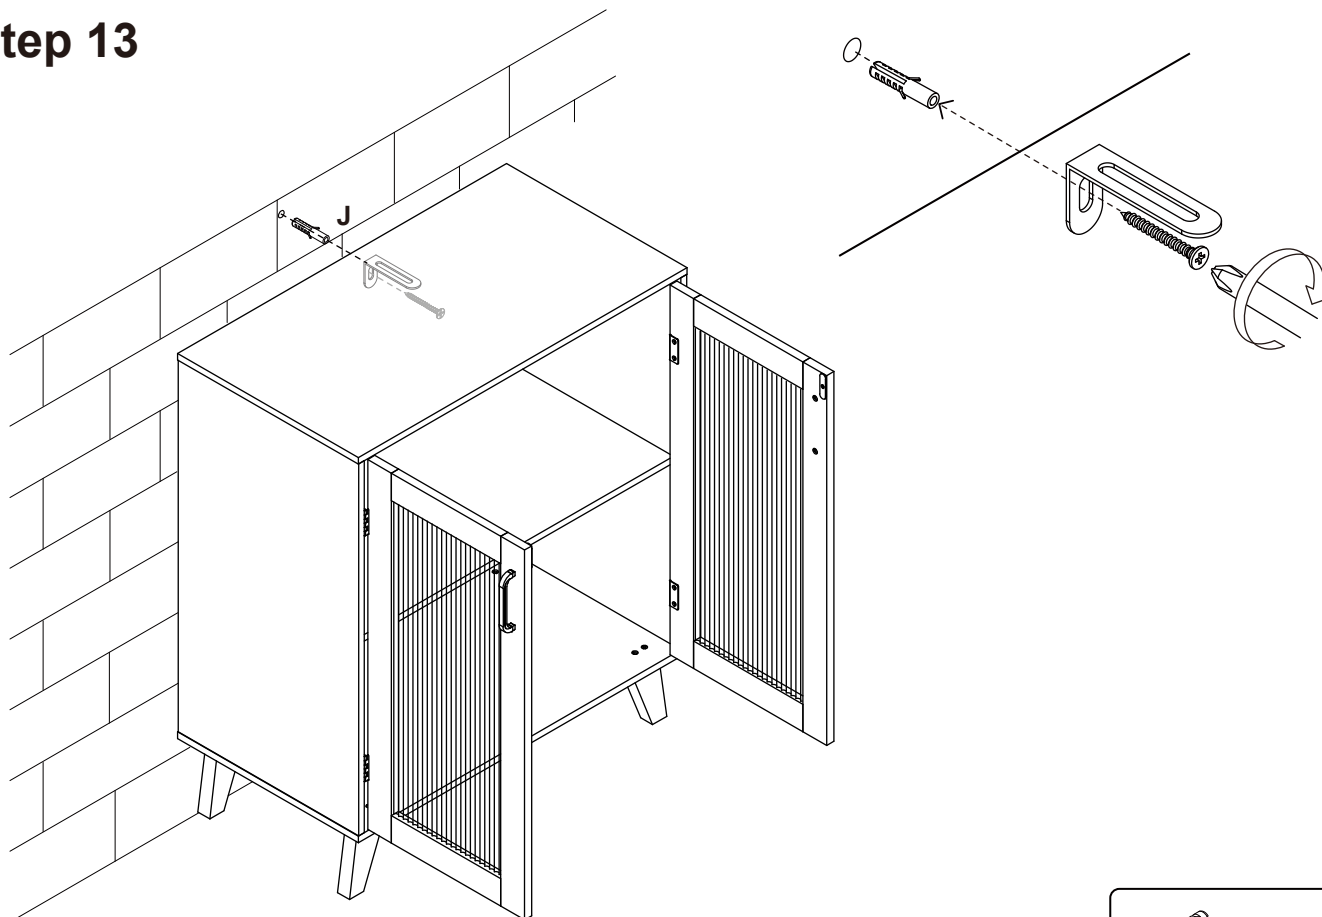

Step 14

