
INSTALLATION MANUAL

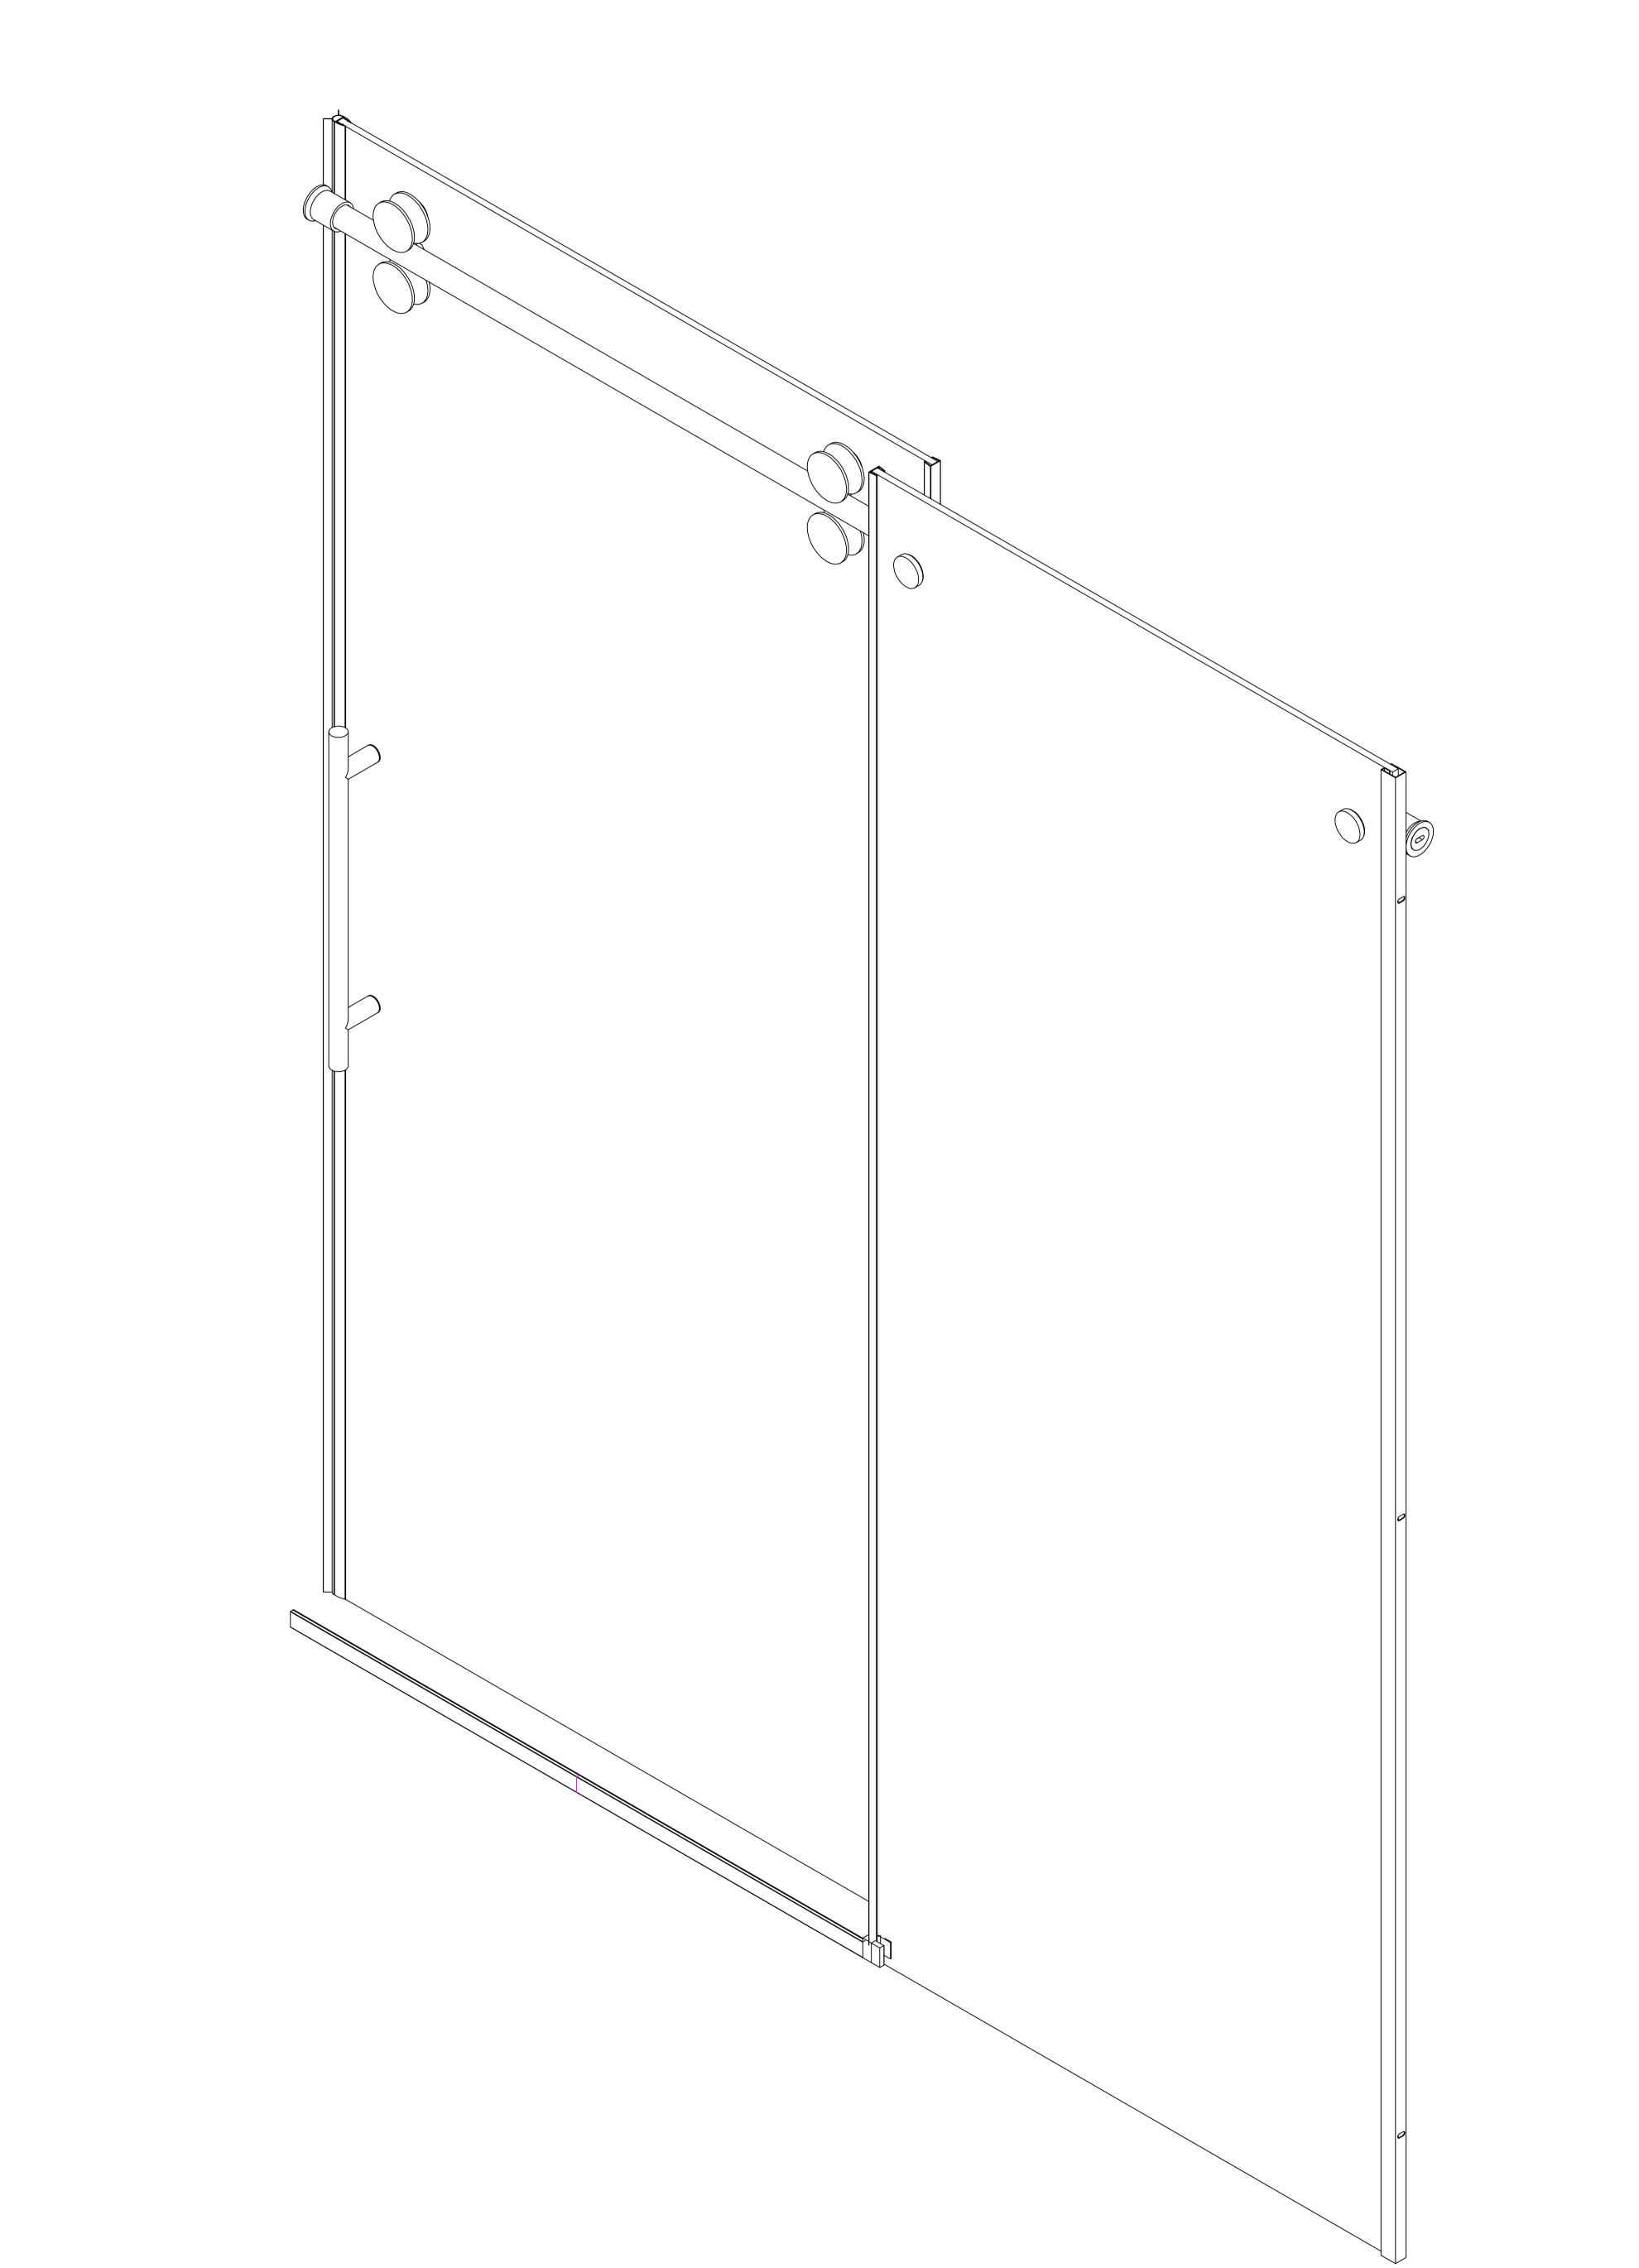

SAFETY INFORMATION




Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product. To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always read and follow all the steps in the installation instructions.
- Inspect all contents and glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass mayshatter if in contact with a hard surface.
- Handle the tempered glass with caution! Improperly handling the glass can cause it to break suddenly insmall

pieces (never in pointed fragments).

- Always take all precautions not to touch the tempered glass with any tools during the installation, or afterinstalled.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage; if there is damage to the unit prior to installation, please contact customerservice at the number provided in this guide.
- Install the shower on a ffoor that is level and able to accommodate the weight of the unit and an occupant.
- Consult local building codes and compliance standards prior to installation and ensure conformity.
- After installation, please check the glass promptly to ensure that there is no looseness after installation.
- Keep this installation manual for future reference.

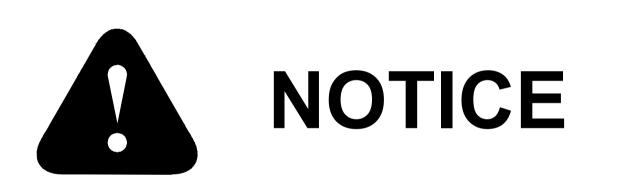


• Any modiffcation or alteration from what is speciffed in this instruction manual will void any and all warranty on this product.

• The distributor is not responsible for any damage to the unit or personal property caused by improper installation. If you disregard instructional warnings, you will void your warranty and possibly deal with water damage.

PREPARATION

You will need at least two people to install this unit properly.

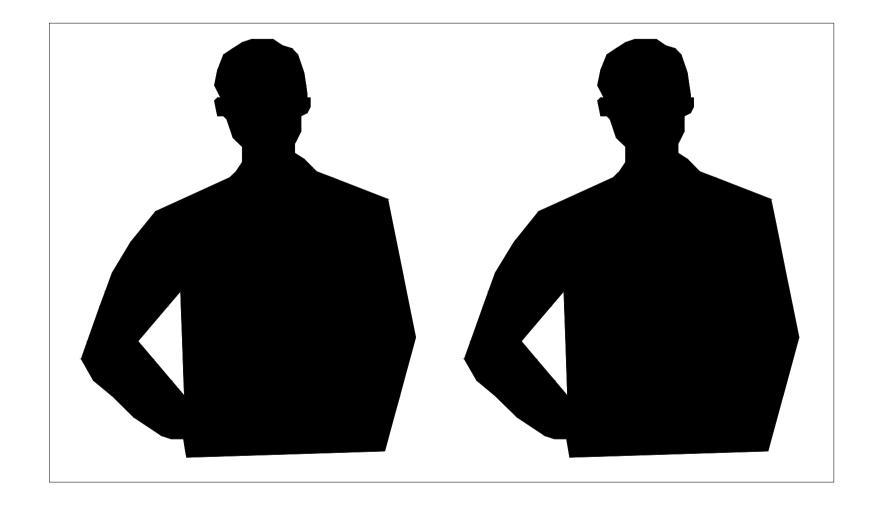



Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: Shower (60 min).





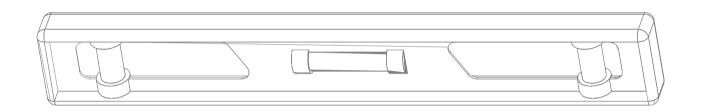

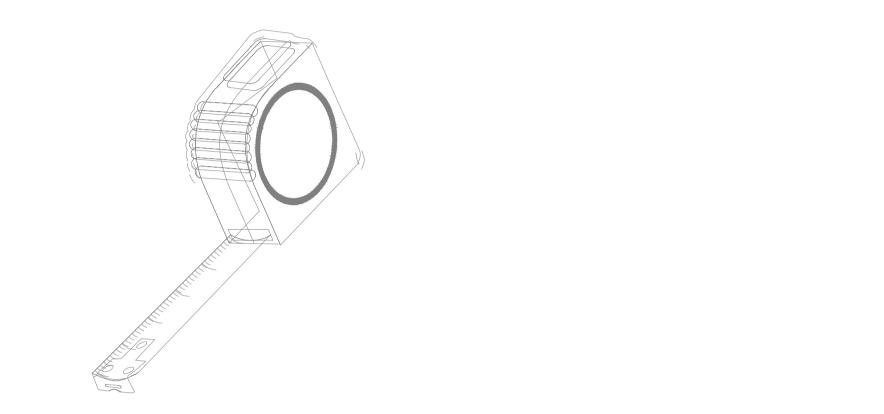

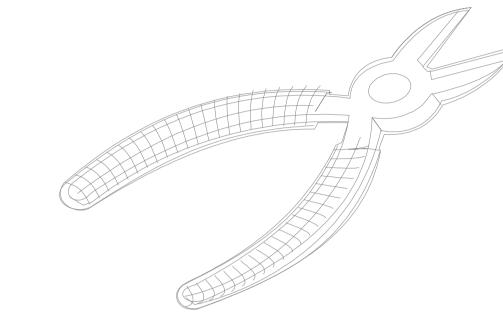





TAPE MEASURE MESURER


CUTTING PLIER PINCE COUPANTE



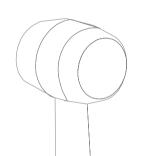


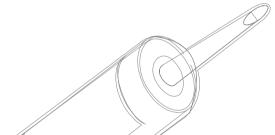



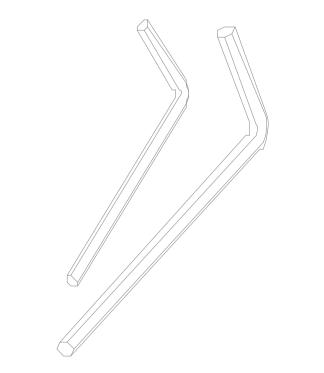


ALLEN KEY 2mm&2.5mm&4mm&5mm

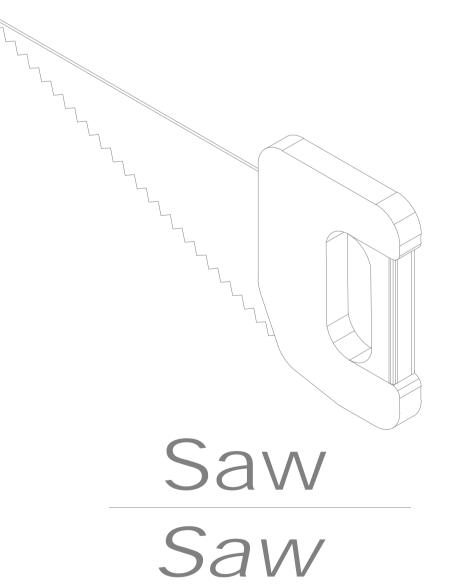


* Use a 1/4" drill bit for ceramic when drilling into ceramic tiles

PARTS AND HARDWARE LISTING

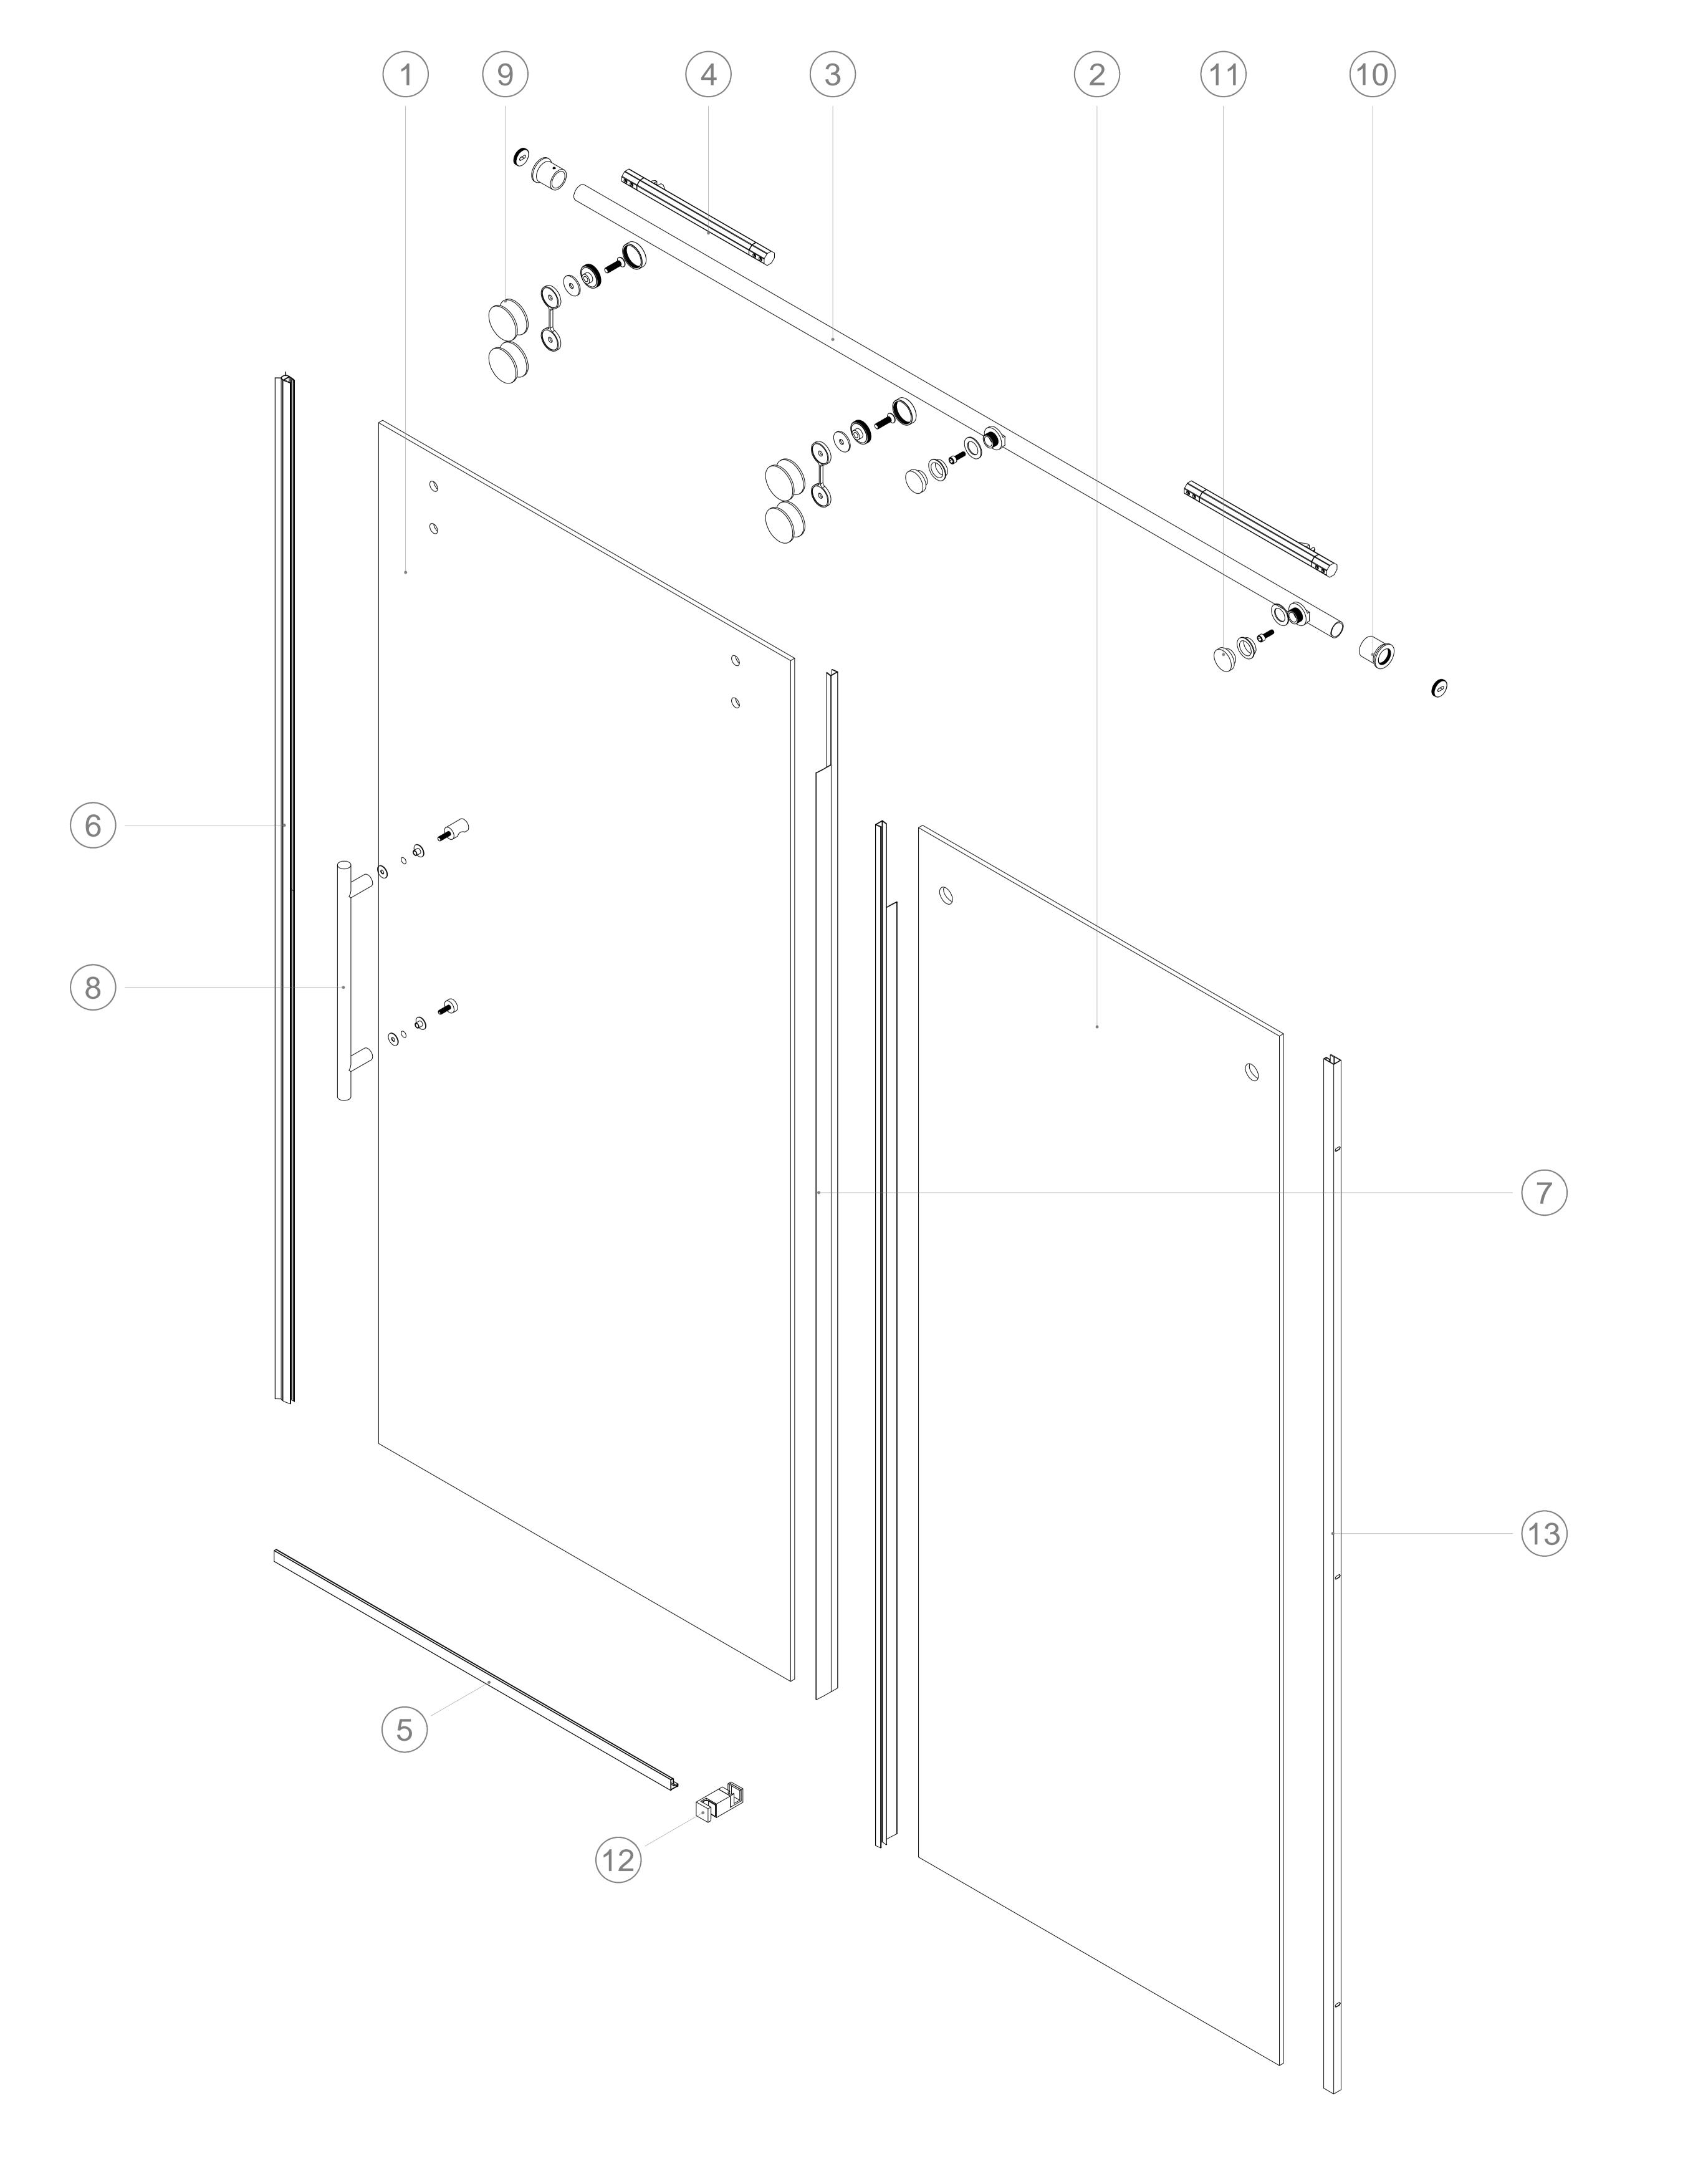



PARTS AND HARDWARE LISTING

ITEM	NAME	QTY	PICTURE
1	Sliding Door	1	
2	Glass Panel	1	
3	Rail	1	
4	Buffer	2	
5	Lower Water Retaining Tape	1	
6	Door Seal	1	
7	Side Seal	2	
8	Handle	1	
9	Combination Wheel	2	
10	Wall Bracket	2	To o
11	Clamp	2	
12	Guide Block	1	
13	Glass Panel Wall Profile	1	
14			
15			
16			
17			
18			
19			
20			
21			

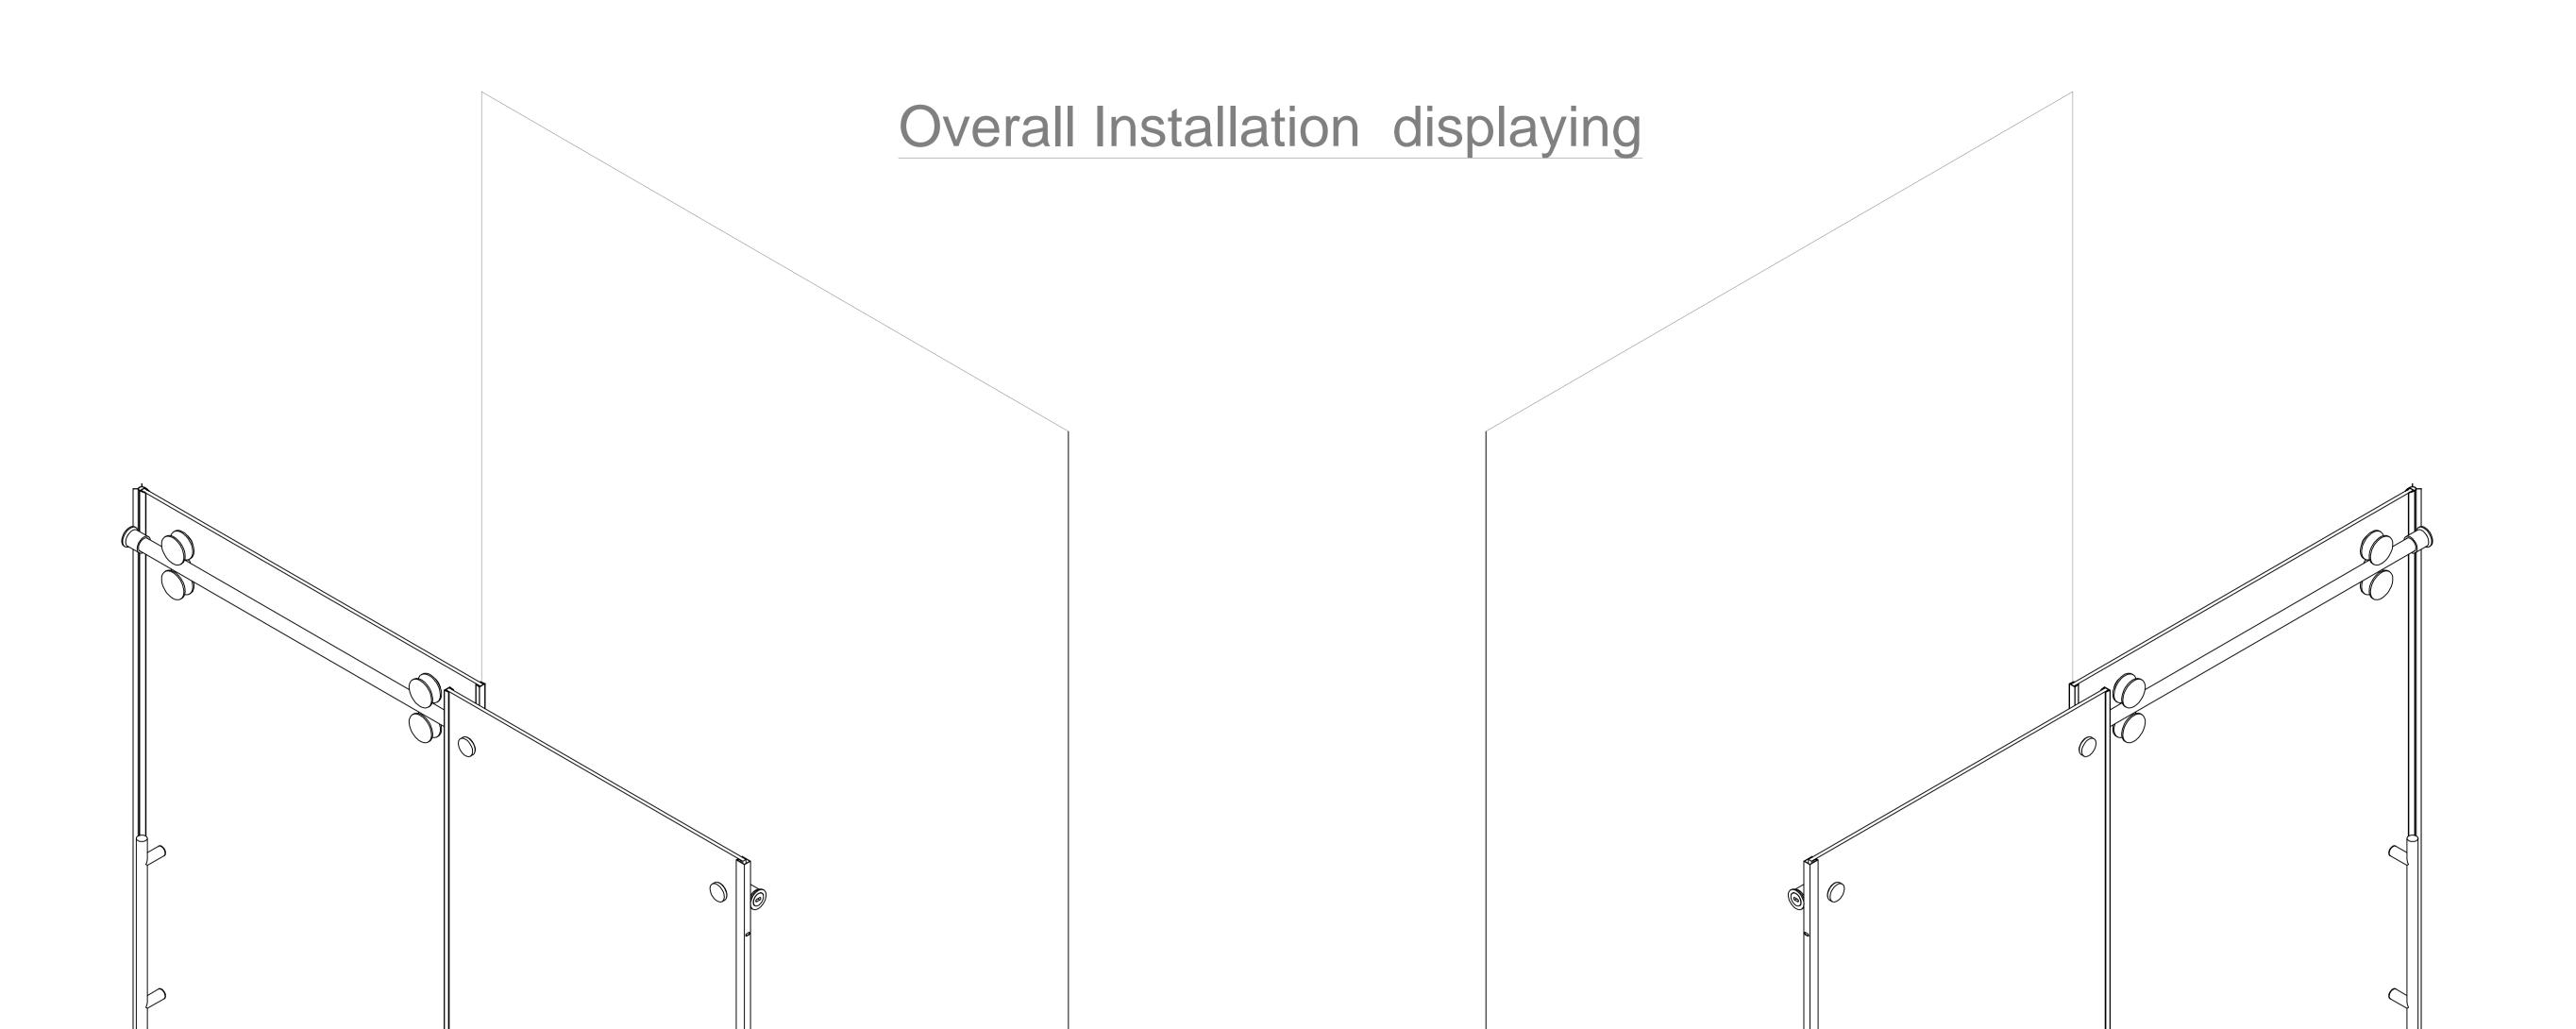

Installation effect diagram of shower enclosure

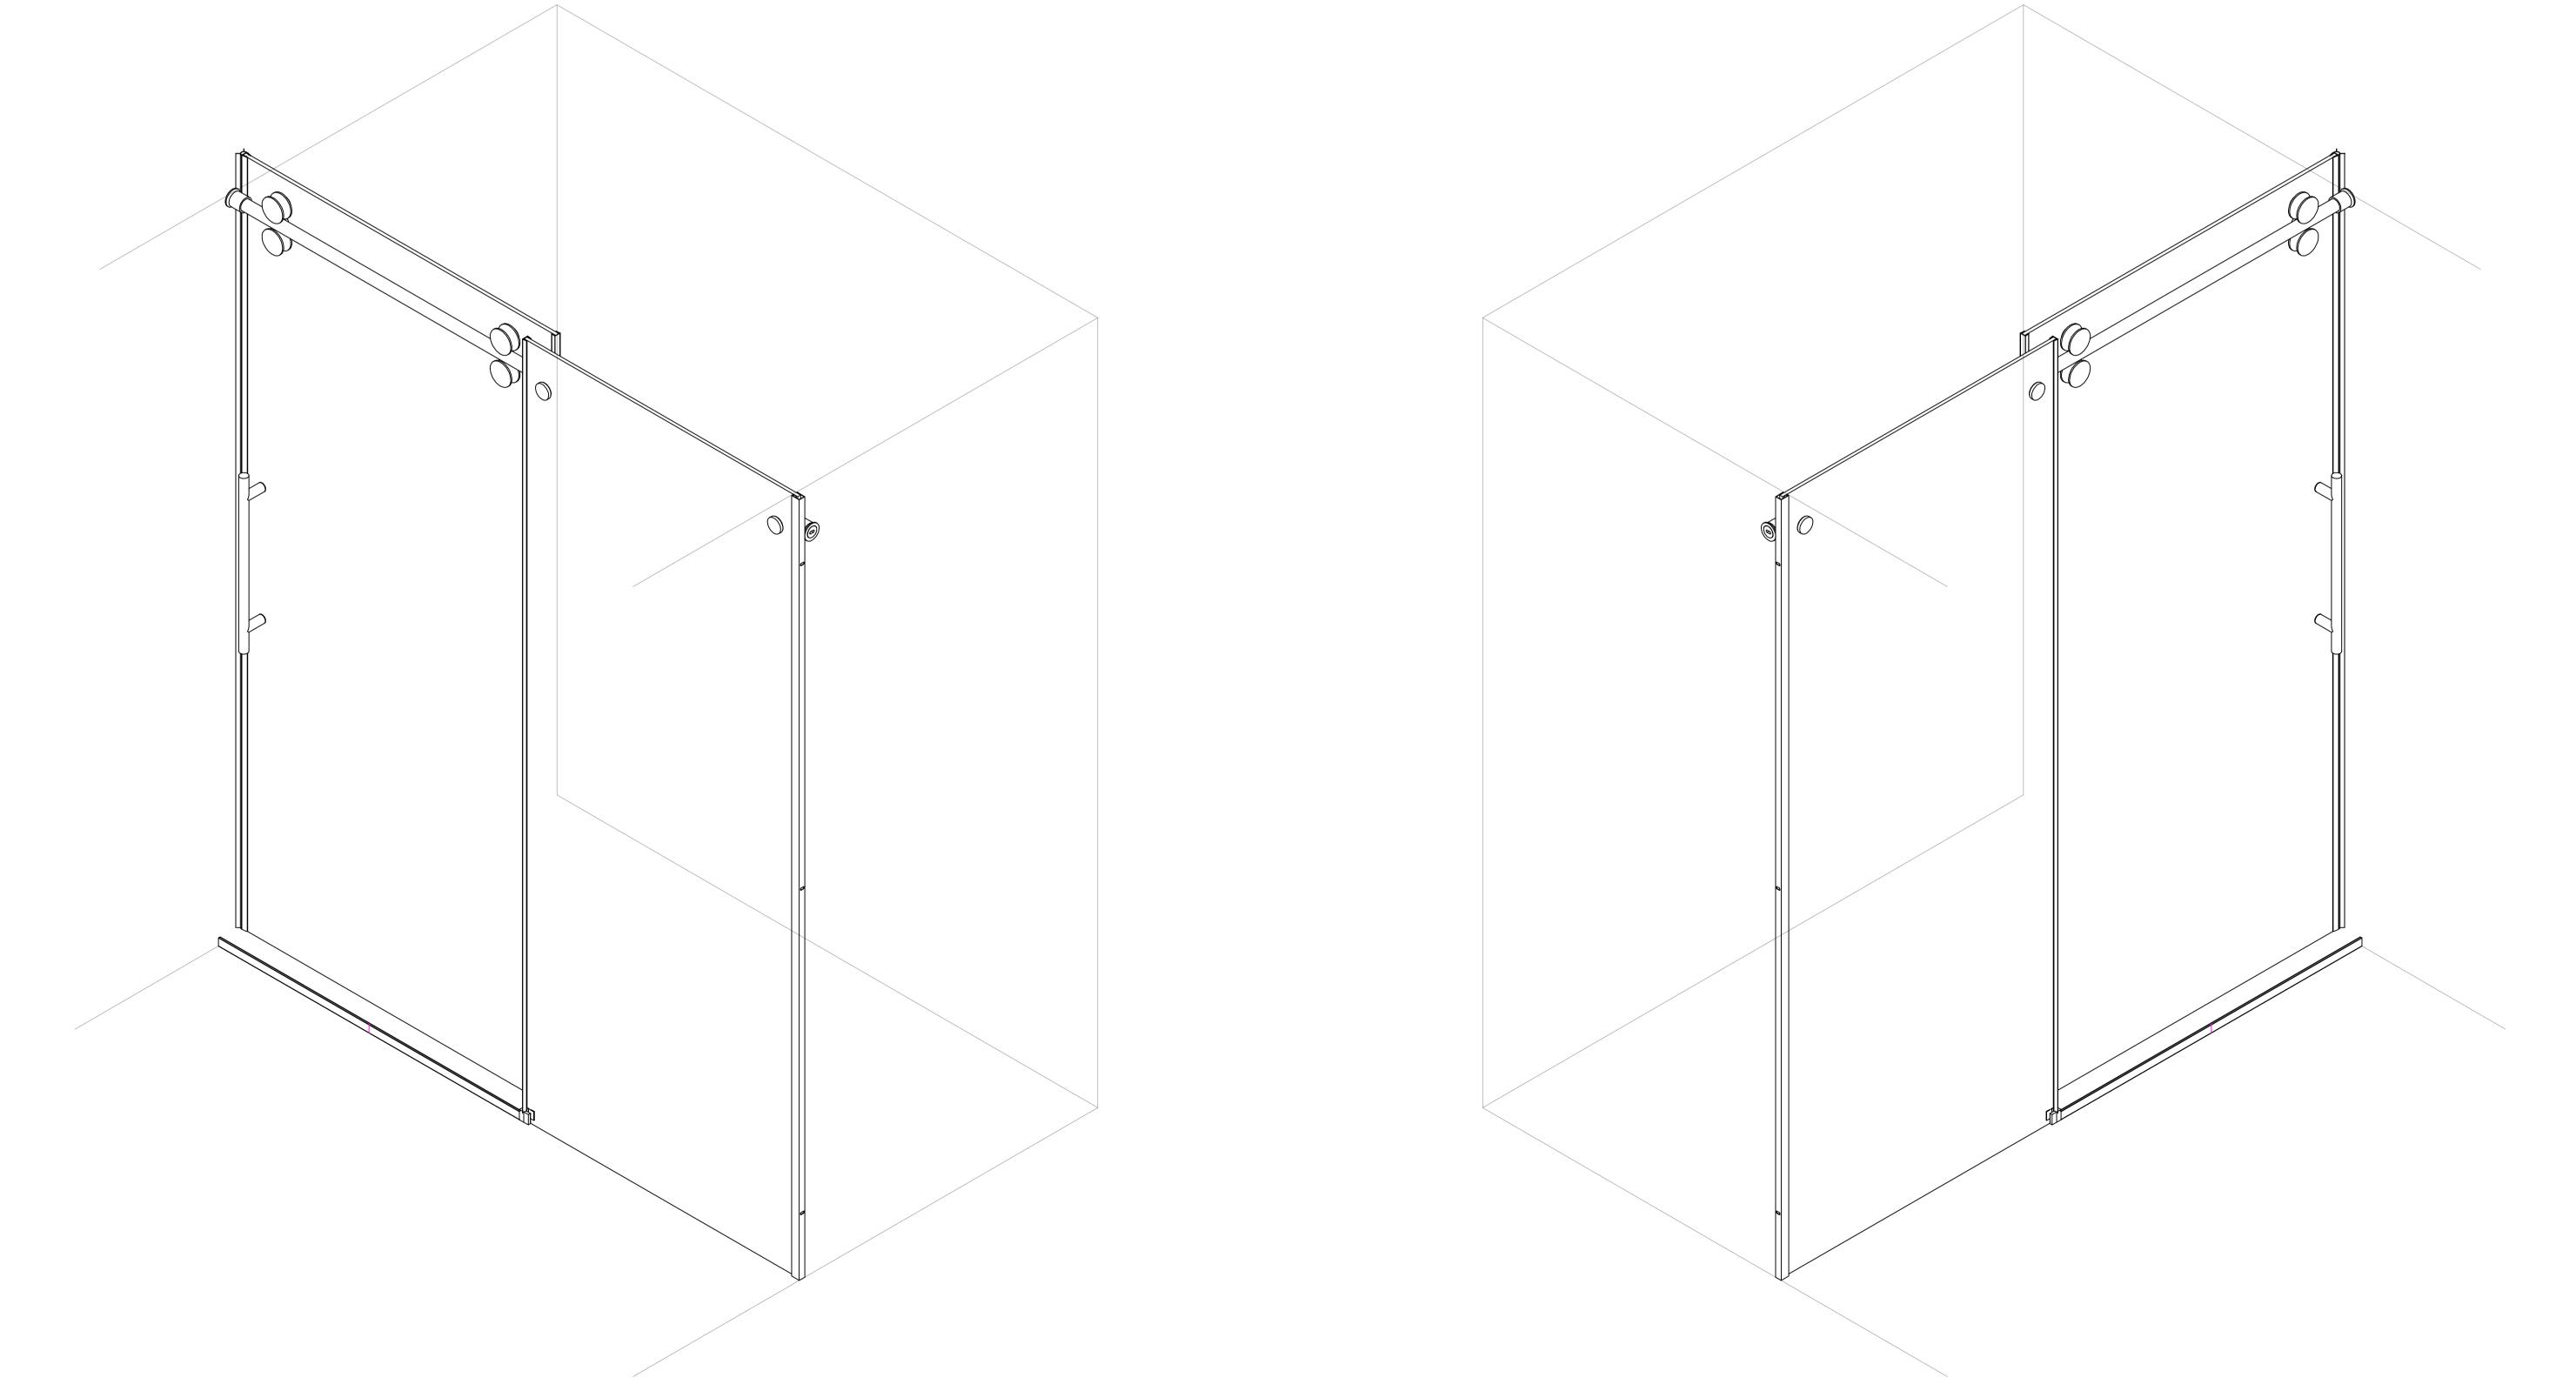

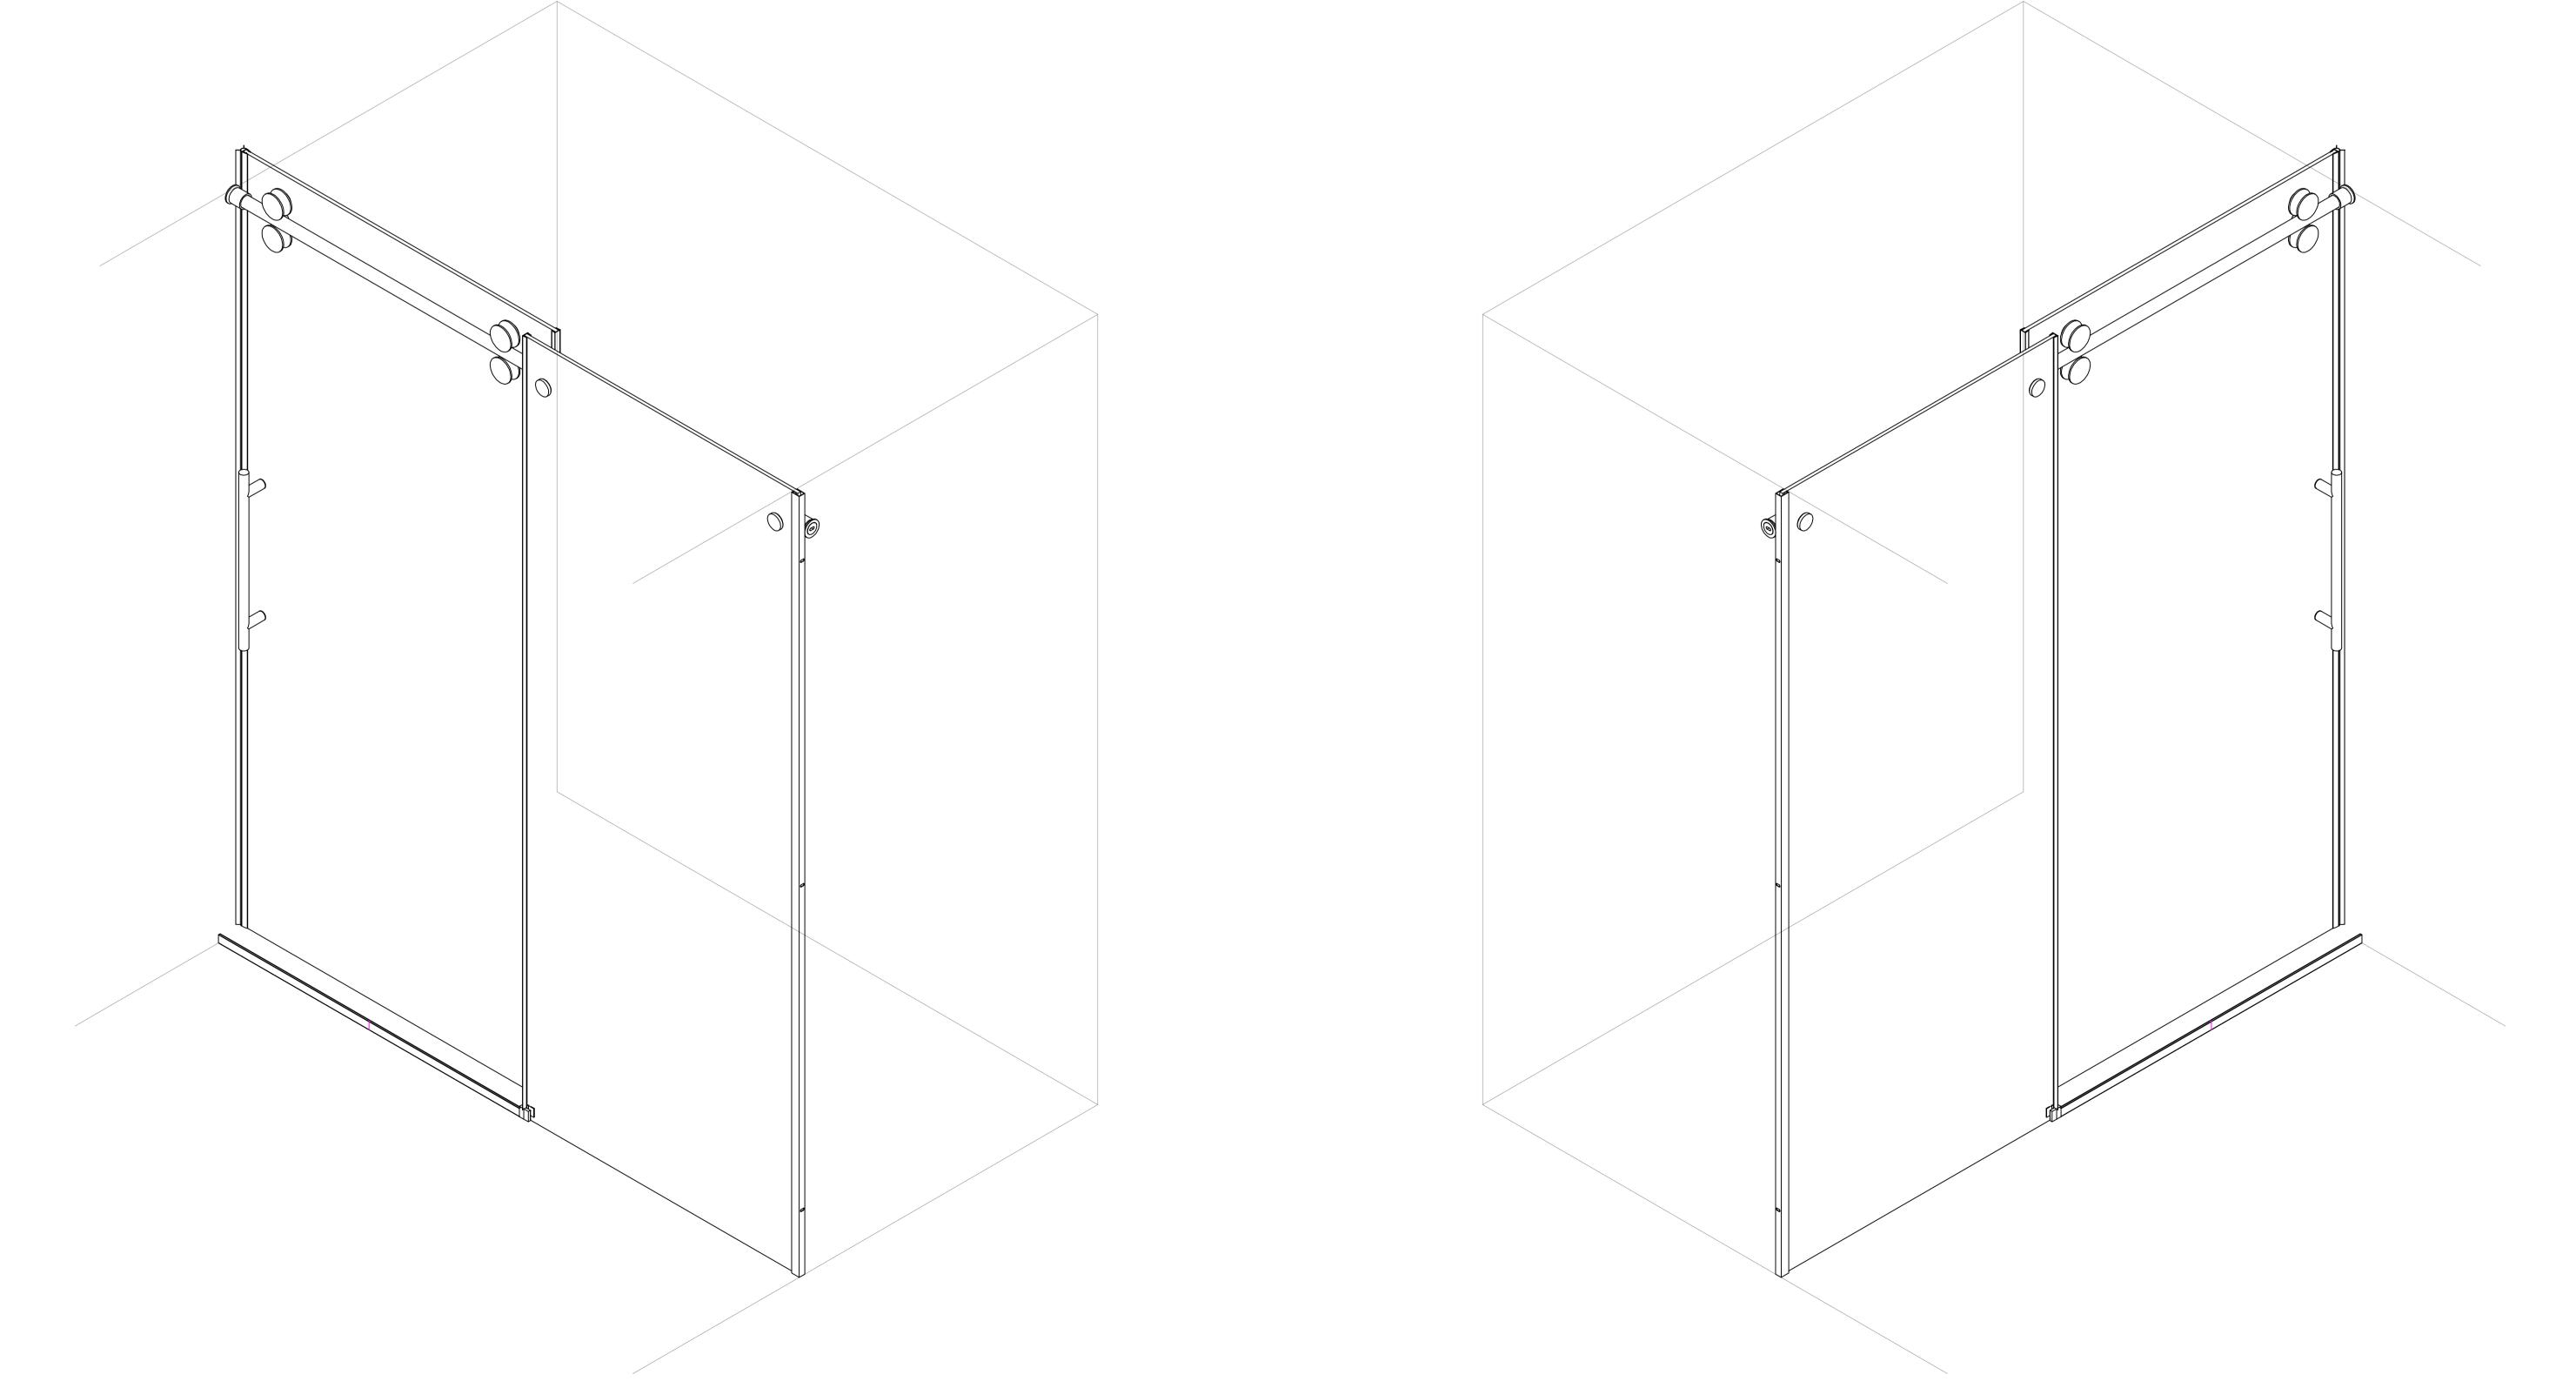



Installation effect diagram of side panel

Measure the width of the site and cut the top rail according to the width of the site.




A

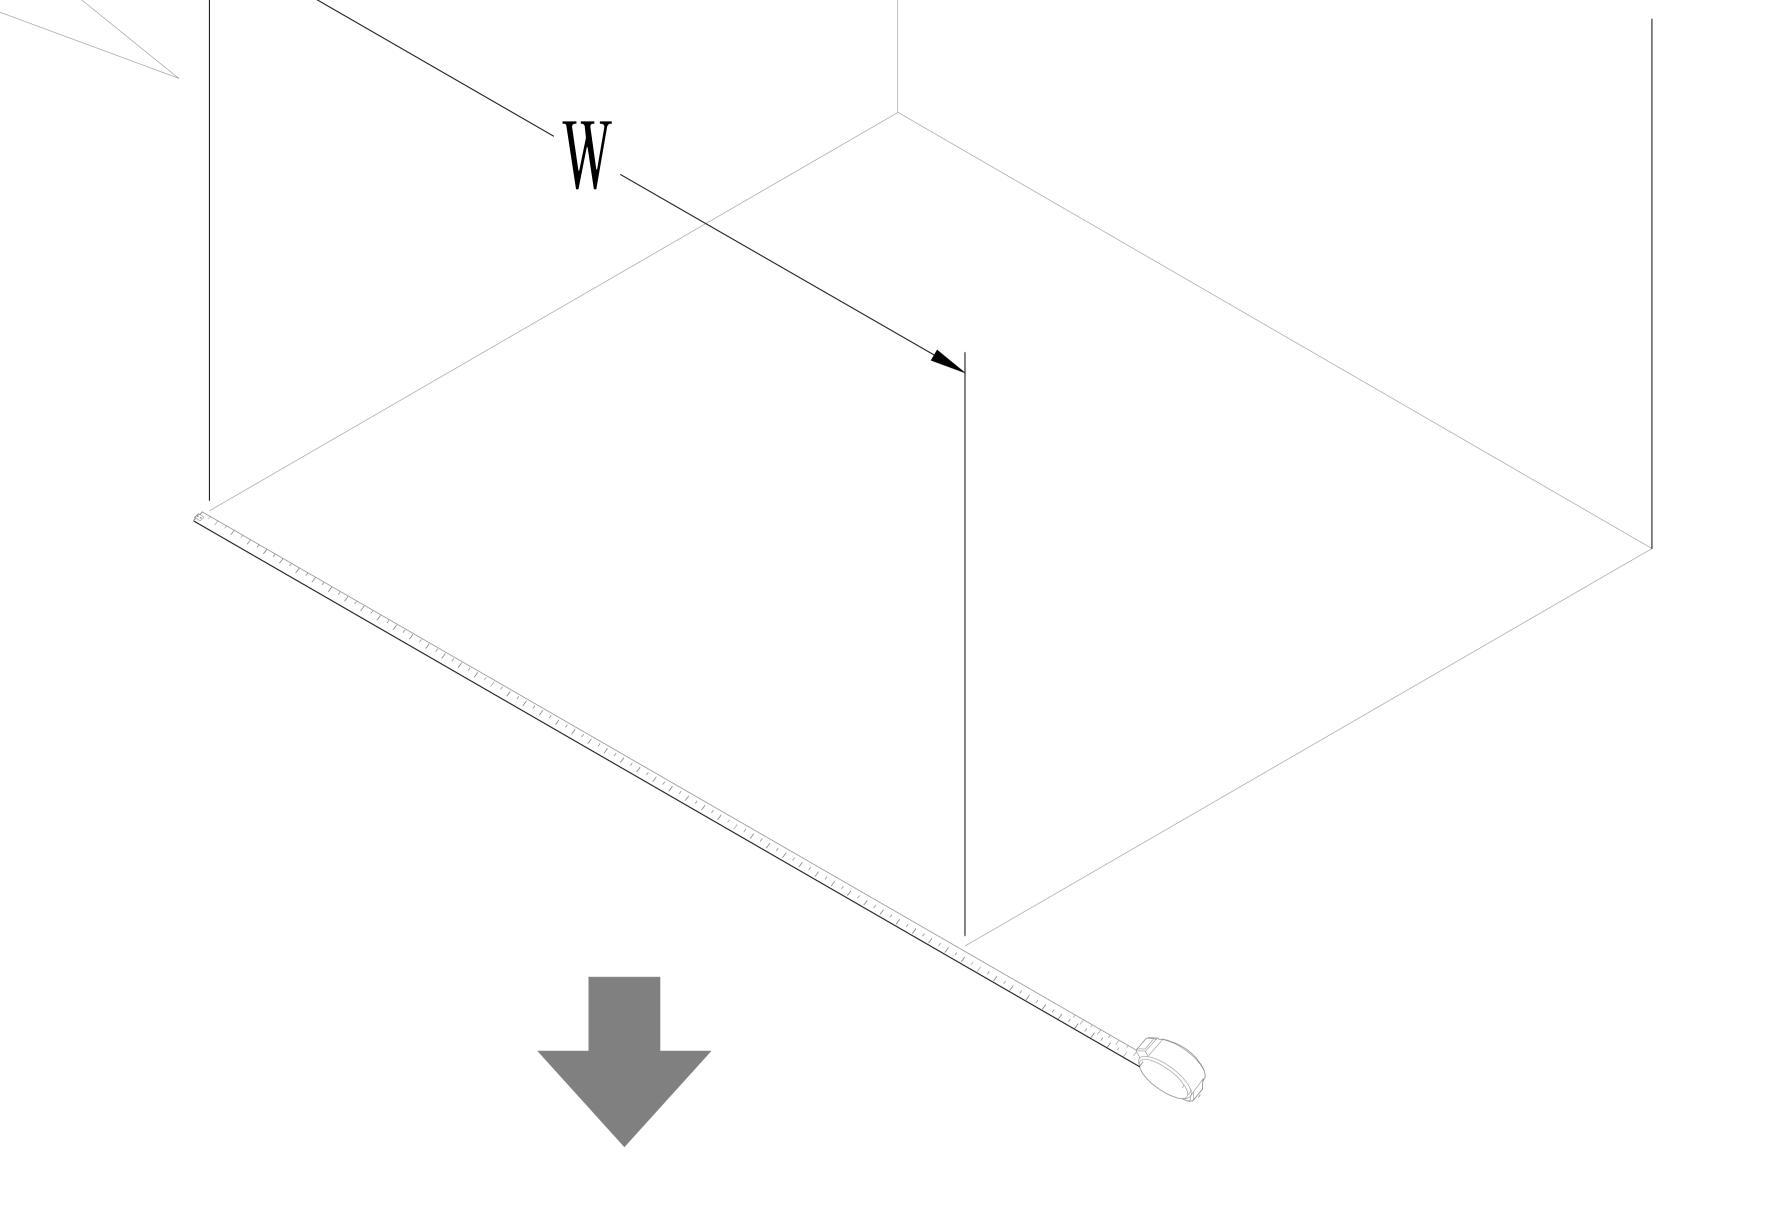

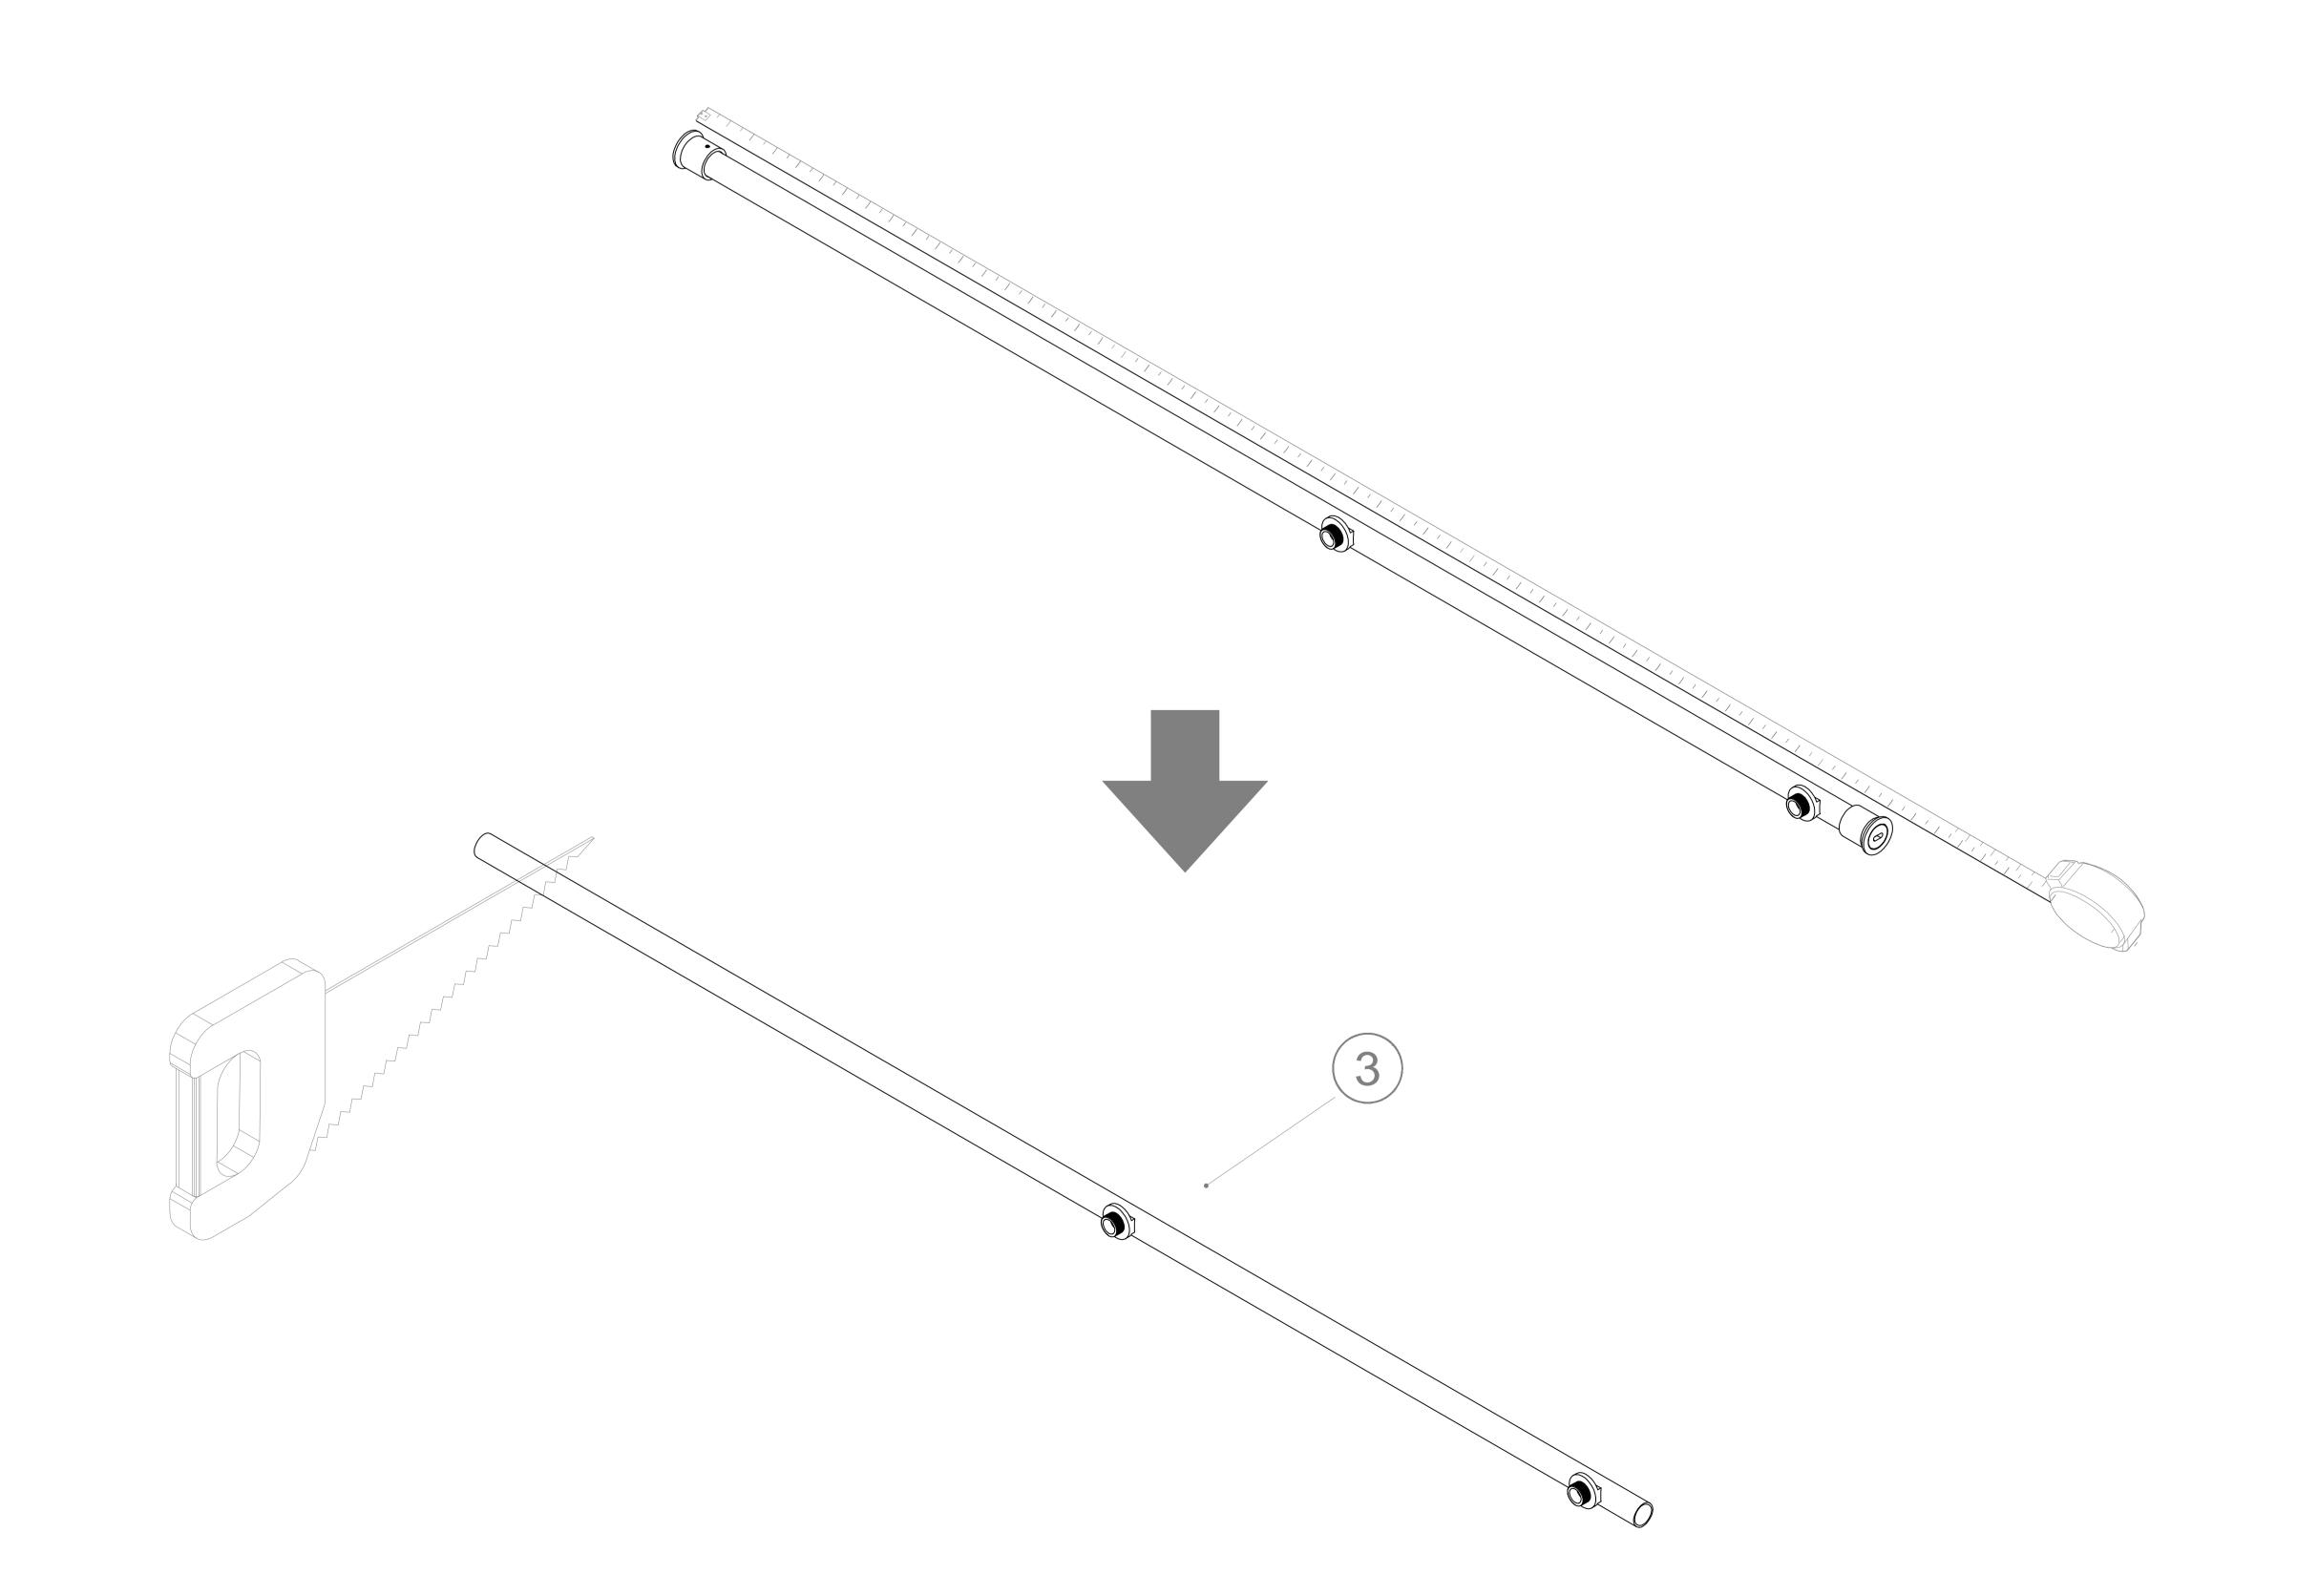


STEP-1: Marking the wall locking holes of solid glass wall material, drilling holes.

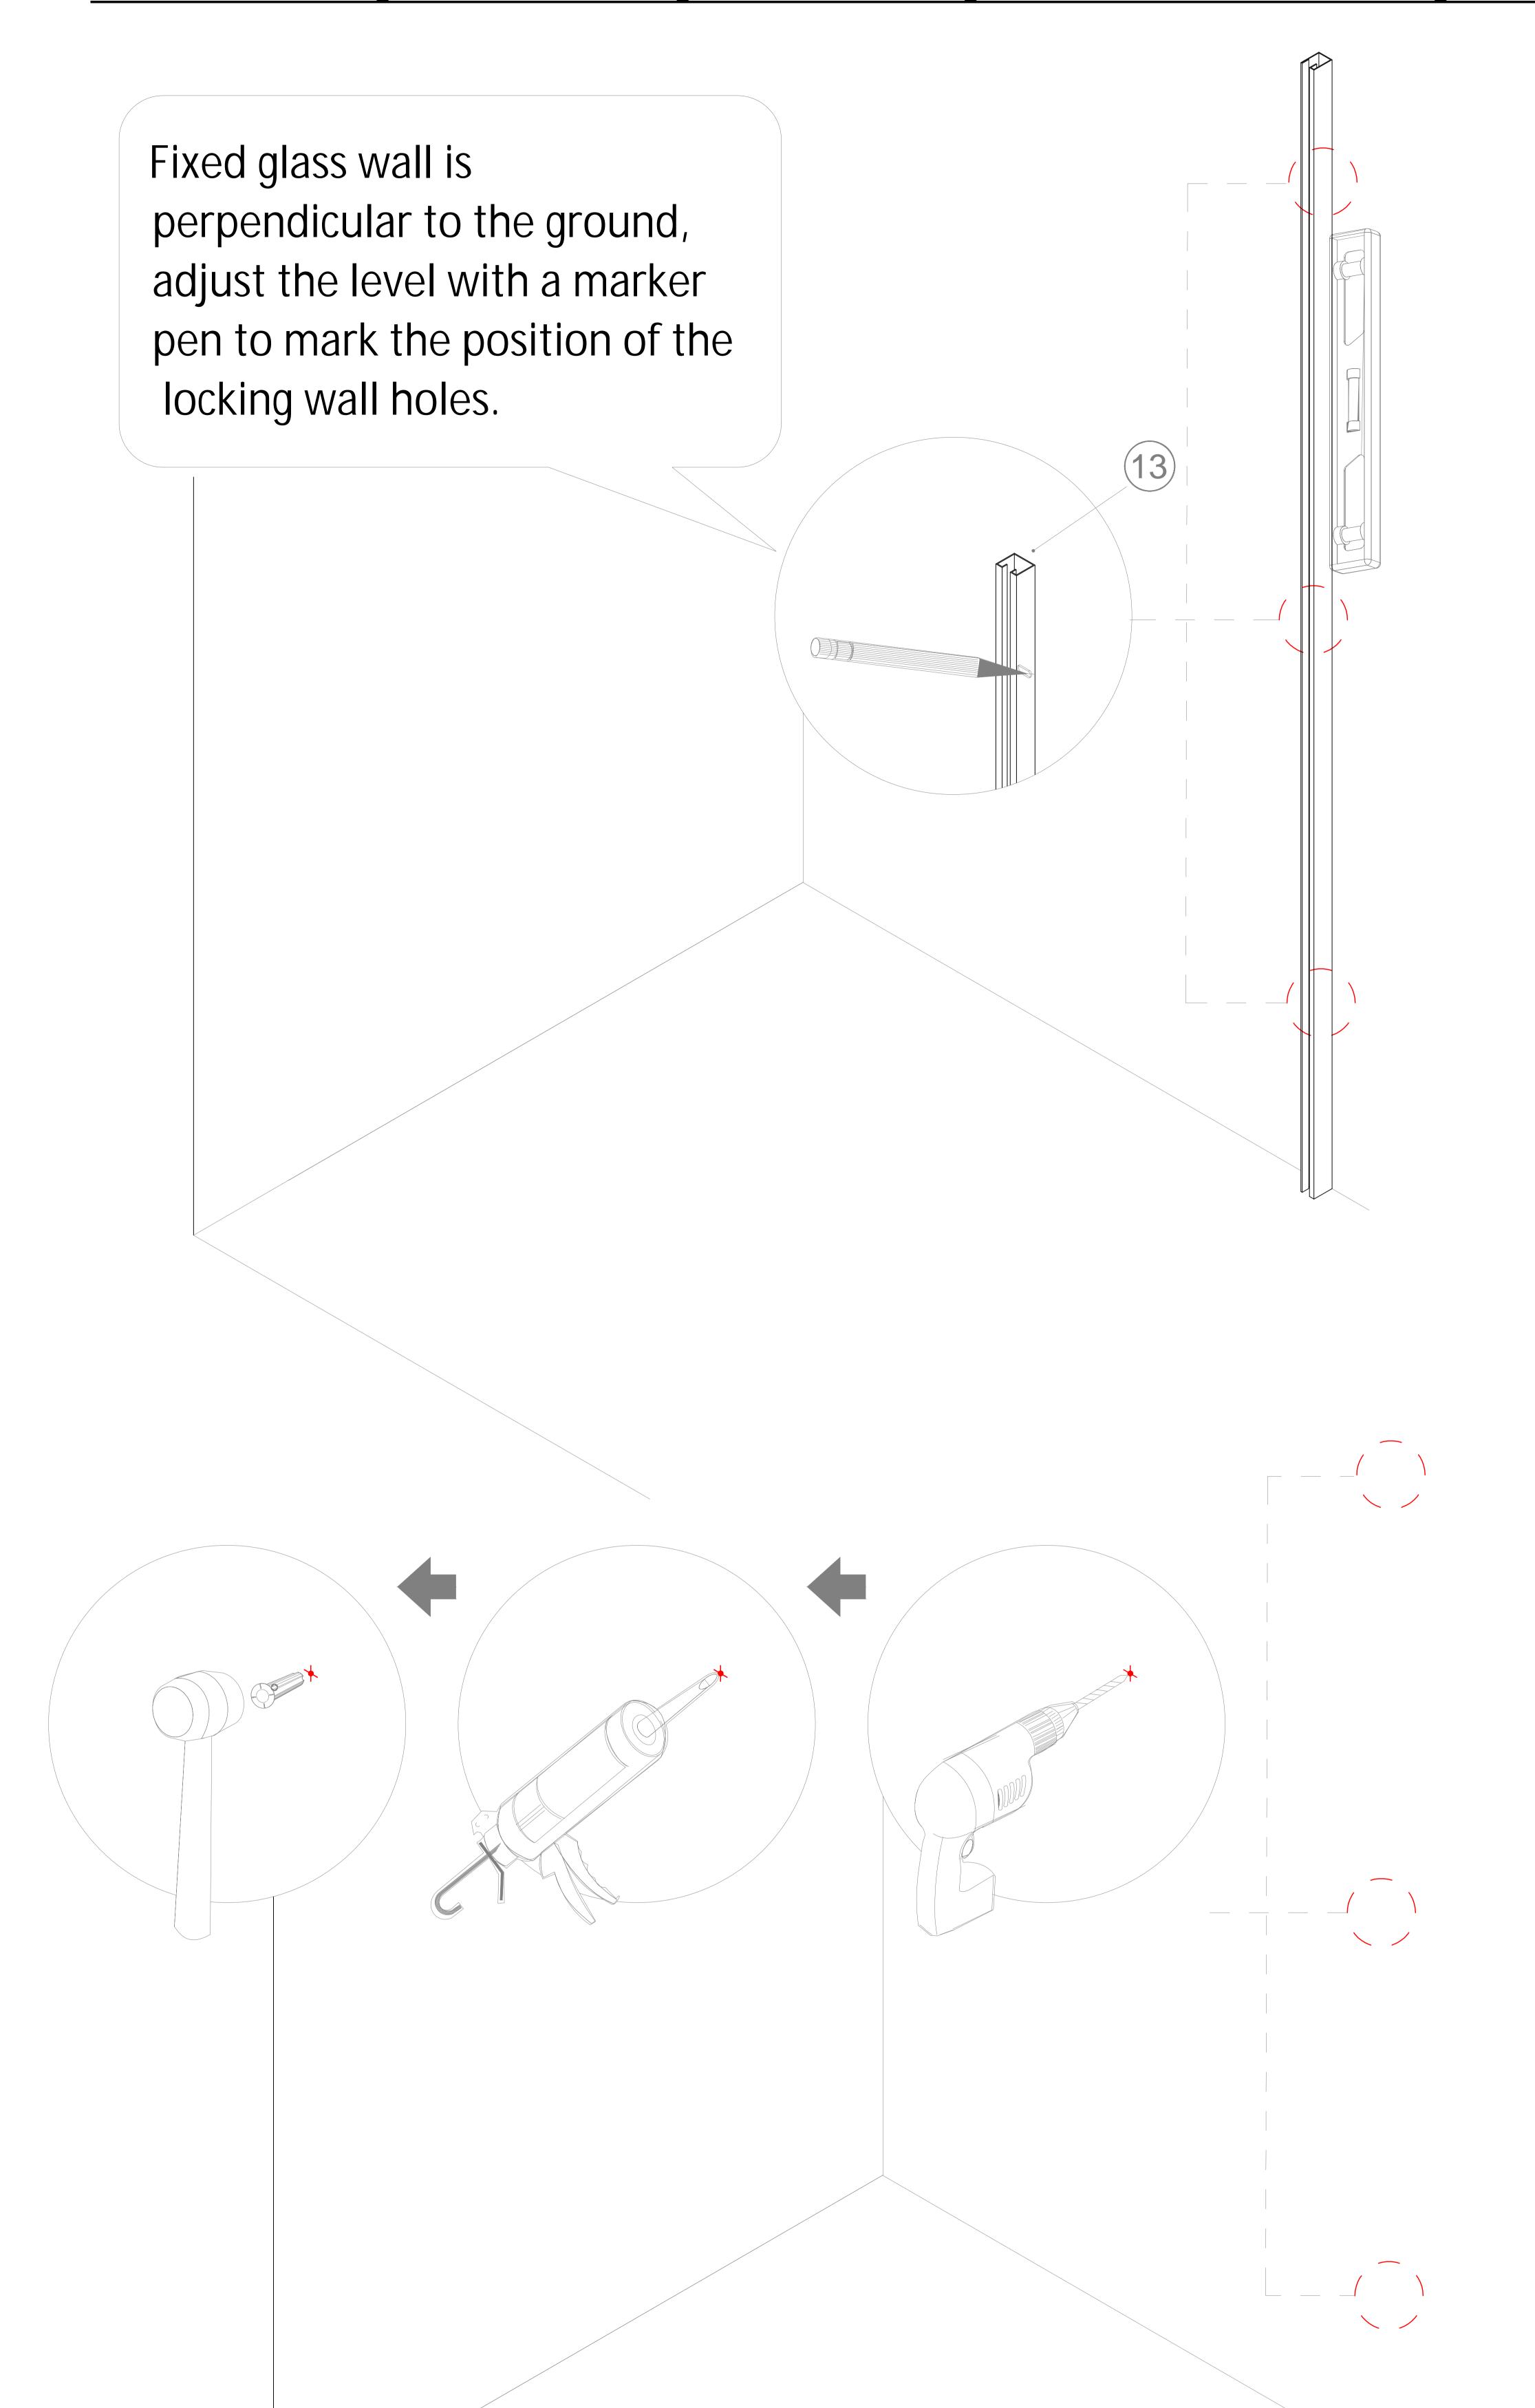


STEP-2: Installation of solid glass wall profile


1.Coat the back of the solid glass wall material with glass glue.

2.Use ST-4*35 stainless steel selftapping screws to lock the solid glass wall material to the wall. Use ST-4*35 stainless steel selftapping screws to lock the solid glass wall material to the wall.

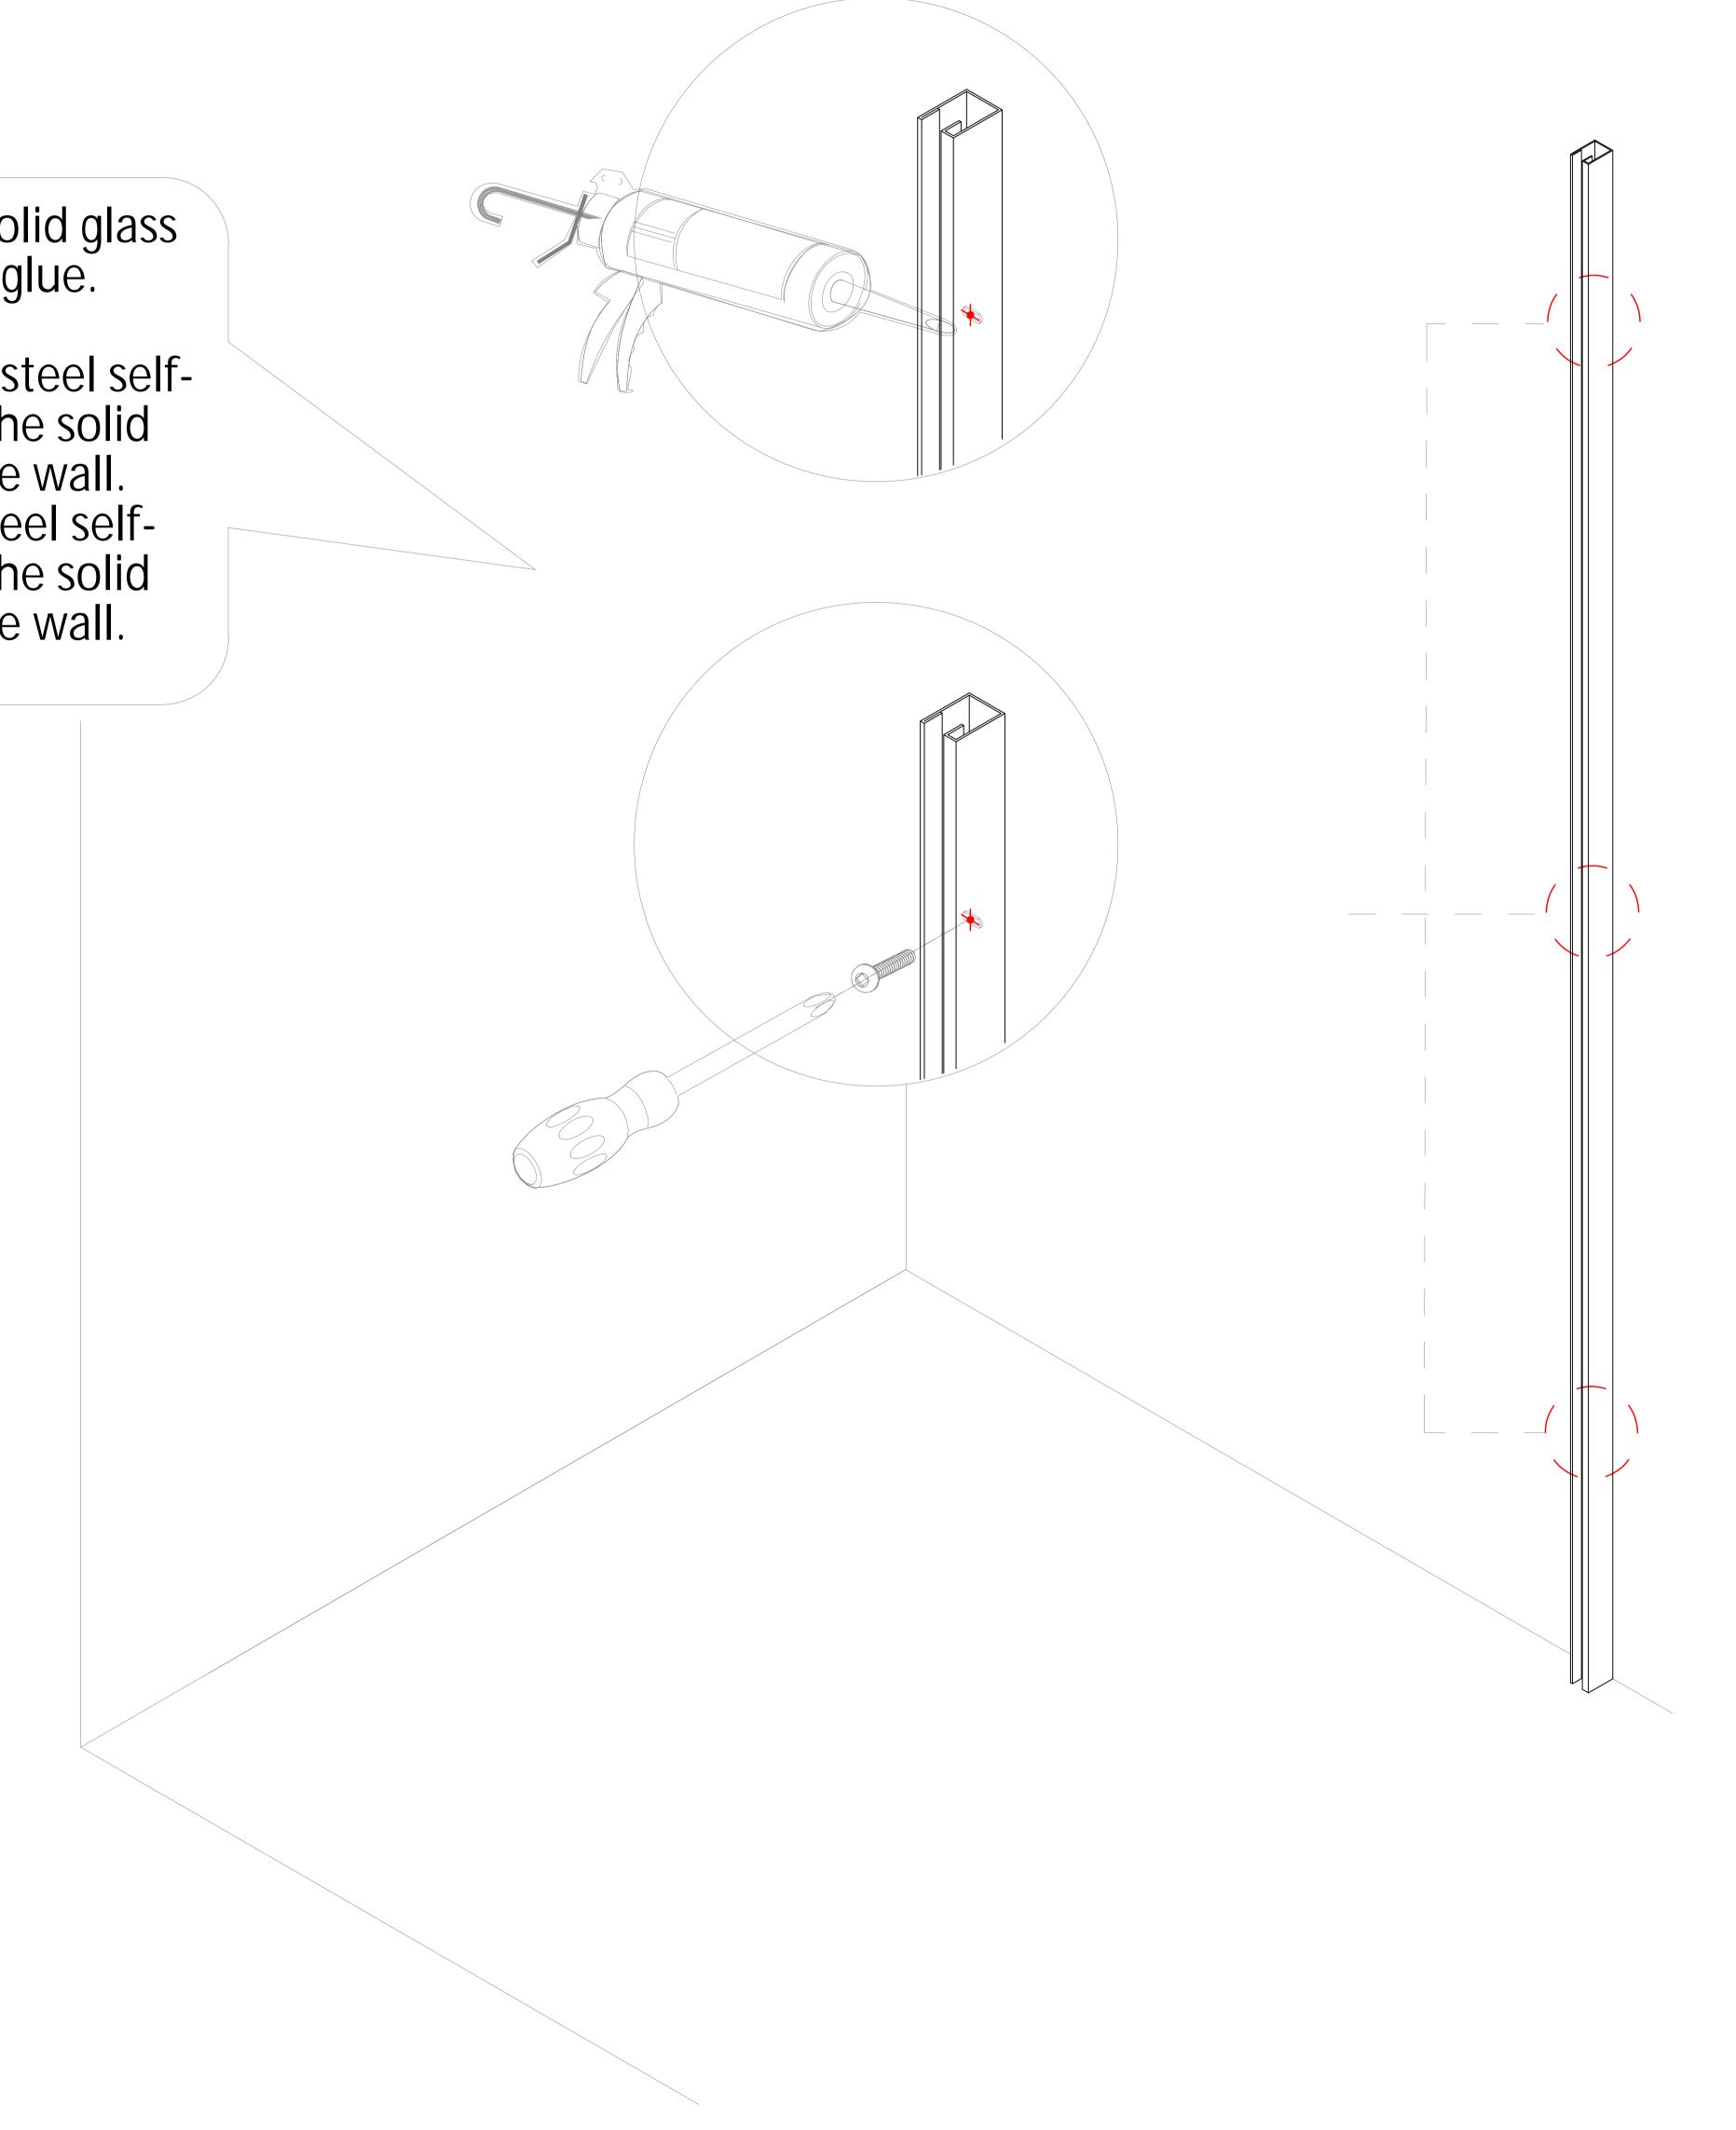


STEP-3: Marking and drilling the holes for the lock wall holder

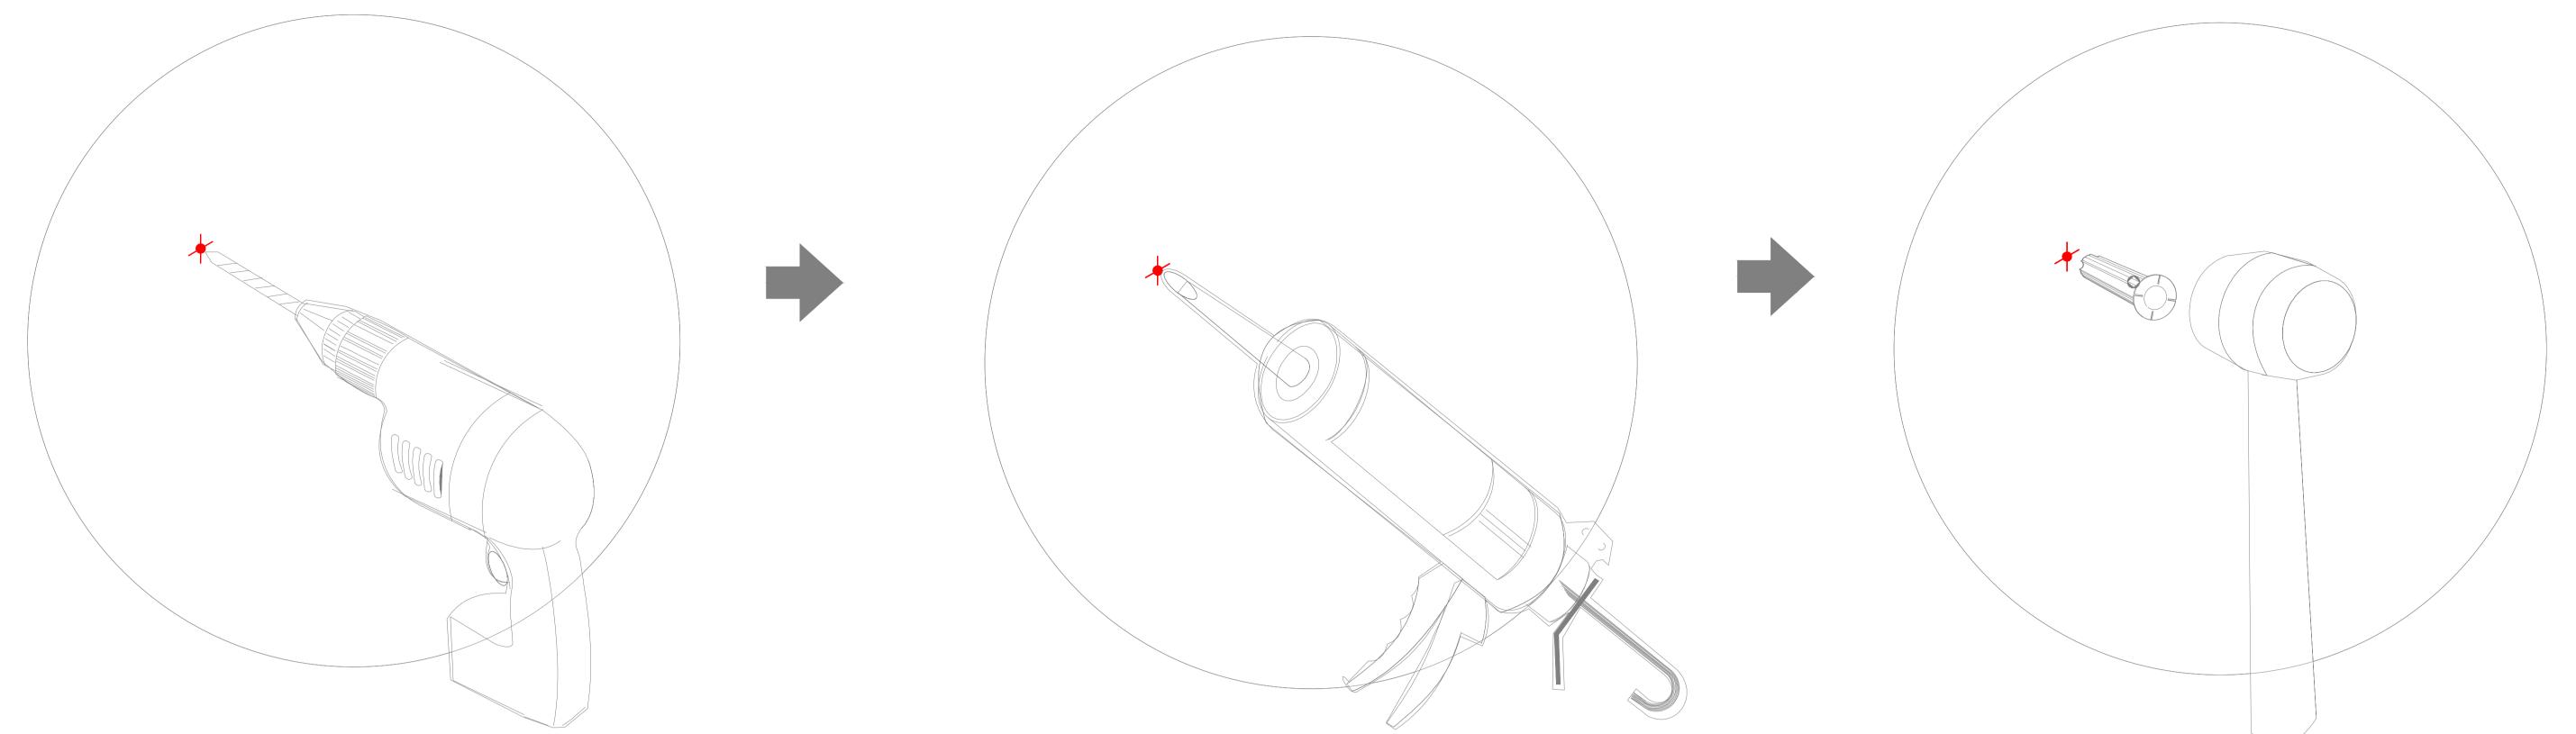


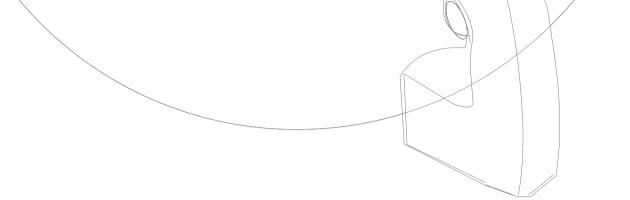


Only installing the Measure the vertical height, place the lock wall seat, and mark the hole location.

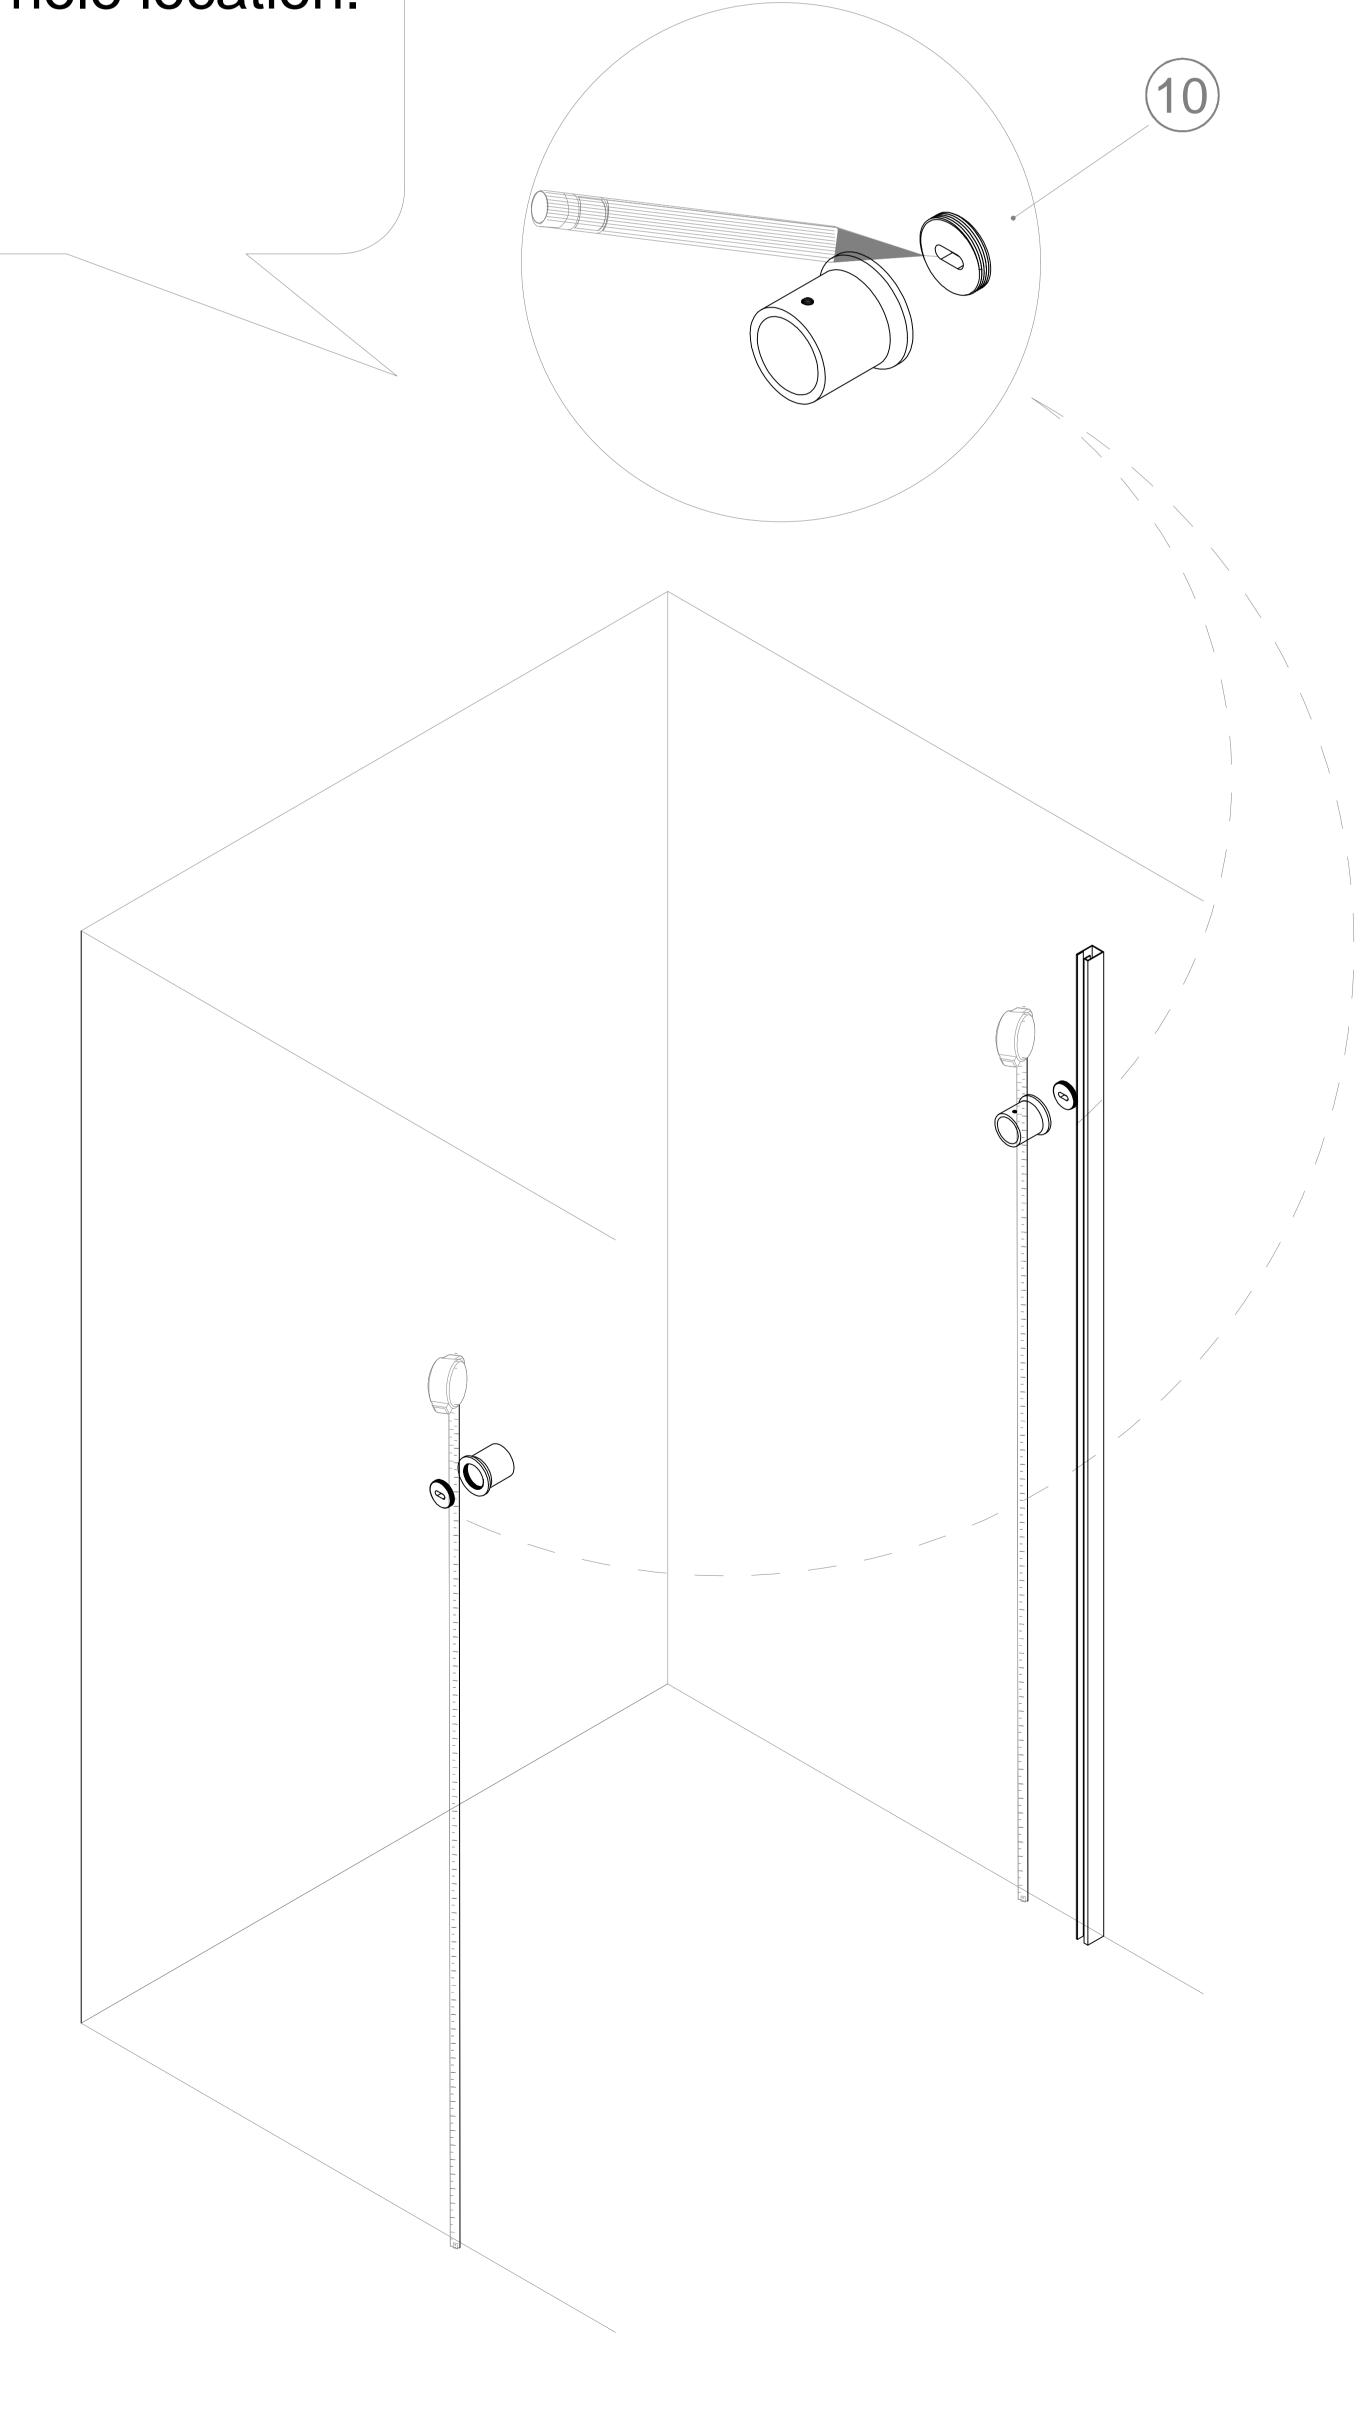


STEP-4: Installation of Locking Wall Mount and Upper Rail




STEP-5: Installation of fixed glass

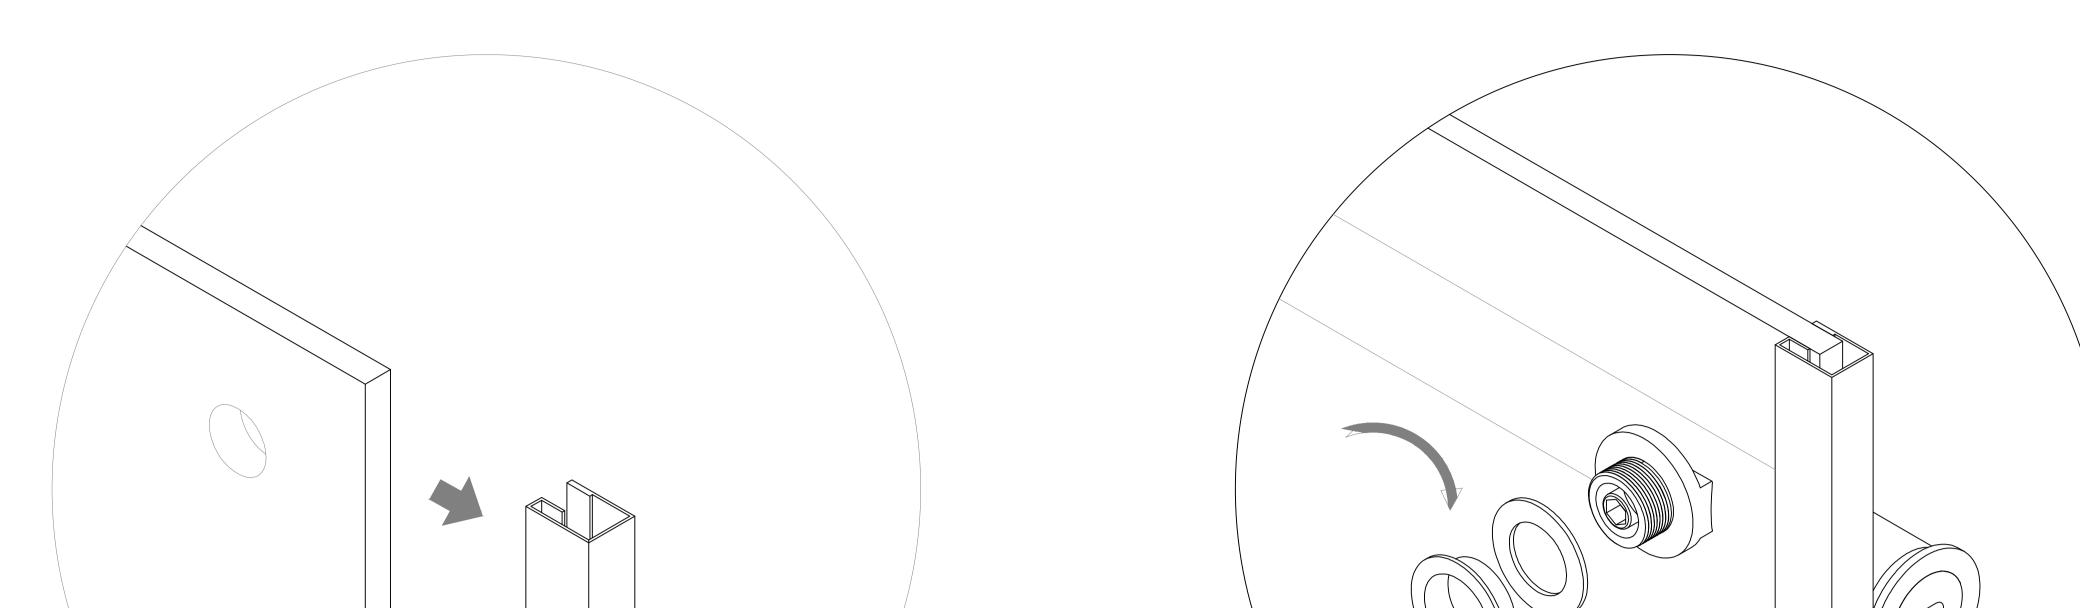




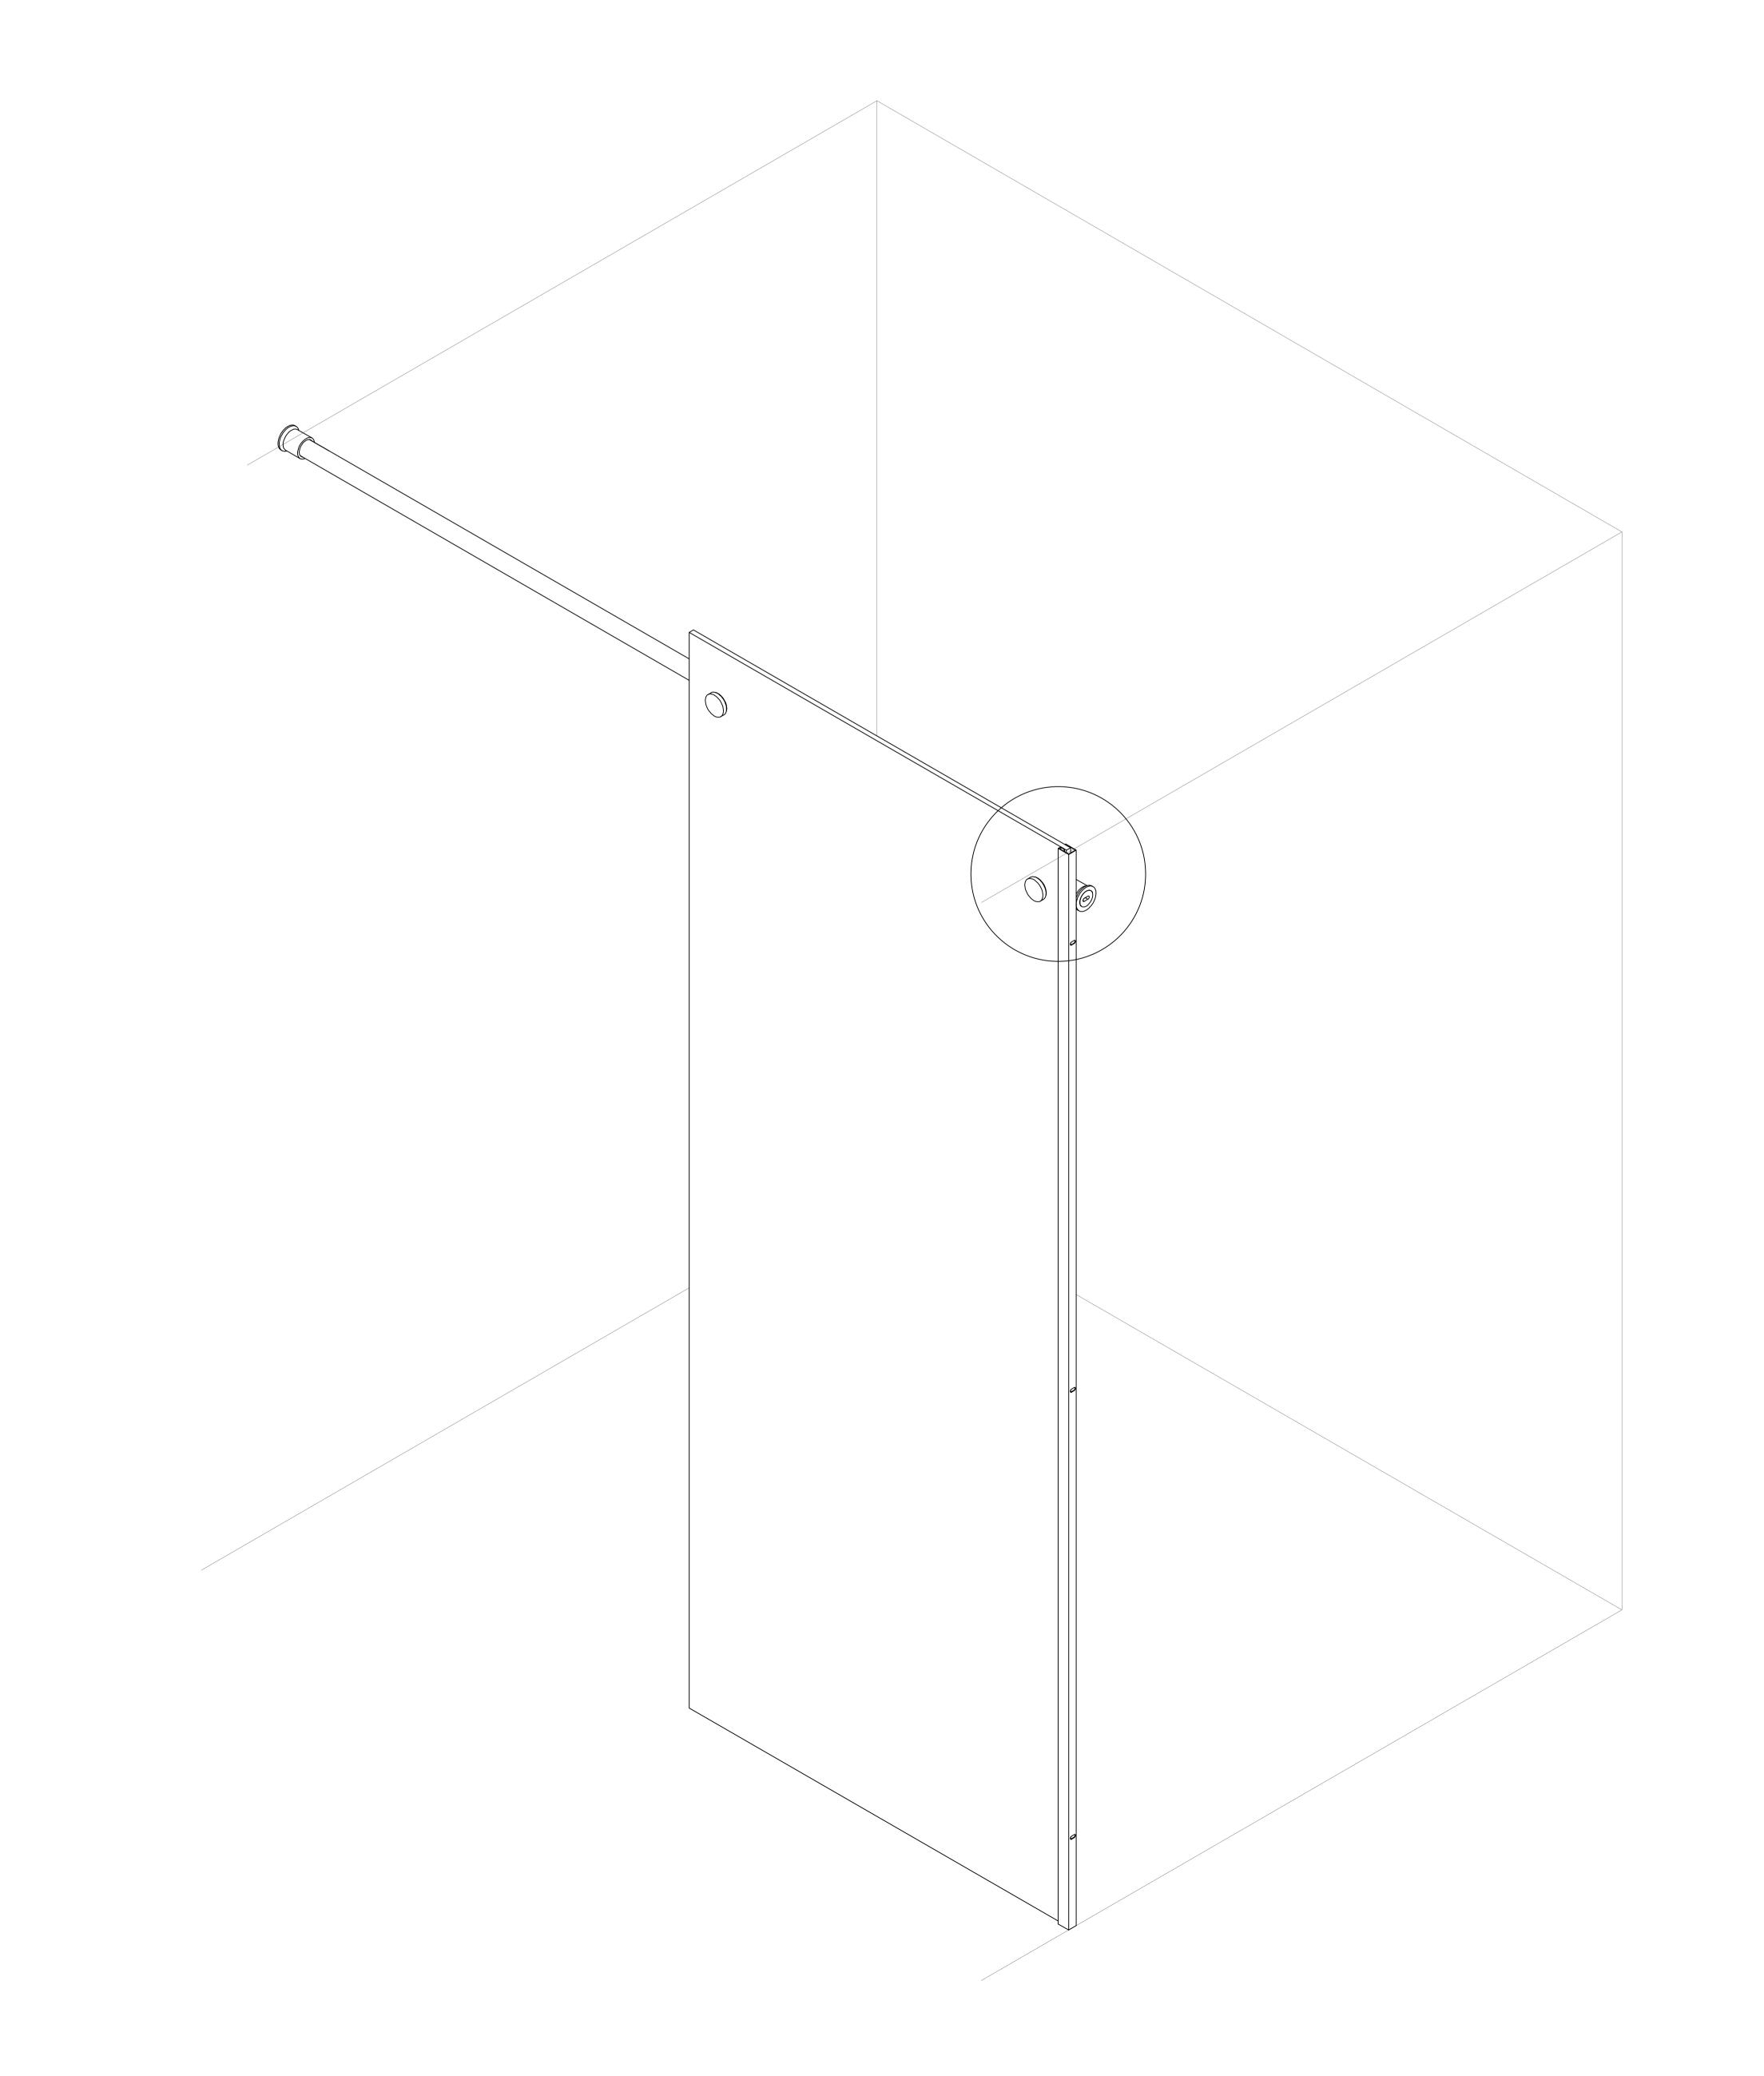


STEP-6: Marking of guide block holes and drilling of holes

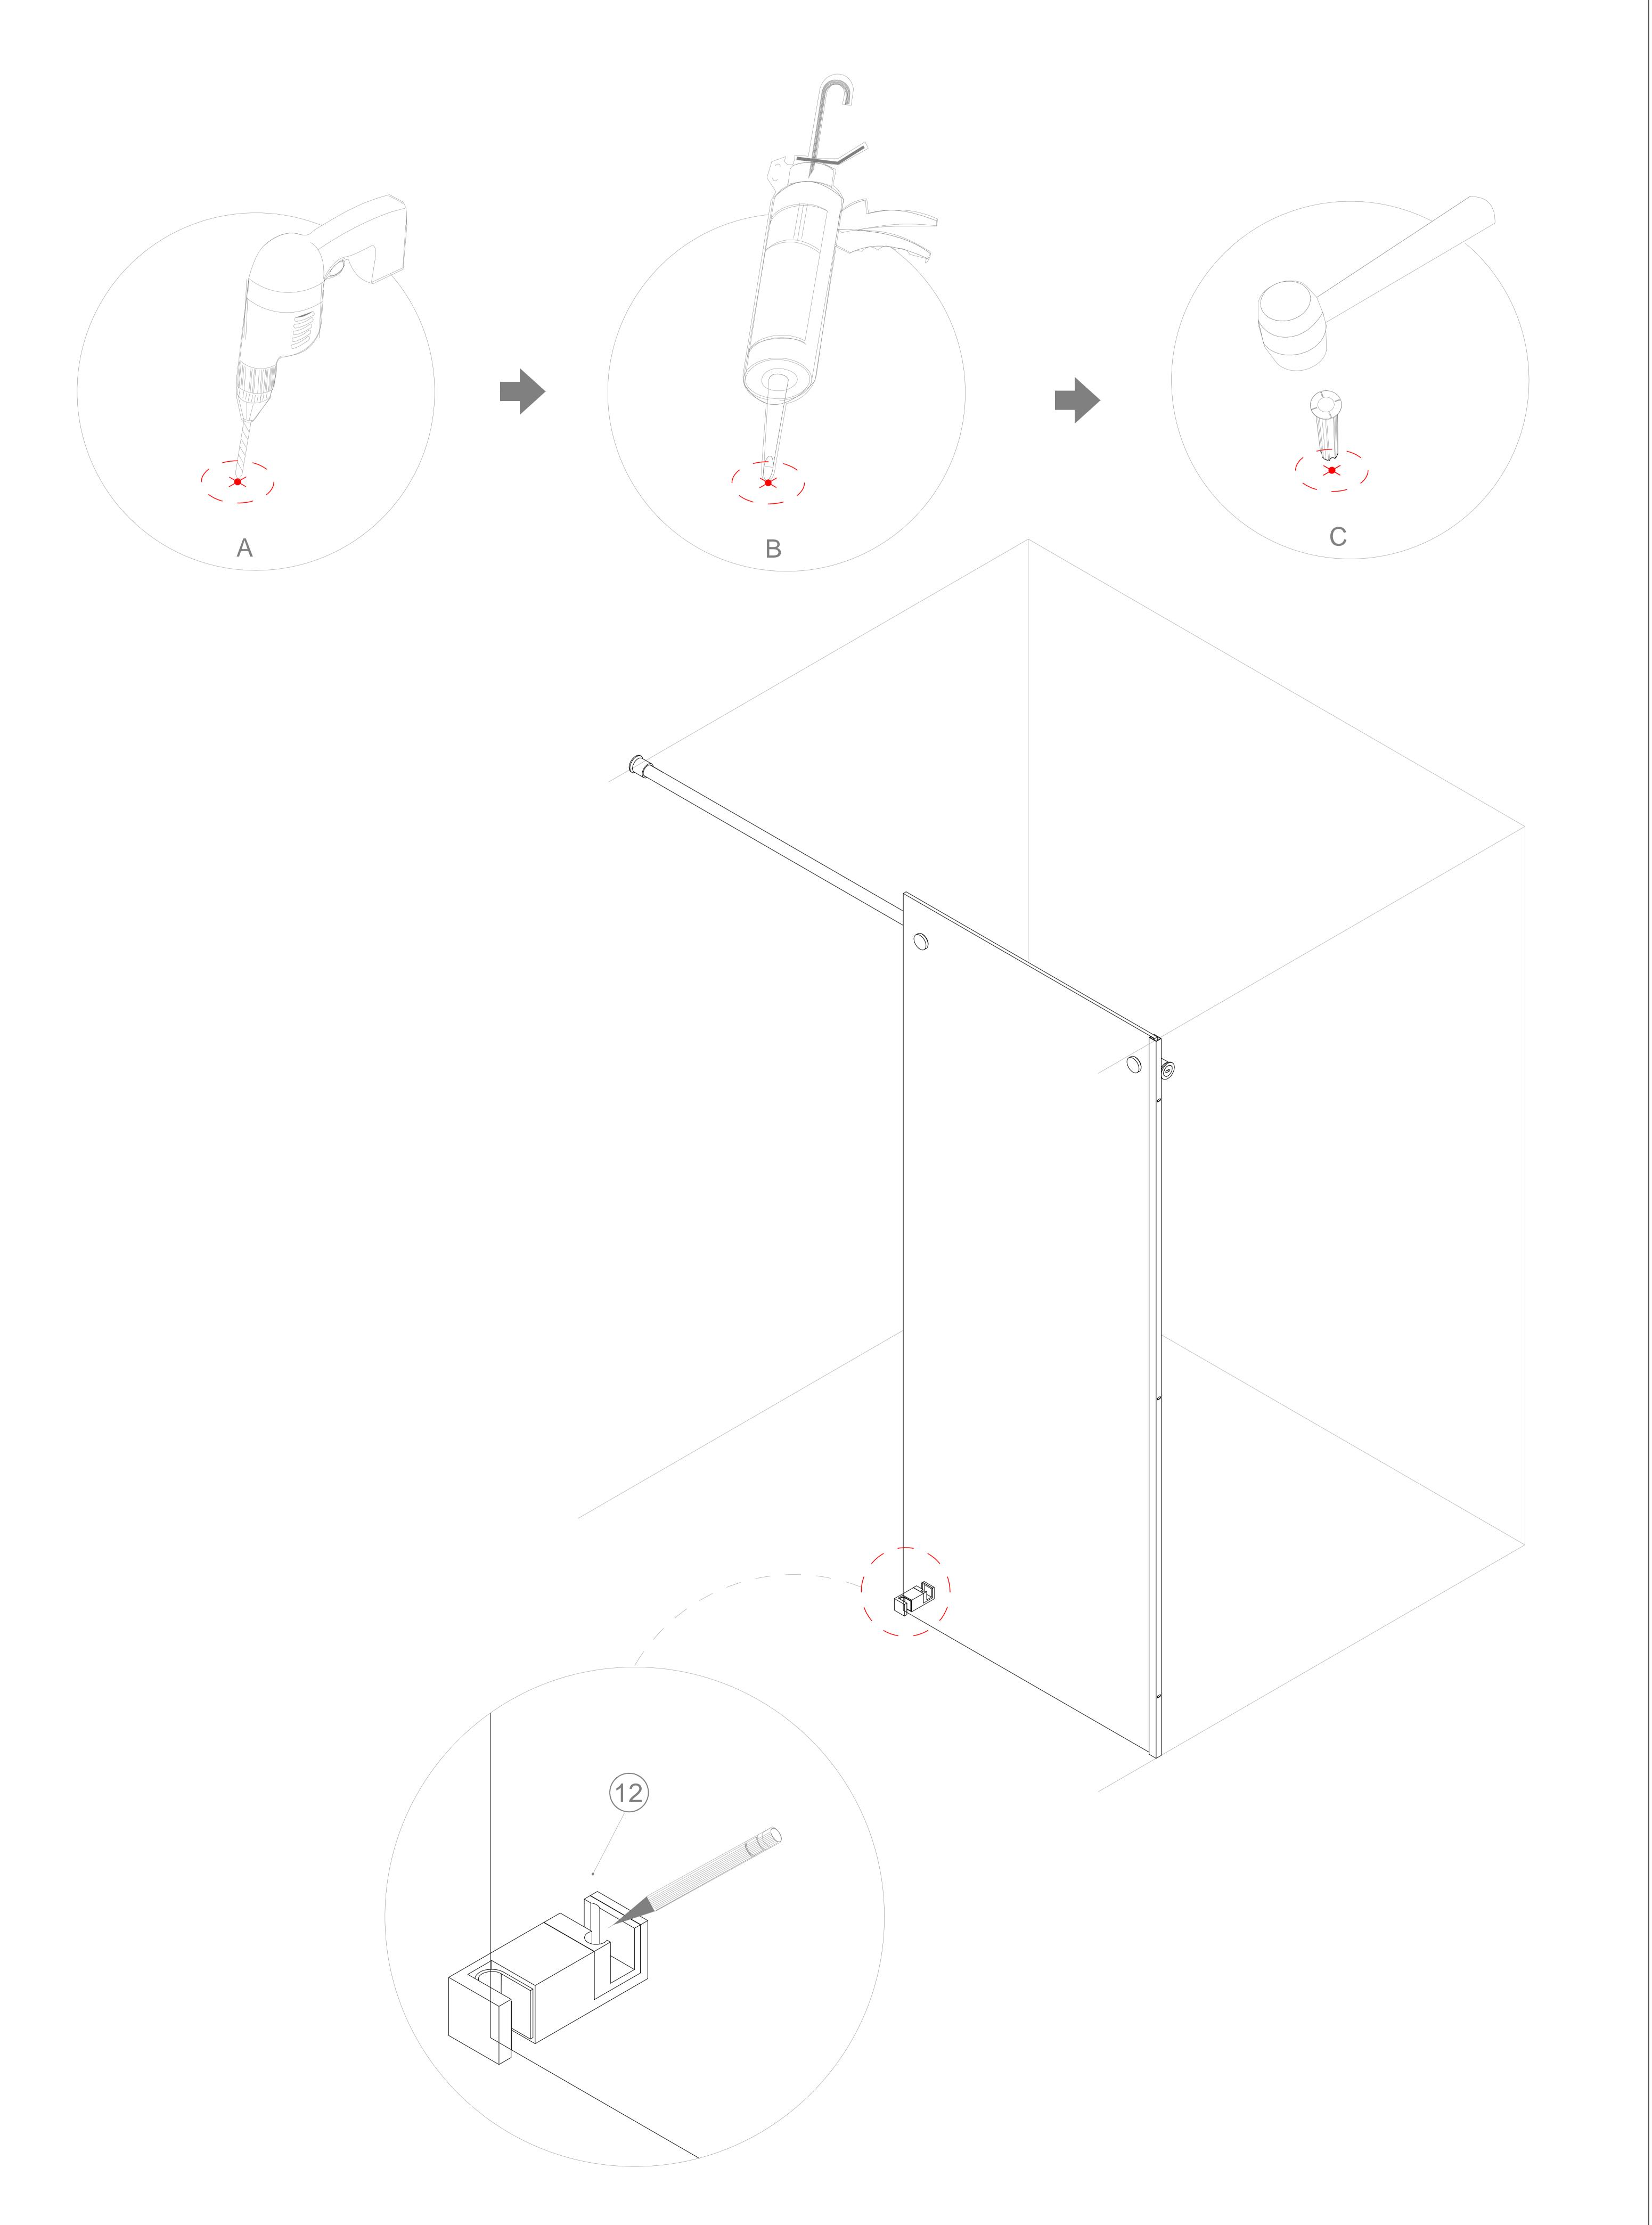

STEP-7: Installation of guide block

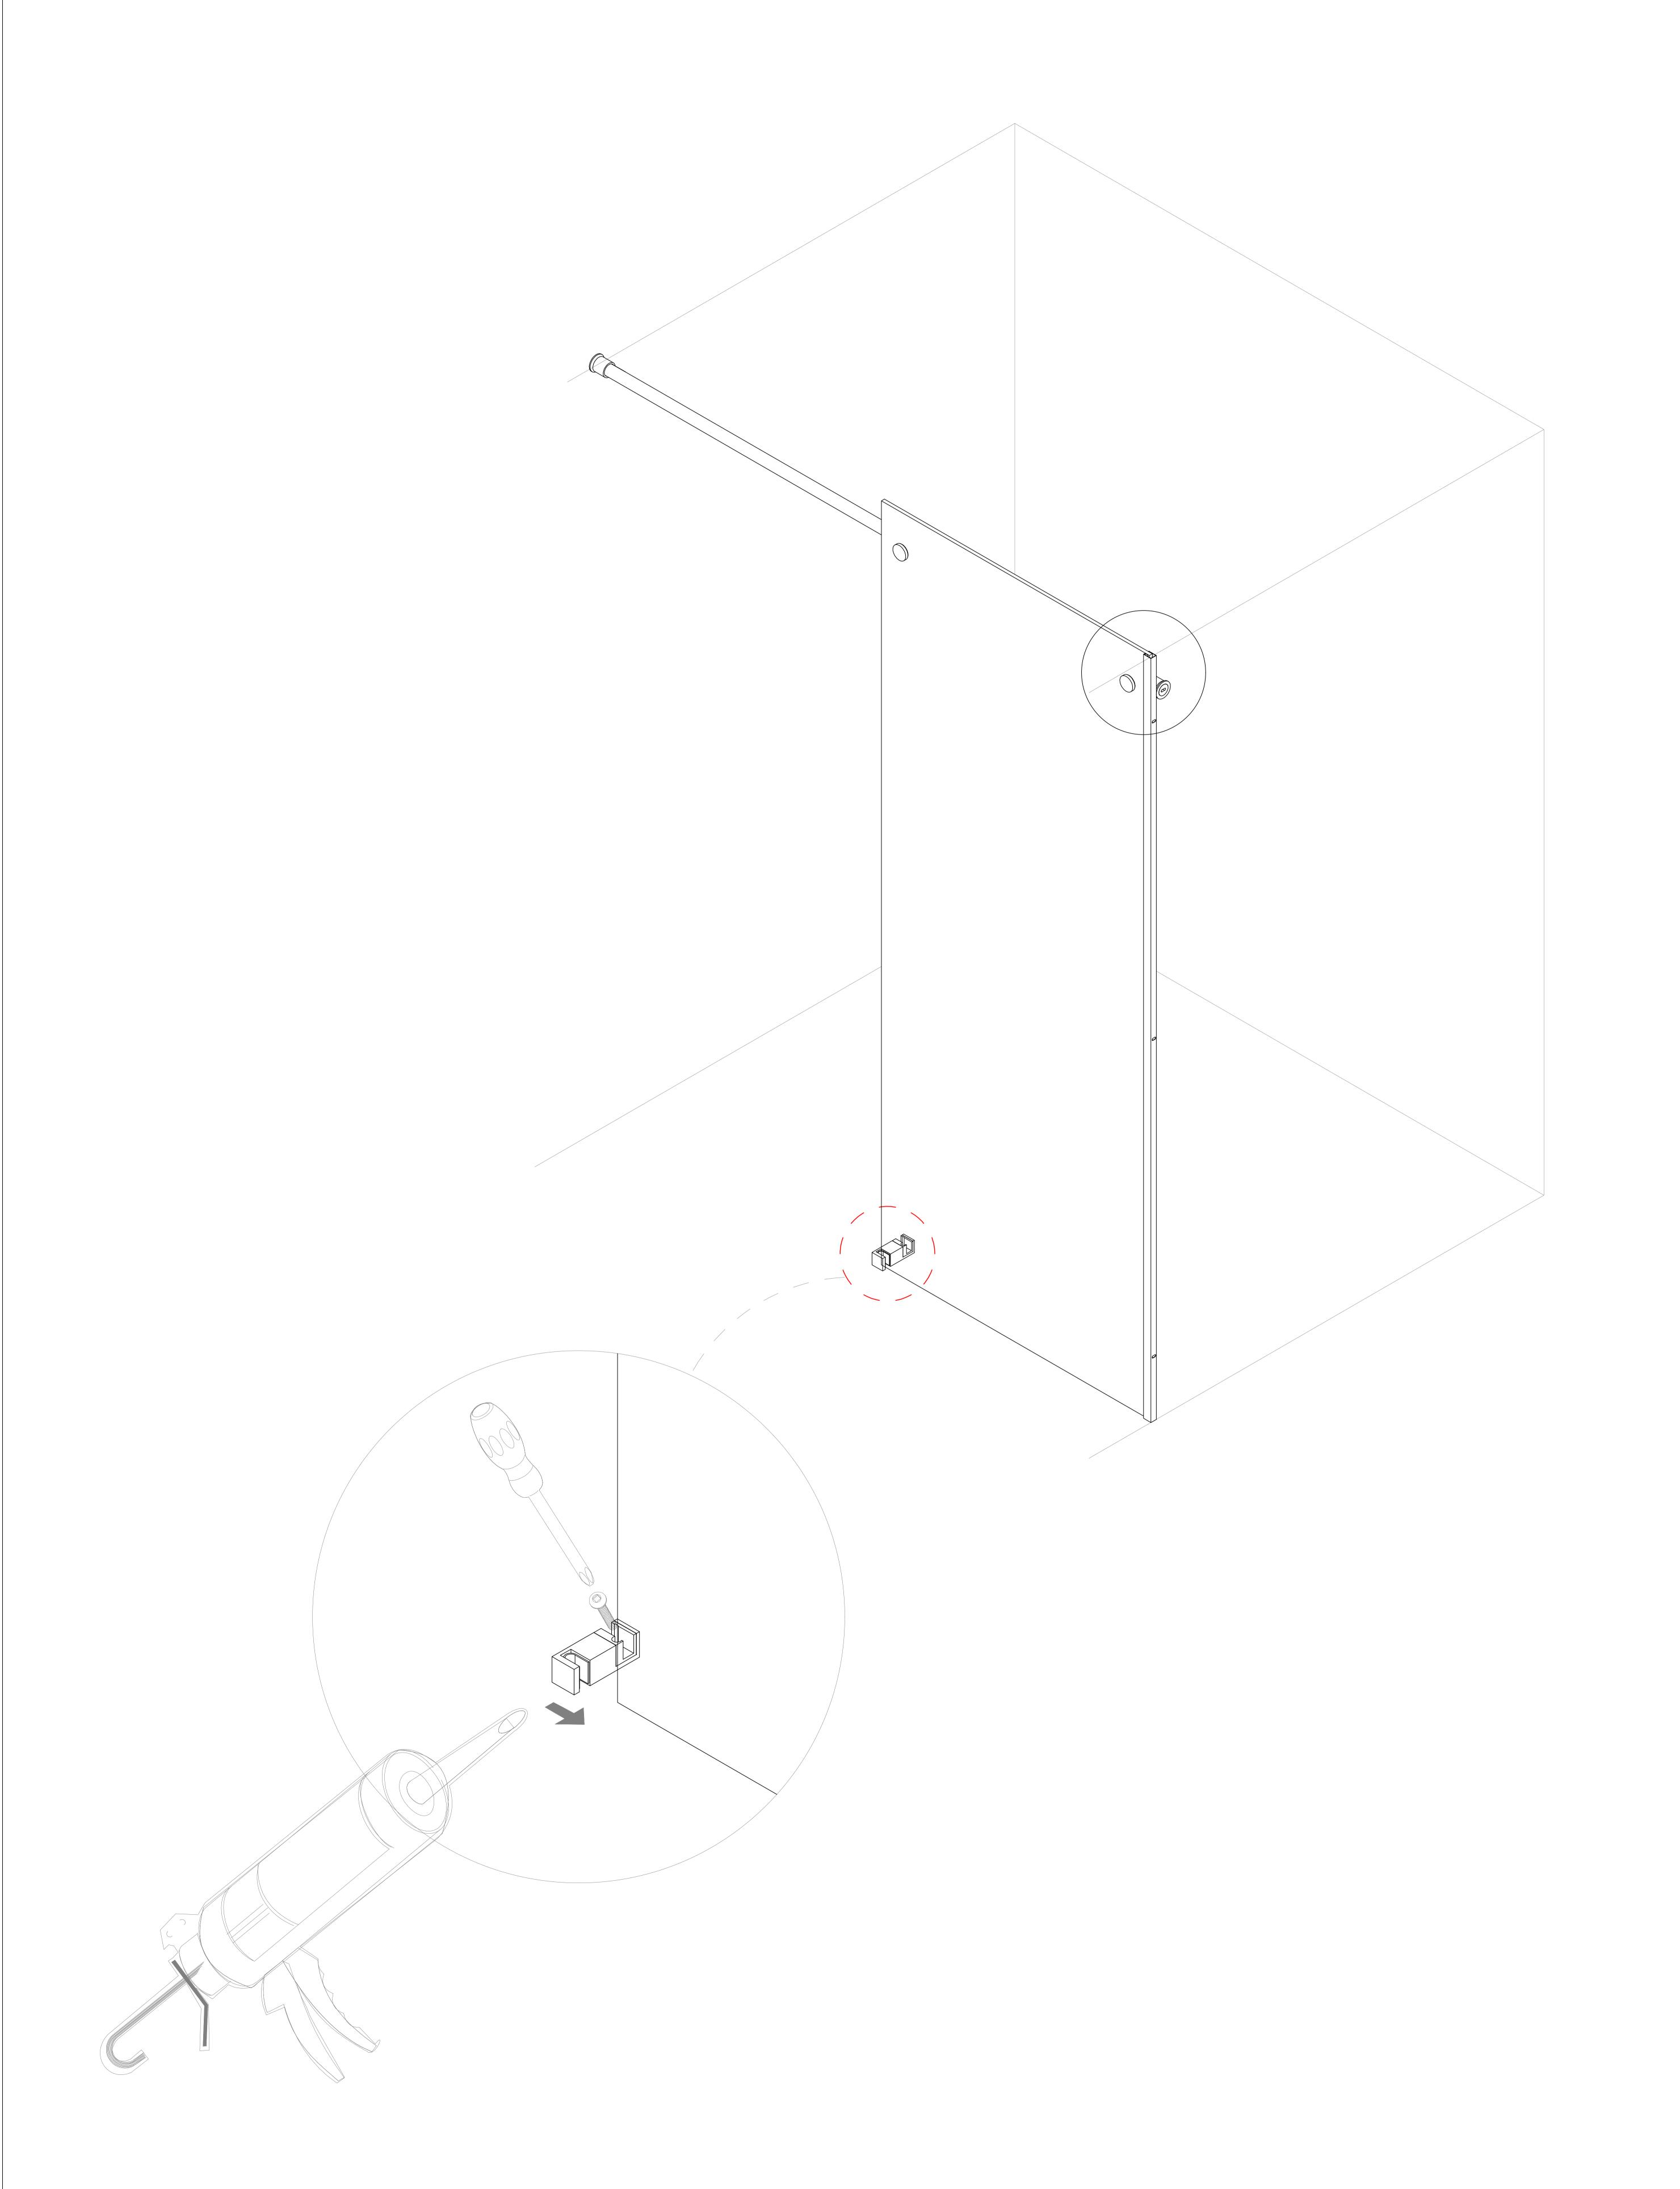



STEP-8: Installation of pulleys on the door glass

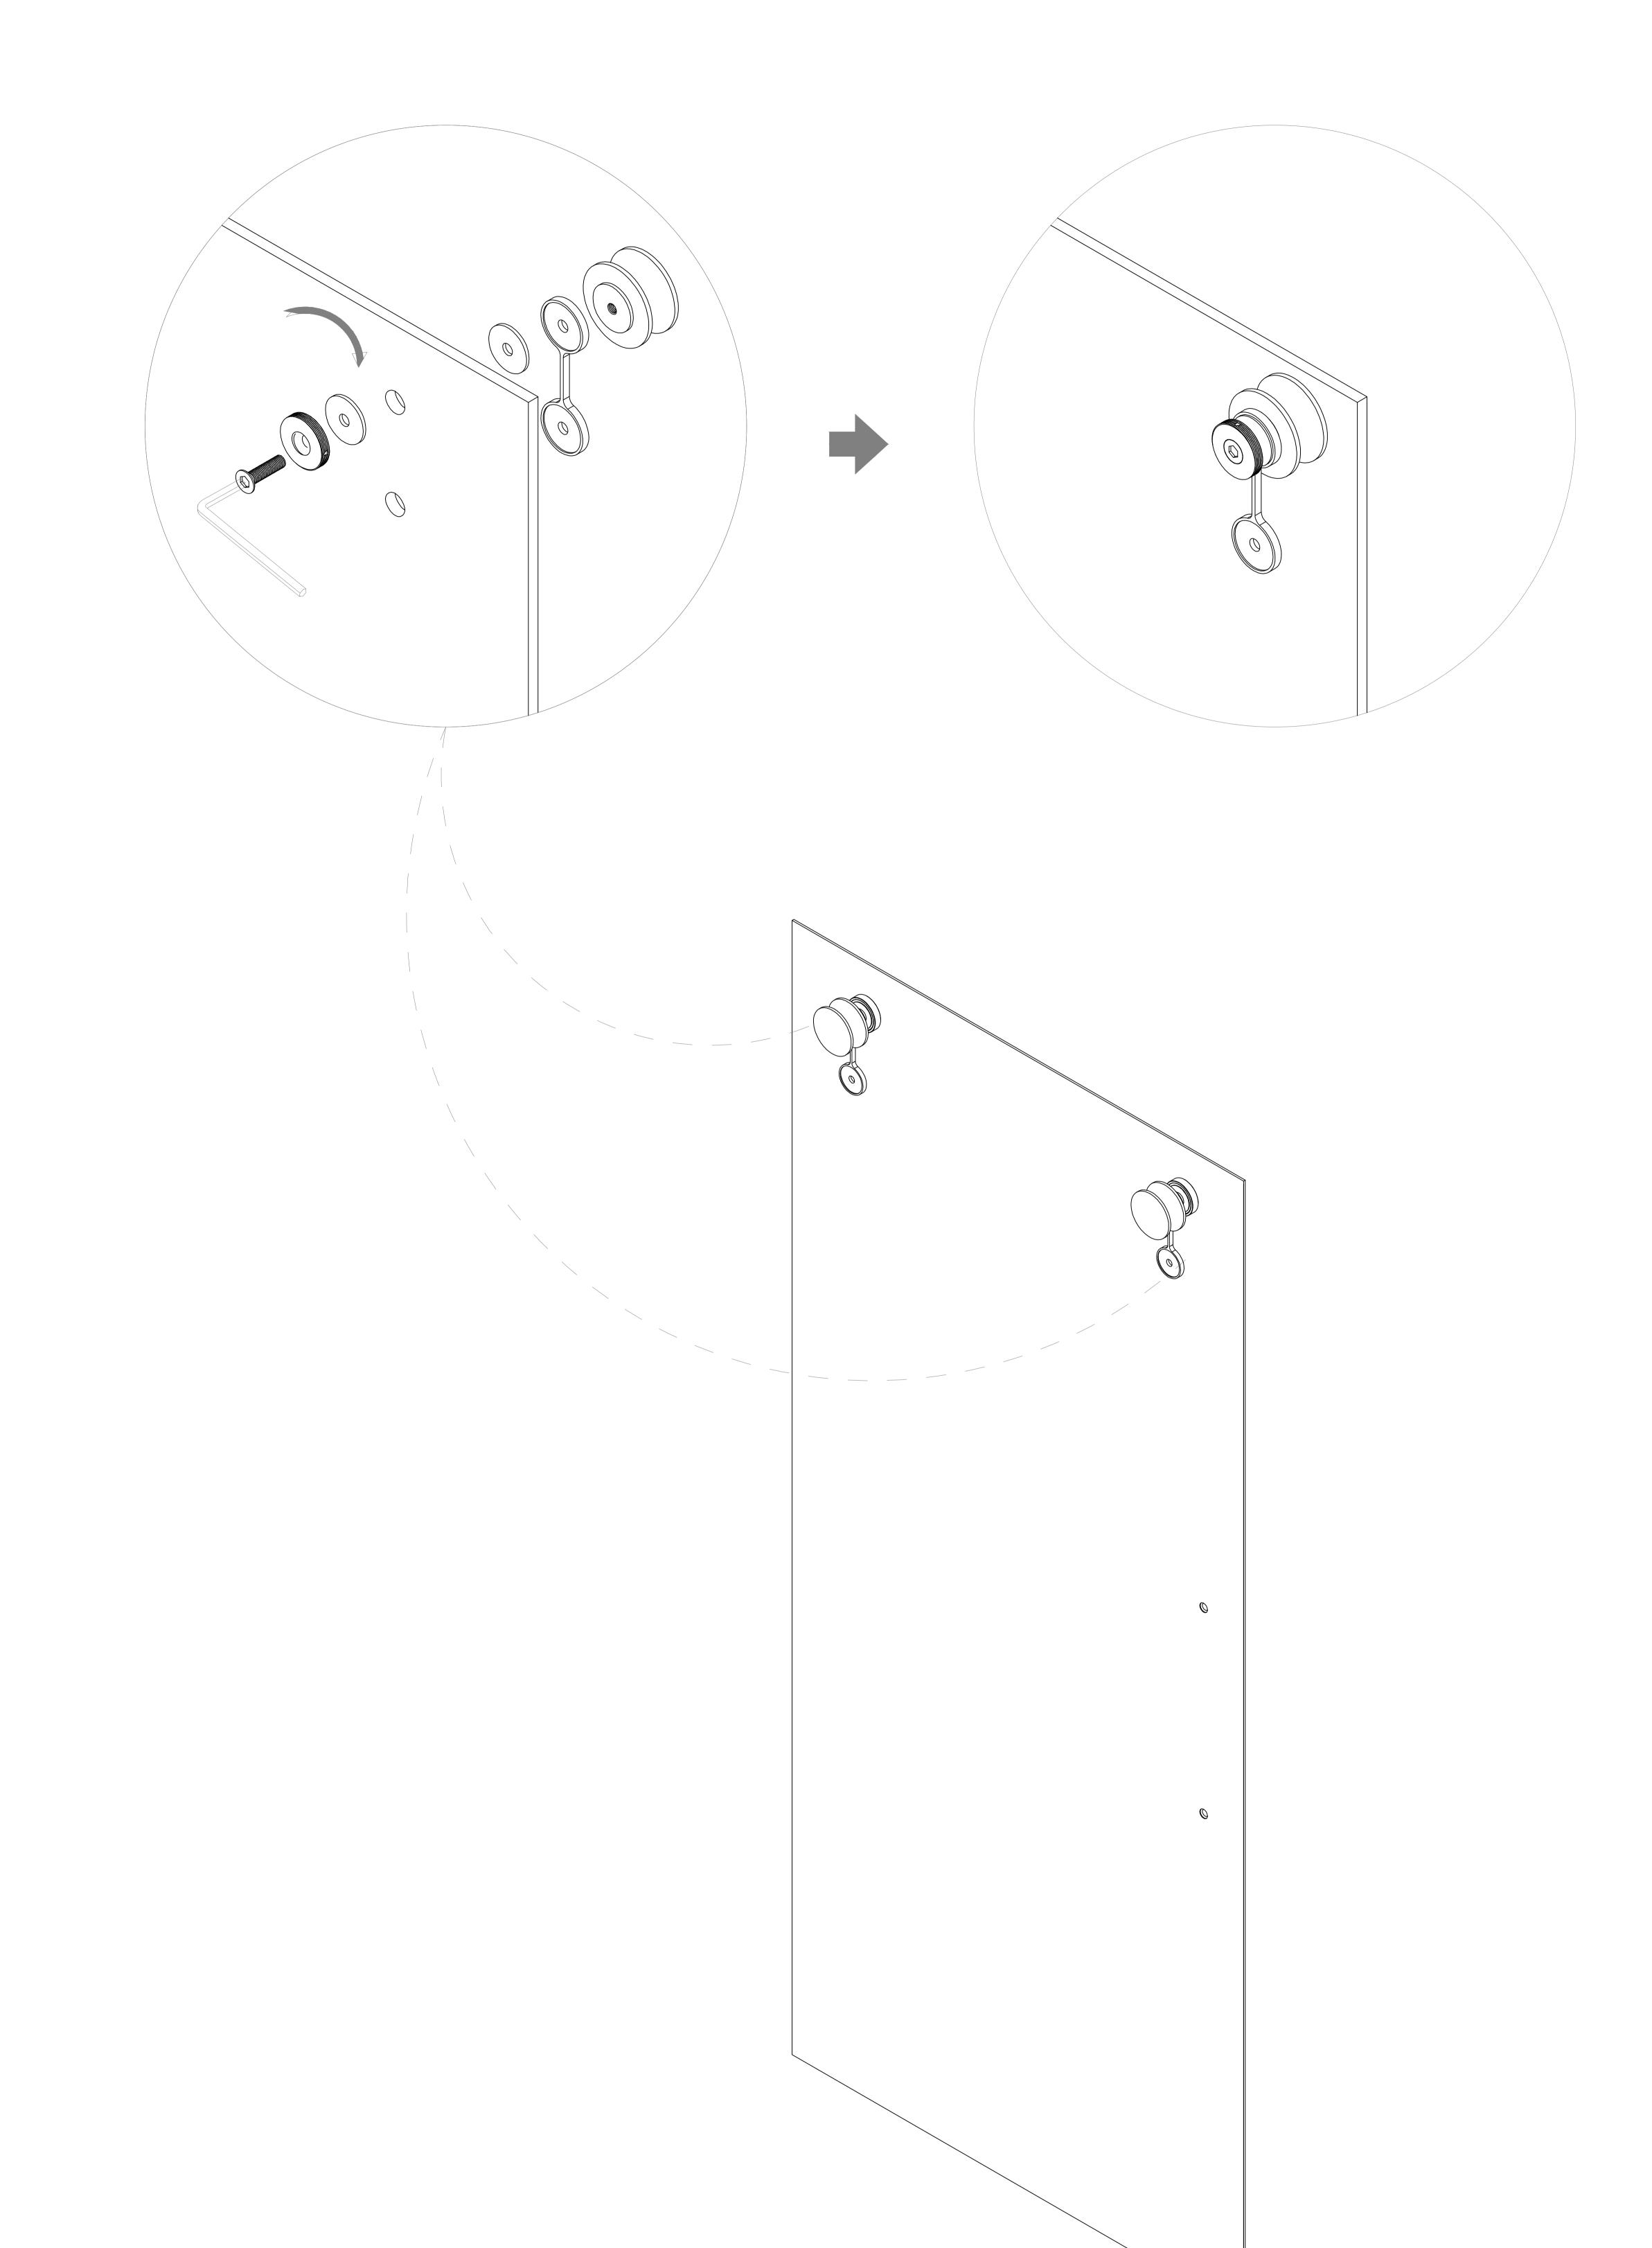








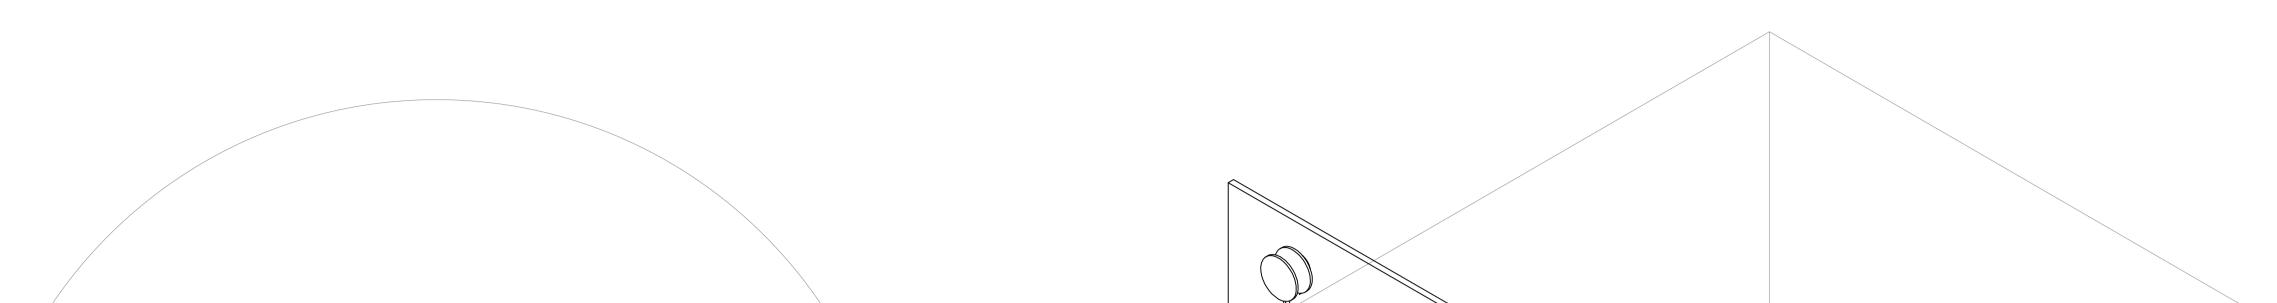

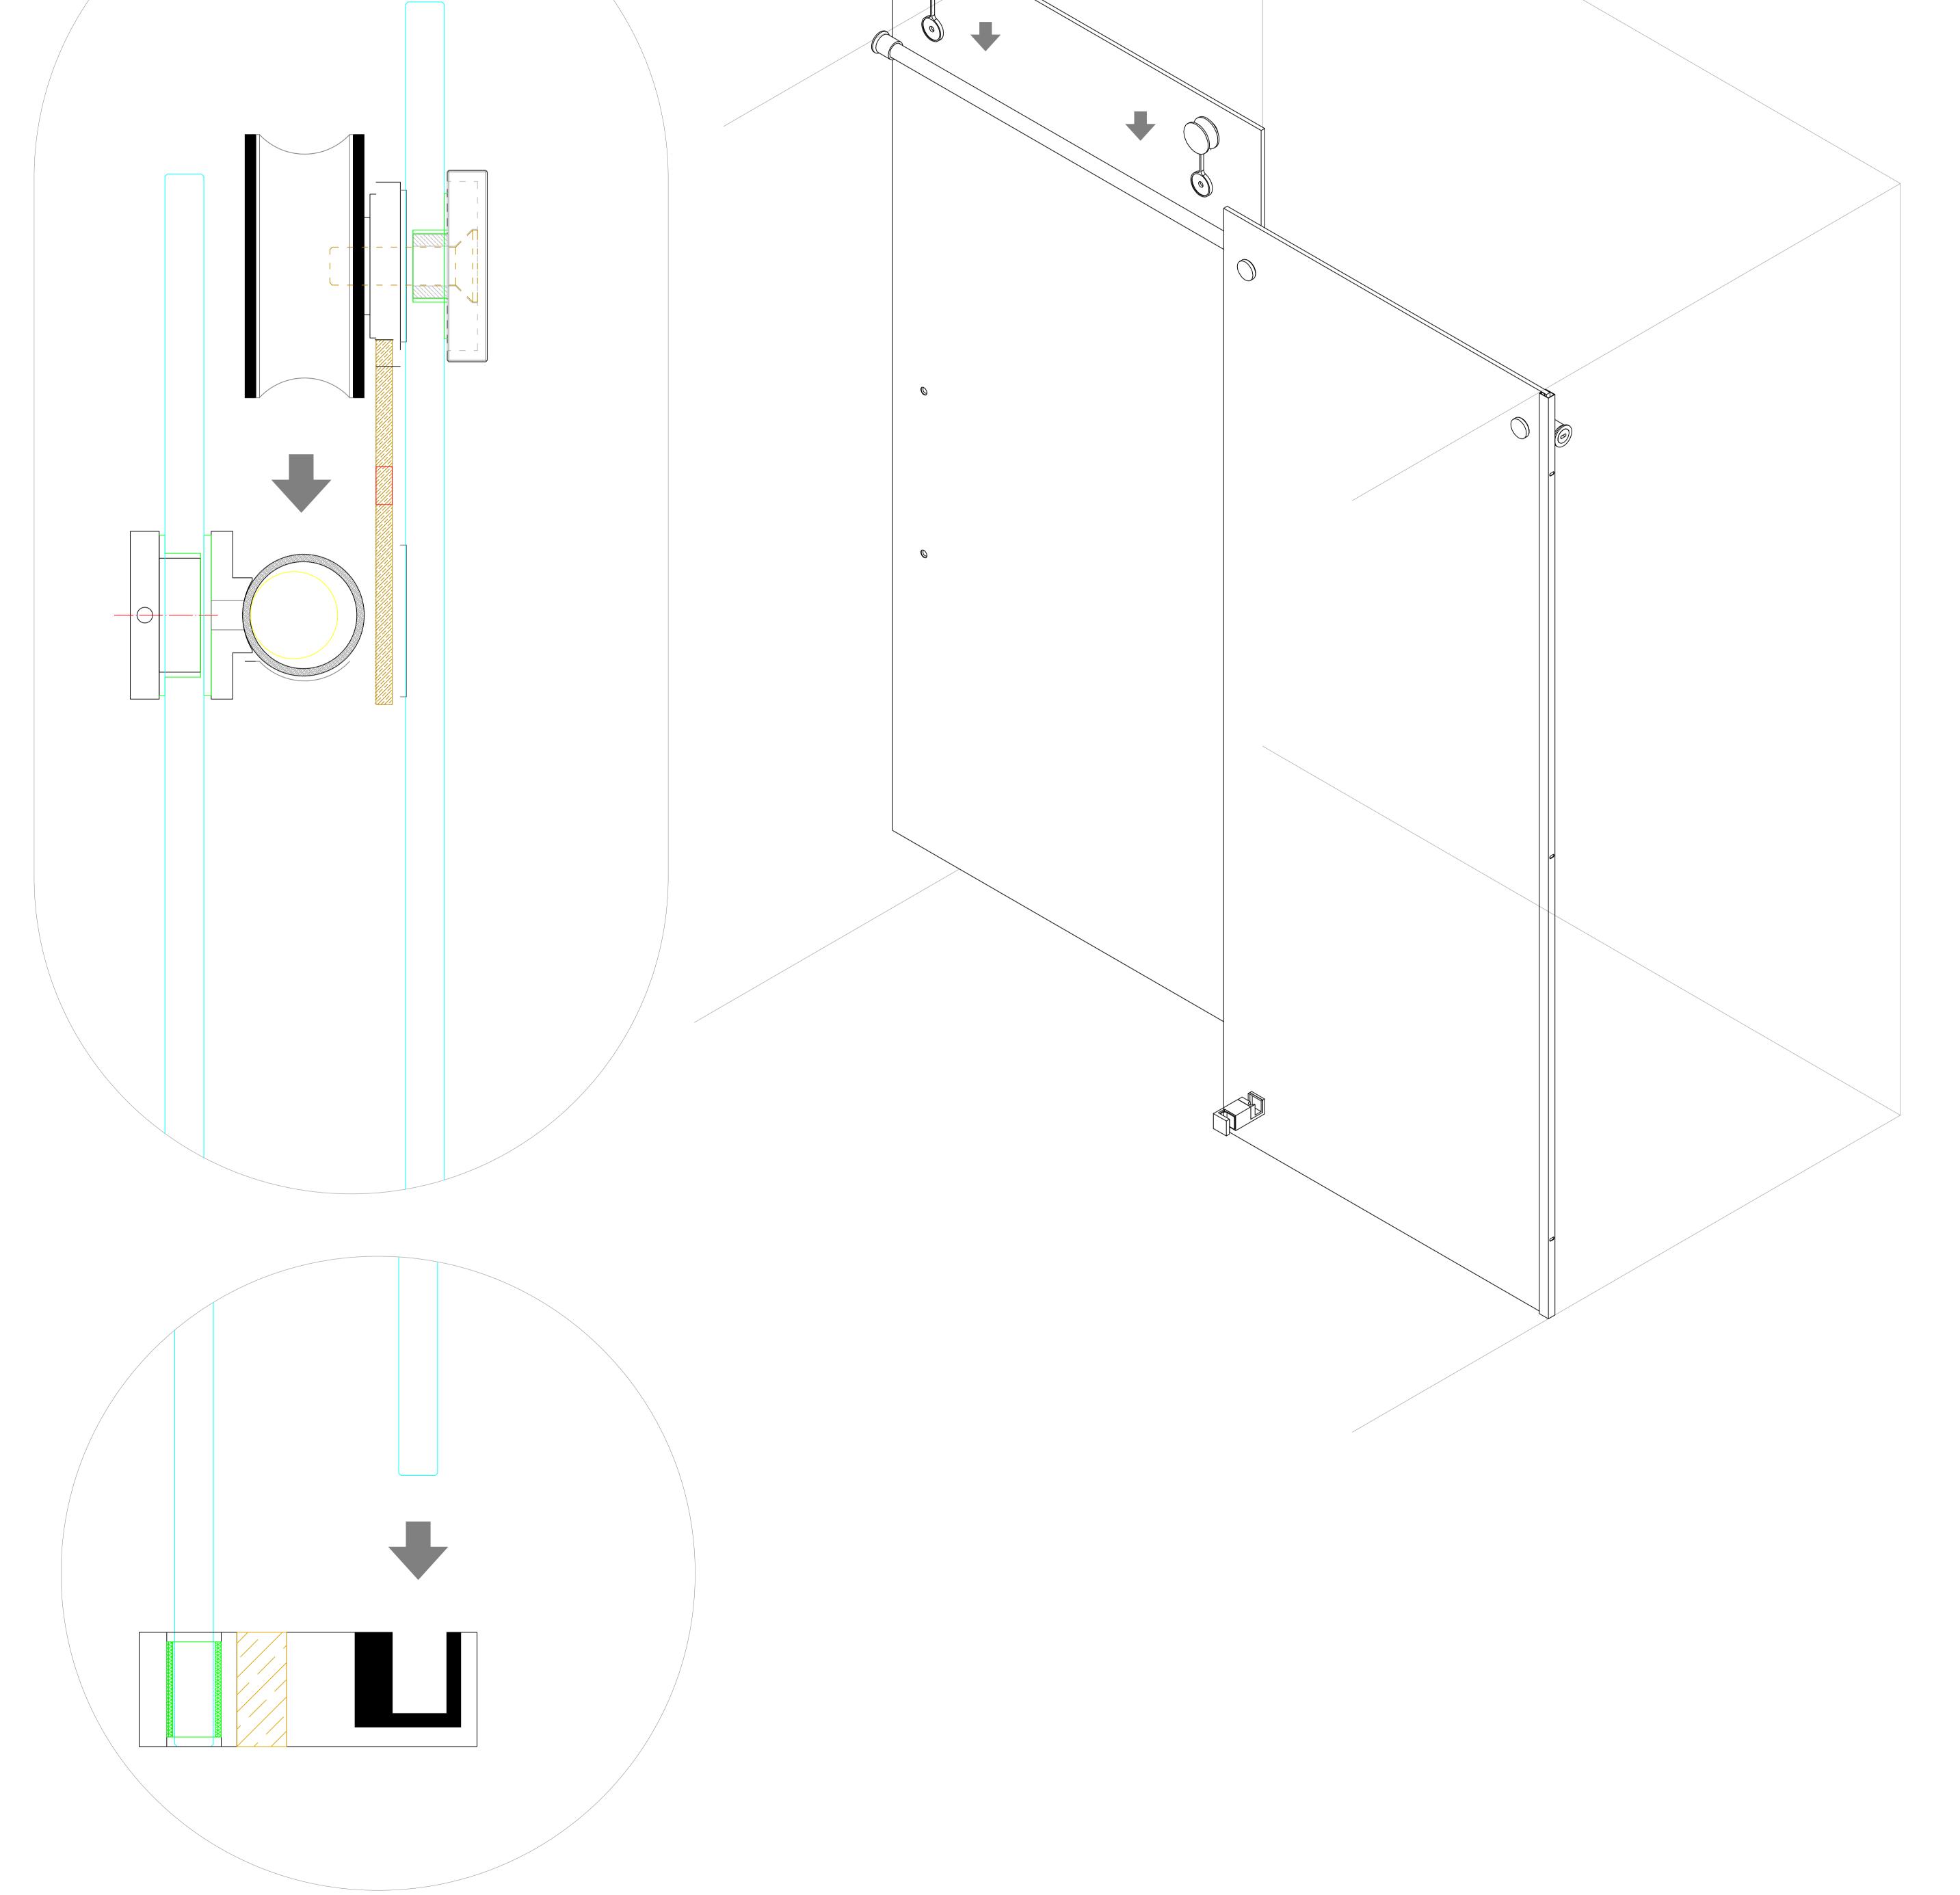


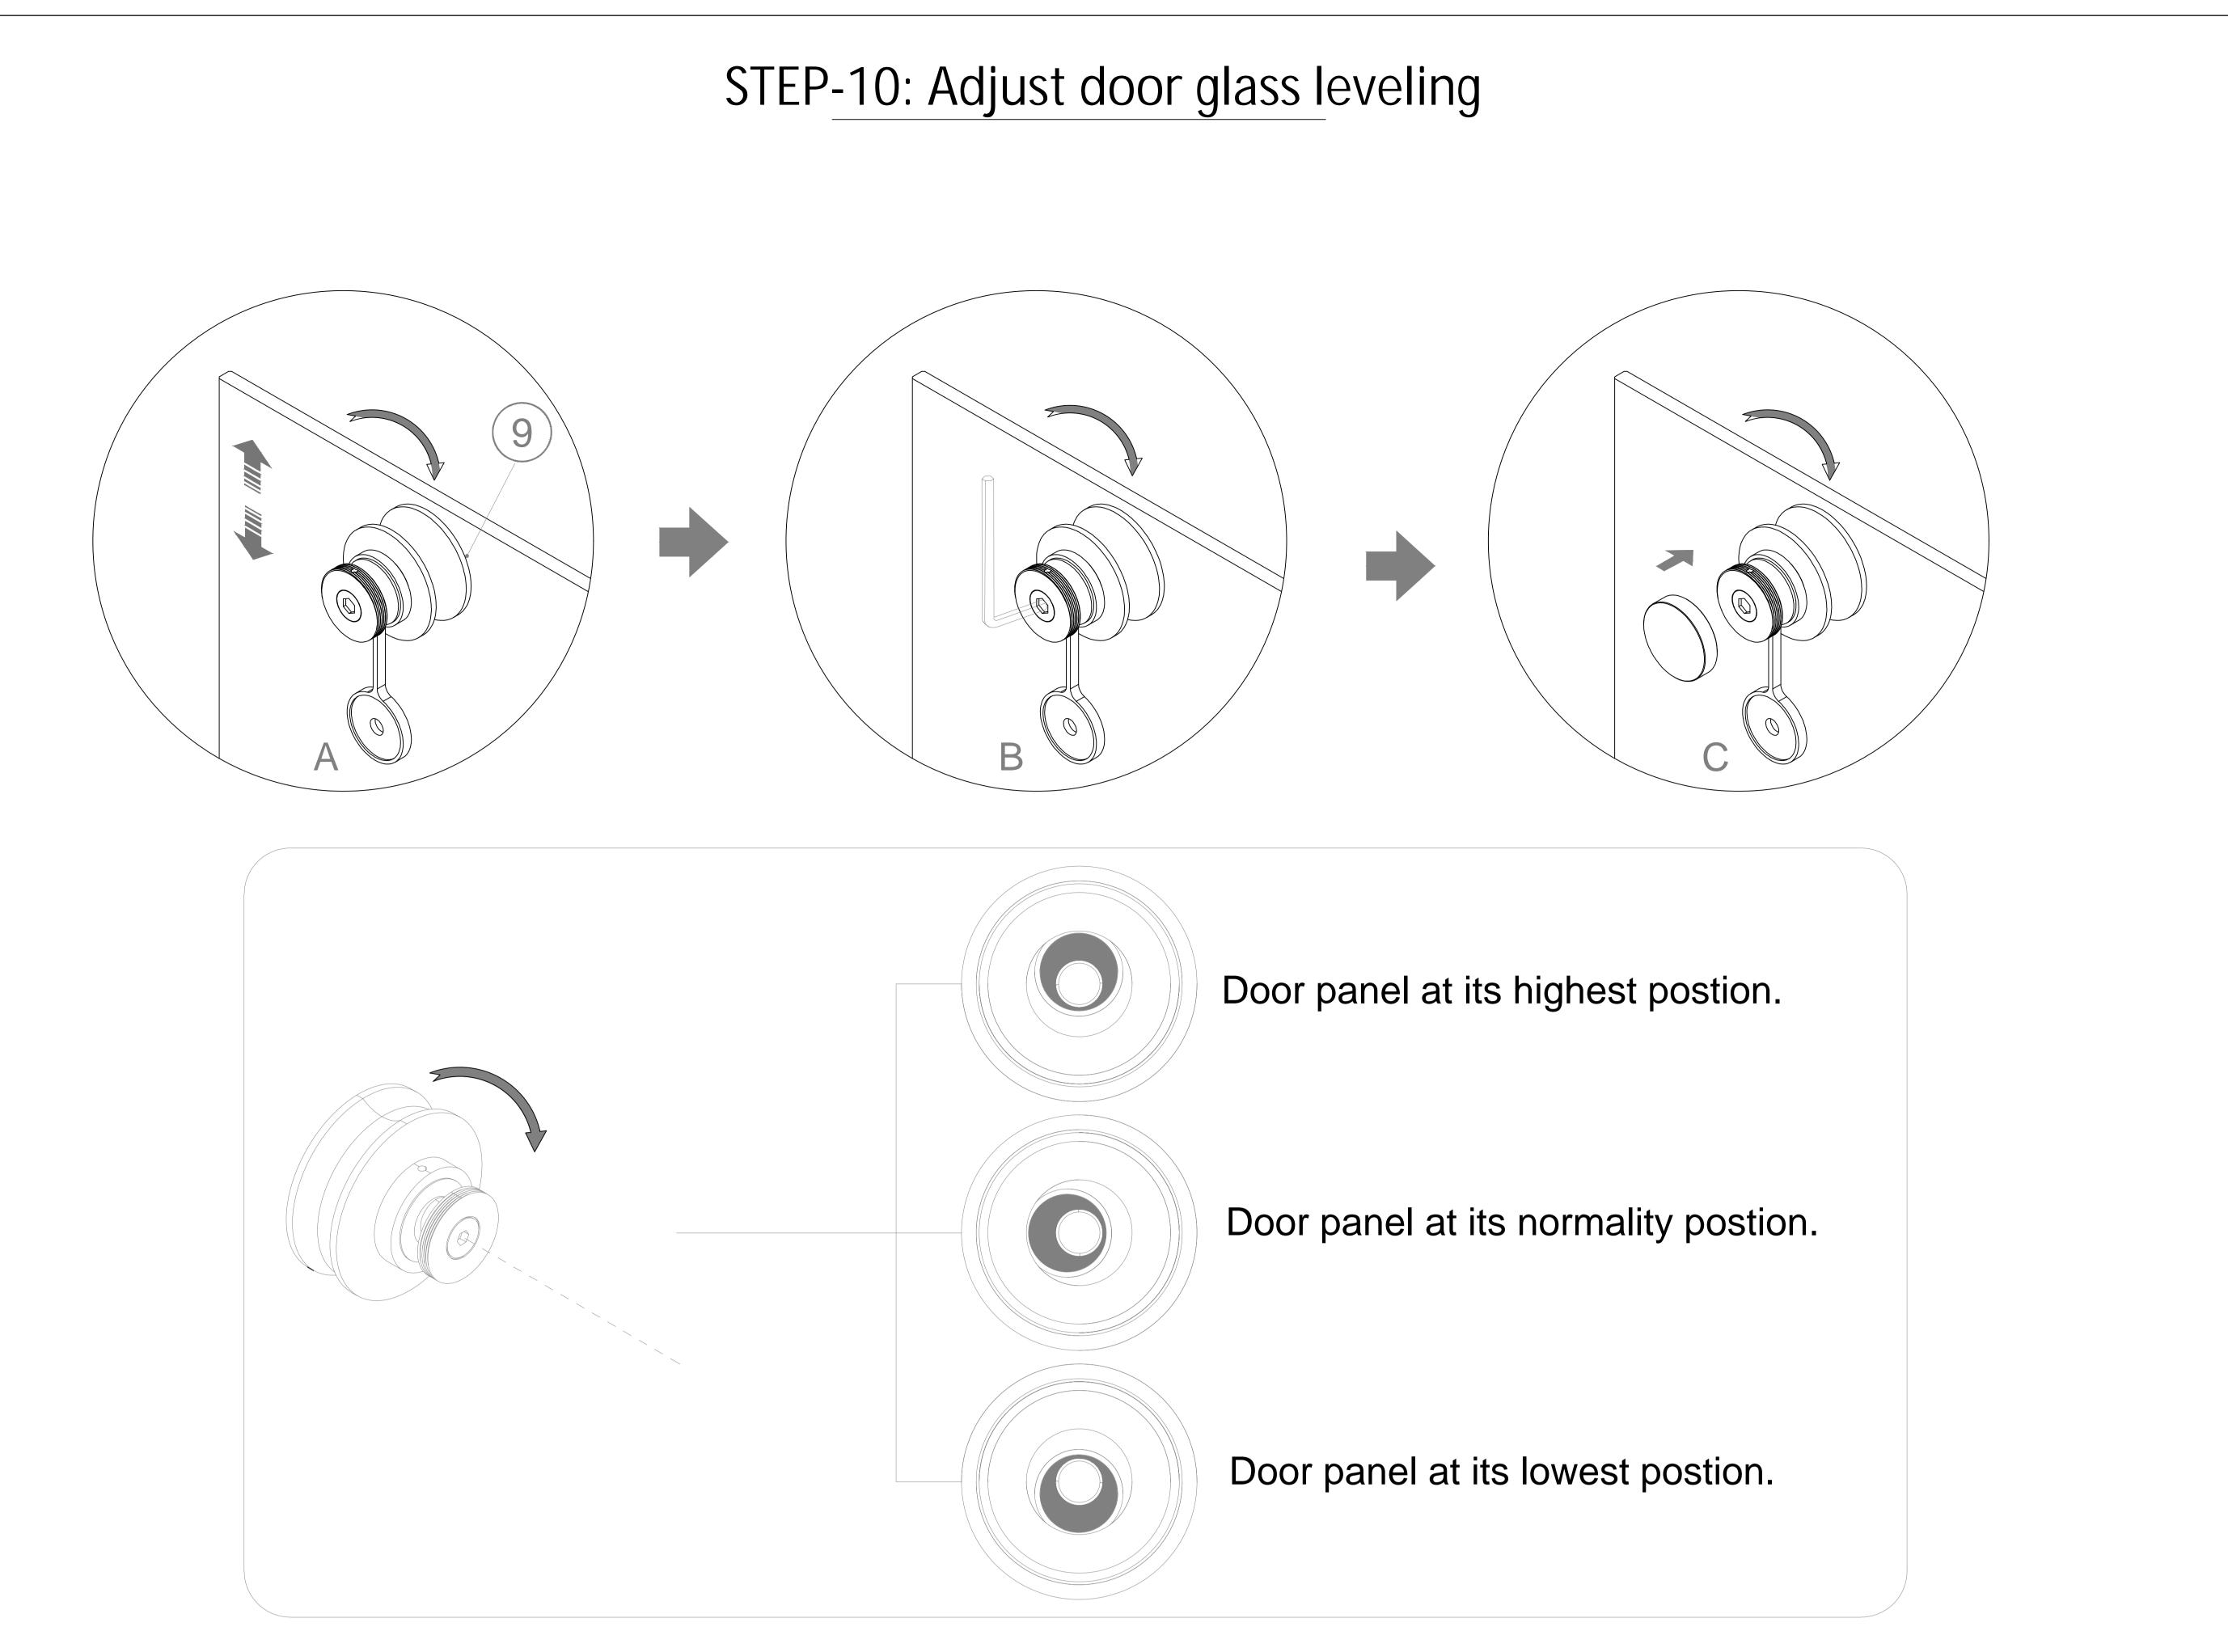

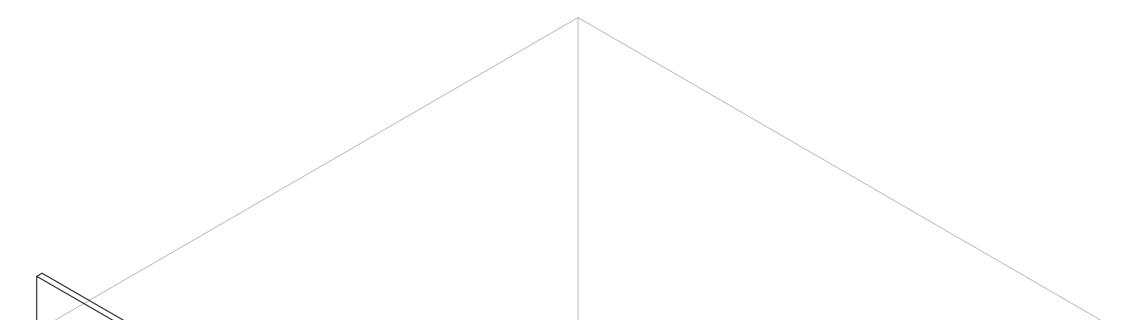


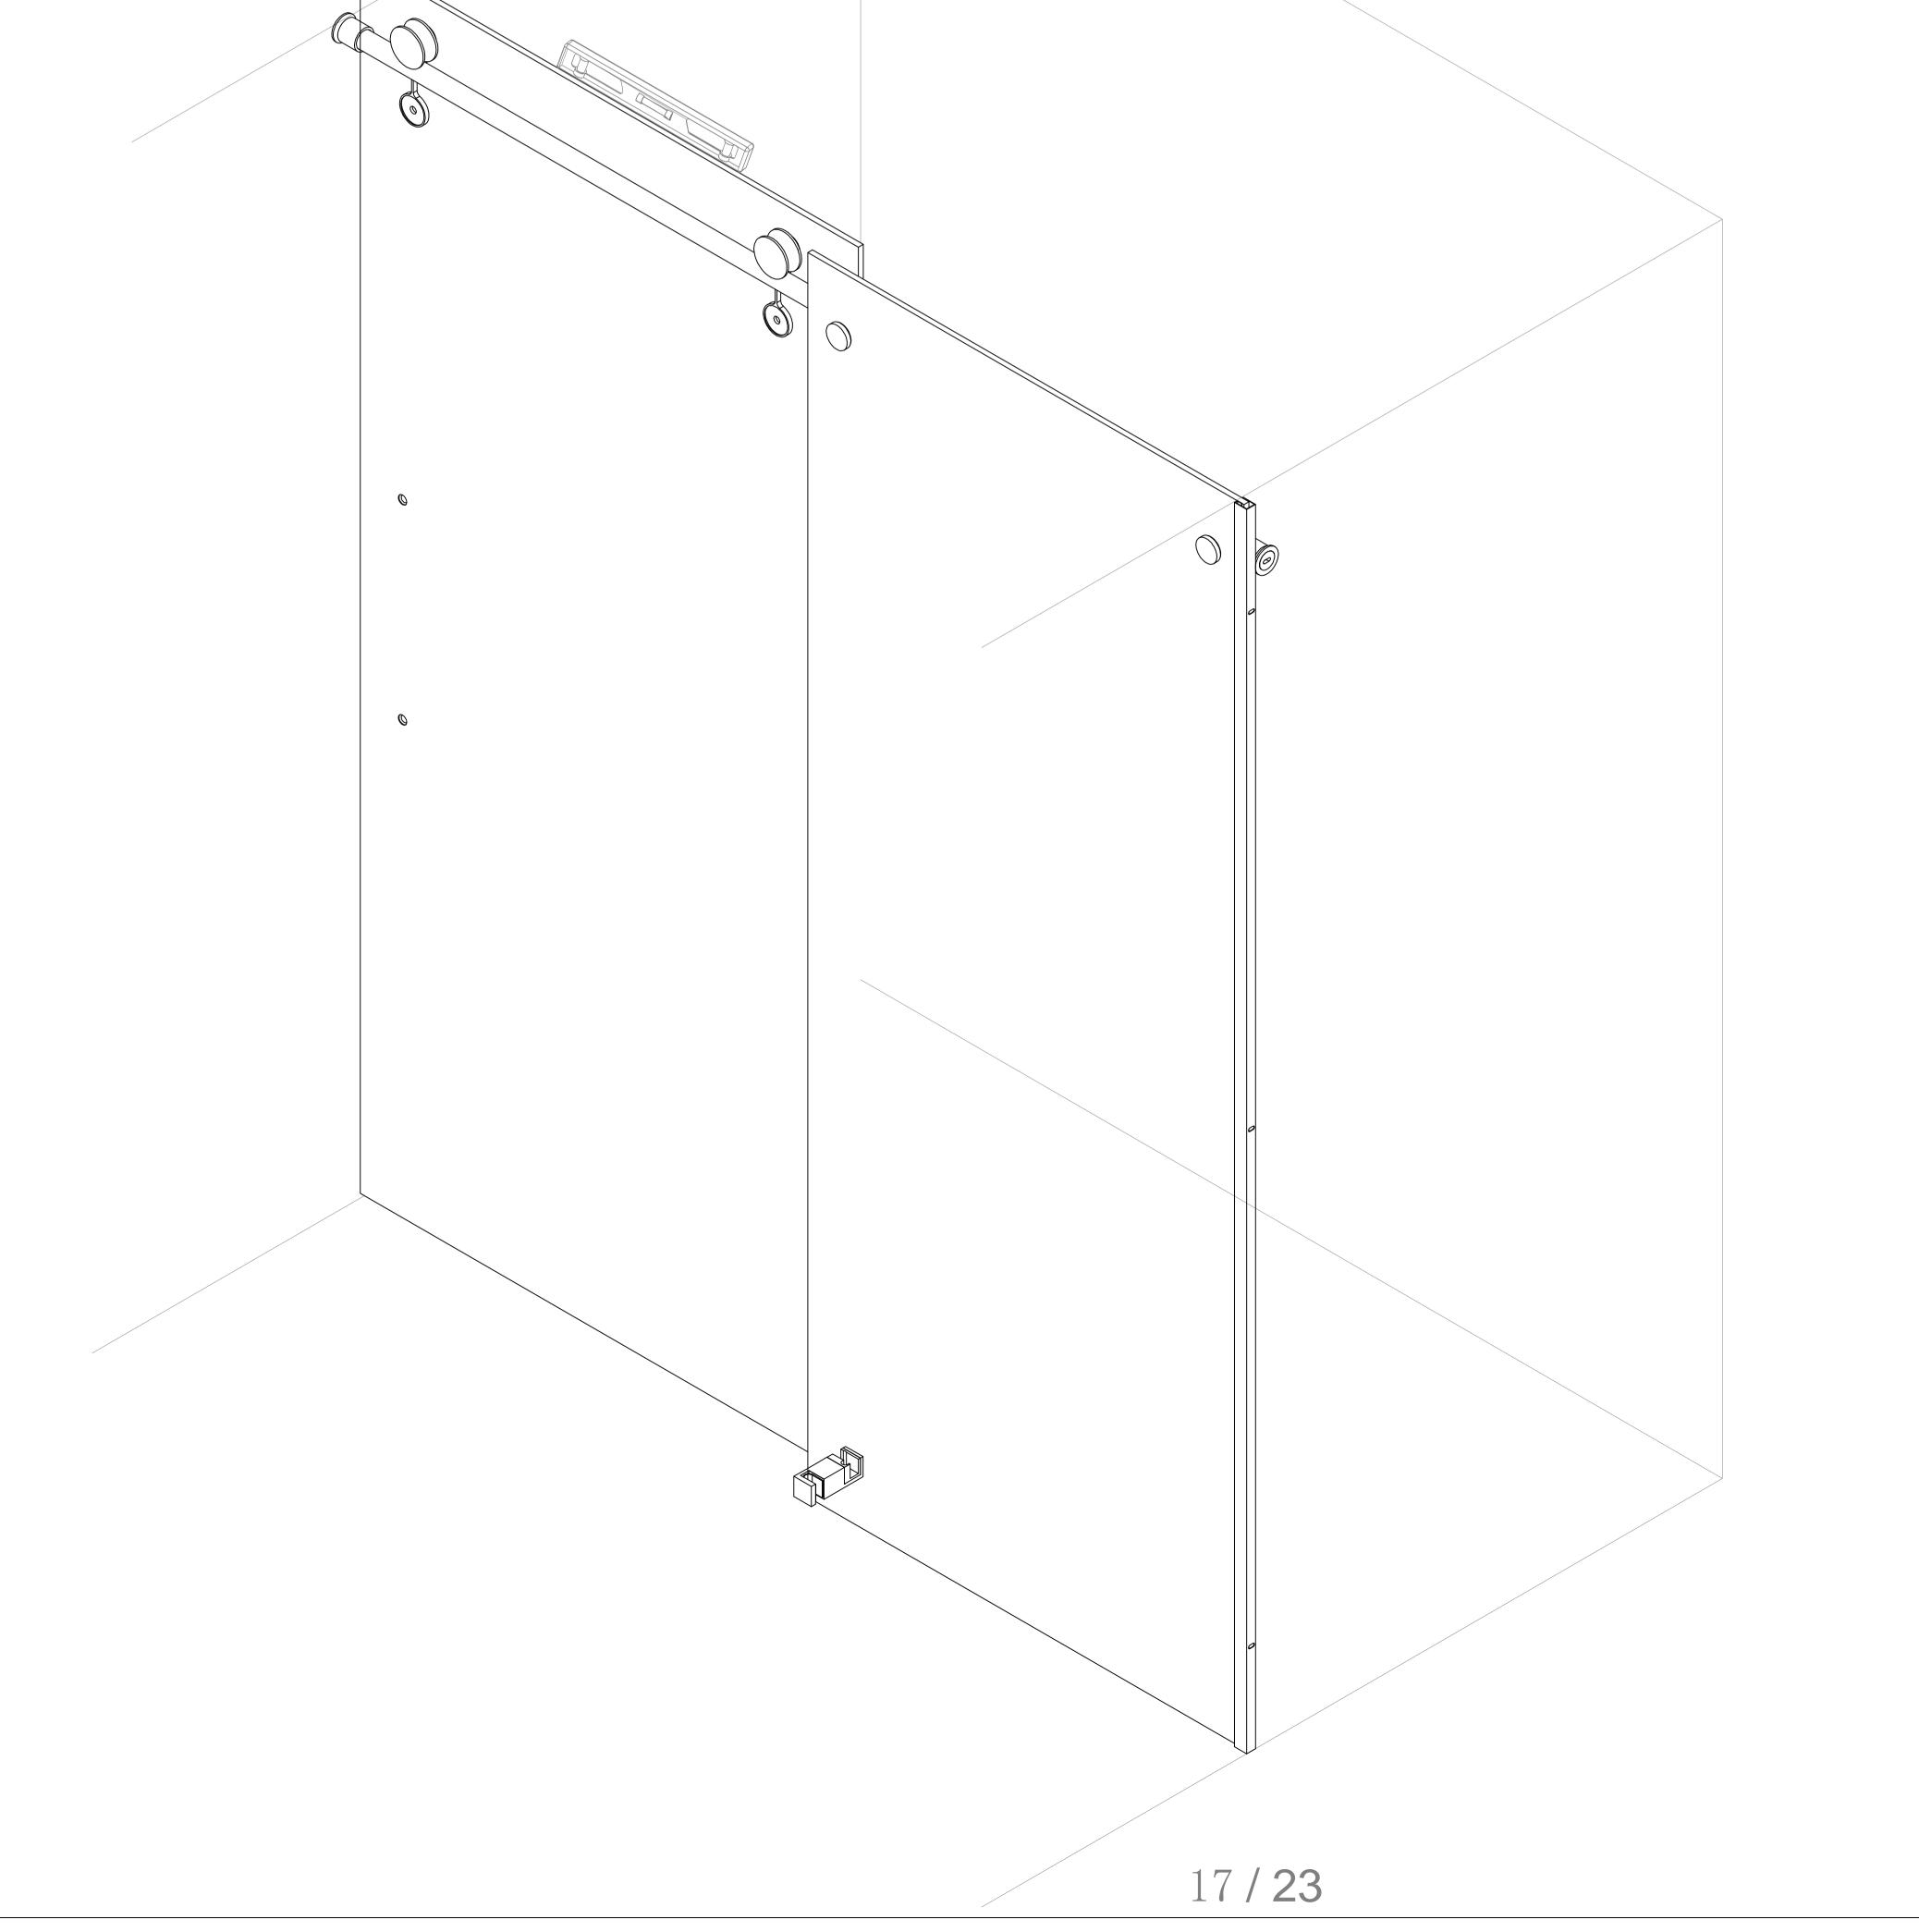



STEP-11: Installation of pulley block lower assembly

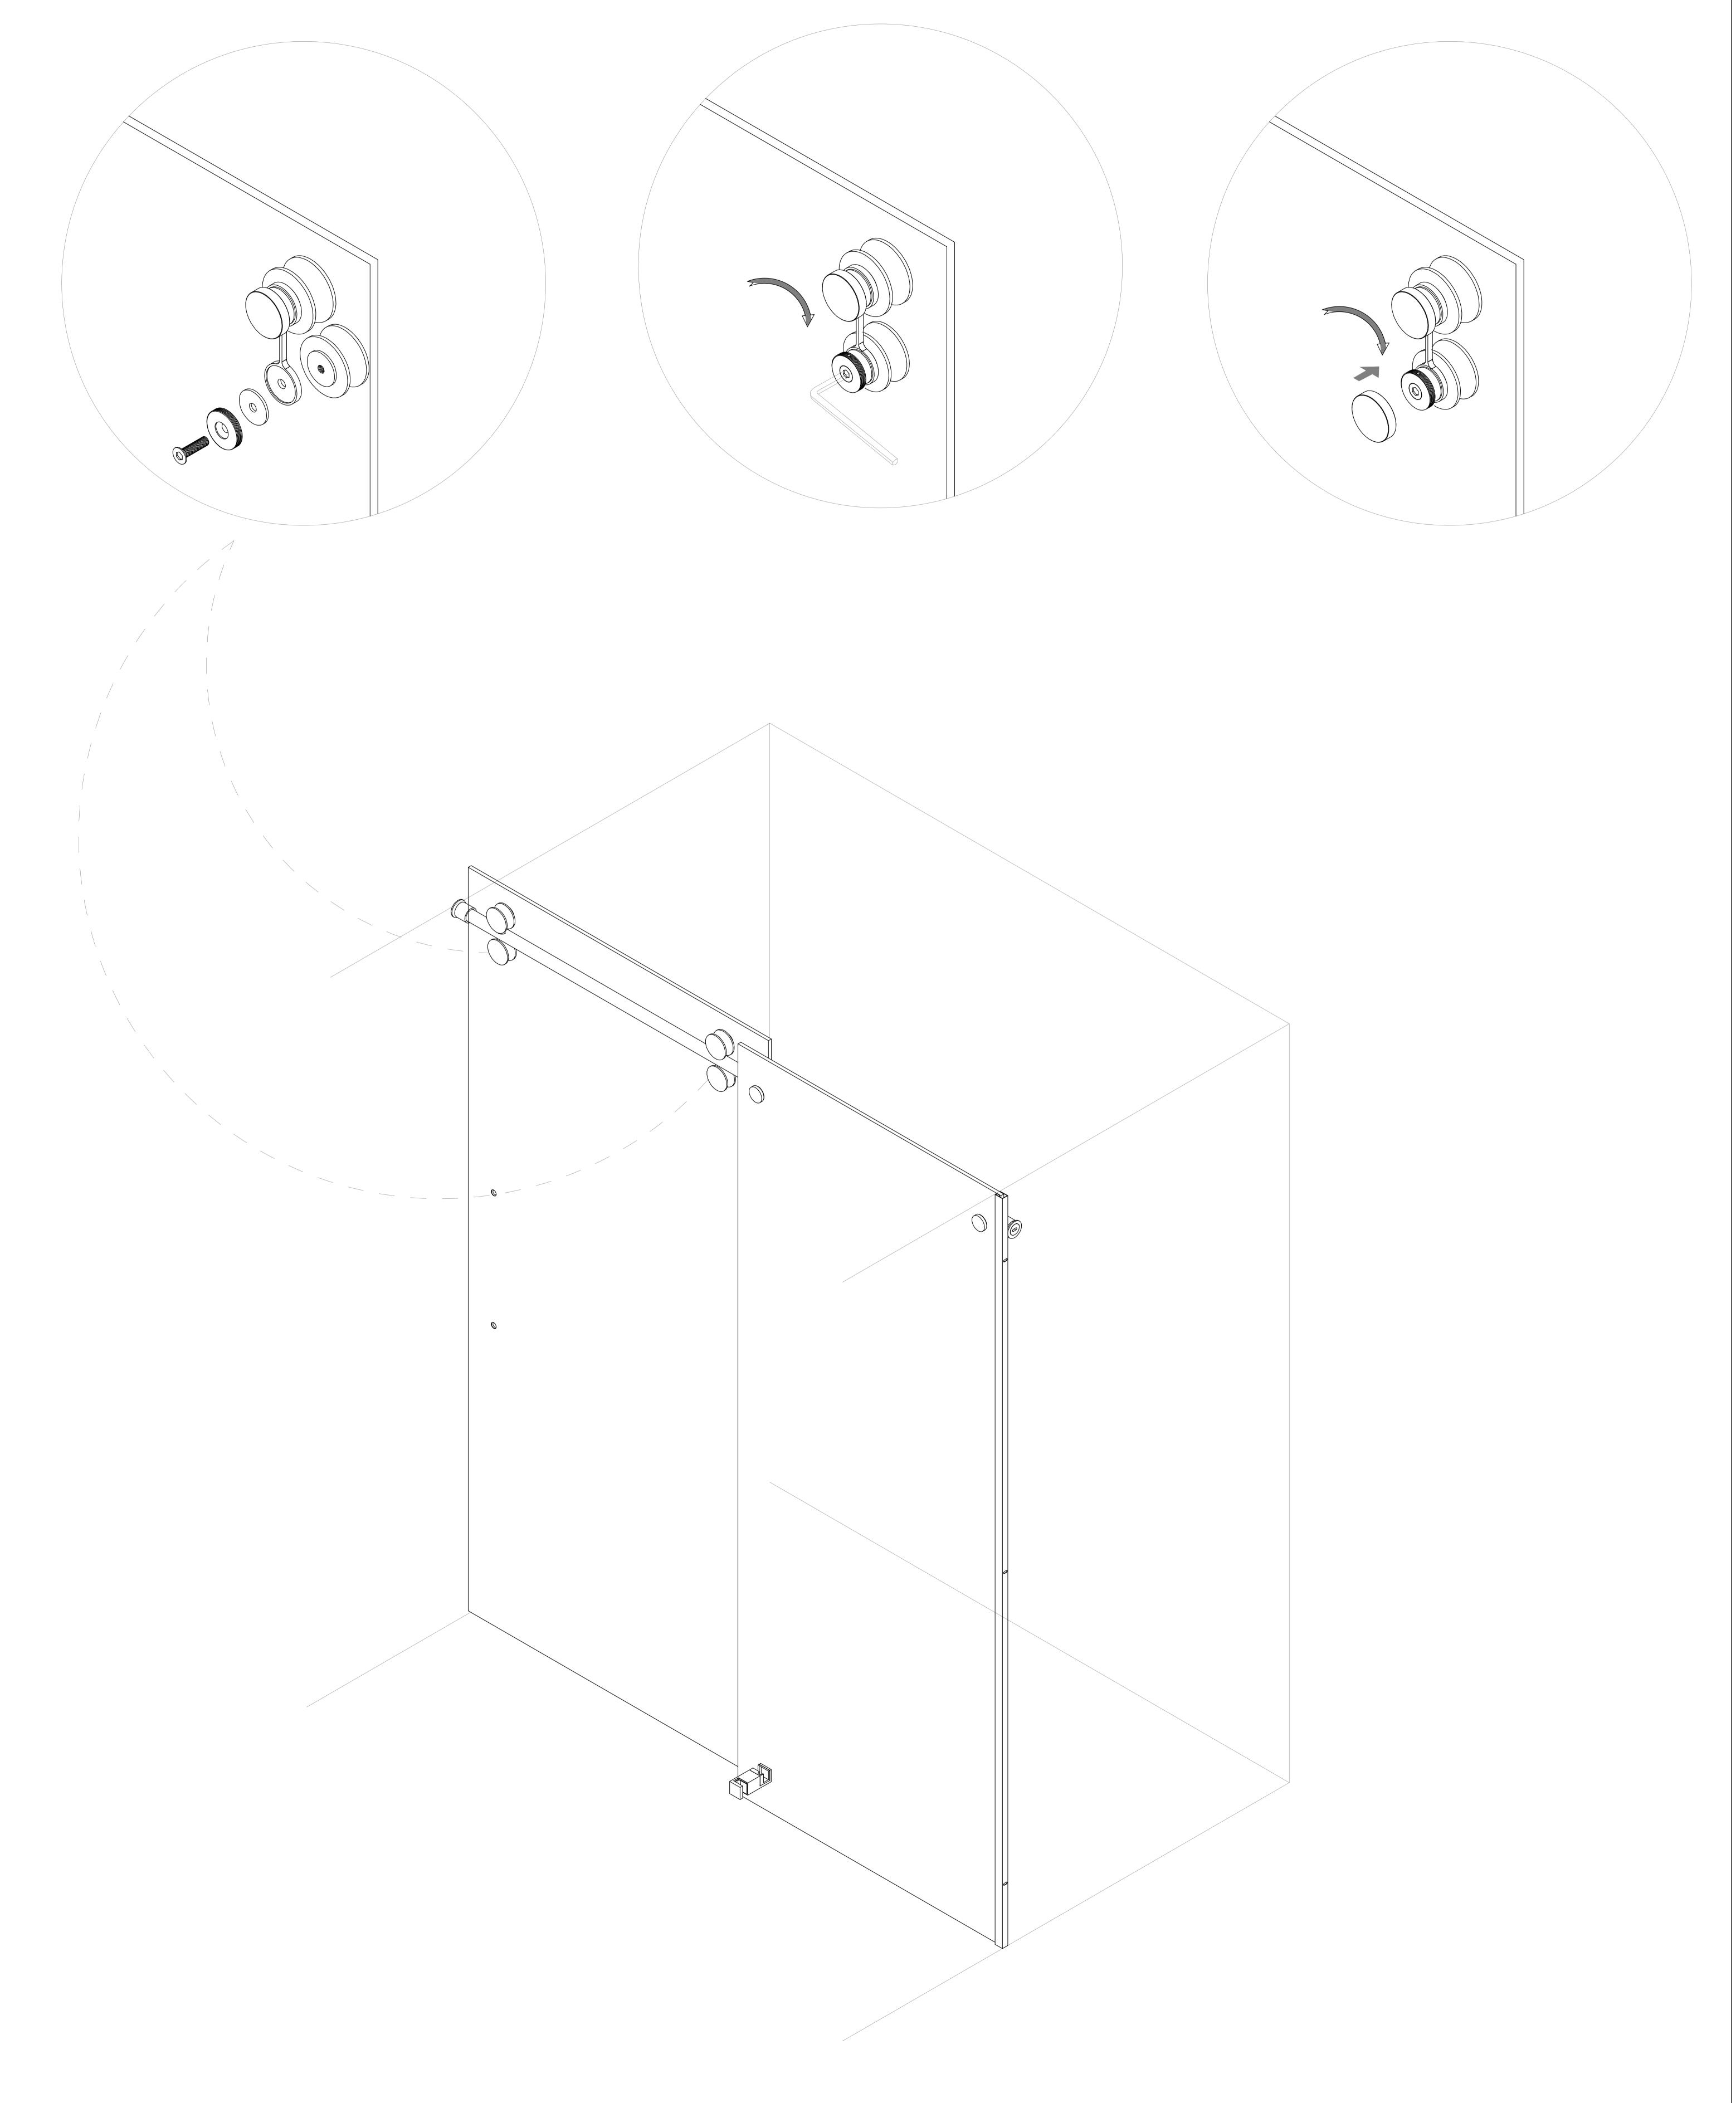


STEP-12: Installation of adhesive tape

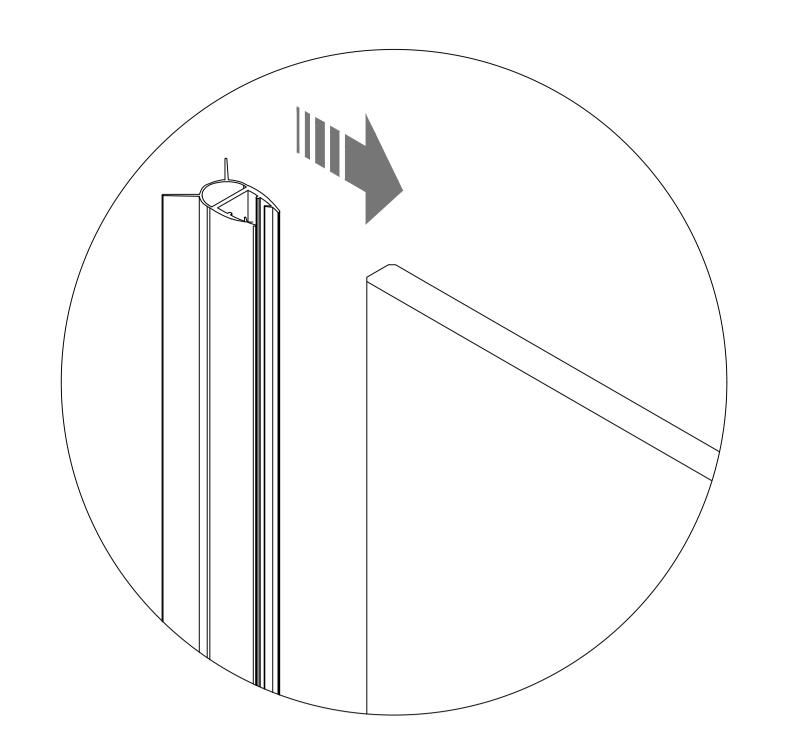

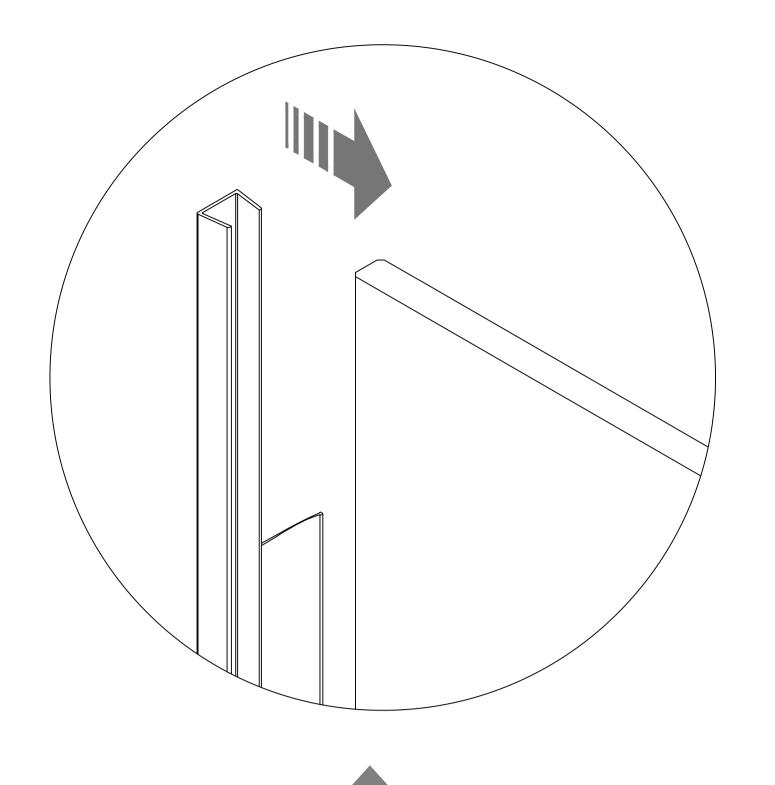


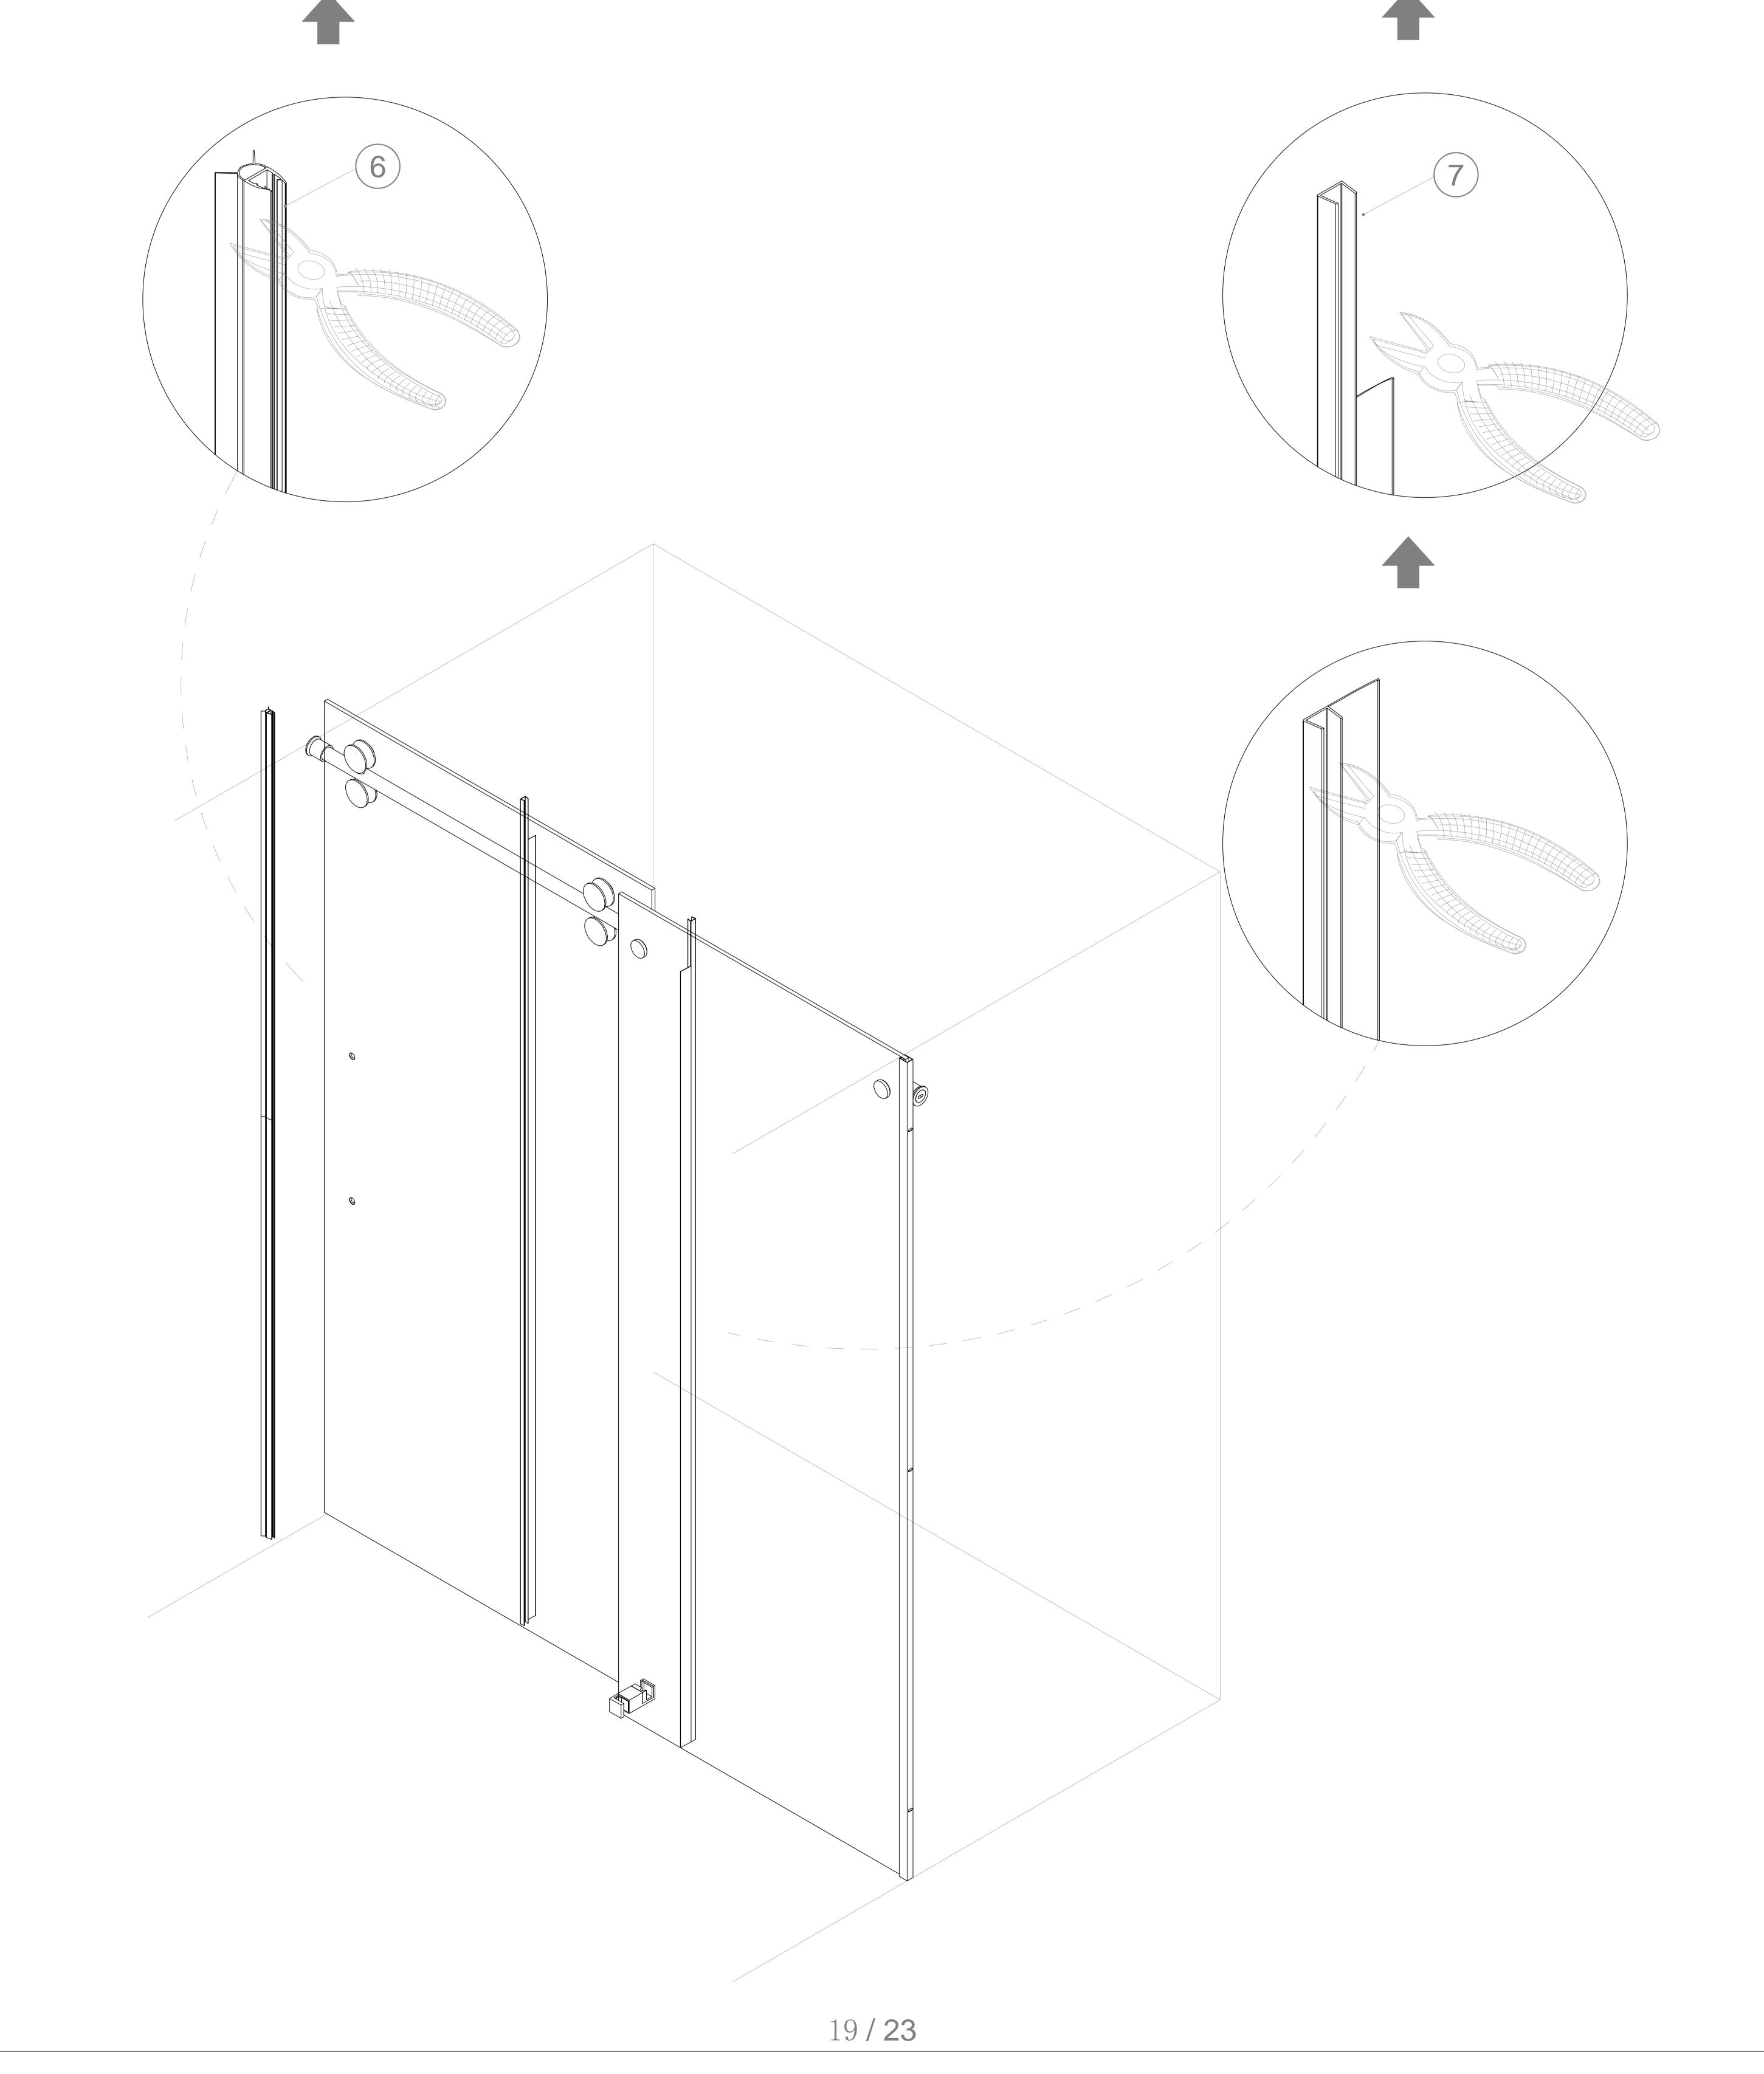




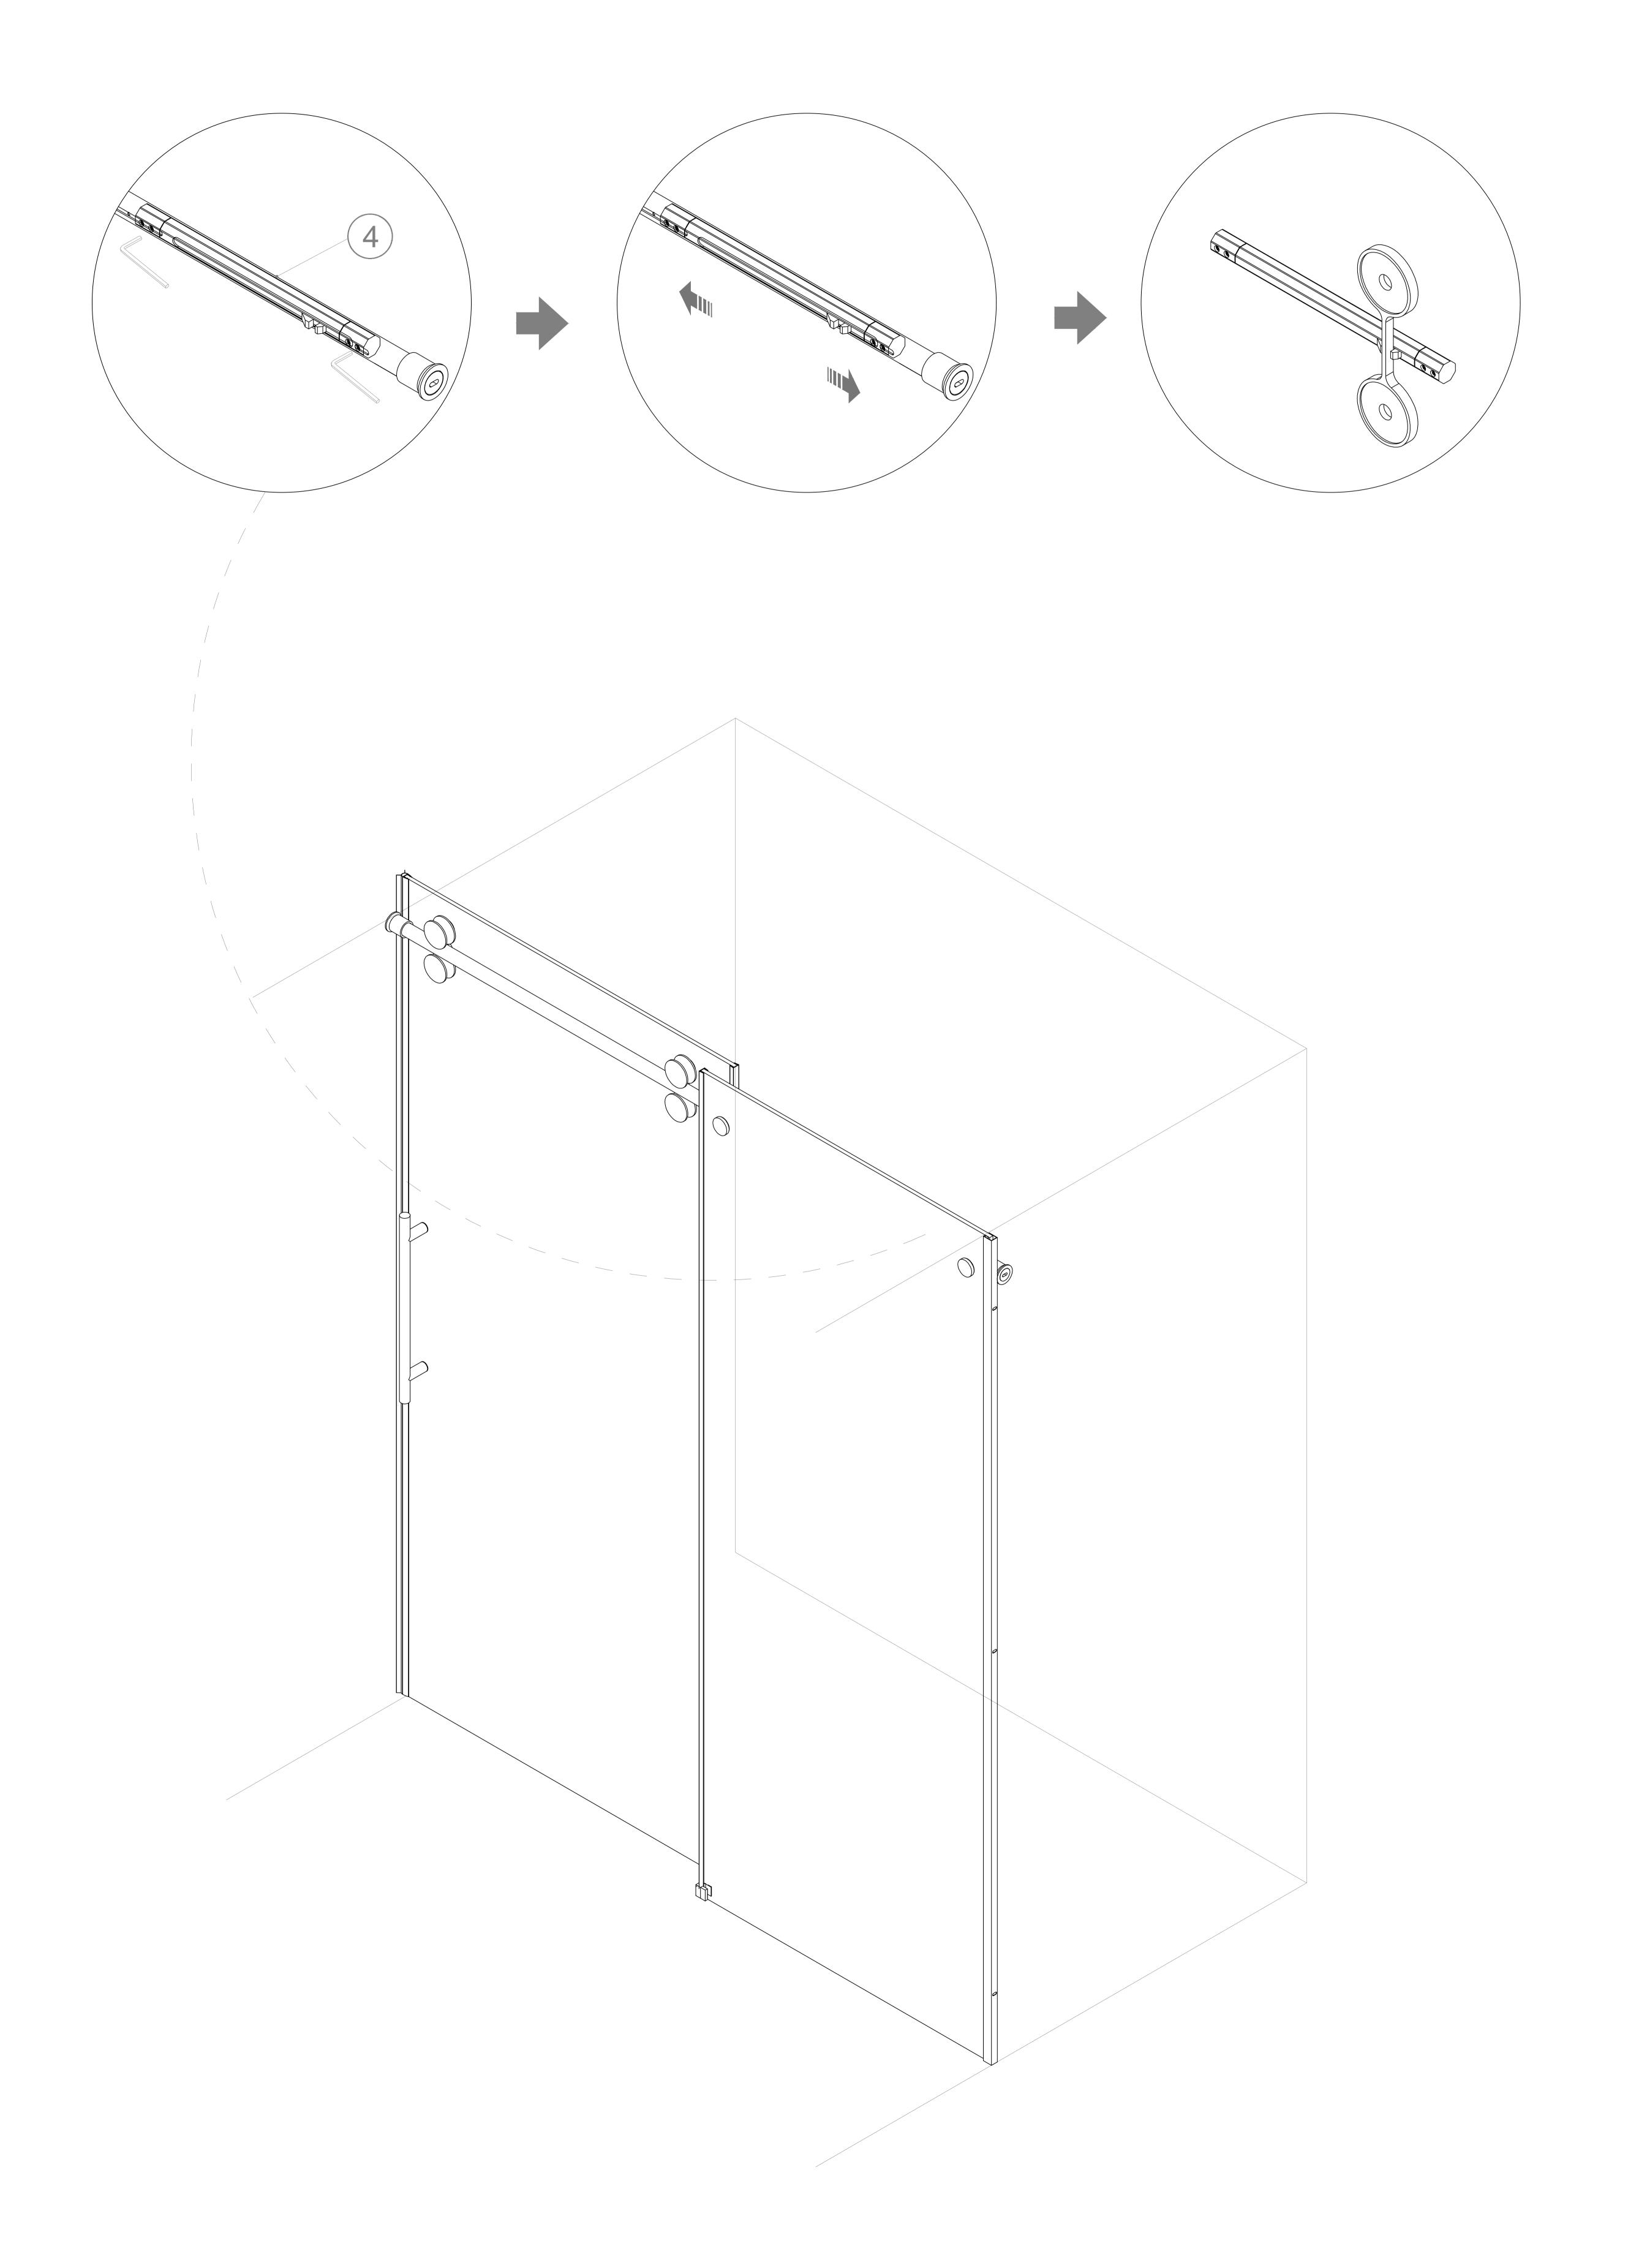



STEP-14: Installation of lower water barrier

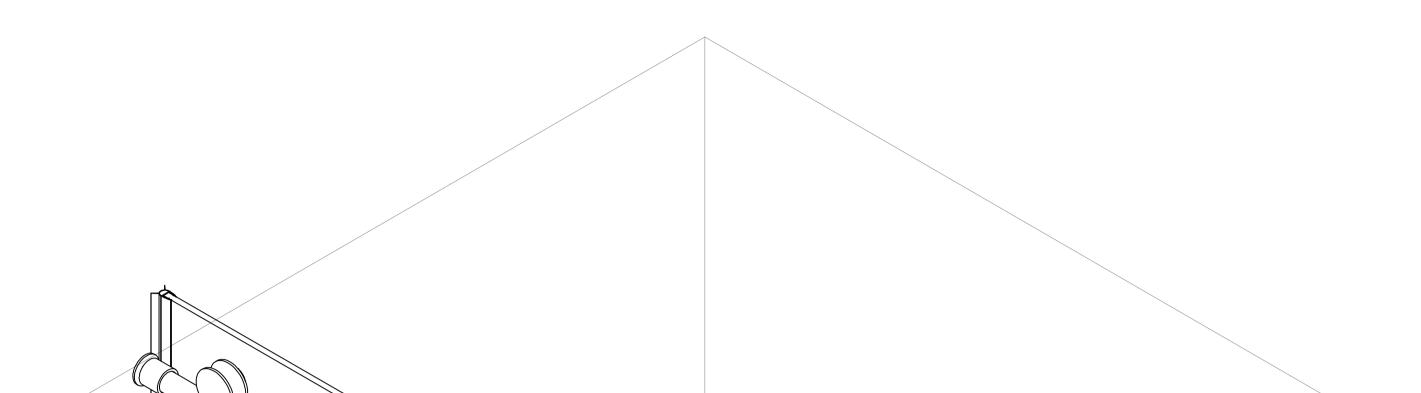

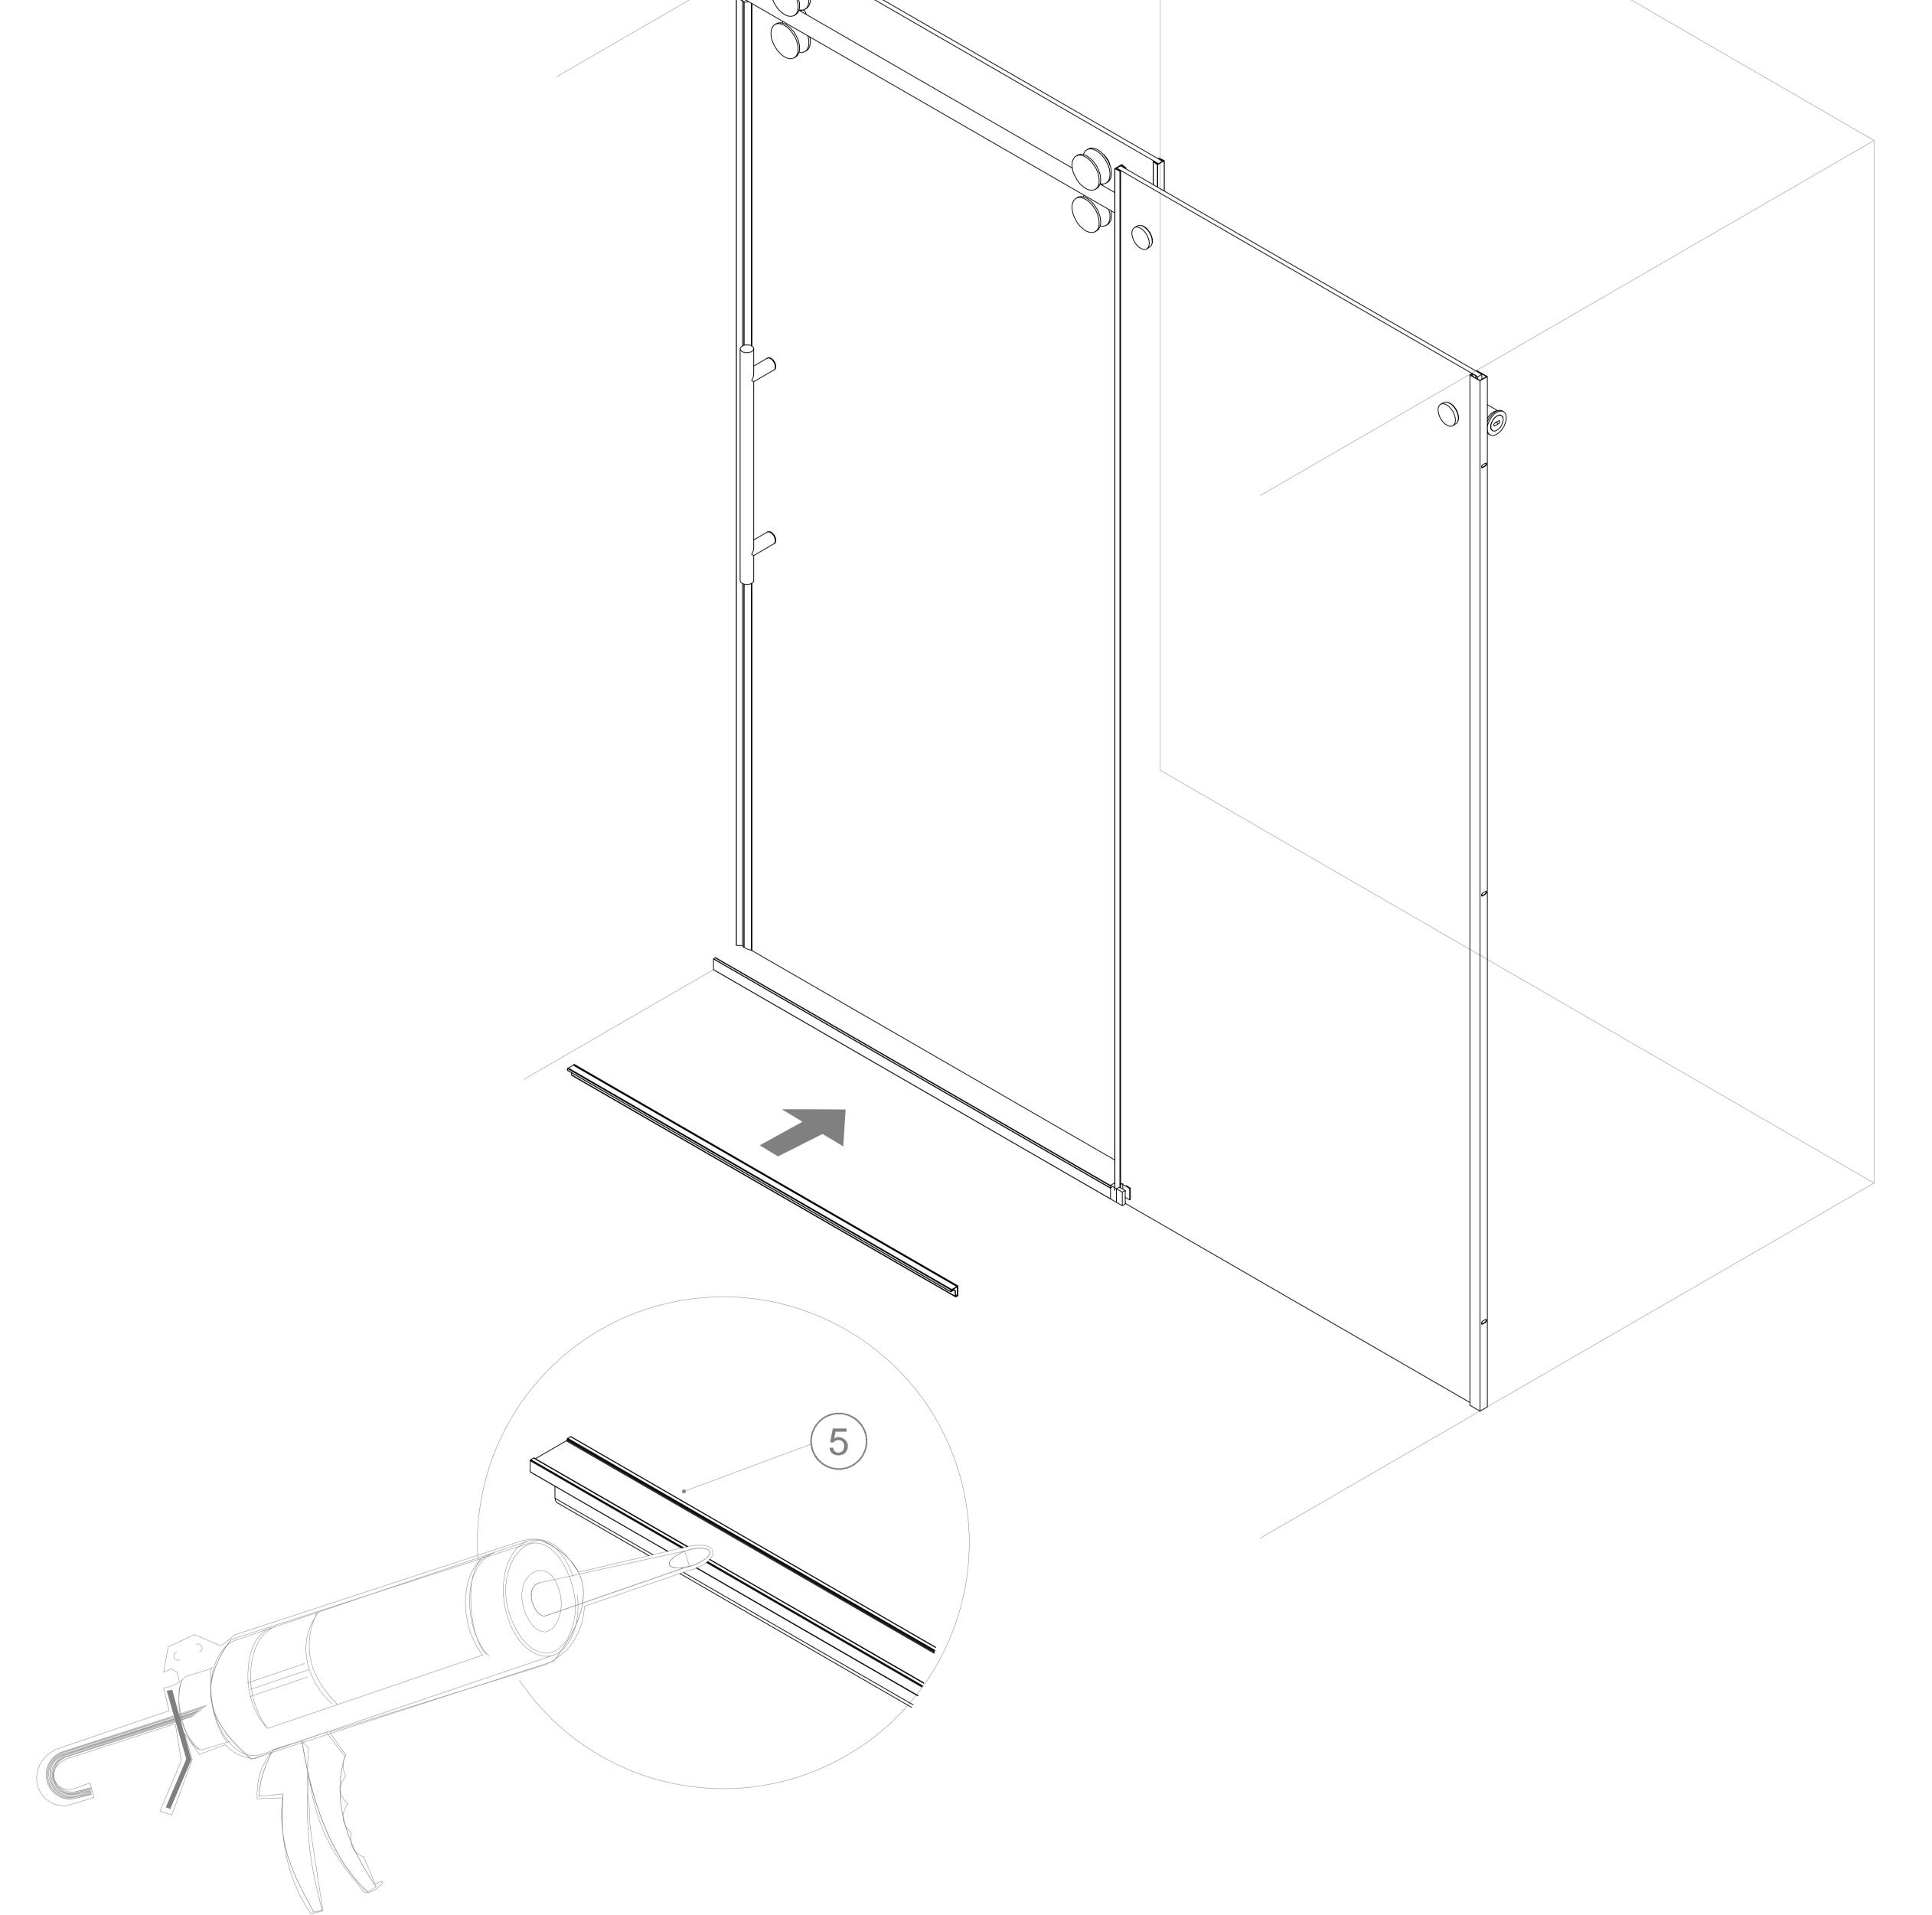



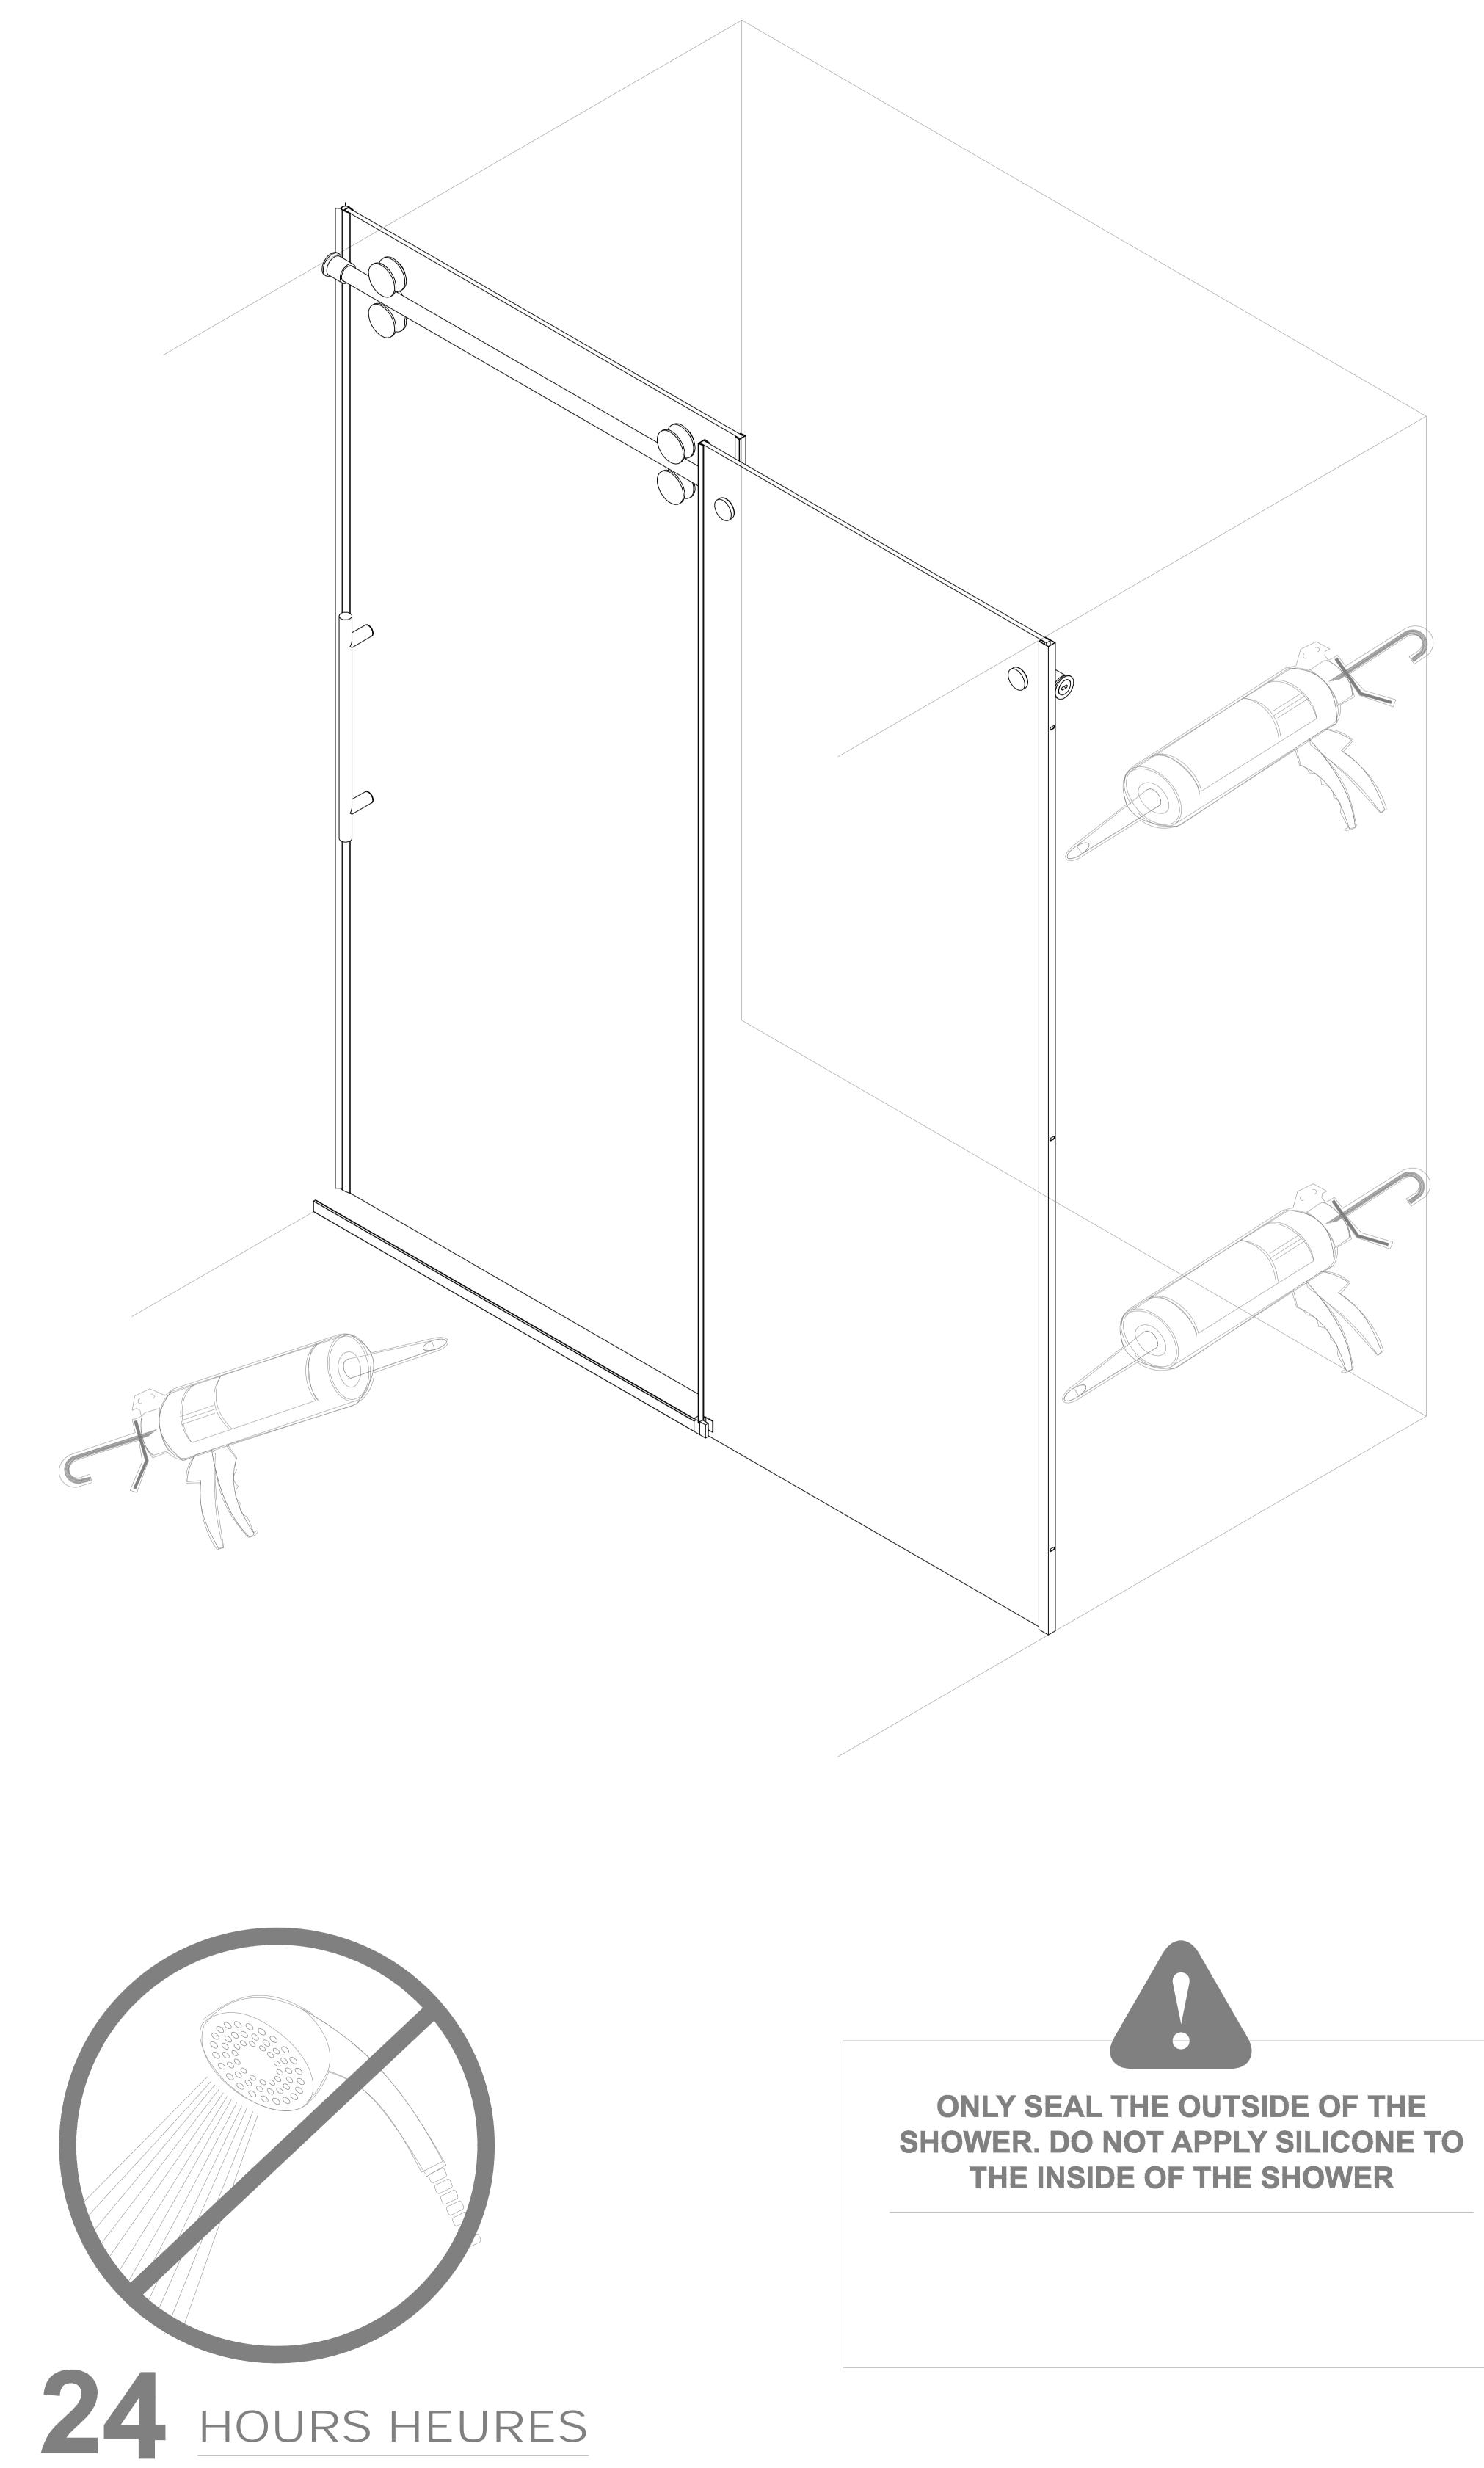

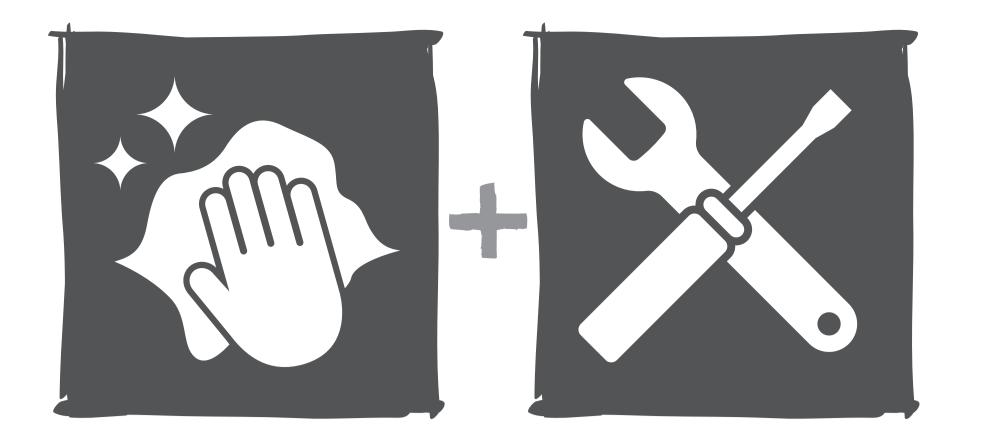

Care & Maintenance

The golden rules for care

NOTE: Use warm soapy water and a soft damp cloth to keep the glass clean. Wipe dry with a clean cloth. Glass cleaner can be used if required. Scourers, abrasives and chemical cleaners can damage the glass and pattern, and should not be used.

In hard water areas, insoluble lime salts may be deposited on the glass. If this is allowed to build up it becomes increasingly difficult to remove and looks unsightly. Regular cleaning will minimize this effect.

Do not attempt to cut the glass.

Do not strike the glass with hard or pointed items.

Regularly check moving parts such as rollers and hinges to ensure they are secure and adjusted correctly. Tighten and adjust where required. Also check all sealed joints to ensure seal has not deteriorated. Re-seal if required.