



Old Moulding

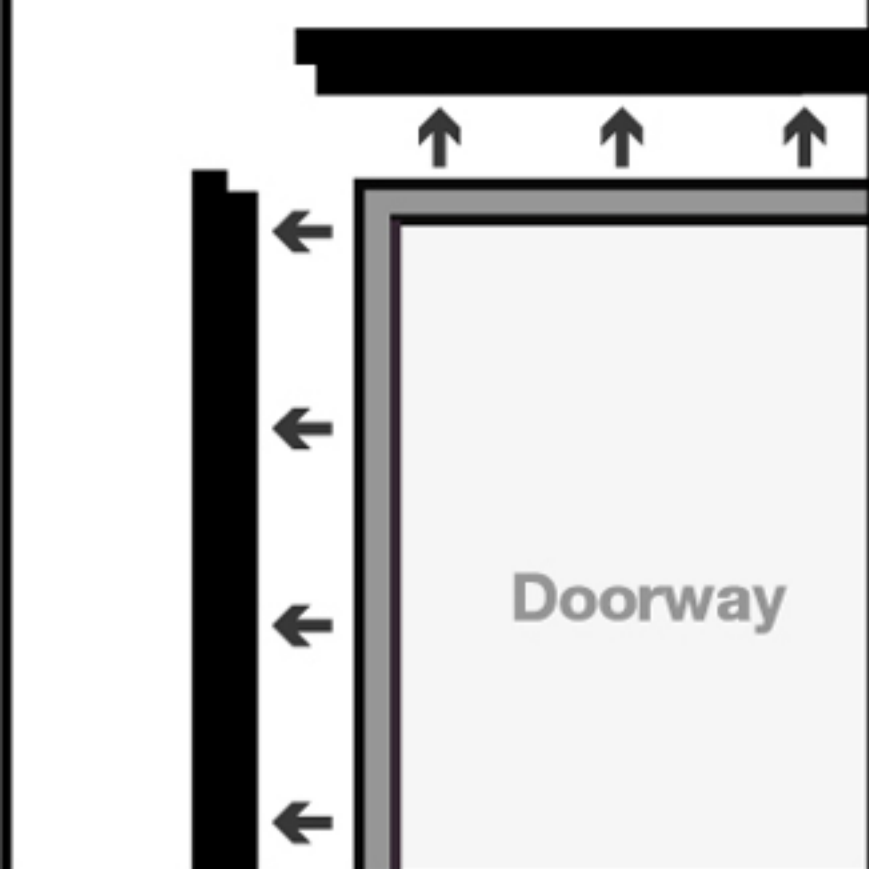

## Step 1

Remove the existing jamb(s), if necessary, and measure the opening. The opening should be approximately 2-3/4 in / 69.9mm wider and 2 in / 50.8mm taller than the door.


Door Jamb (3)

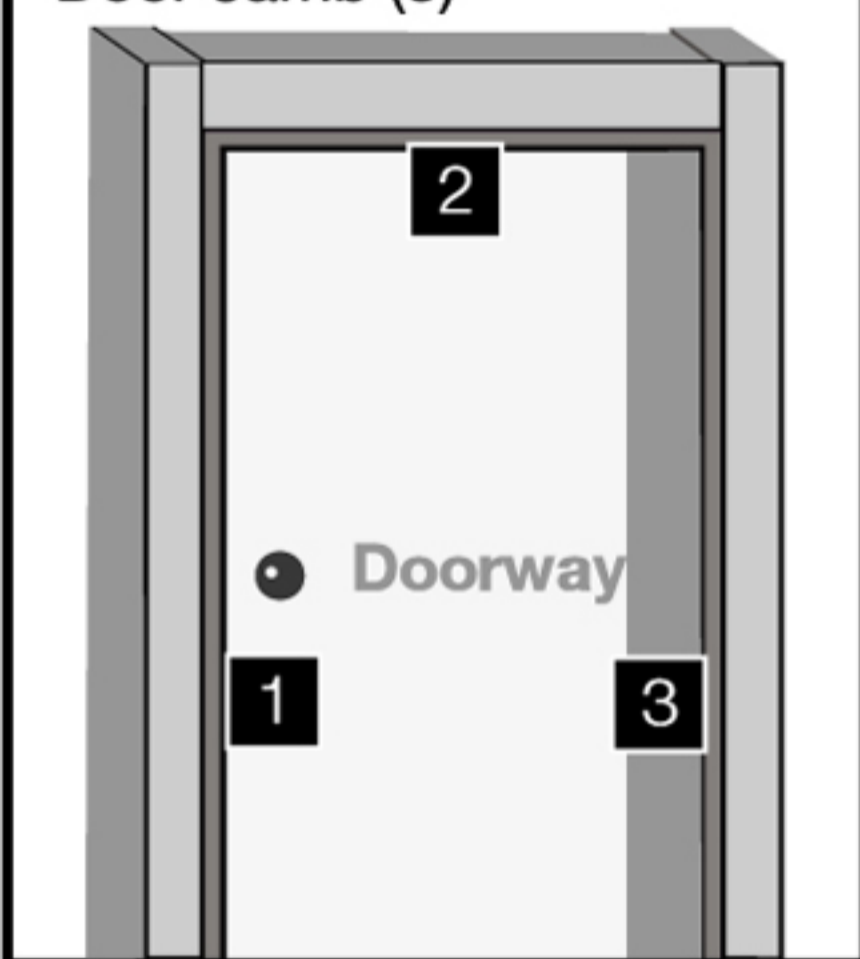

## Step 2

Cut the jambs to fit the opening of the door and assemble as shown. Fit into door opening and shim as necessary, then attach with finishing nails. Complete the installation by applying casing around the door opening.

## Quick Tip

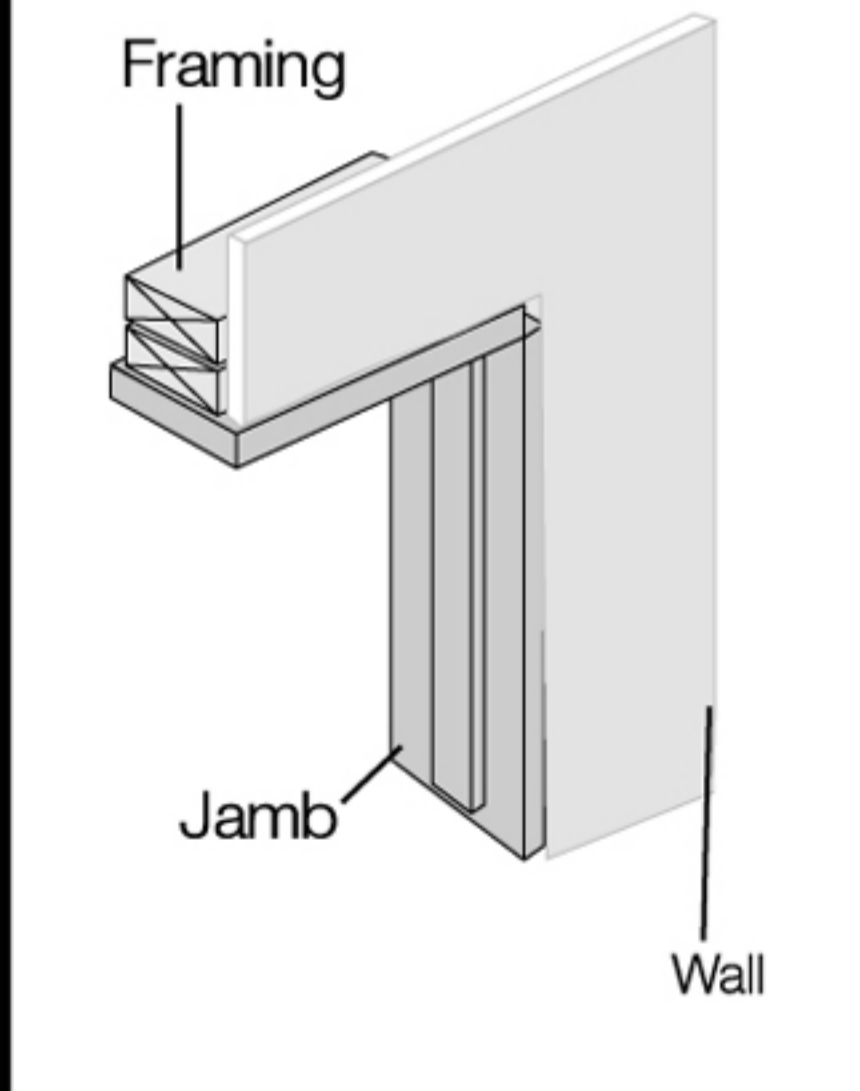

1. To prevent splitting, keep nails back at least 1 in / 25.4mm from the ends of the door jamb.
2. Apply a thin bead of caulking material to any joint area or door jamb side to hide joint imperfections or undulating wall spaces behind the door jamb.

3. Sanding all parts of the jamb before installation will save work when it is time to paint.