



SHOWER DOOR INSTALLATION GUIDE

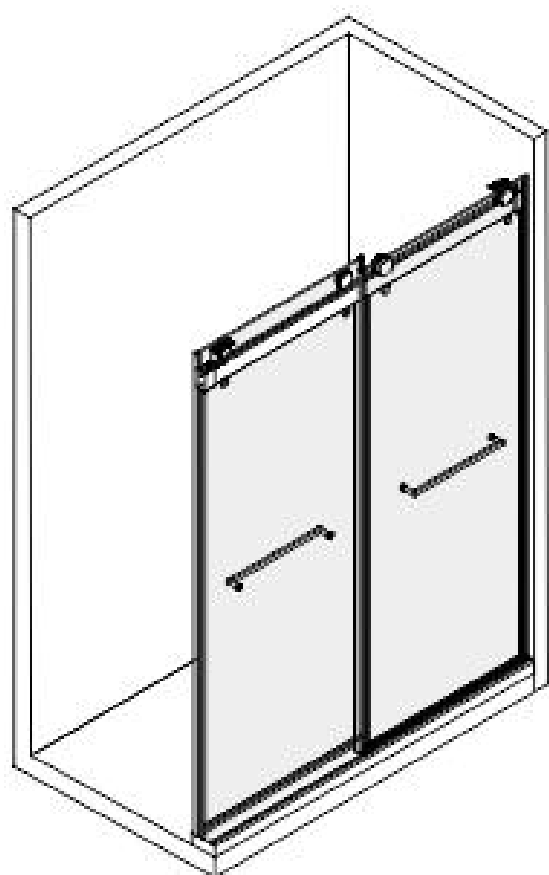





Without shower base
(P2~11)

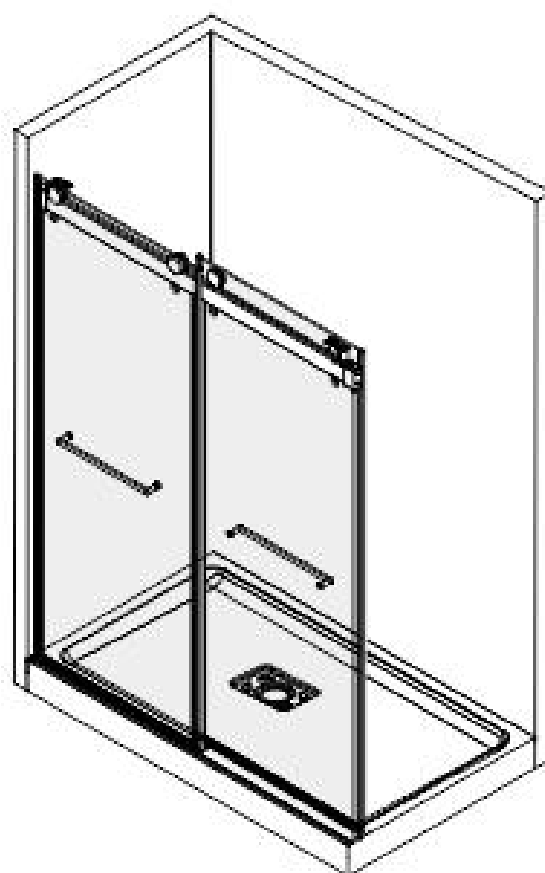

With shower base
(P12~22)








IMPORTANT - Please read and follow all warnings and instructions before using this product. Injury can result from improper use. Save this documents.

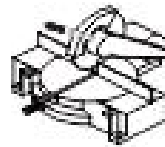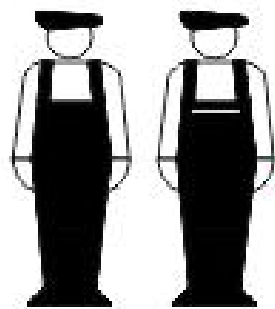


03




06

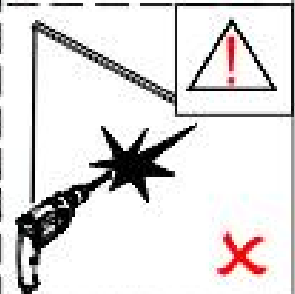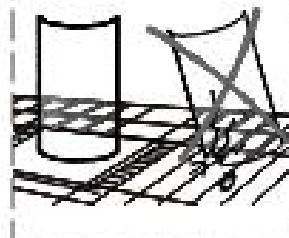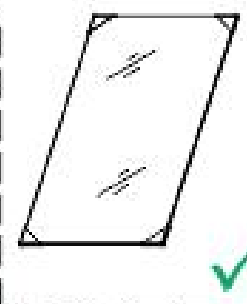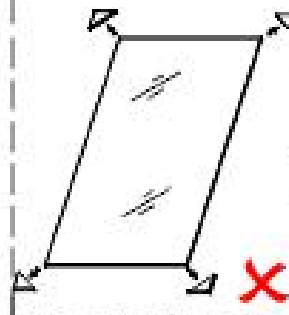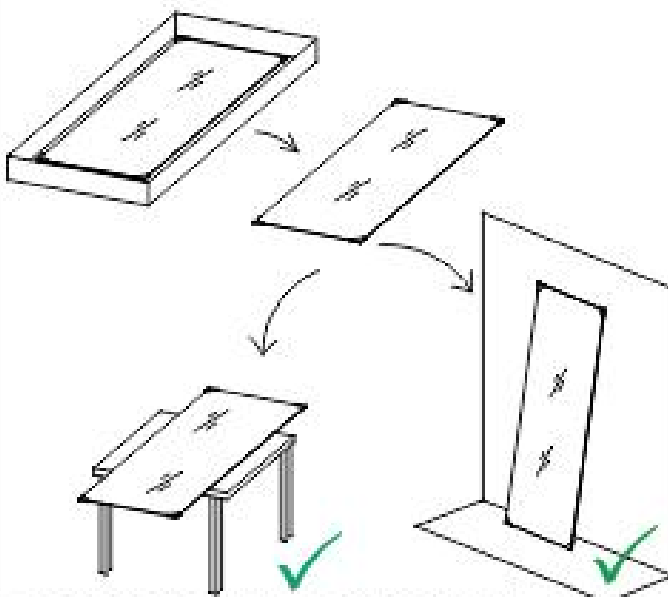

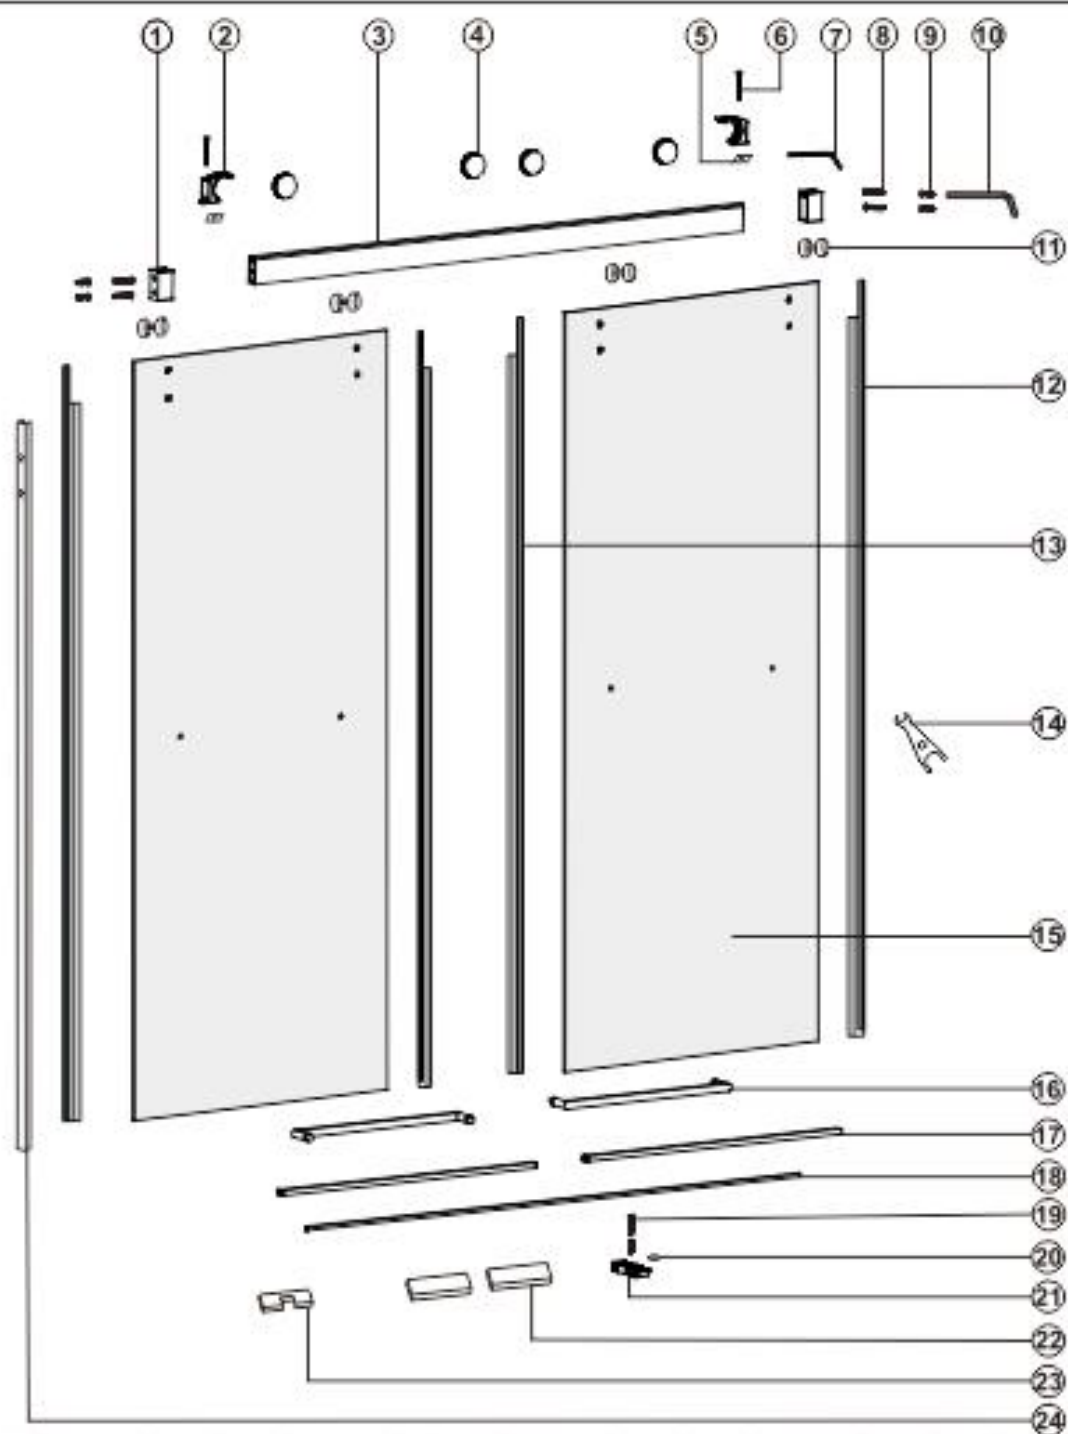


NO.	Picture	Qty	NO.	Picture	Qty	NO.	Picture	Qty	NO.	Picture	Qty	NO.	Picture	Qty
①		2	②		2	③		1	④		4	⑤		2
⑥		2	⑦		1	⑧		4	⑨		5	⑩		1
⑪		4	⑫		2	⑬		2	⑭		1	⑮		2
⑯		2	⑰		2	⑱		1	⑲		1	⑳		1
㉑		1	㉒		2	㉓		1	㉔		1			

1






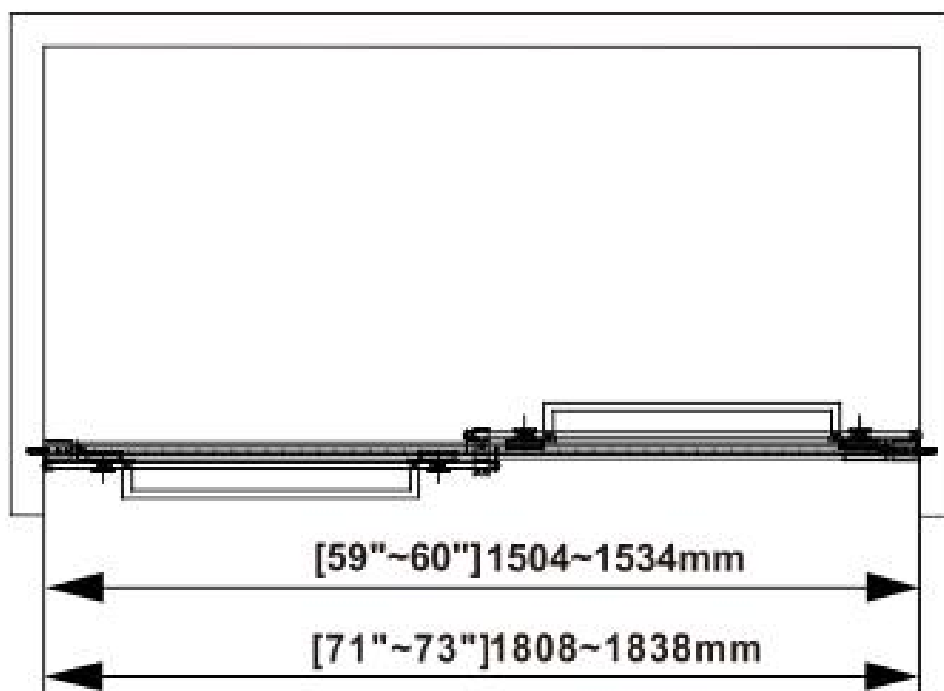


2

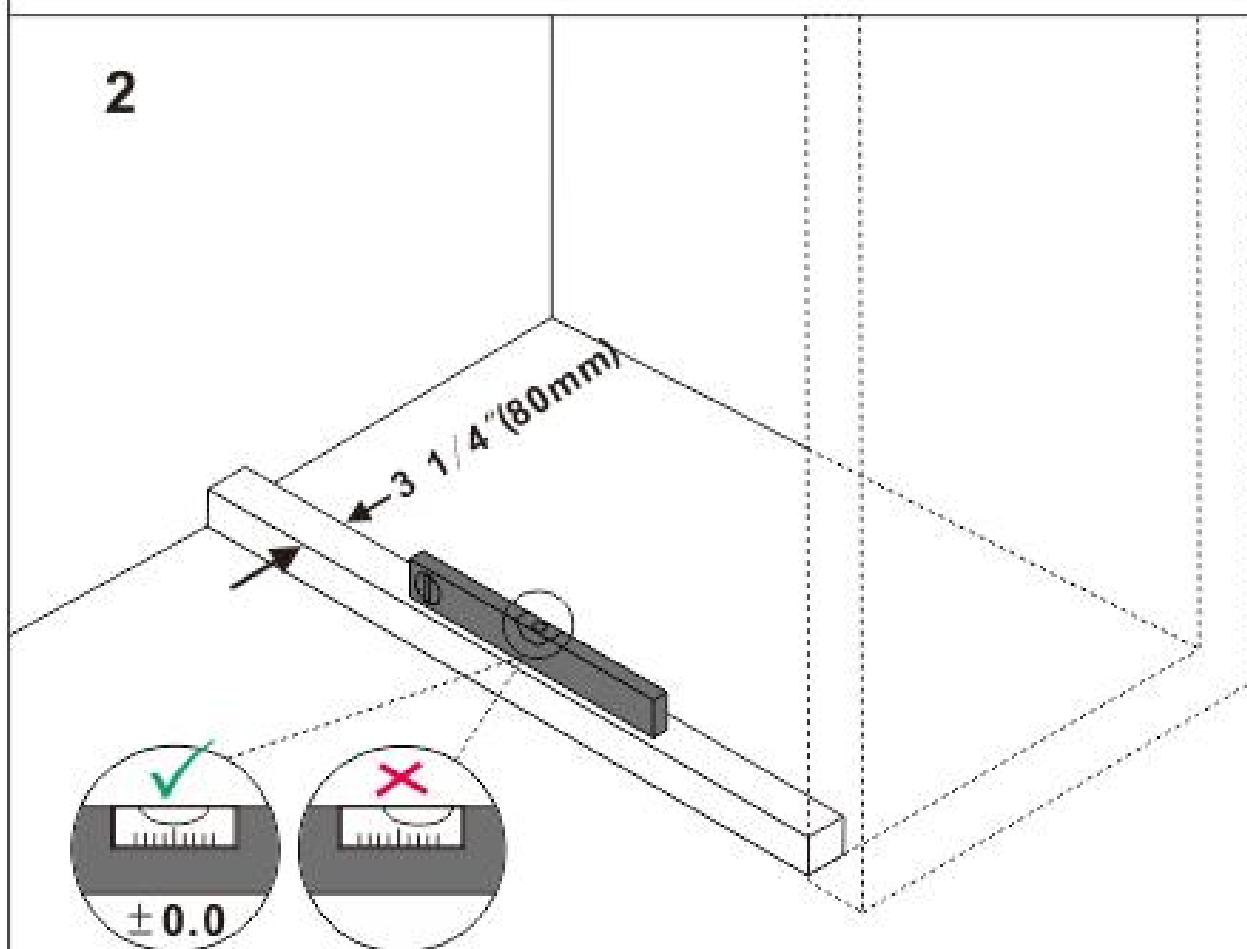





3

NO.	Picture	Qty
①		2
⑧		4
⑨		4
②③		1
②④		1

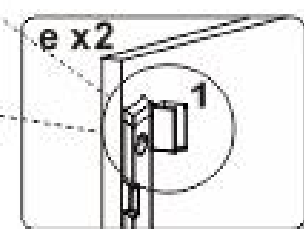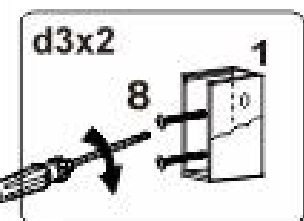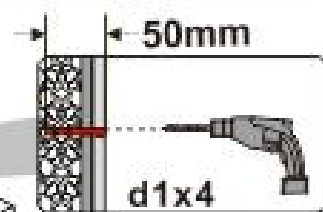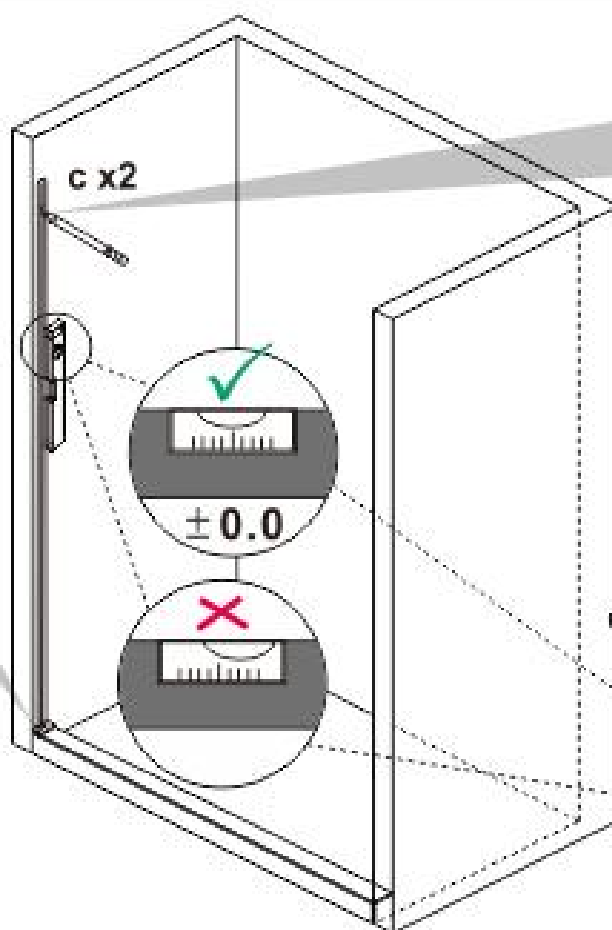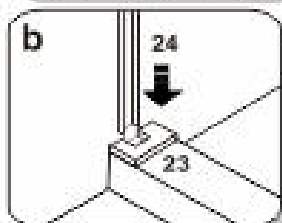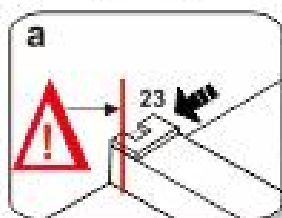




4

NO.	Picture	Qty
②		2
③		1
⑤		2
⑥		2
⑦		1
⑩		1

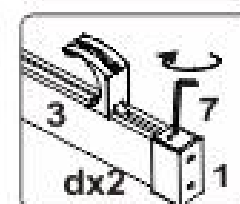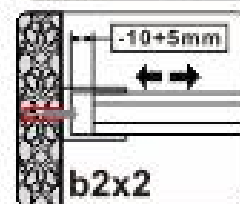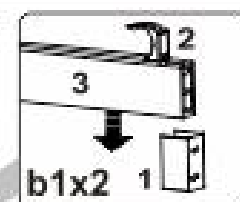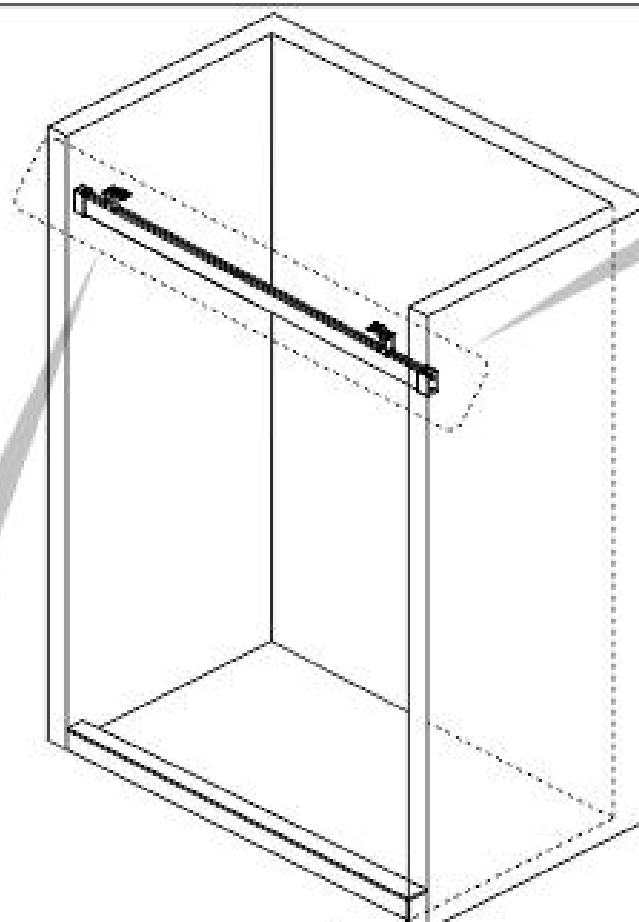







5

NO.	Picture	Qty
18		1

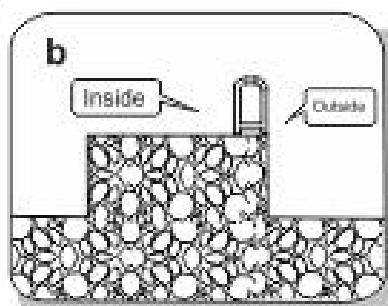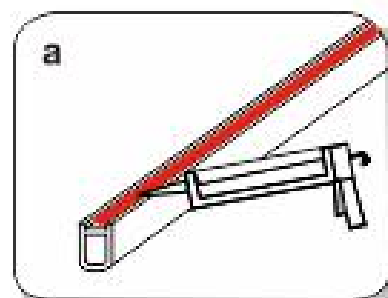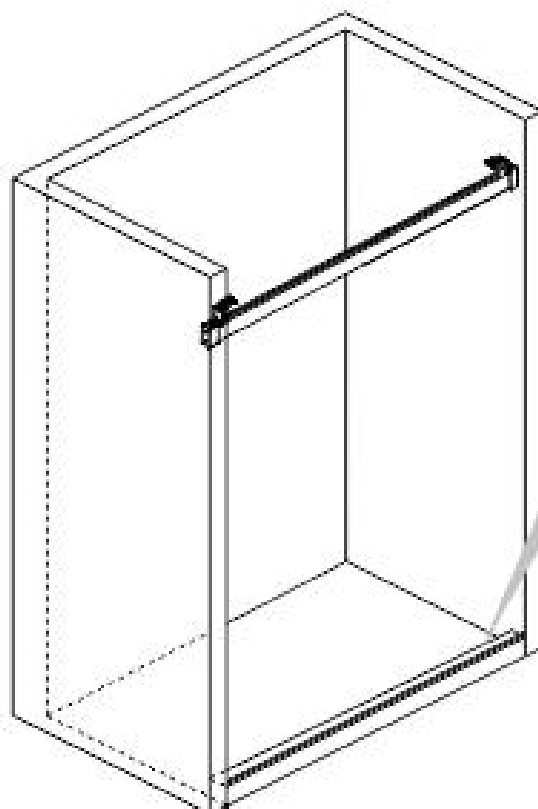


6

NO.	Picture	Qty
9		1
19		1
20		1
21		1

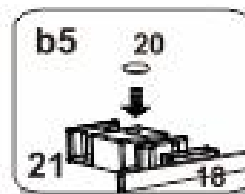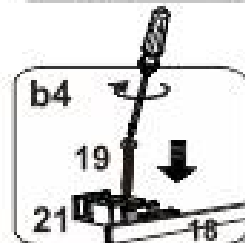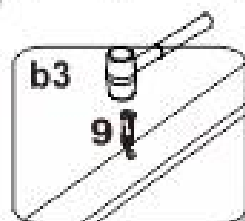
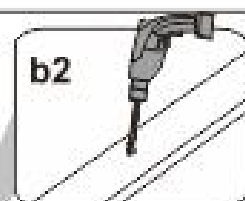
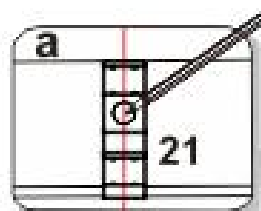
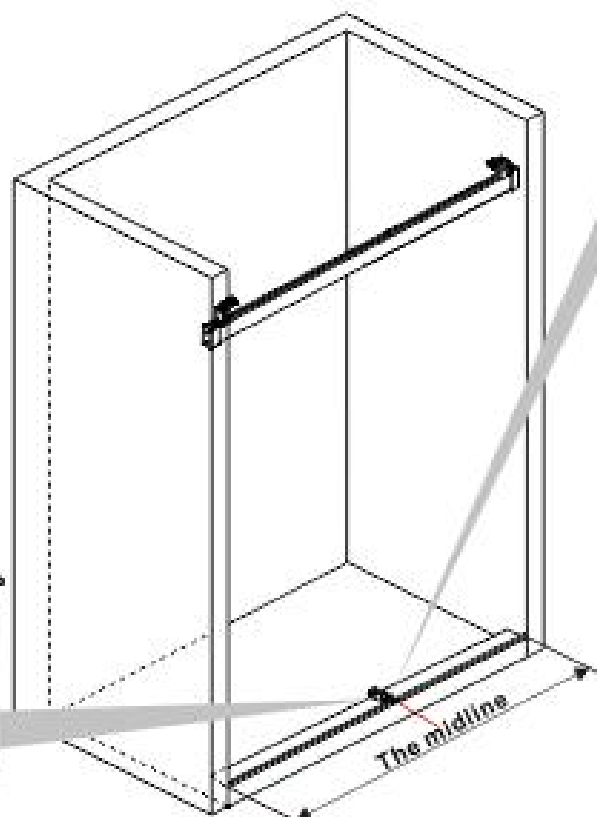


7

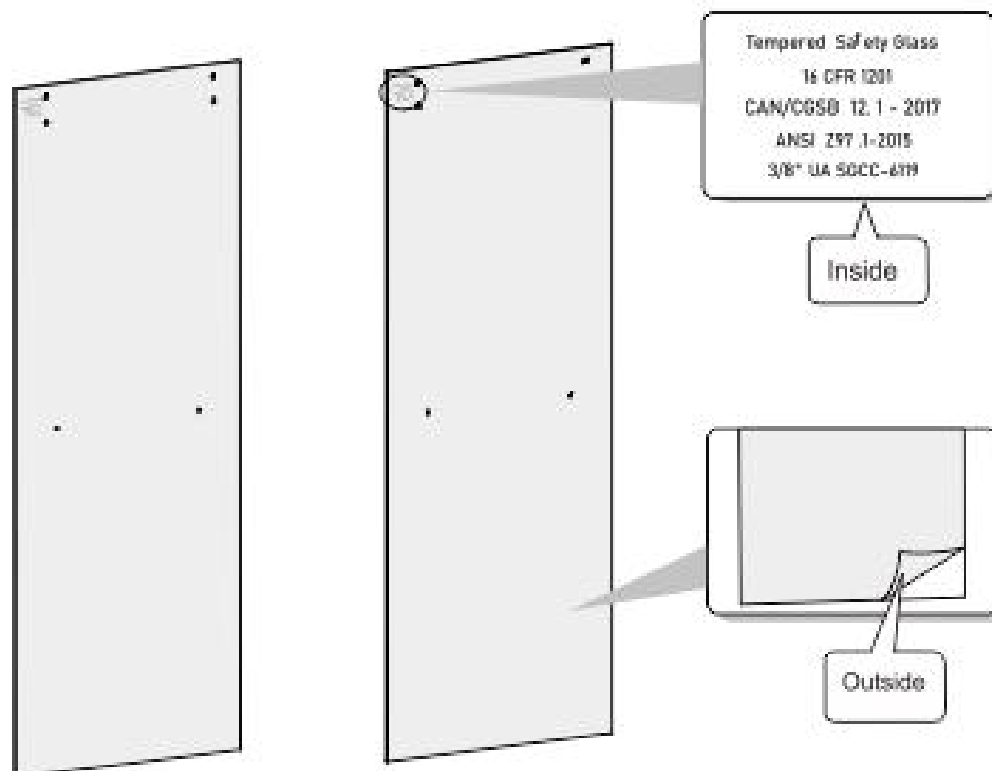






8

NO.	Picture	Qty
④		2
④		1
⑮		1
⑰		1

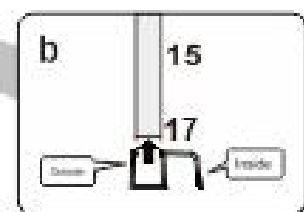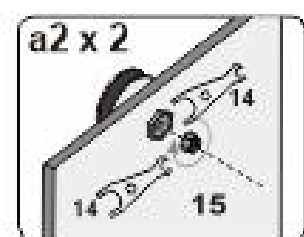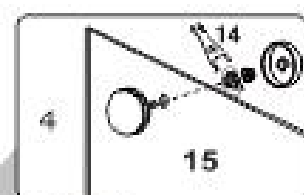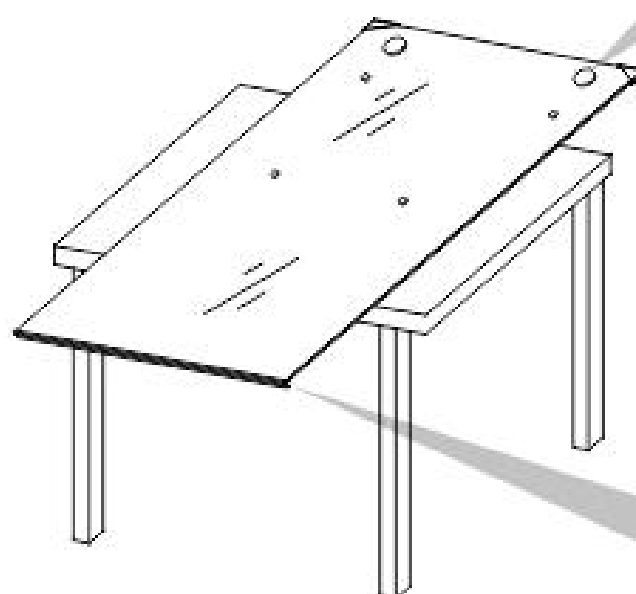




9

NO.	Picture	Qty
22		2

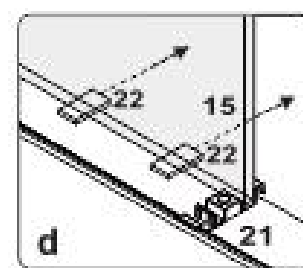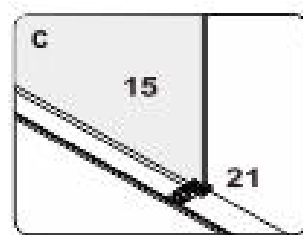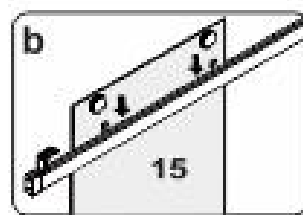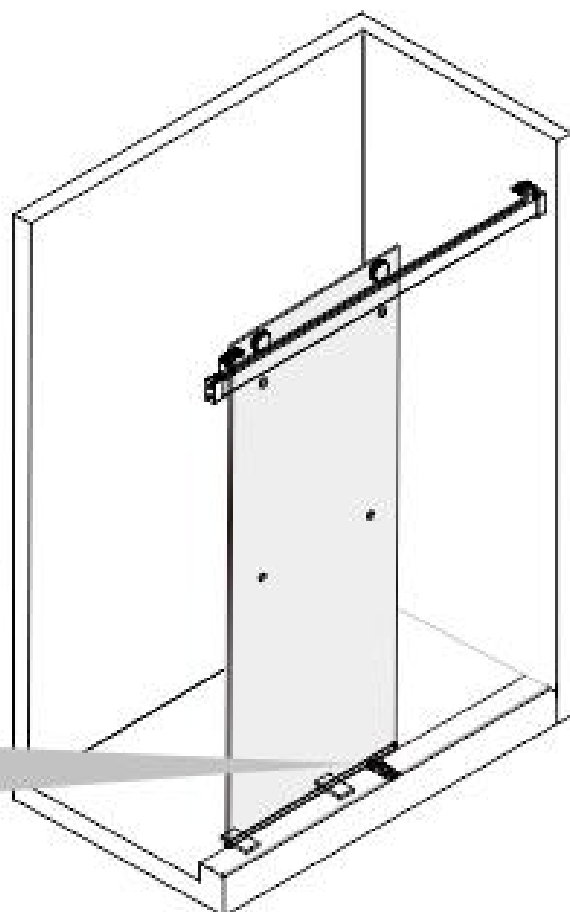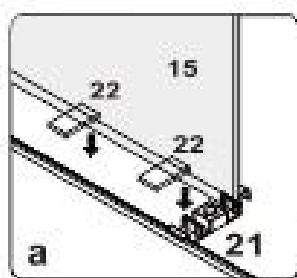


10


NO.	Picture	Qty
4		2
15		1
17		1

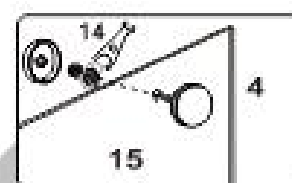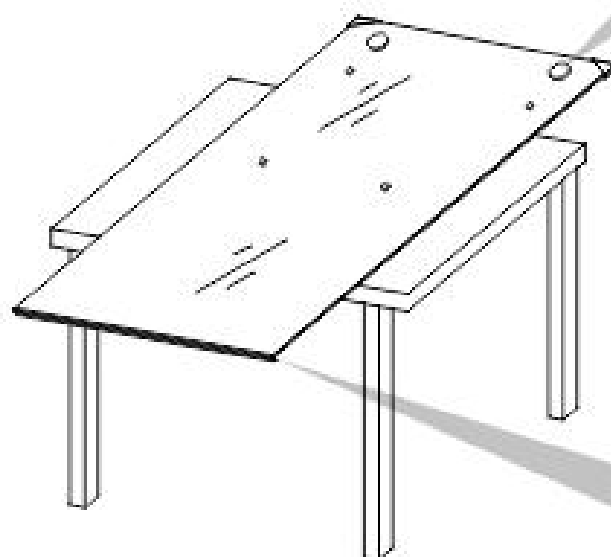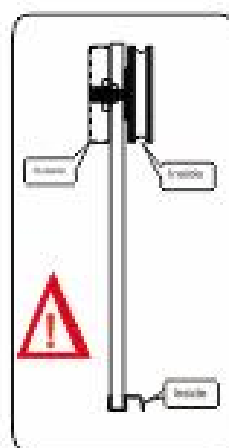

a1 x 2





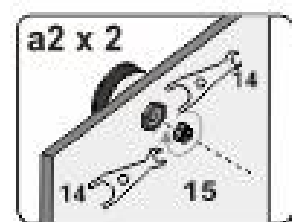


a2 x 2

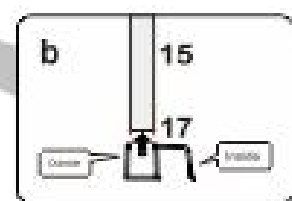







b

11

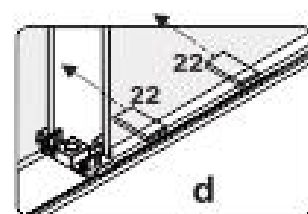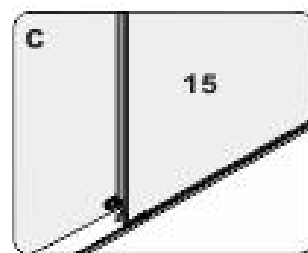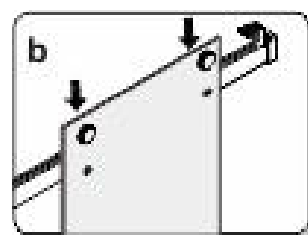
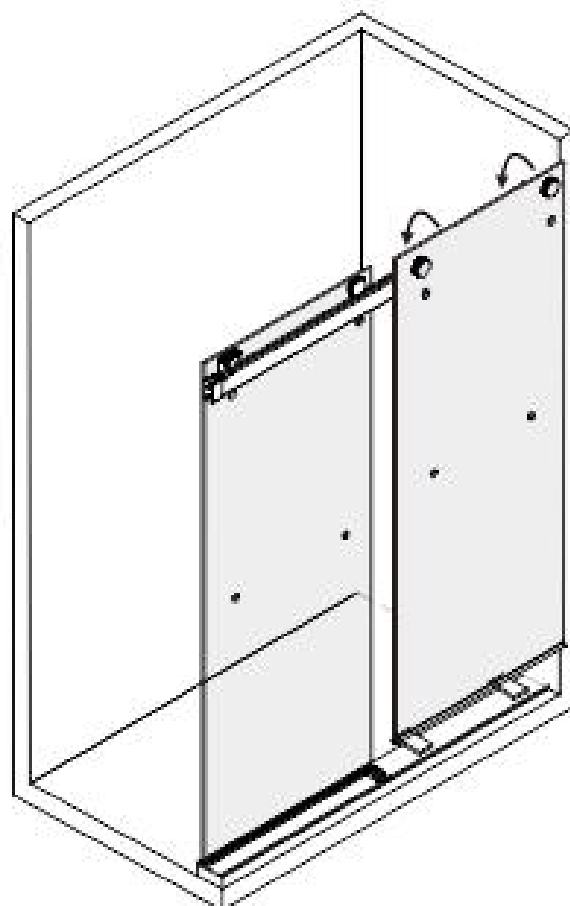
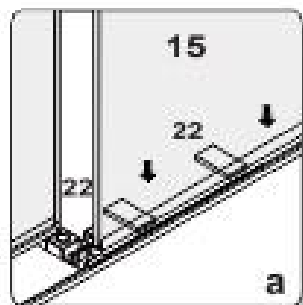


12

NO.	Picture	Qty
(12)		2
(13)		2

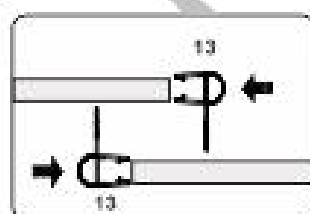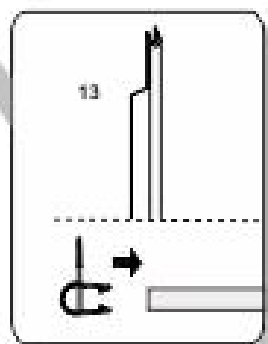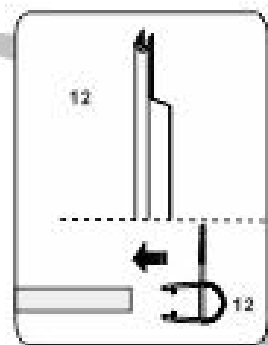
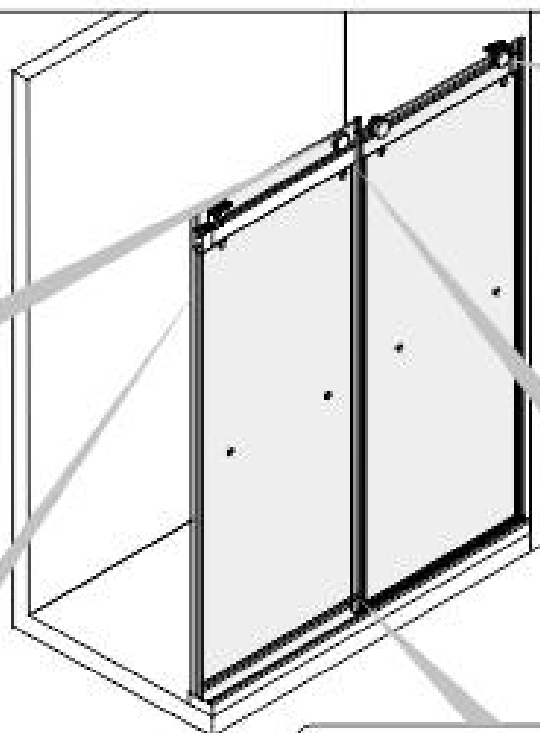
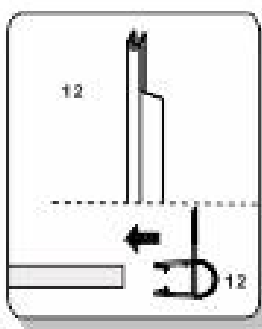
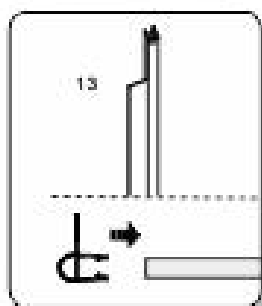


13

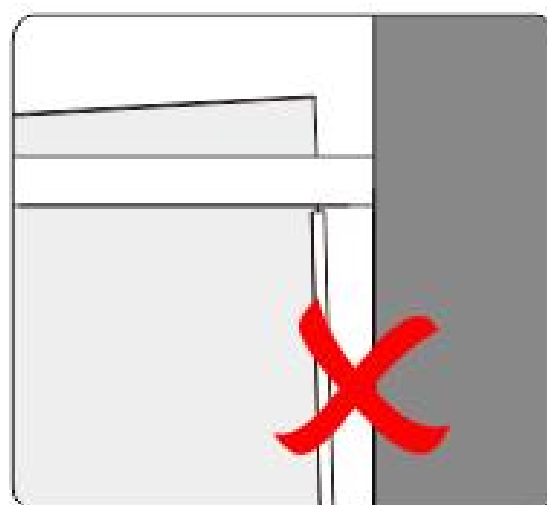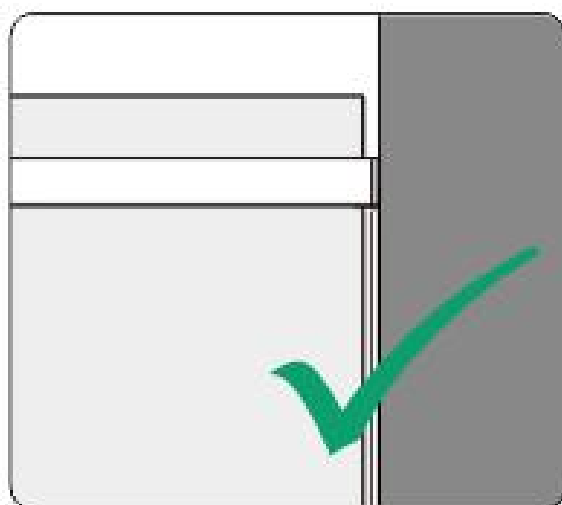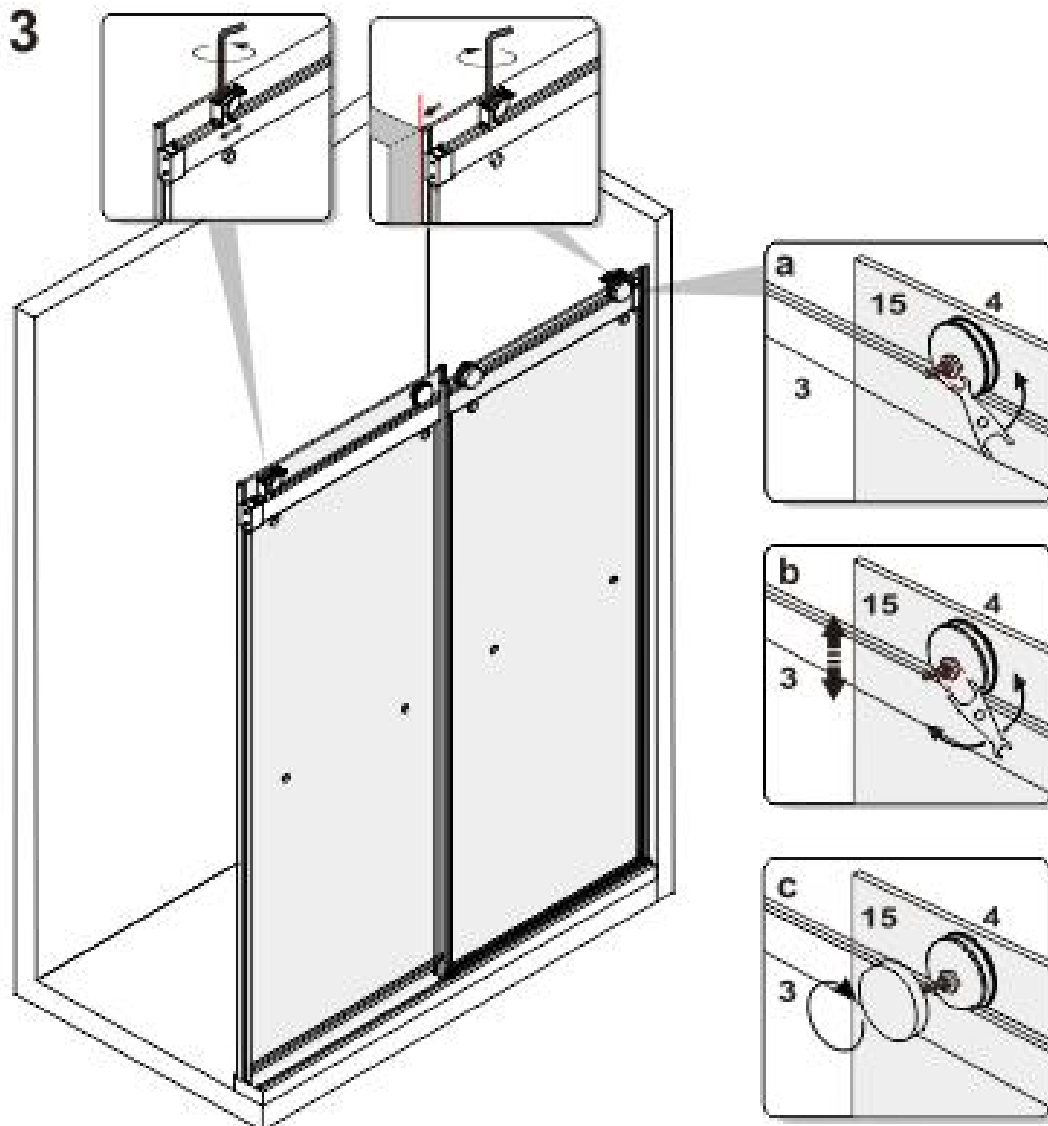


14


NO.	Picture	Qty
⑪		4
⑫		2

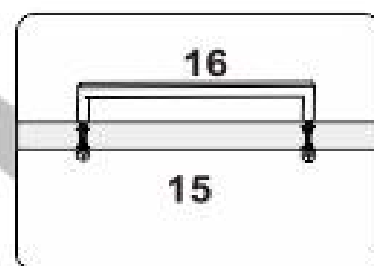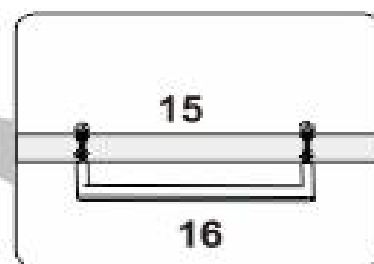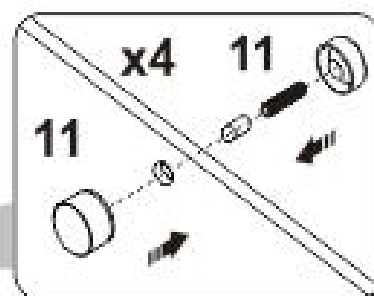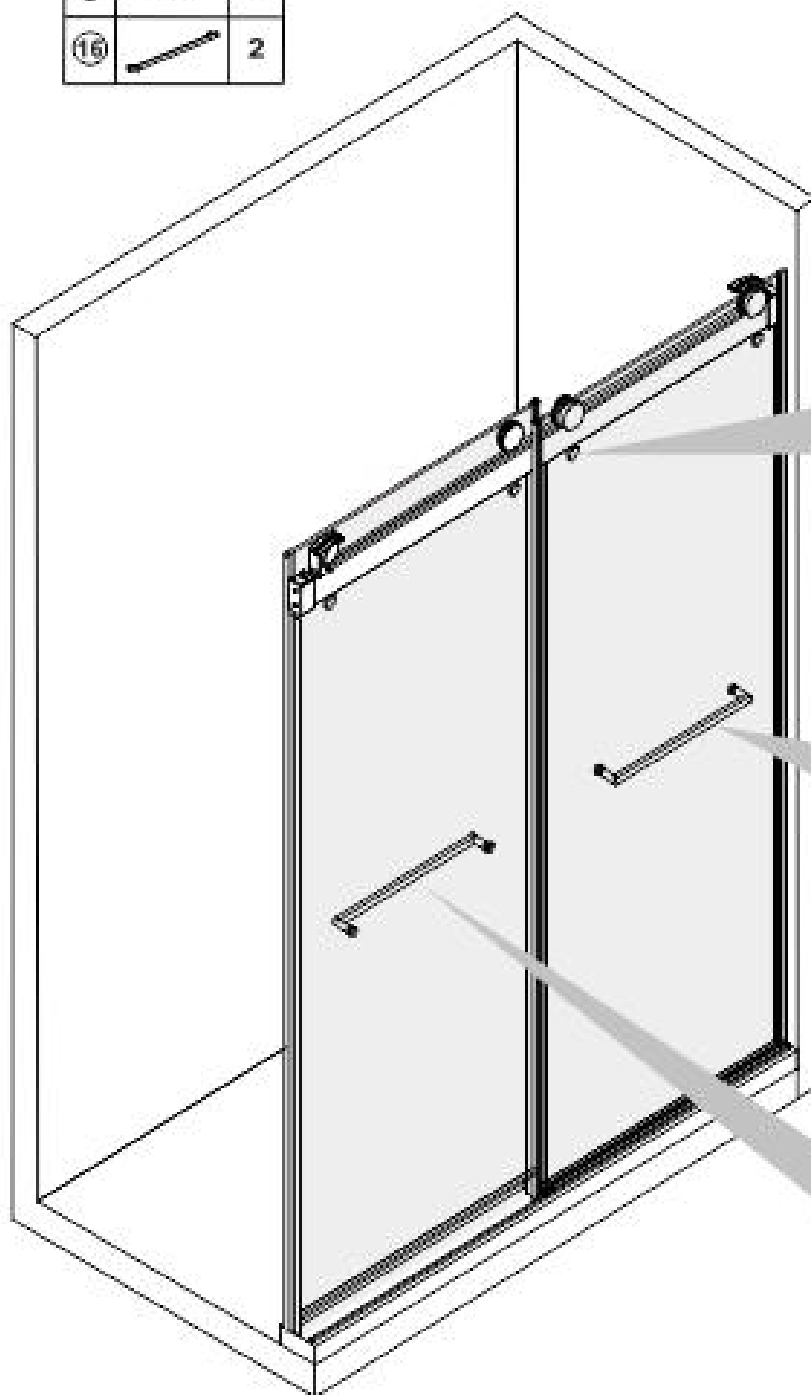

15

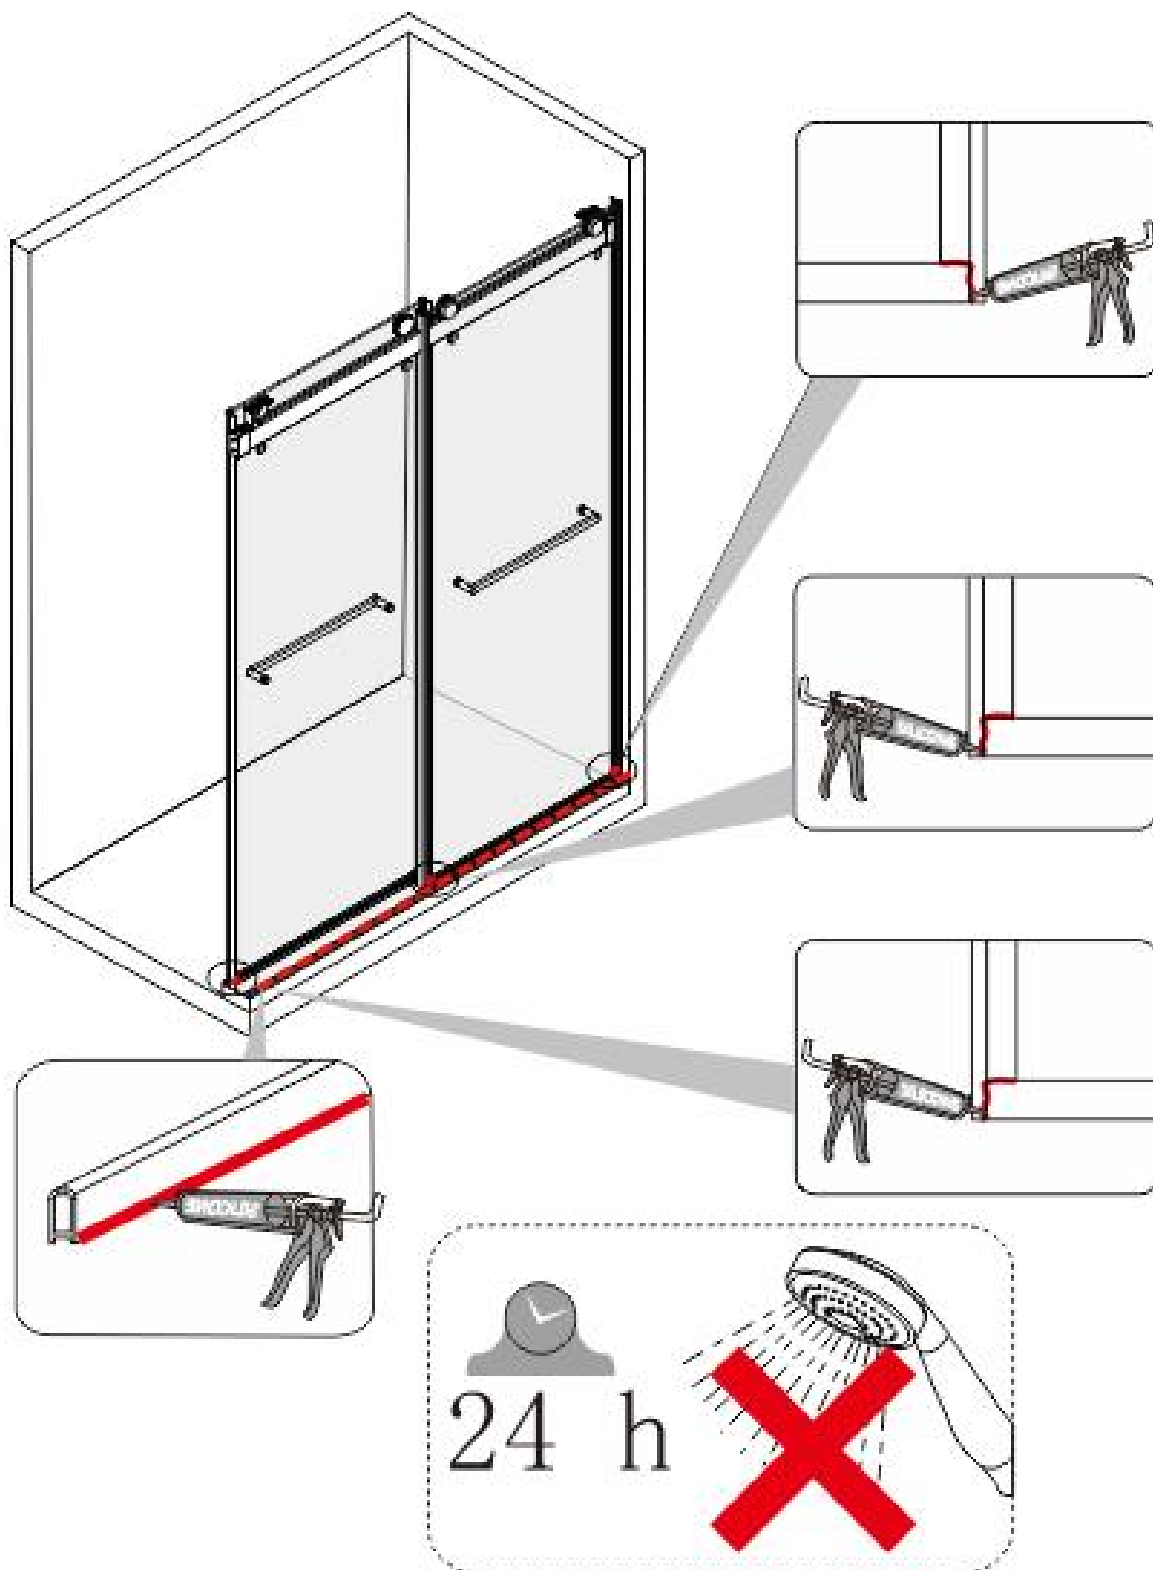


Do not use the shower enclosure for at least 24 hours in order to allow the silicone sealant to cure fully.

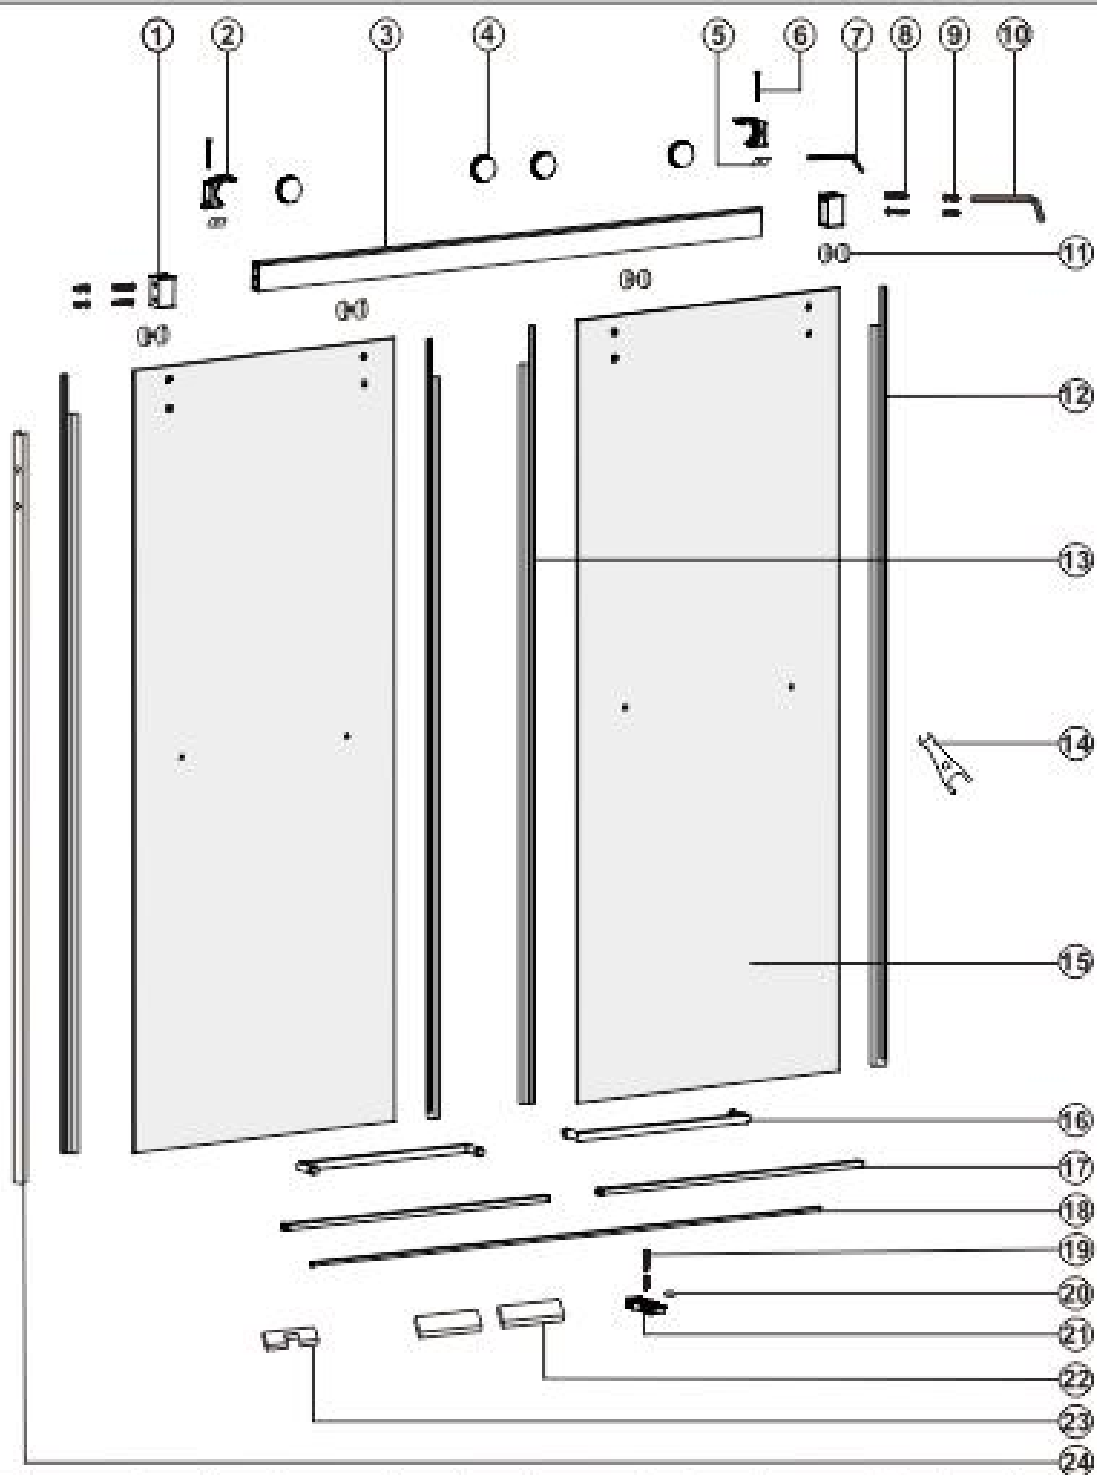


NO.	Picture	Qty	NO.	Picture	Qty	NO.	Picture	Qty	NO.	Picture	Qty	NO.	Picture	Qty
①		2	②		2	③		1	④		4	⑤		2
⑥		2	⑦		1	⑧		4	⑨		5	⑩		1
⑪		4	⑫		2	⑬		2	⑭		1	⑮		2
⑯		2	⑰		2	⑱		1	⑲		1	⑳		1
㉑		1	㉒		2	㉓		1	㉔		1			

1






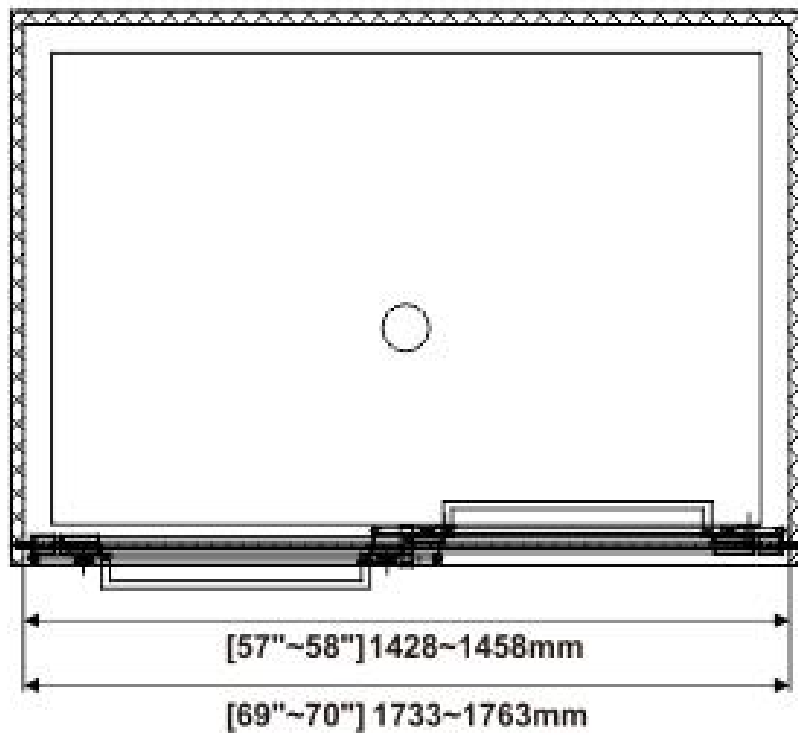


2

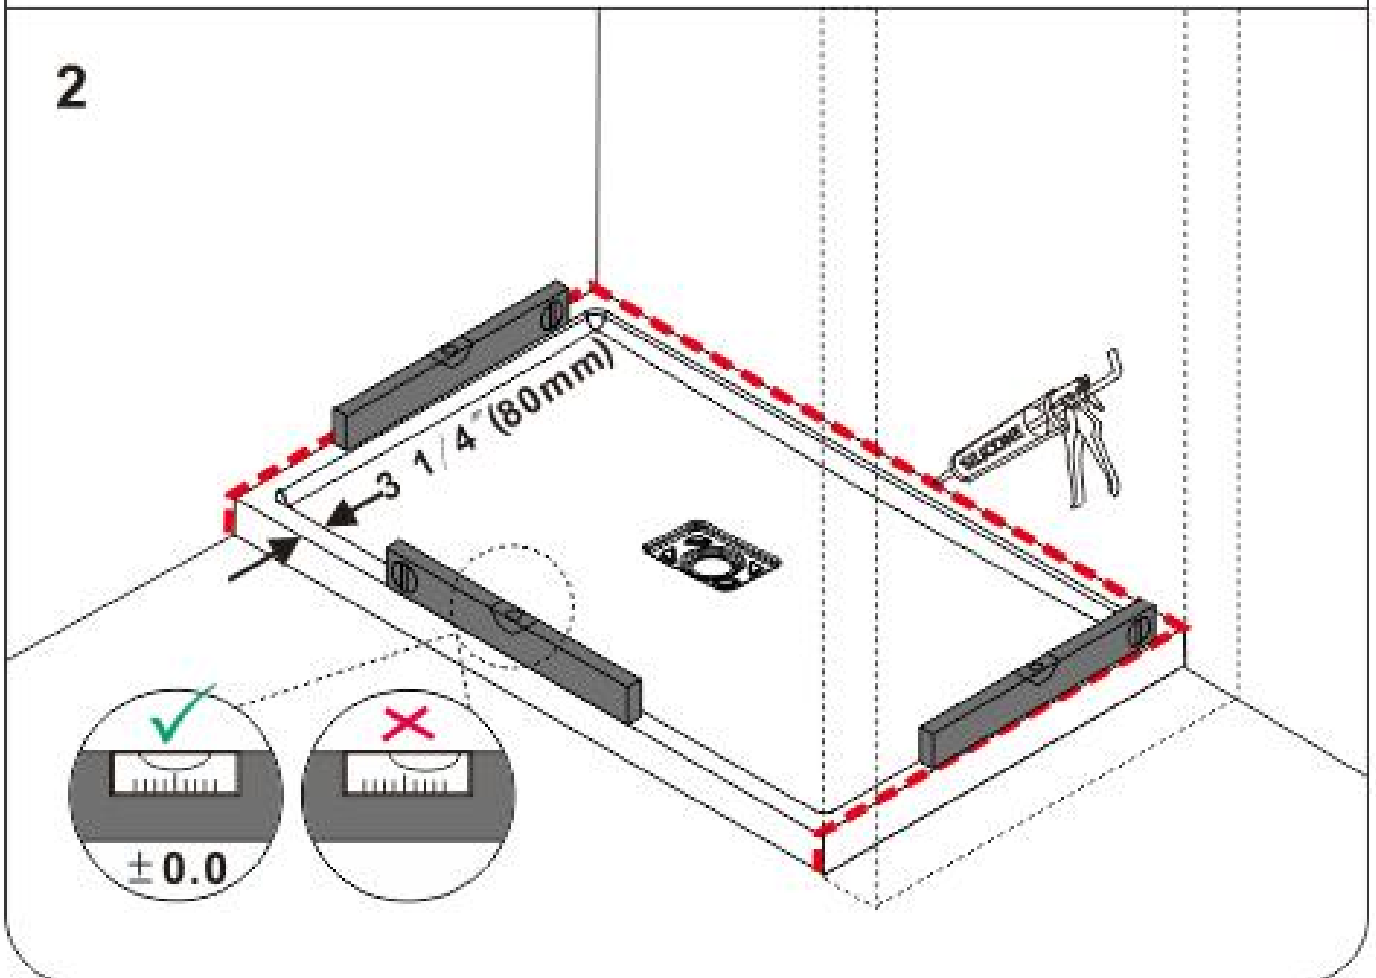






3

NO.	Picture	Qty
①		2
⑧		4
⑨		4
②③		1
②④		1

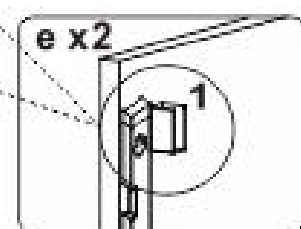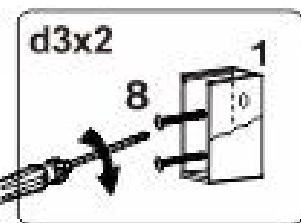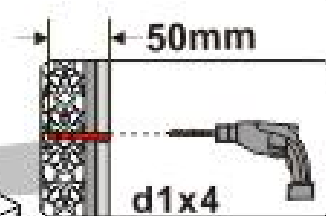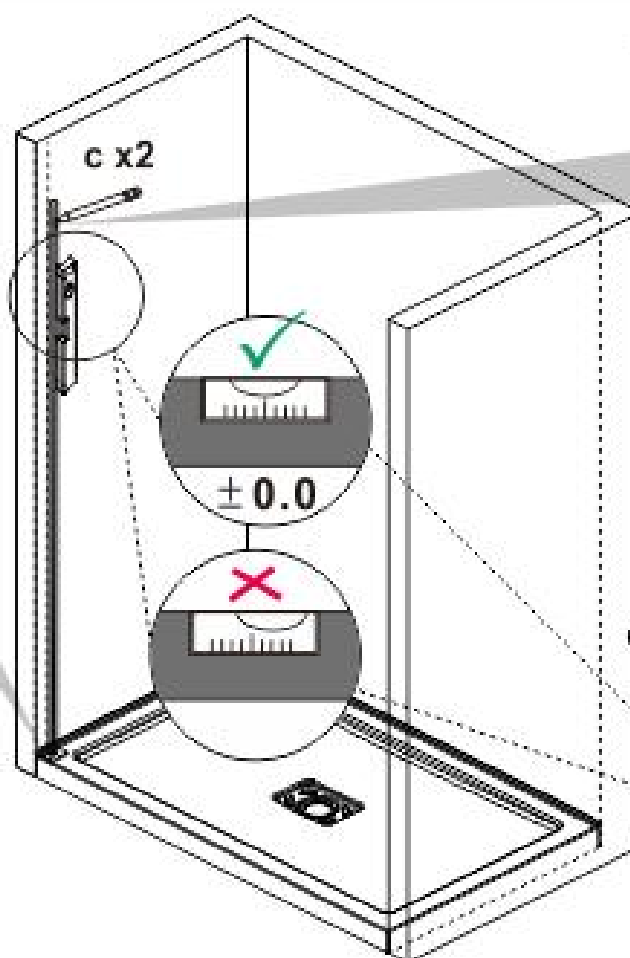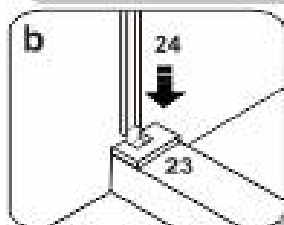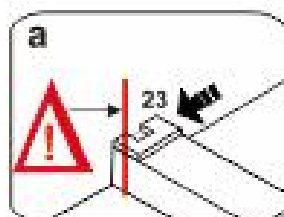







4

NO.	Picture	Qty
③		1

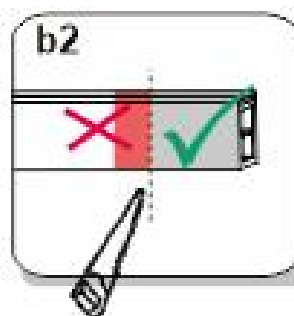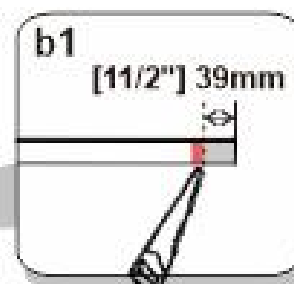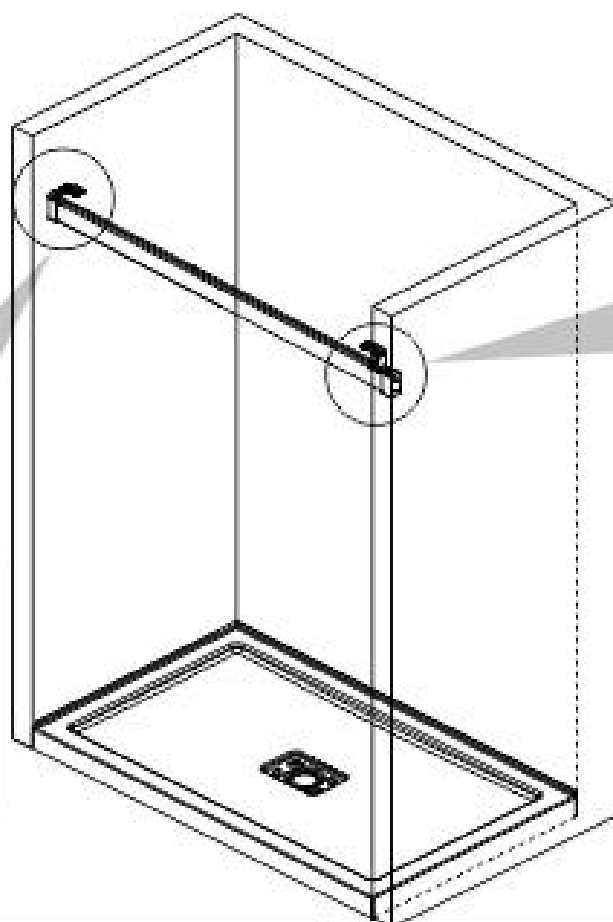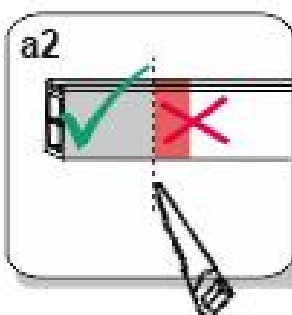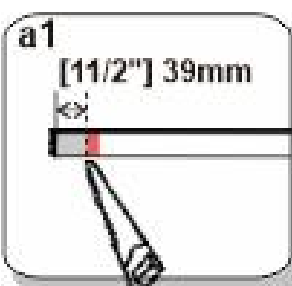






5

NO.	Picture	Qty
②		2
⑤		2
⑥		2
⑦		1
⑩		1

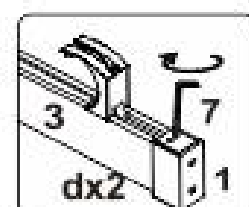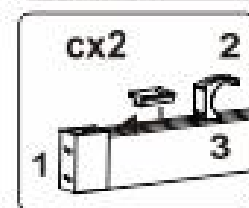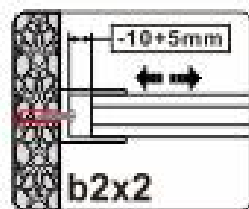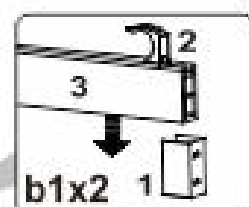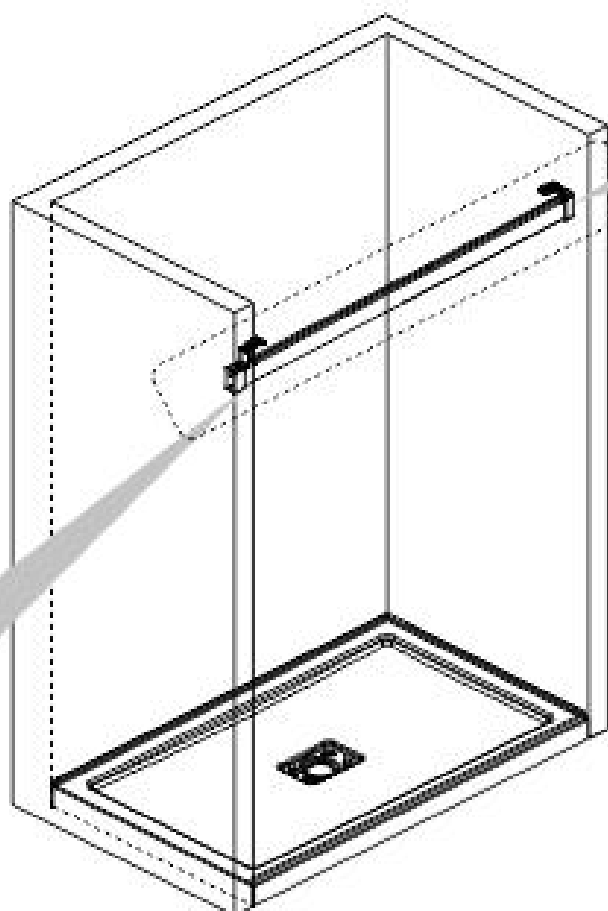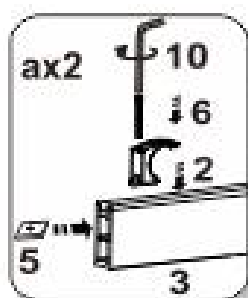






6

NO.	Picture	Qty
⑮		1

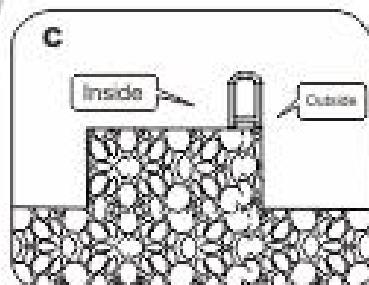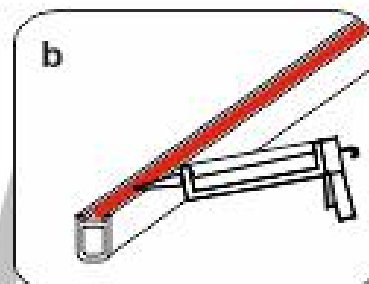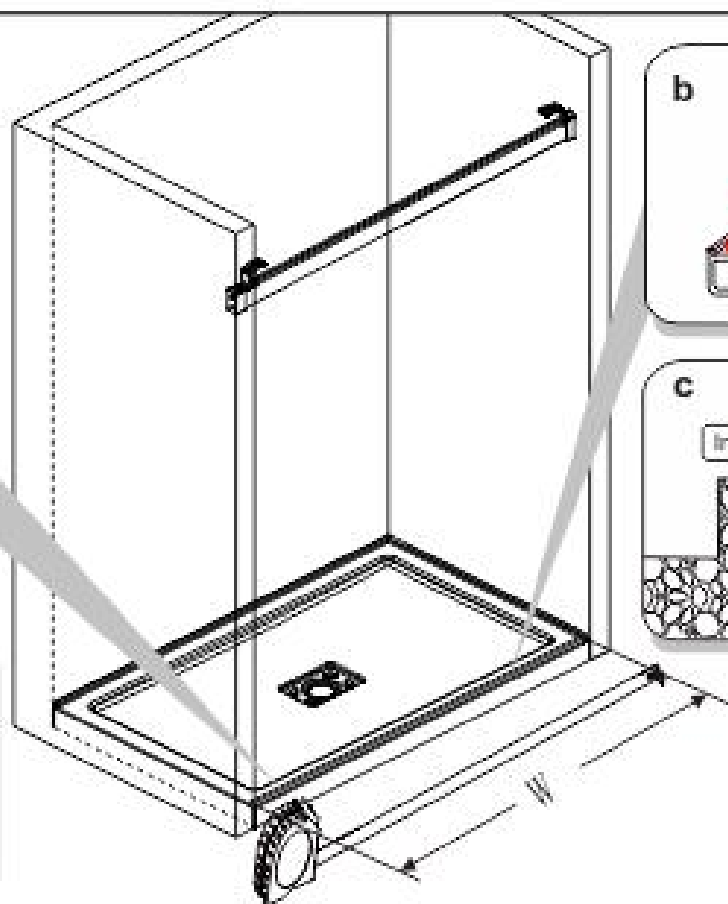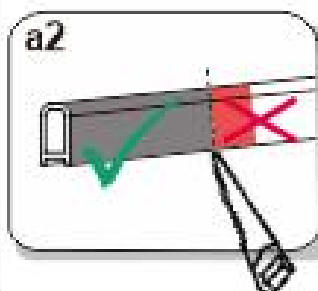
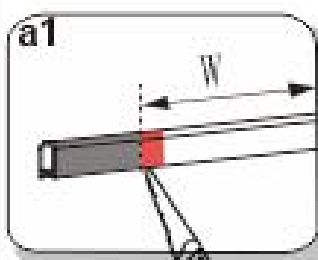


7

NO.	Picture	Qty
9		1
19	 STA-40	1
20		1
21		1

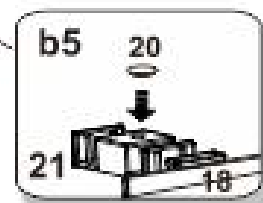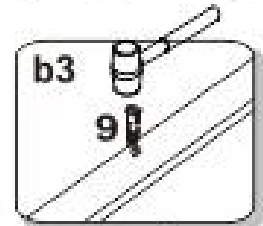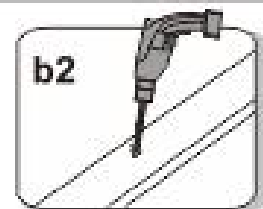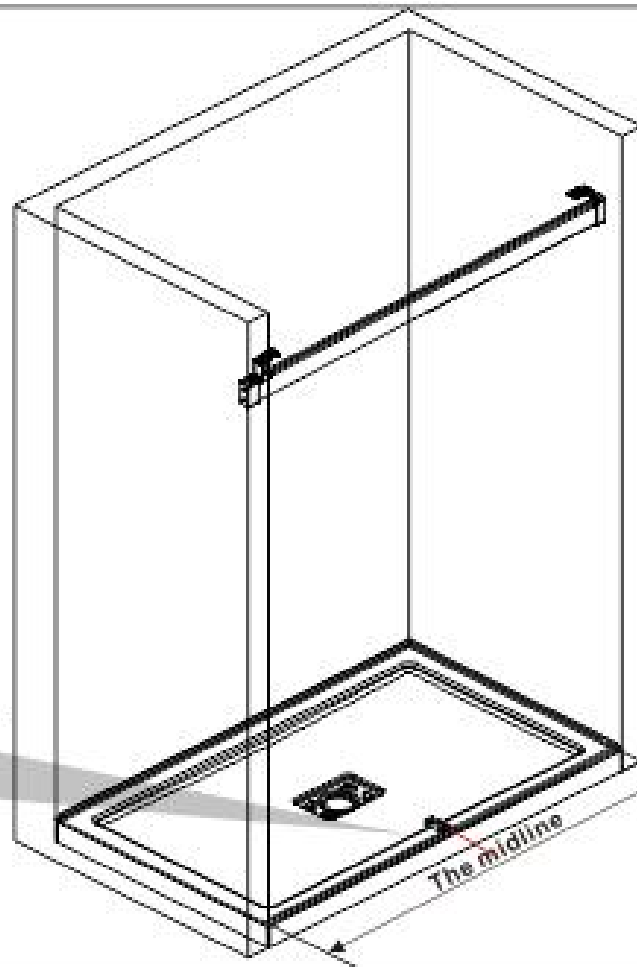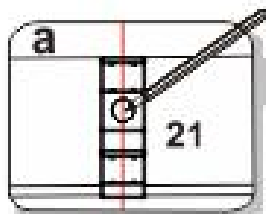


8

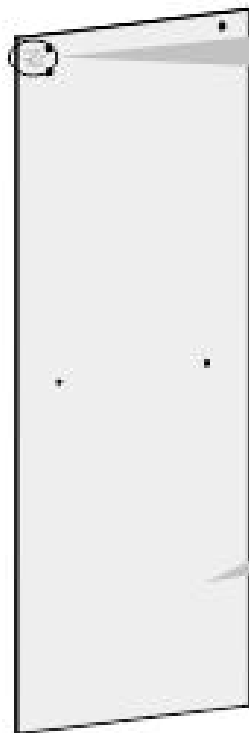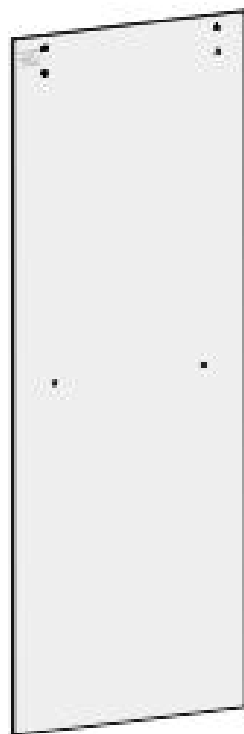

Tempered Safety Glass
16 CFR 1201
CAN/CSA 12.1 - 2017
ANSI Z97.1-2015
3/8" UA 58CC-6119



Inside

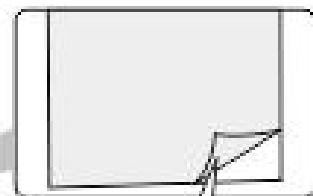


Outside

9


NO.	Picture	Qty
④		2
⑭		1
⑮		1
⑰		1

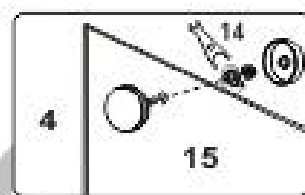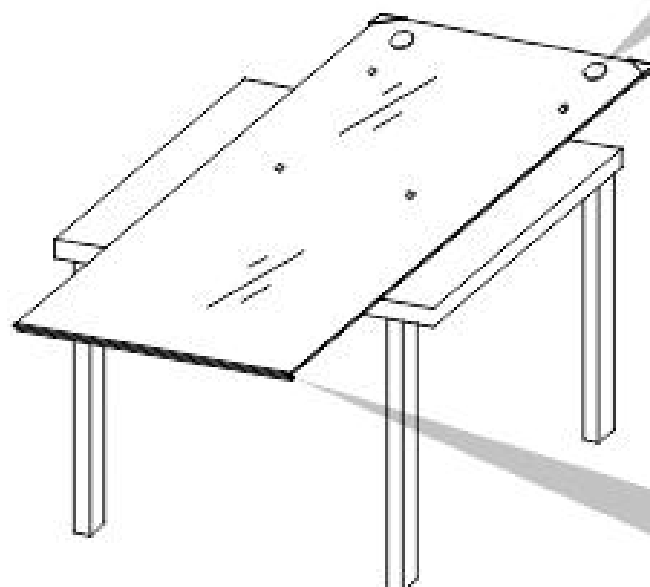

a1 x 2

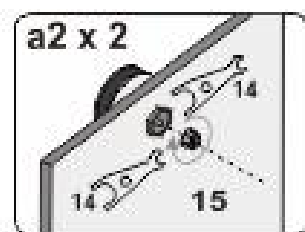




a2 x 2

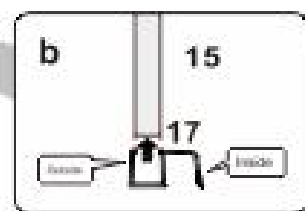


b

10


NO.	Picture	Qty
②②		2

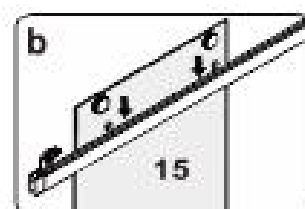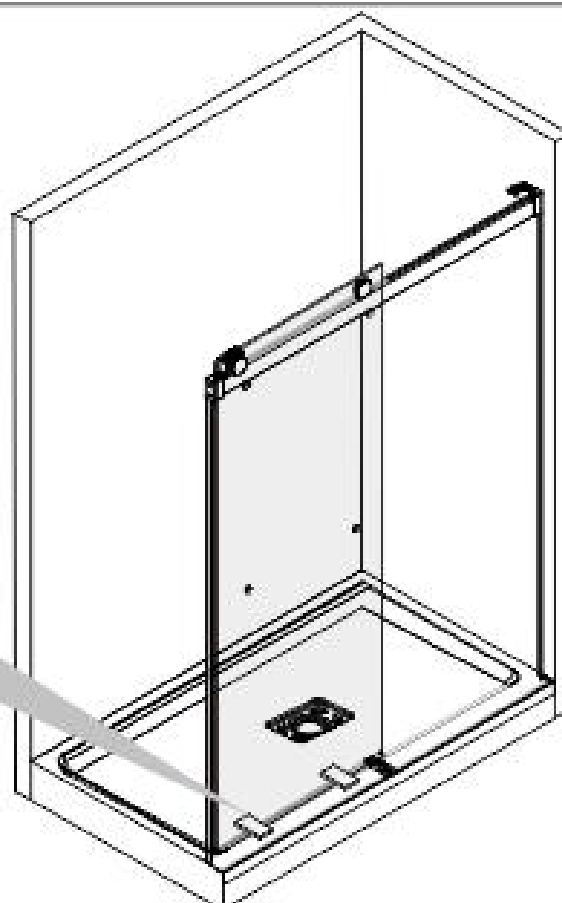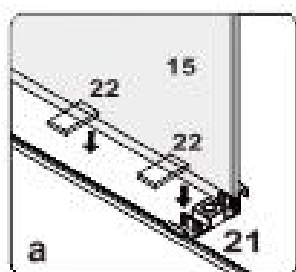

b

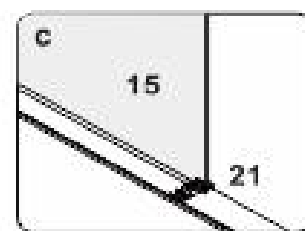




c

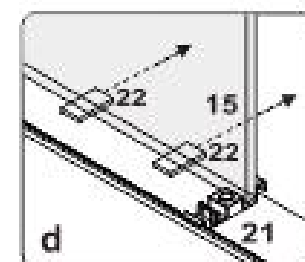


d

11


NO.	Picture	Qty
④		2
⑮		1
⑰		1

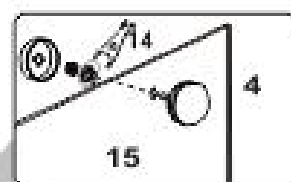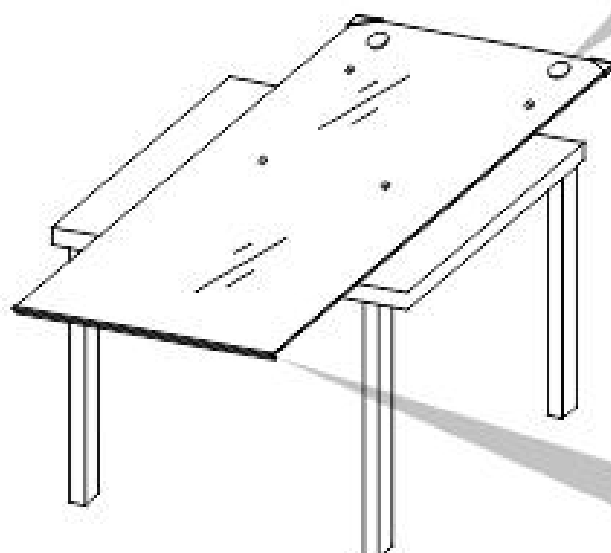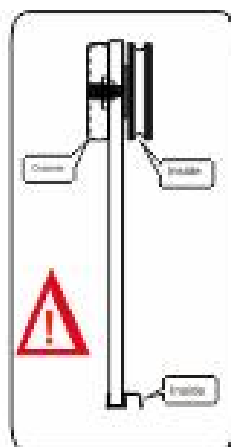

a1 x 2

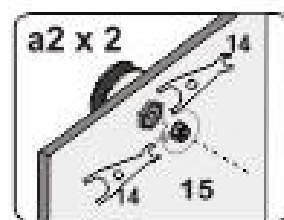


a2 x 2


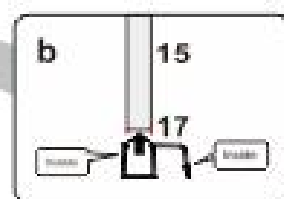


b


12

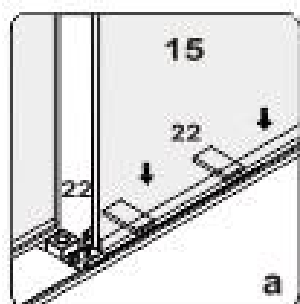


a

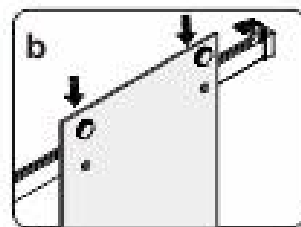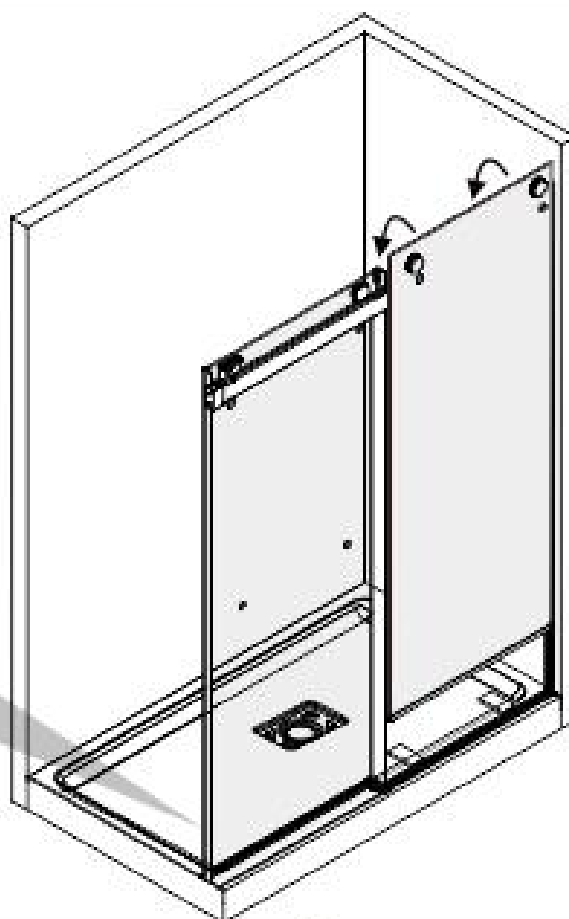

b

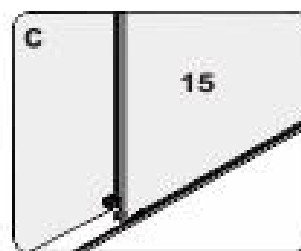


c

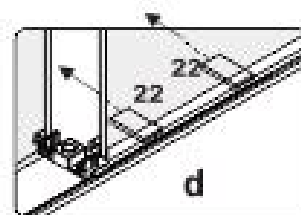




d

13

NO.	Picture	Qty
⑫		2
⑬		2




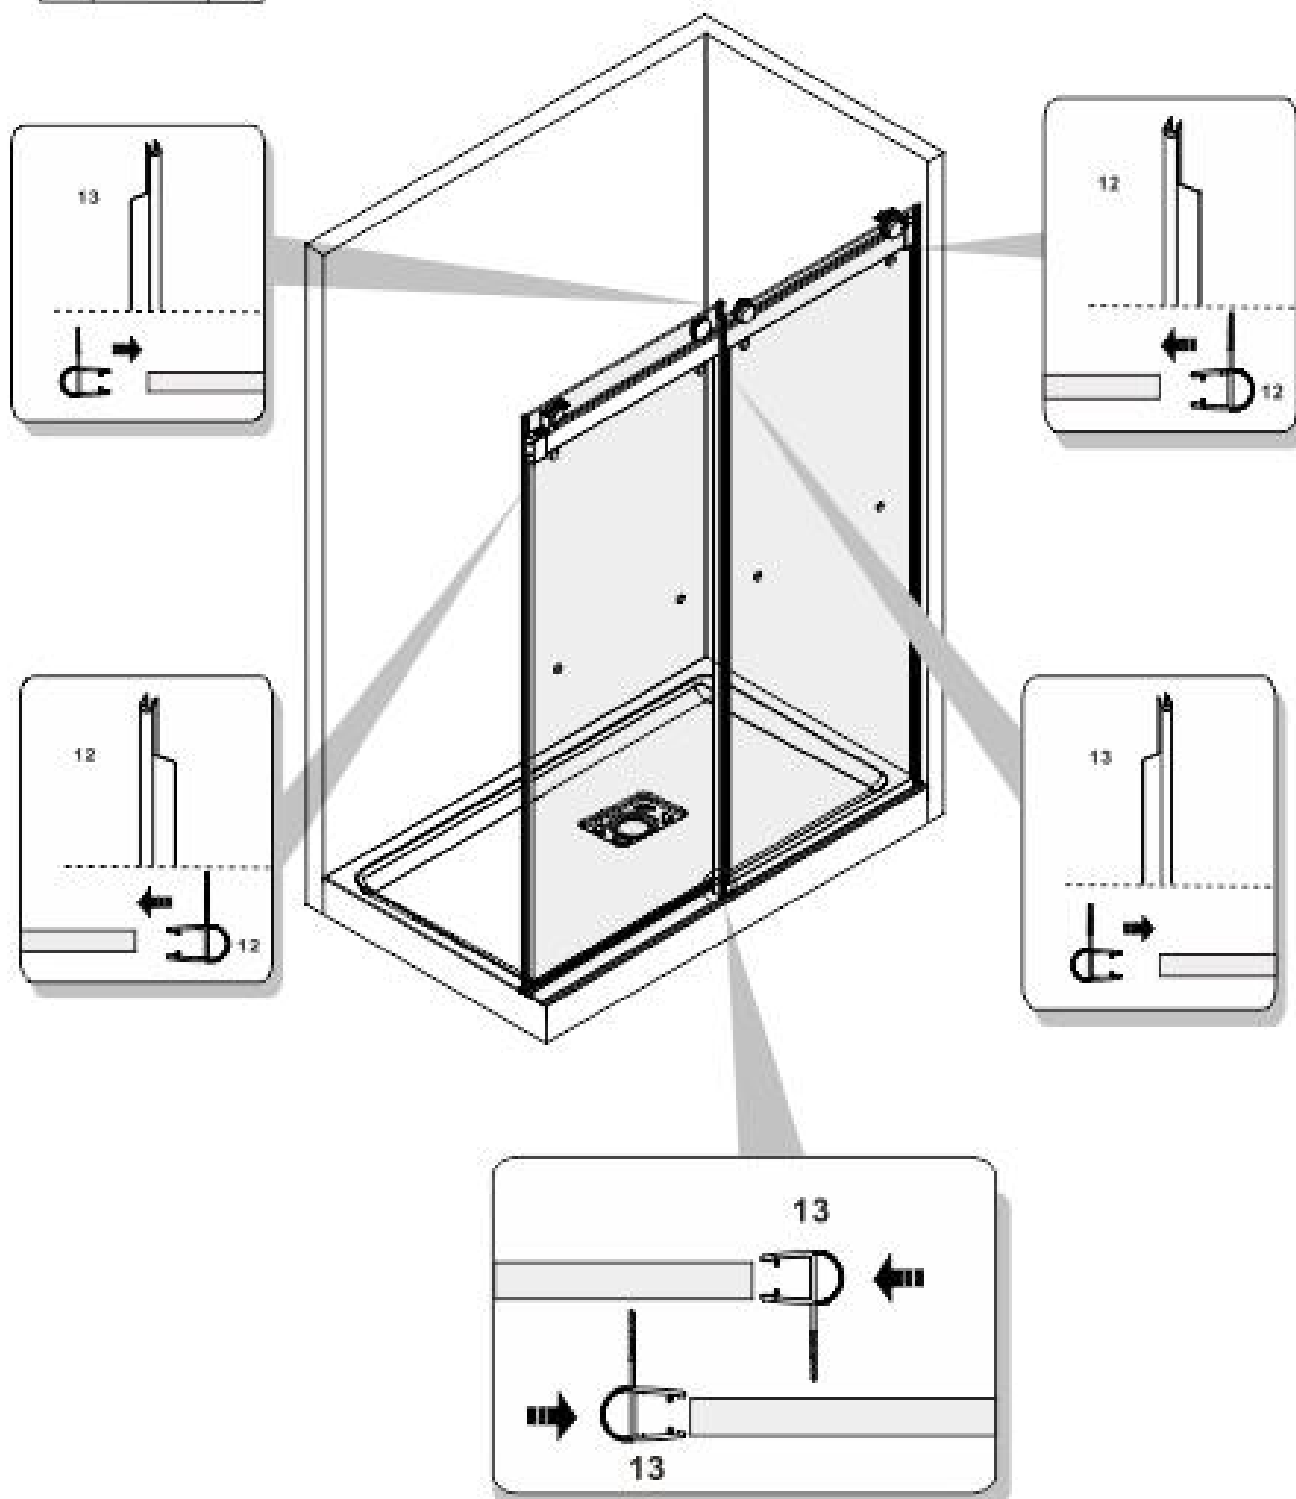


14




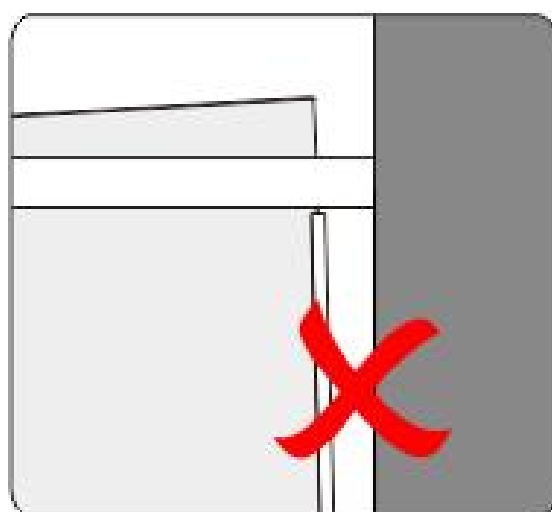
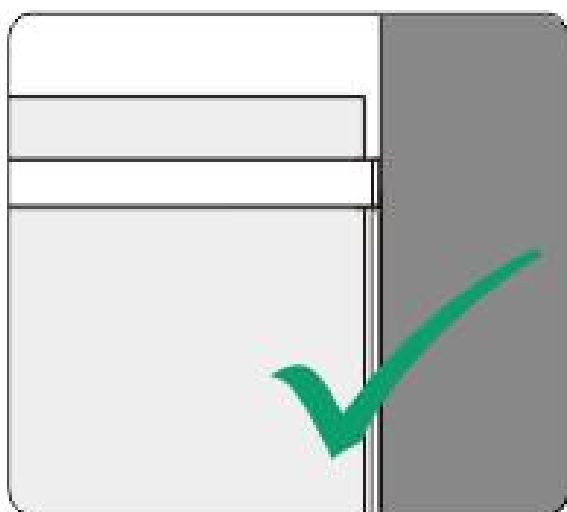
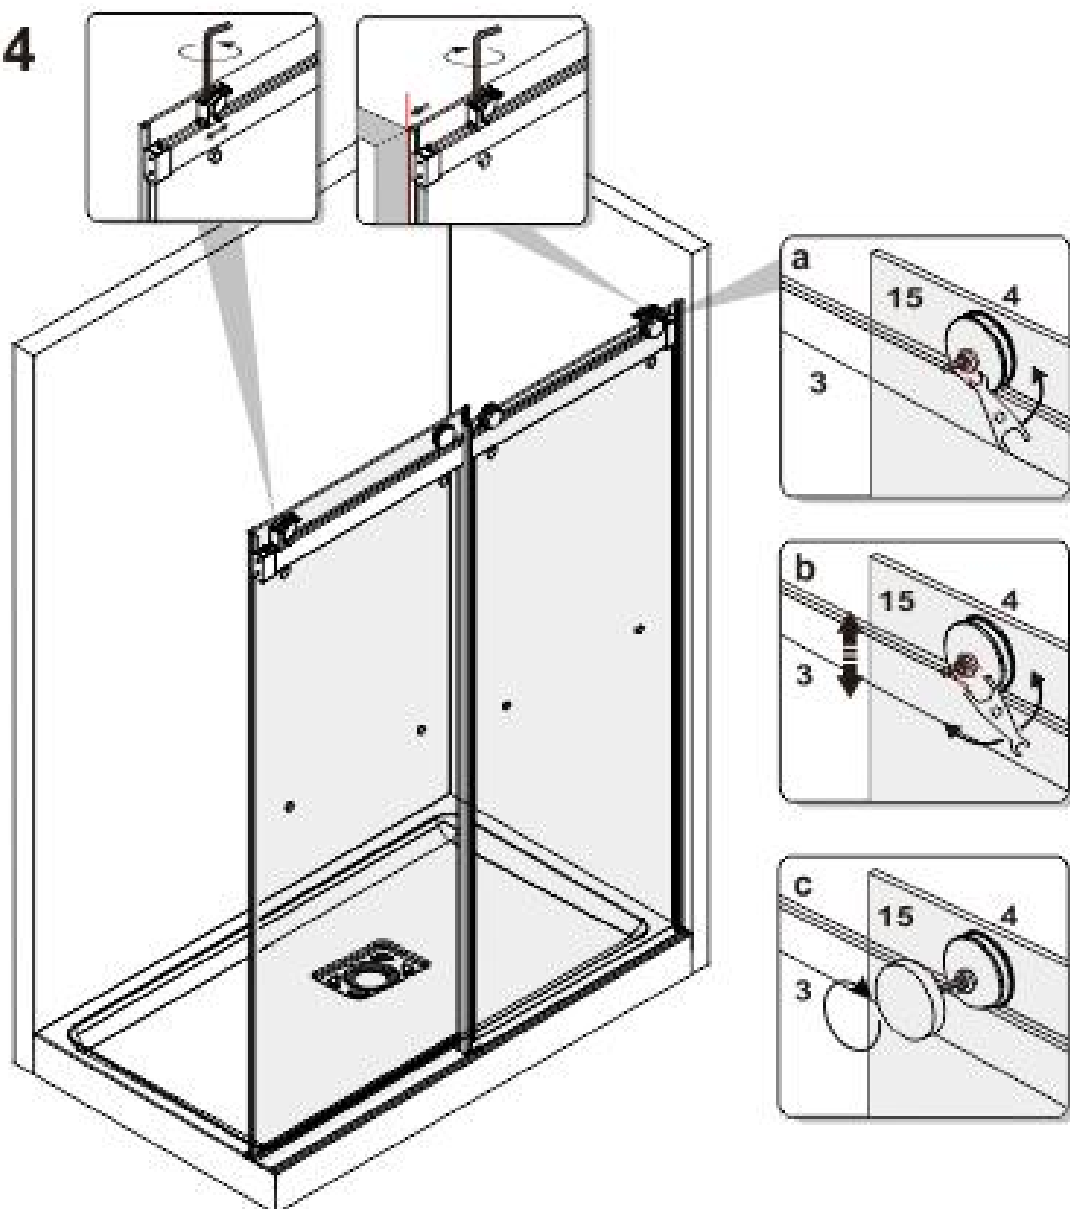


15


NO.	Picture	Qty
⑪		4
⑮		2

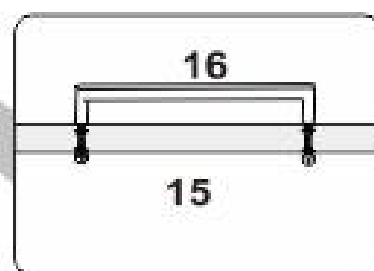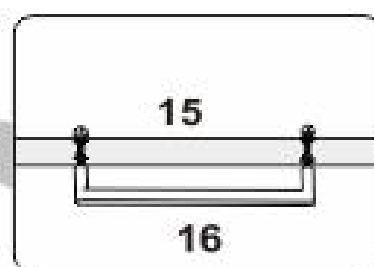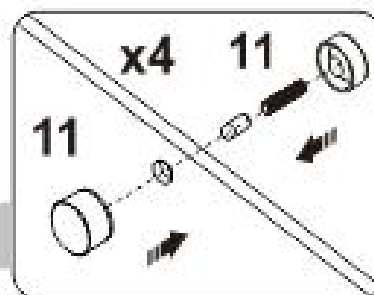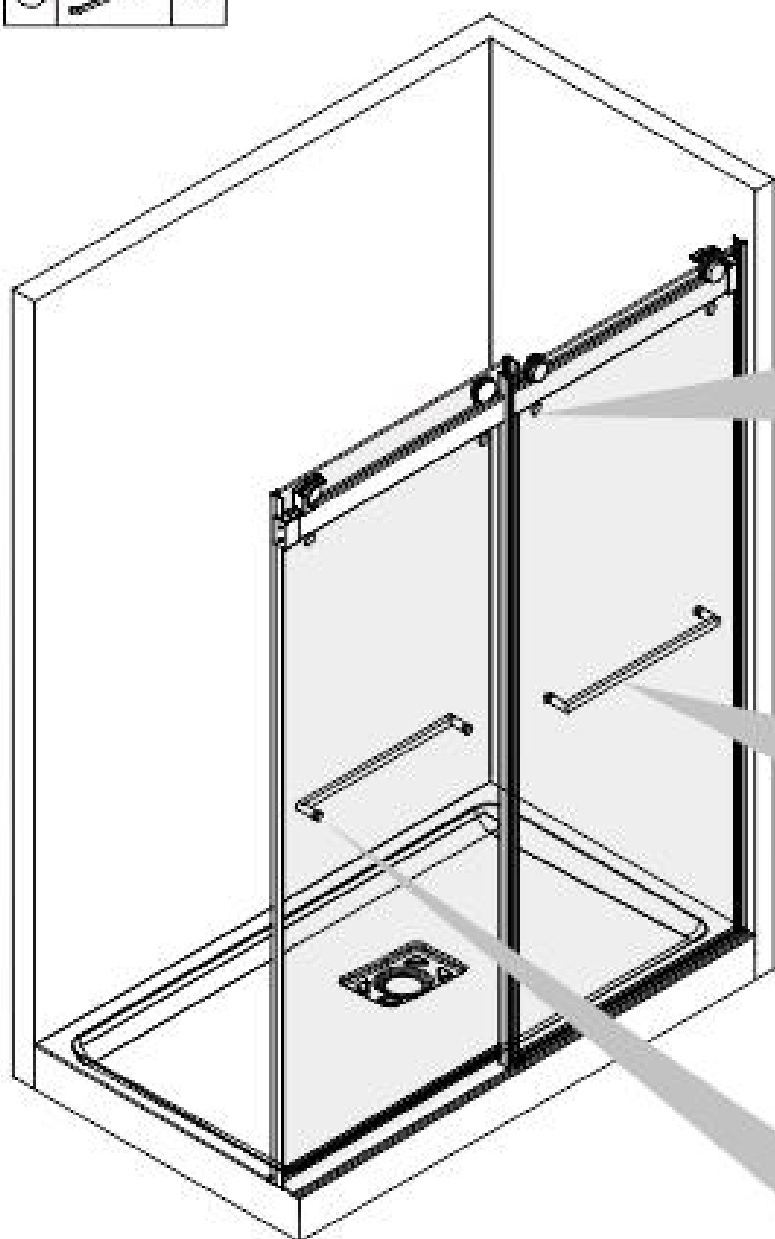

16

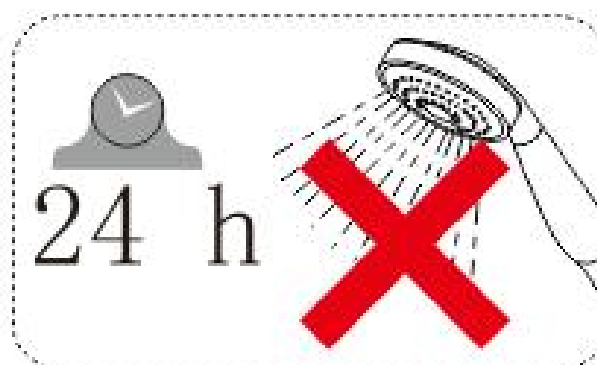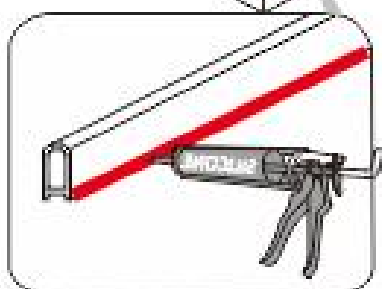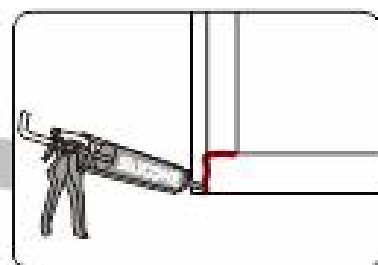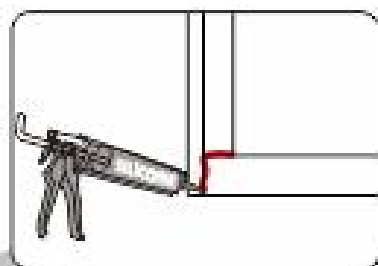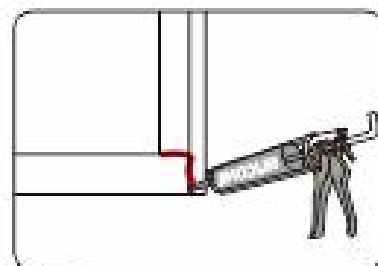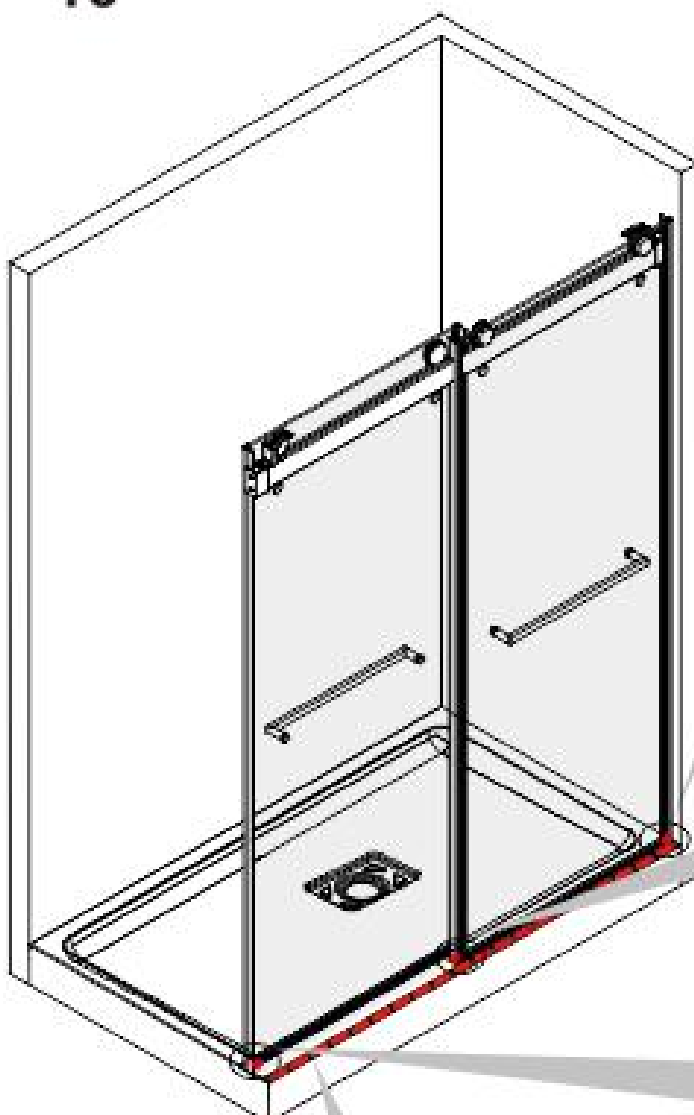

Do not use the shower enclosure for at least 24 hours in order to allow the silicone sealant to cure fully.

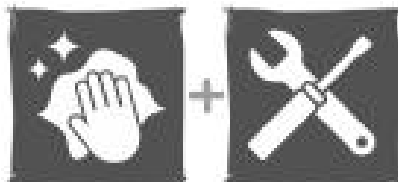

Care & maintenance

The golden rules for care

NOTE: Use warm soapy water and a soft damp cloth to keep the glass clean. Wipe dry with a clean cloth. Glass cleaner can be used if required. Scourers, abrasives and chemical cleaners can damage the glass and pattern, and should not be used.

In hard water areas, insoluble lime salts may be deposited on the glass. If this is allowed to build up it becomes increasingly difficult to remove and looks unsightly. Regular cleaning will minimize this effect.

- ✓ Do not attempt to cut the glass.
- ✓ Do not strike the glass with hard or pointed items.
- ✓ Regularly check moving parts such as rollers and hinges to ensure they are secure and adjusted correctly. Tighten and adjust where required. Also check all sealed joints to ensure seal has not deteriorated. Re-seal if required.

TOOLkiss®



Customer service



sales@toolkiss.com



+1 (832)3768443

If you have any questions please do
not hesitate to contact us.

.....

TOOLKISS is the destination for all things home and a
place that helps everyone, anywhere, create their
feeling of home.

🌐 www.toolkiss.com