

Please read all instructions before proceeding.

## Bottom Lock Installation Instructions (Figure 1)

1. Begin by inserting locking channels into bottom of fence, one space above bottom of fence.
2. Insert Privacy Slat through top of fence with tapered end pointing down. Slide slat down through openings until it securely locks into the locking channel.
3. Continue inserting slats individually until desired section is covered. Slats should have an even appearance when securely locked in place.

## Top Lock Installation Instructions (Figure 2)

1. Insert Privacy Slat tapered end up into fence channel, until bottom of slat reaches the ground.
2. Continue inserting Privacy Slats individually until desired section is covered.
3. From either side insert locking channel just below the top rail and above inserted slats. Push tapered end of Privacy Slat into locking channel to secure the Privacy Slats to your fence.

Figure 1

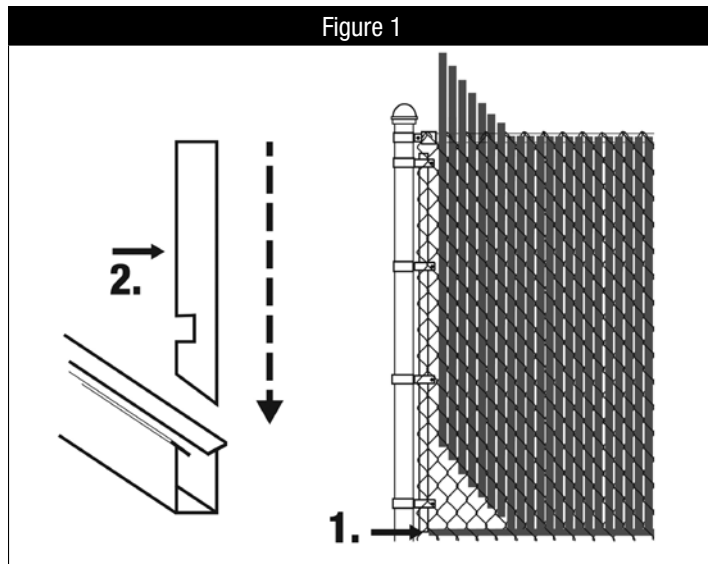


Figure 2

