

installation instructions:

SIGNATURE URETHANE PILASTERS

SAFETY INSTRUCTIONS

Make sure to use the correct tools recommended.

Wear safety goggles.

Follow fixture, power tools, and paint manufacturers' instructions and users manuals.

Use common sense and follow good construction practices.

TOOL & MATERIAL CHECKLIST

- construction adhesive
- caulking gun
- electric drill
- miter saw
- noncorrosive screws

IMPORTANT INFO


- It is highly recommended that you paint or finish pilaster before you install it.
- Fill fastener holes in with acrylic caulk.
- Use 100% acrylic paint before in stalling, finish with final coat to cover caulked holes.

INSTALL INSTRUCTIONS:

1. Measure the height of the opening.
2. Trim pilaster with miter saw or other saw to overall height.
Note: always trim from the bottom of the pilaster
3. Adhere using PL premium construction adhesive and any necessary fasteners for additional support.
4. Use caulk to seal edges. Use a finger or putty knife to smooth caulk.
5. Once caulk is dry, touch up using a high quality acrylic paint.

Note: If new construction, after installation of the pilasters butt and fit the manufacturers recommended J-Channel to the sides of the moulding.

EXAMPLE DIAGRAM:

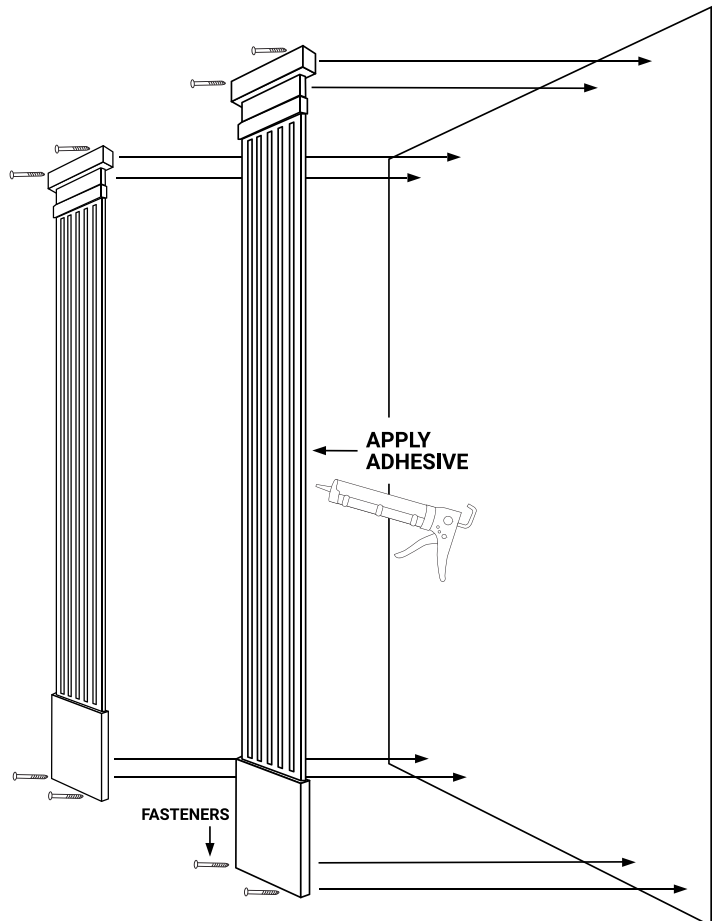

We Can Help. Call (866) 607-0453



Industry leading manufacturer of urethane, PVC, wood, rustic, and metal millwork

www.ekenamillwork.com