


## Shower Door Installation Instructions

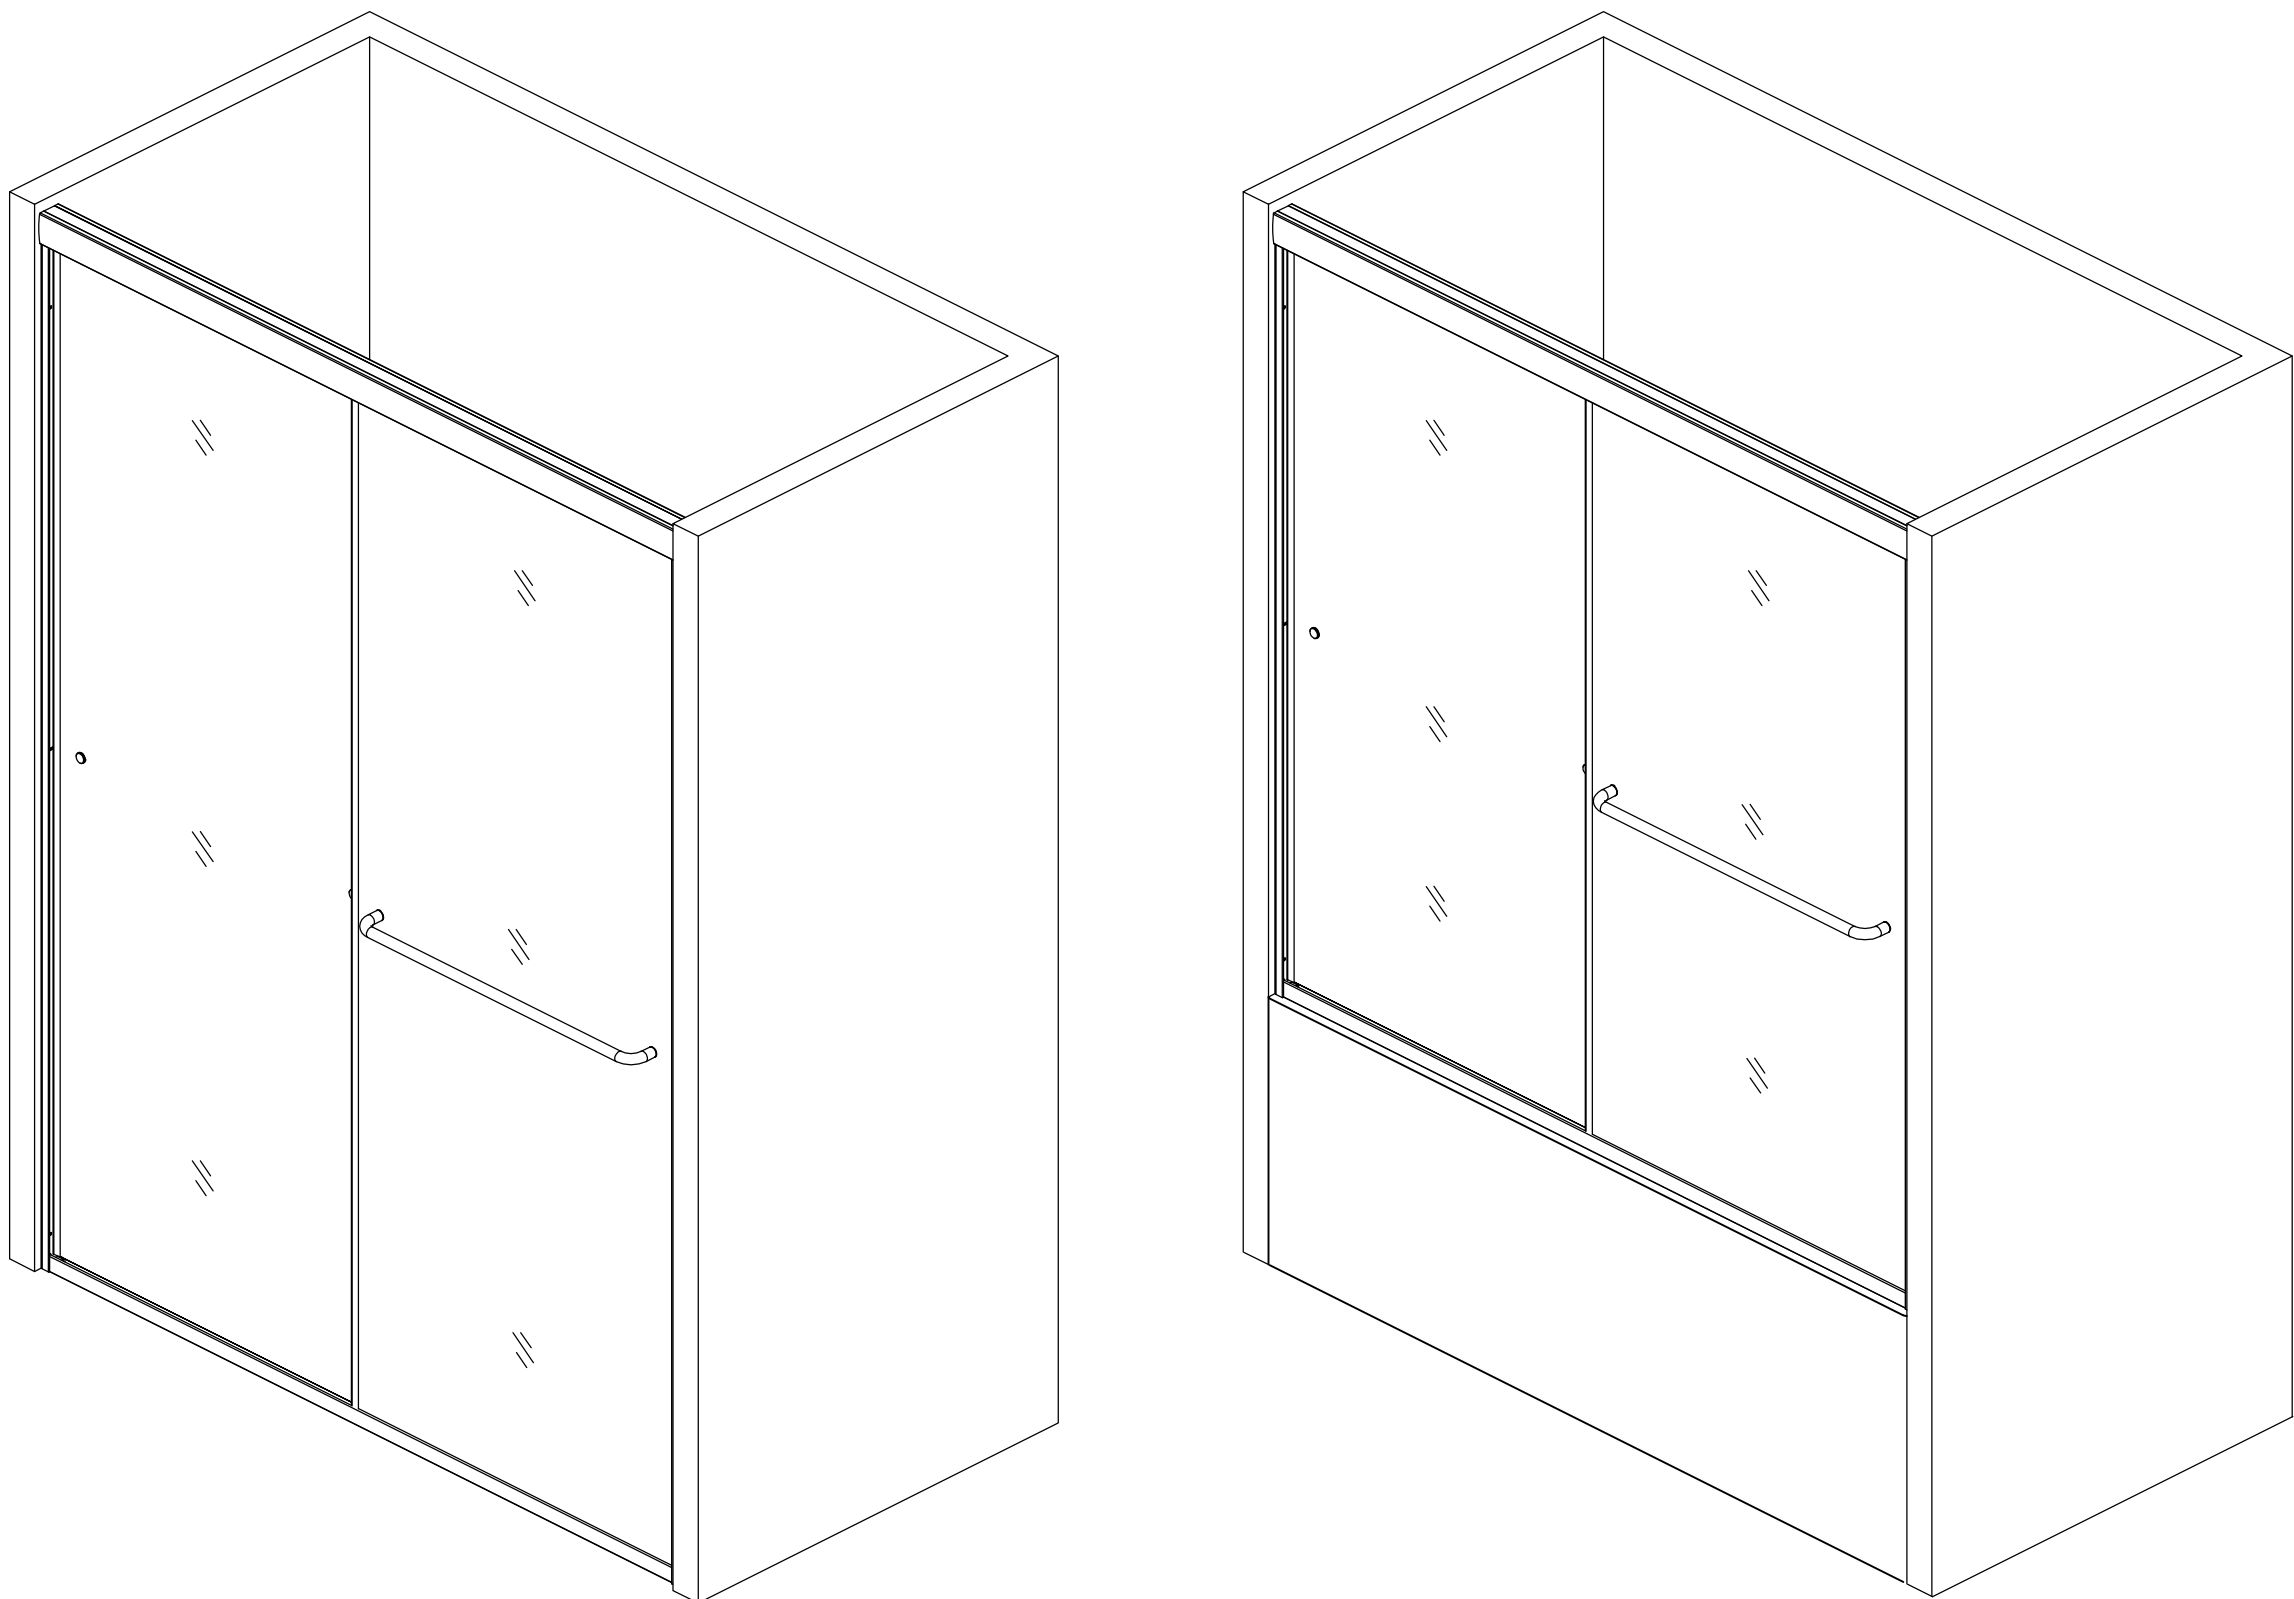

**Please do not return the product to the store.  
Contact us with any questions.**

---


Model Specific Preparation




REQUIRED:

Verify threshold and wall with a level.



1/4" ( 6mm )  
Out-of-Plumb  
Adjustment within  
the Wall Profile.

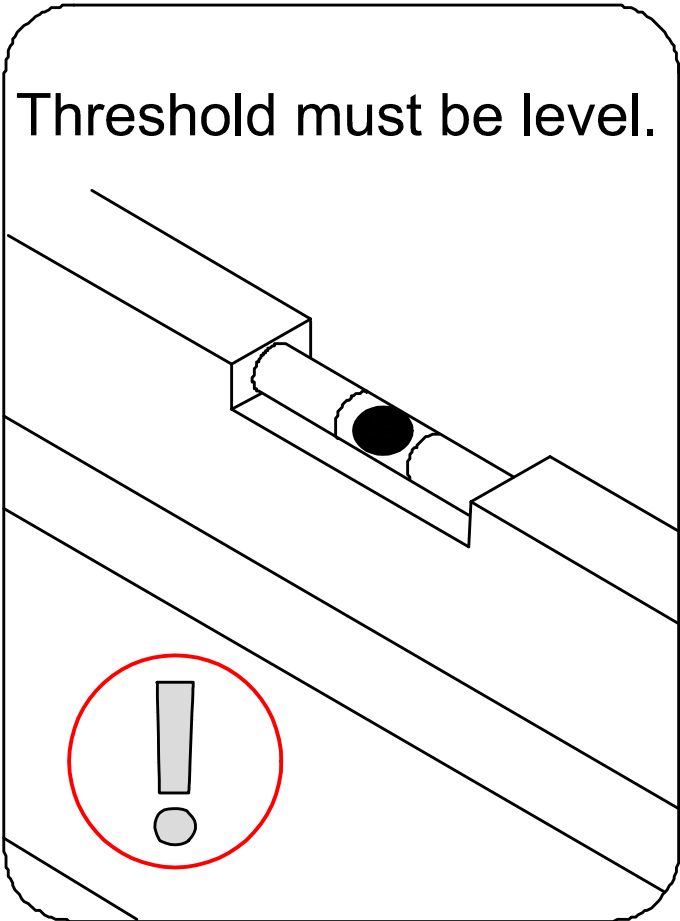


Threshold must be level.

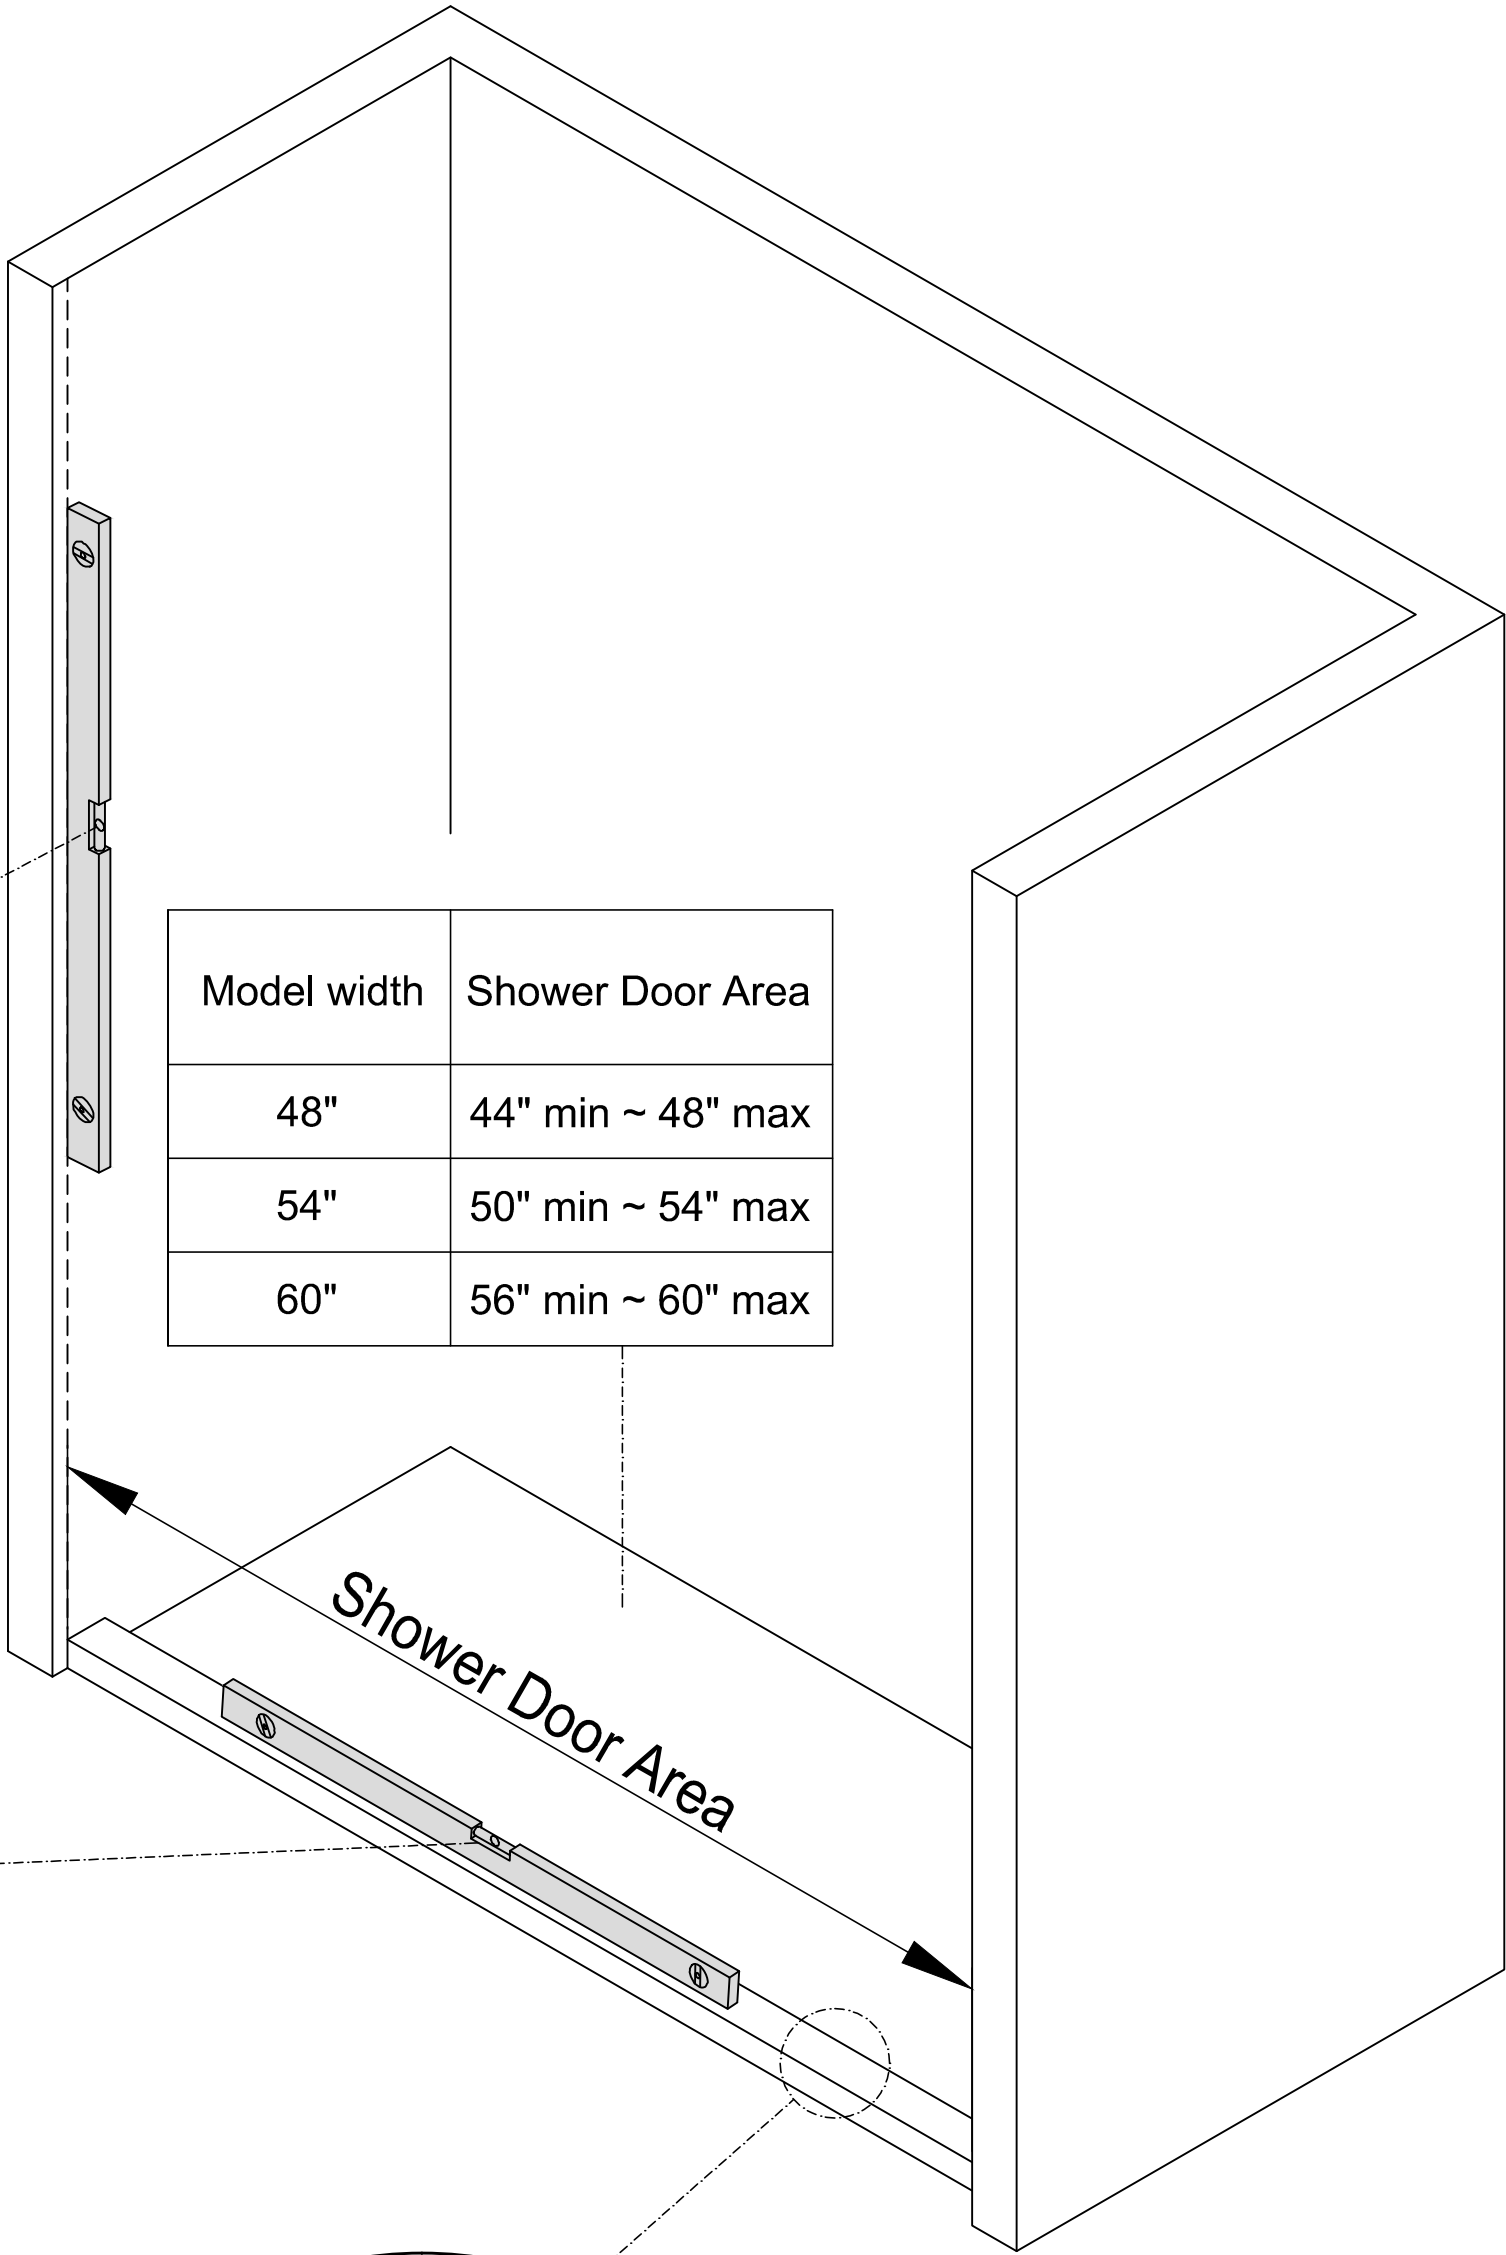

| Model width | Shower Door Area  |
|-------------|-------------------|
| 48"         | 44" min ~ 48" max |
| 54"         | 50" min ~ 54" max |
| 60"         | 56" min ~ 60" max |

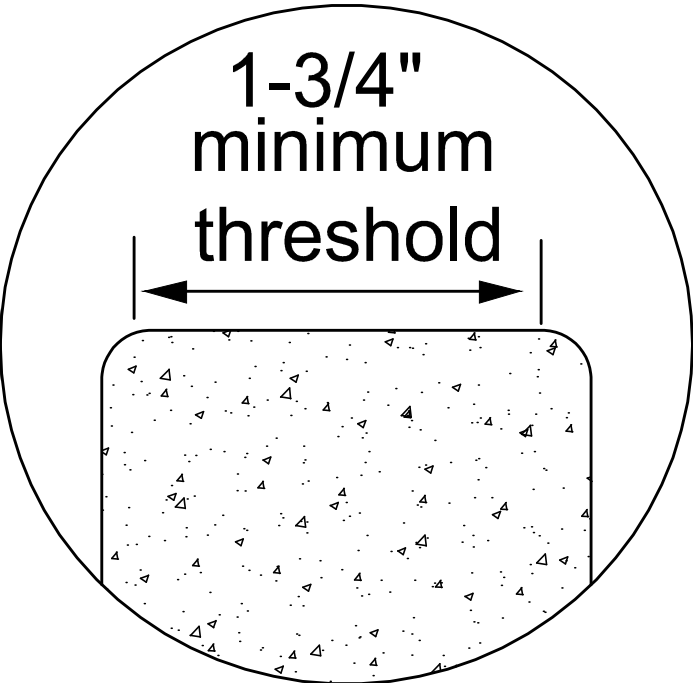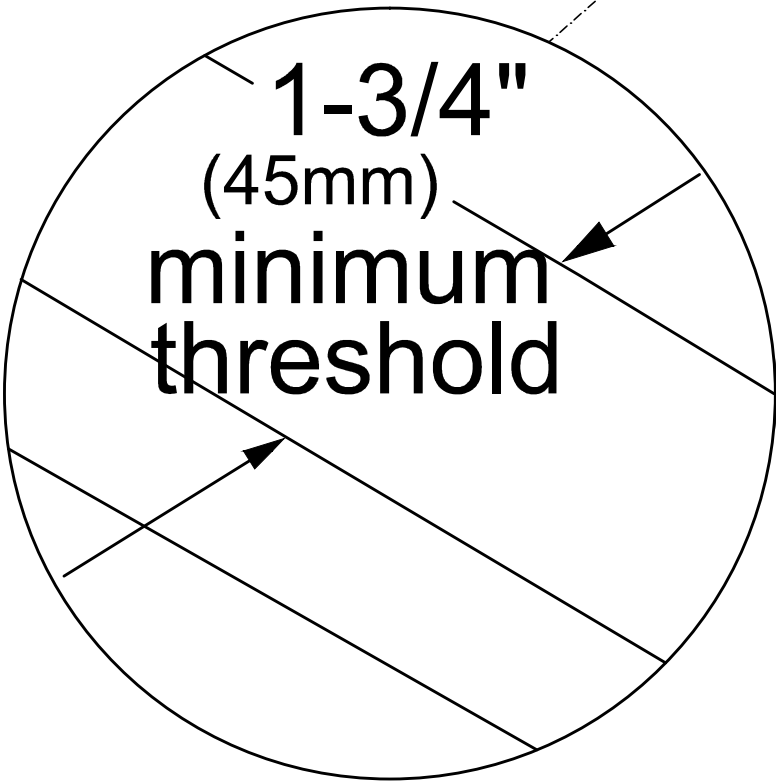

PACKAGE CONTENT

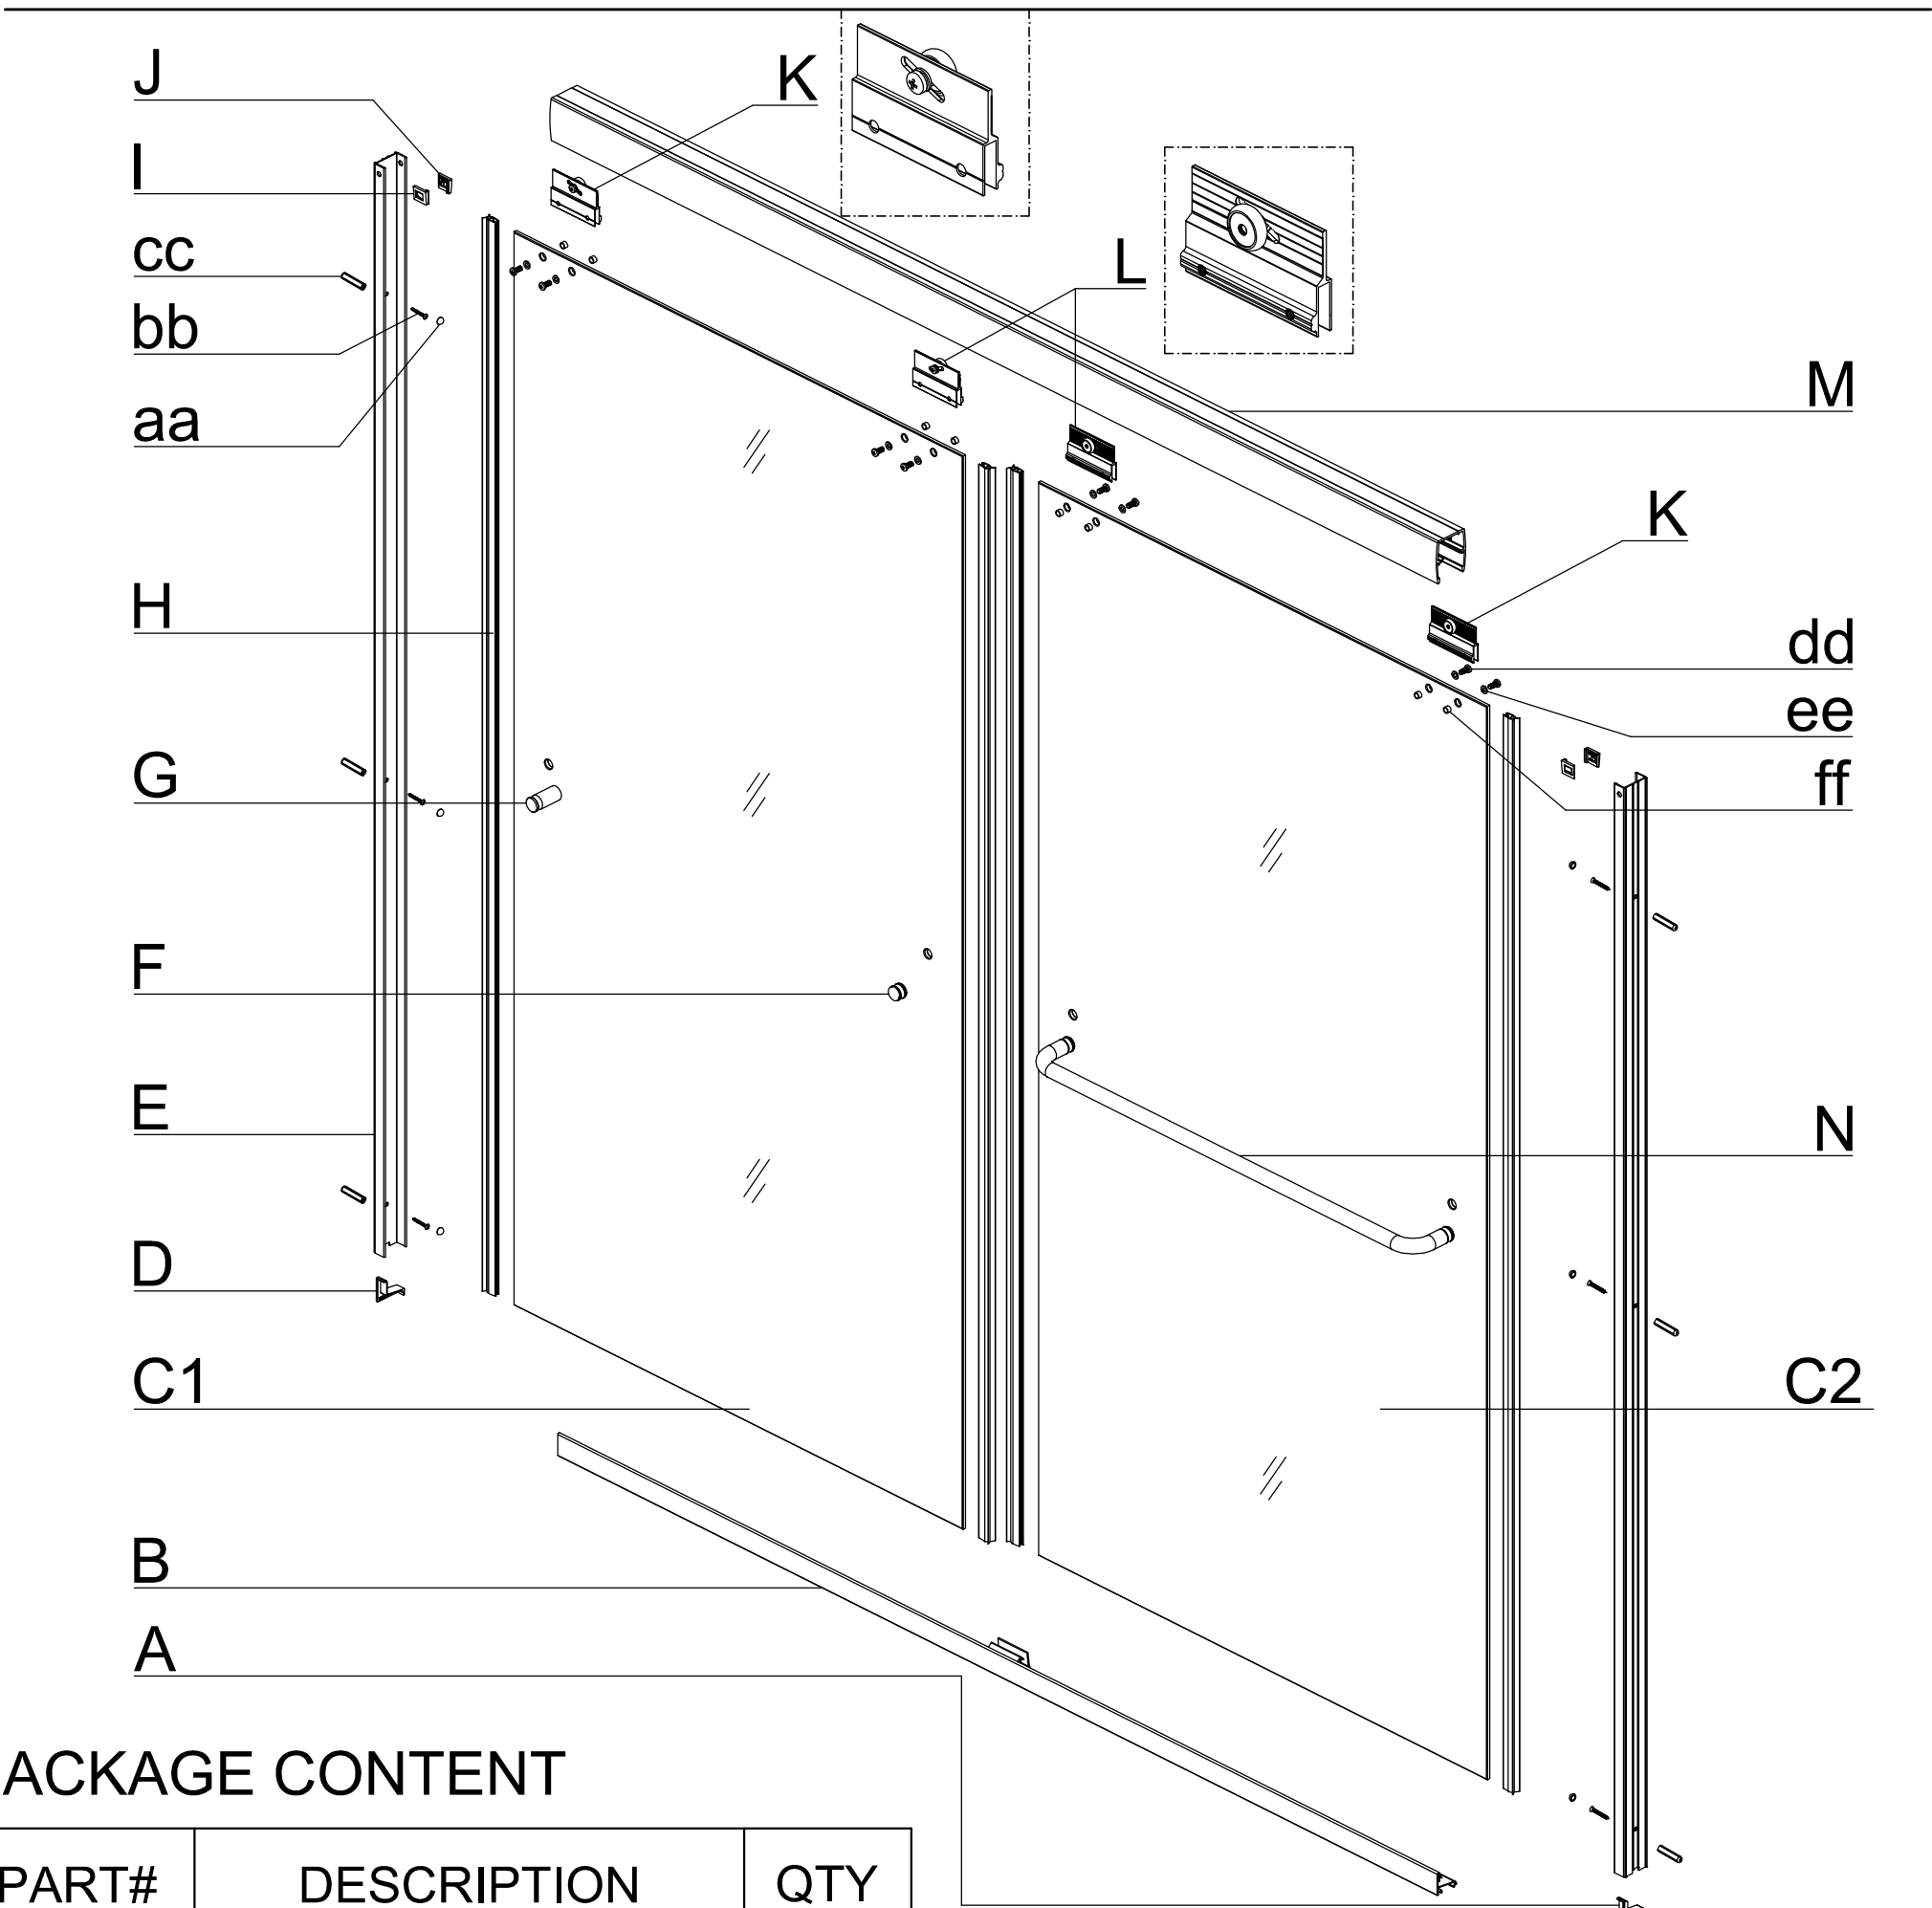

PACKAGE CONTENT

| PART# | DESCRIPTION              | QTY |
|-------|--------------------------|-----|
| A     | Bottom threshold cap (R) | 1   |
| B     | Bottom Rail              | 1   |
| C1    | Inside Door panel        | 1   |
| C2    | Outside Door panel       | 1   |
| D     | Bottom threshold cap (L) | 1   |
| E     | Wall Jamb                | 2   |
| F     | Knob A                   | 1   |
| G     | Knob B                   | 1   |
















| PART# | DESCRIPTION               | QTY |
|-------|---------------------------|-----|
| H     | PVC seal                  | 4   |
| I     | Upper guide rail lock (L) | 2   |
| J     | Upper guide rail lock (R) | 2   |
| K     | Roller set (L)            | 2   |
| L     | Roller set (R)            | 2   |
| M     | Upper Guide Rail          | 1   |
| N     | Towel Bar                 | 1   |





Inspect all parts for missing prior to installation!  
Contact us for any part missing.



PACKAGE CONTENT
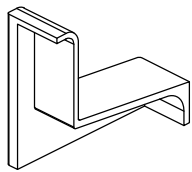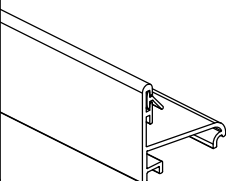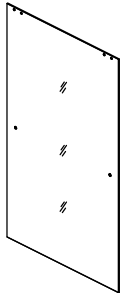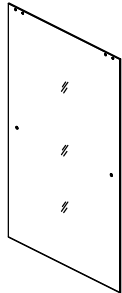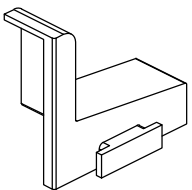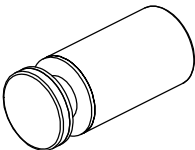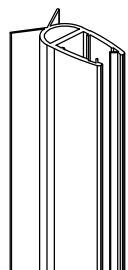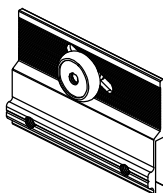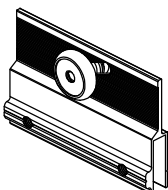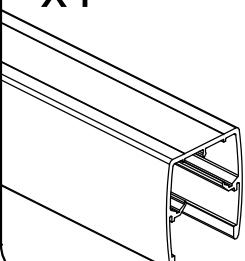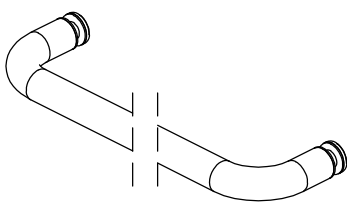
|                                                                                                       |                                                                                                       |                                                                                                         |                                                                                                         |
|-------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| <b>A</b><br>x1<br>   | <b>B</b><br>x1<br>   | <b>C1</b><br>x1<br>  | <b>C2</b><br>x1<br>  |
| <b>D</b><br>x1<br>  | <b>E</b><br>x2<br>  | <b>F</b><br>x1<br>  | <b>G</b><br>x1<br>  |
| <b>H</b><br>x4<br> | <b>I</b><br>x2<br> | <b>J</b><br>x2<br> | <b>L</b><br>x2<br> |
| <b>K</b><br>x2<br> | <b>M</b><br>x1<br> | <b>N</b><br>x1<br> |                                                                                                         |

















HARDWARE CONTENT
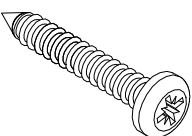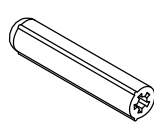
|                                                                                                                                   |                                                                                                                                        |                                                                                                                                                  |                                                                                                                                 |
|-----------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------|
| <b>aa</b><br><br>Screw cap<br>7 pcs            | <b>bb</b><br><br>Metric Screw<br>ST4X30mm<br>7 pcs  | <b>cc</b><br><br>Wall anchor<br>Ø6x28mm<br>7 pcs            | <b>dd</b><br><br>Screw<br>M5X12mm<br>9 pcs |
| <b>ee</b><br><br>Washer<br>Φ10XΦ5X1.0<br>9 pcs | <b>ff</b><br><br>Plastic tube<br>Φ8XΦ6.2X5<br>9 pcs | <div></div> <div>Additional spare parts are included.</div> |                                                                                                                                 |

NOTE

Inspect all parts for missing prior to installation!  
Contact us for any part missing.

TOOLS REQUIRED
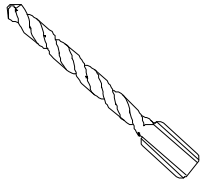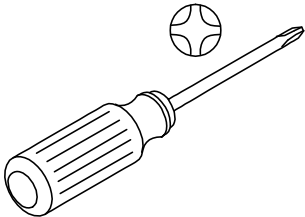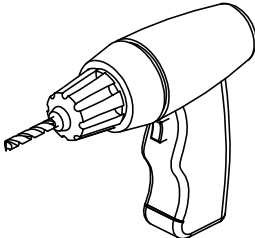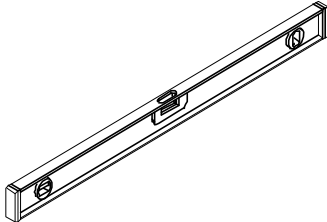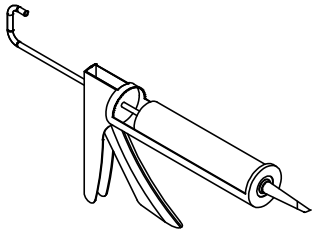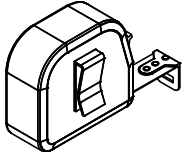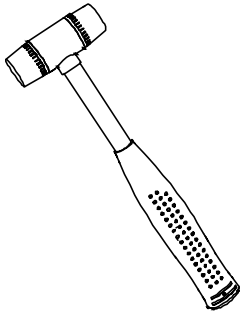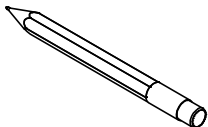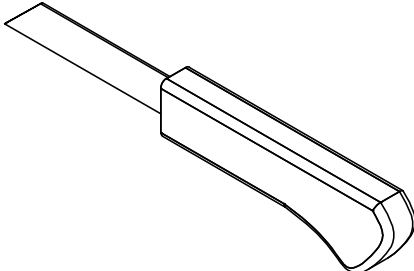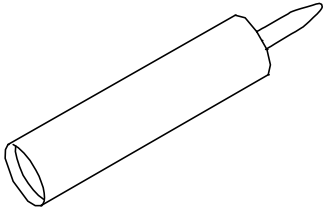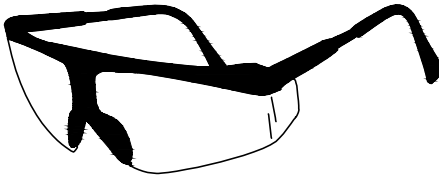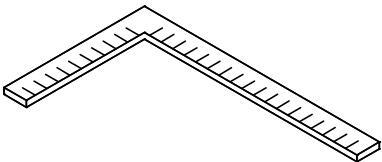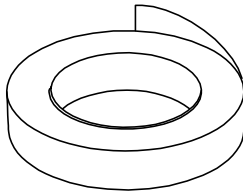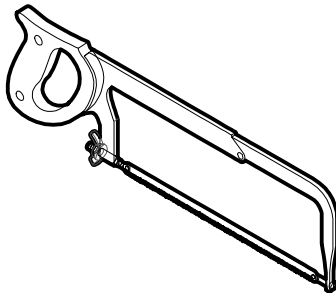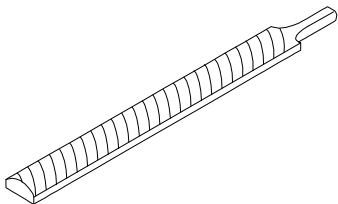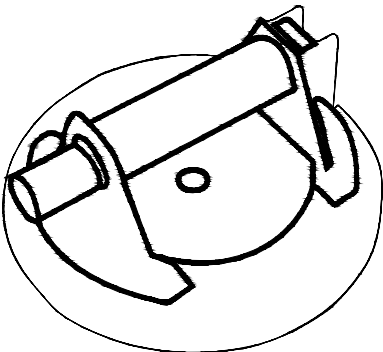
|                                                                                                                                                        |                                                                                                                |                                                                                                                                  |                                                                                                             |
|--------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|
| <p>Drill Bits</p>  <p>Ø1/4" &amp; Ø5/16" (6&amp;8mm) dia.<br/>HSS</p> | <p>Screw Driver</p>           | <p>Drill</p>                                  | <p>Level</p>             |
| <p>Silicone</p>                                                     | <p>Measuring Tape</p>       | <p>Soft Head Hammer</p>                     | <p>Pencil</p>          |
| <p>Knife</p>                                                        | <p>Sealant</p>              | <p>MASONRY DRILL BIT FOR TILE<br/>Ø6mm</p>  | <p>Safety Glasses</p>  |
| <p>Glove</p>                                                        | <p>Carpenter's Squarer</p>  | <p>Masking or painter's tape</p>            | <p>Hack Saw</p>        |
| <p>Metal File</p>                                                   | <p>Glass suction</p>        |                                                                                                                                  |                                                                                                             |

## SAFETY INFORMATION


### CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product.

To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
- Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation, protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!
- Keep this installation manual for future reference.

**NOTE:** Two people should perform this installaton.

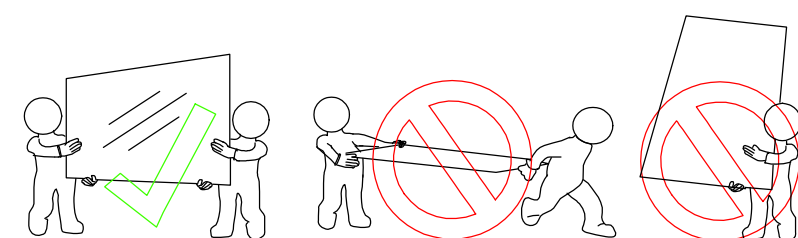



## 1

### Measure the finished opening width.

NOTE

- 1.Measure the finished opening width at the bottom and at the model height.  
Use these dimensions as “W1” (top) and “W2”(bottom) in step #2.
- 2.Also check the threshold for level and the walls for plumb.(Fig 1)

This model will only accommodate up to 1/4"(6mm) for out-of-plumb condition.


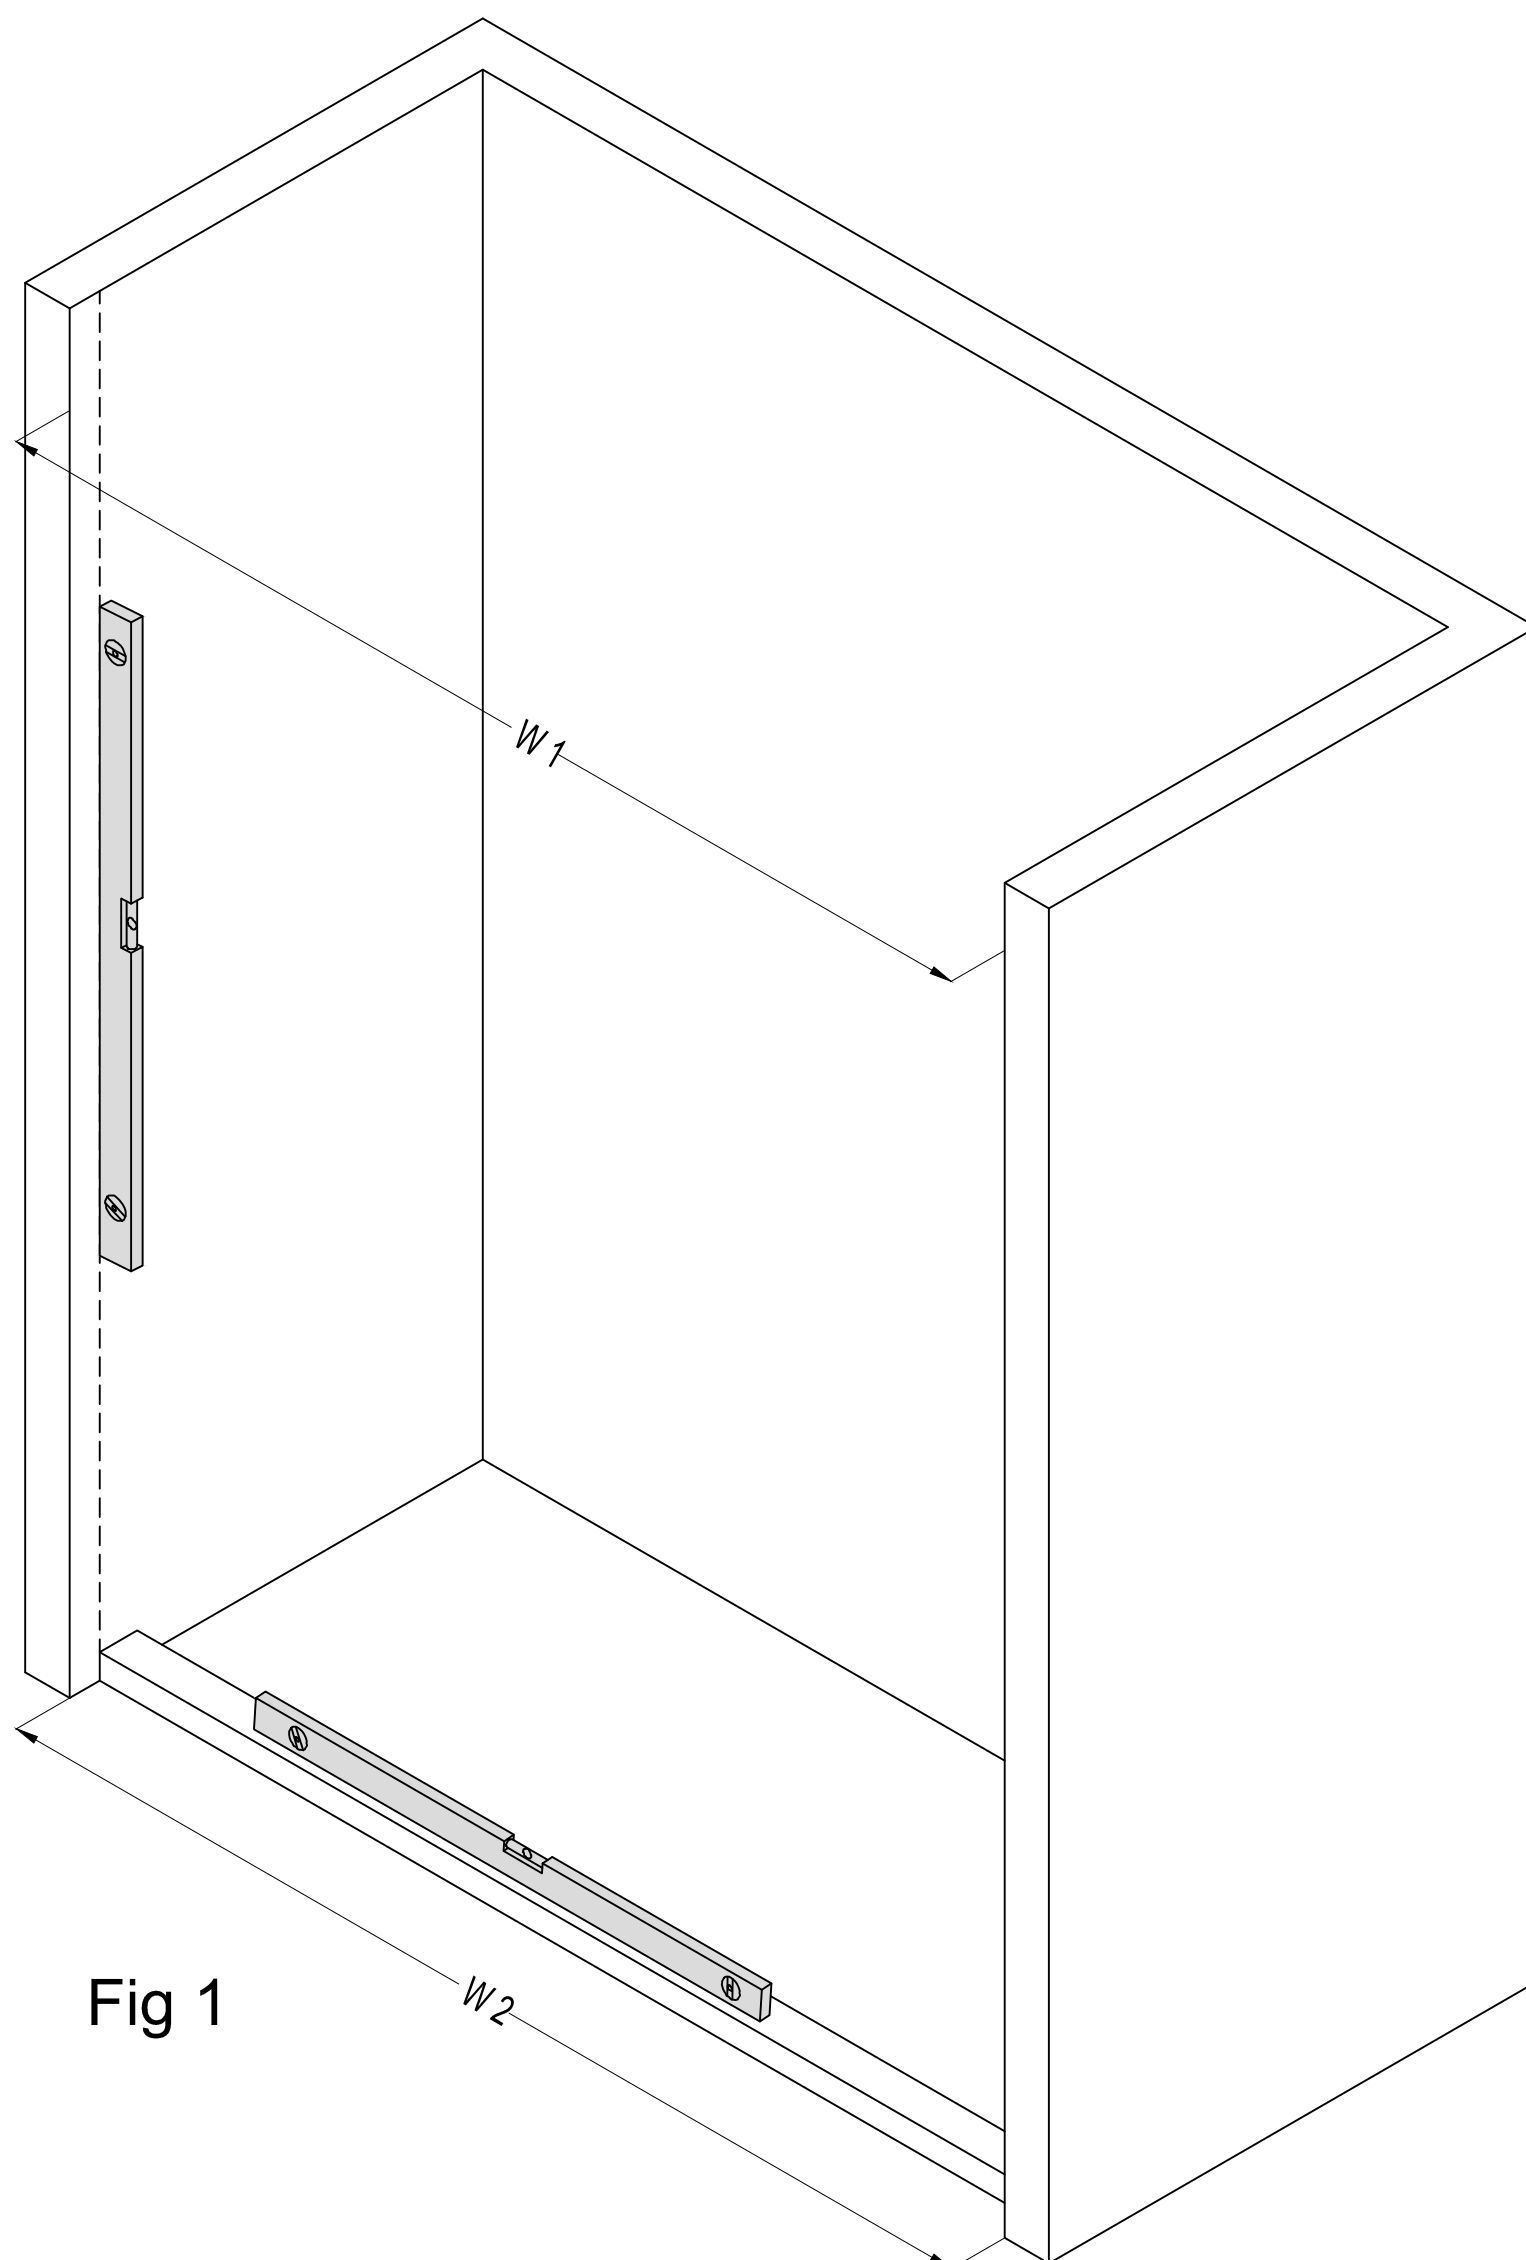


Fig 1



Finished opening top (W1)


Finished opening bottom (W2)

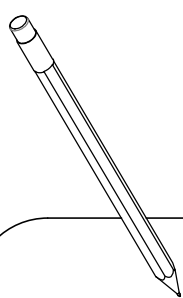

2

Cut the **Upper Guide Rail (M)** and the **Bottom Rail (B)** to fit your finished opening using either a miter saw or a hacksaw

Cut the **Upper Guide Rail (M)** to: "W1" (top) dimension - 1/16"

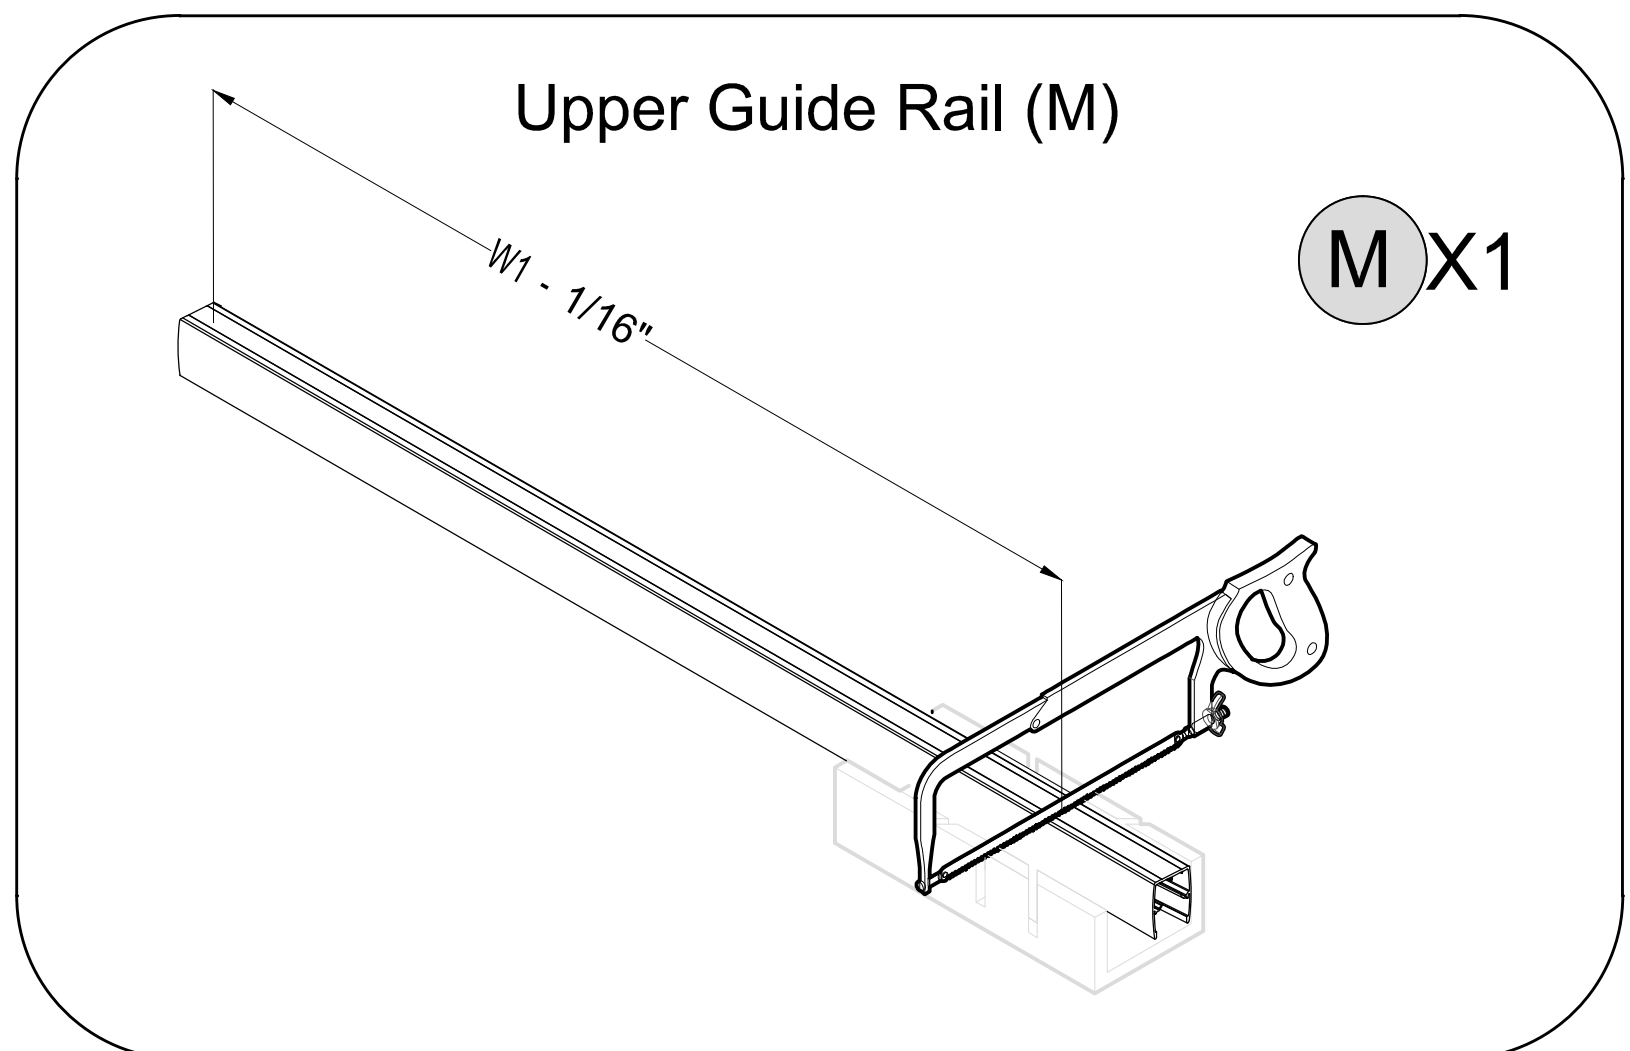

Cut the Bottom Rail (B) to: "W2"(bottom) dimension - 9/16"

Use a metal file to remove any burrs from the cut ends.

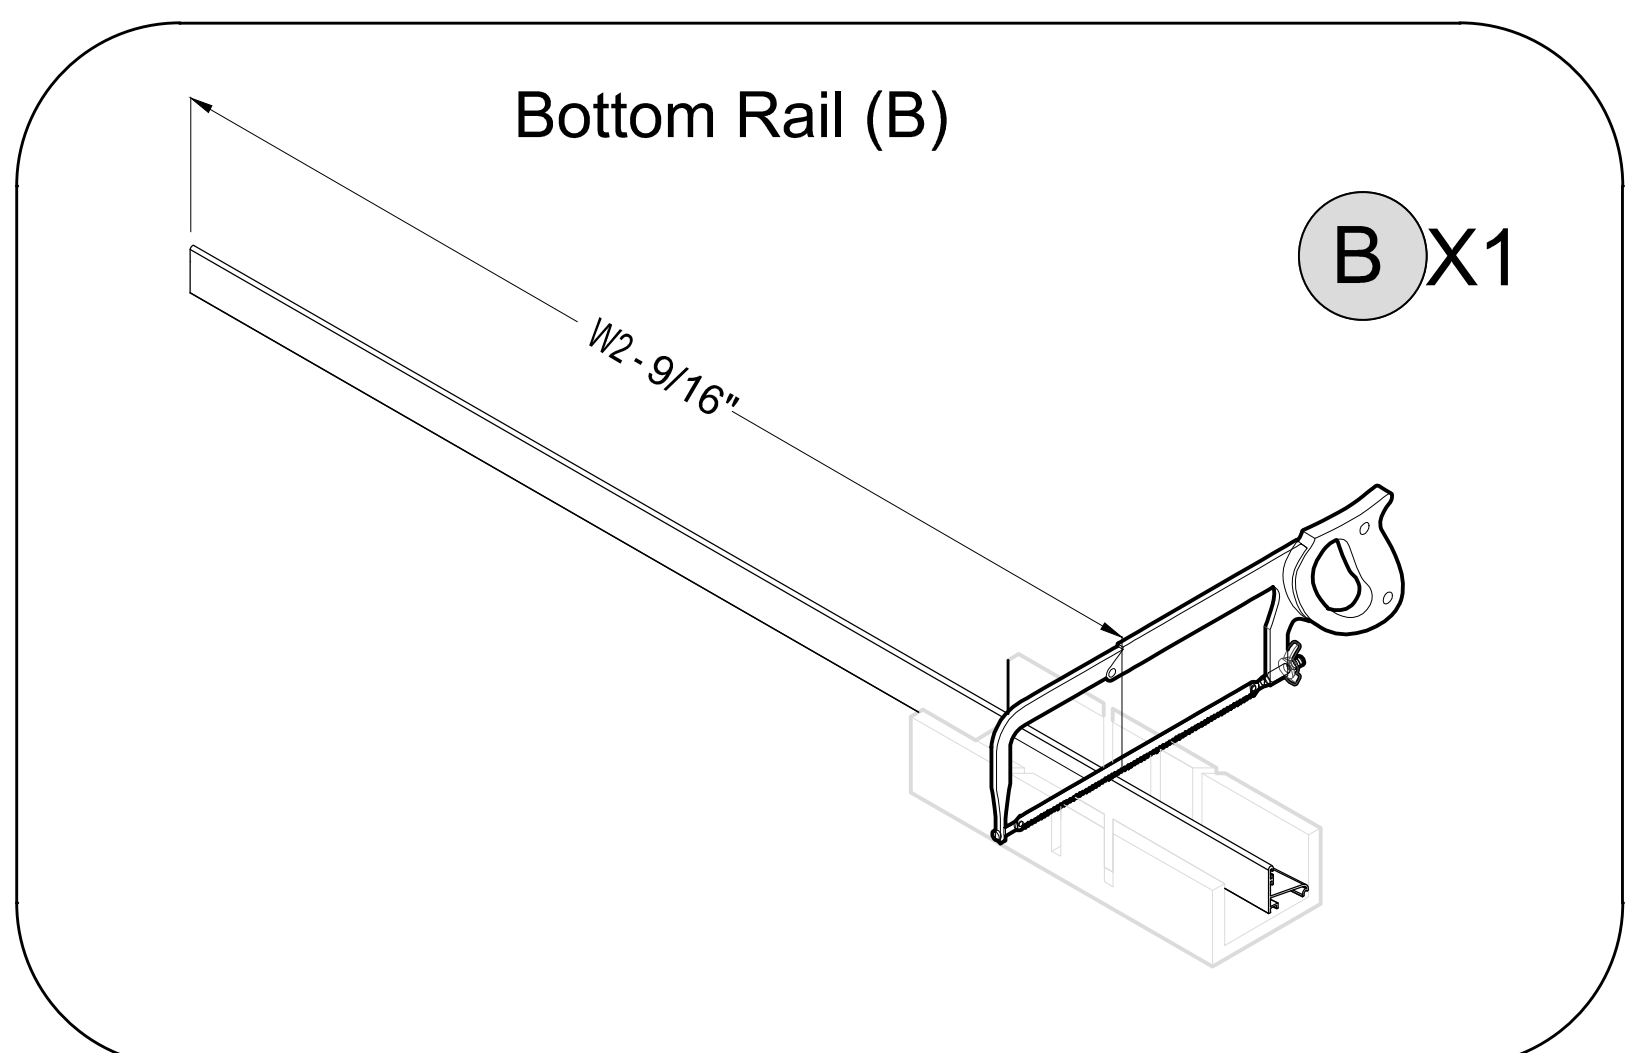


Fig 2



## 3

### Bottom Rail(B) Installation

NOTE

1. Apply silicone into the groove along the entire length of the **Bottom Rail(B)** as Fig a;
2. Measure in 5/16" from the outside of the **Bottom Rail(B)** as Fig.b.

Fig.a




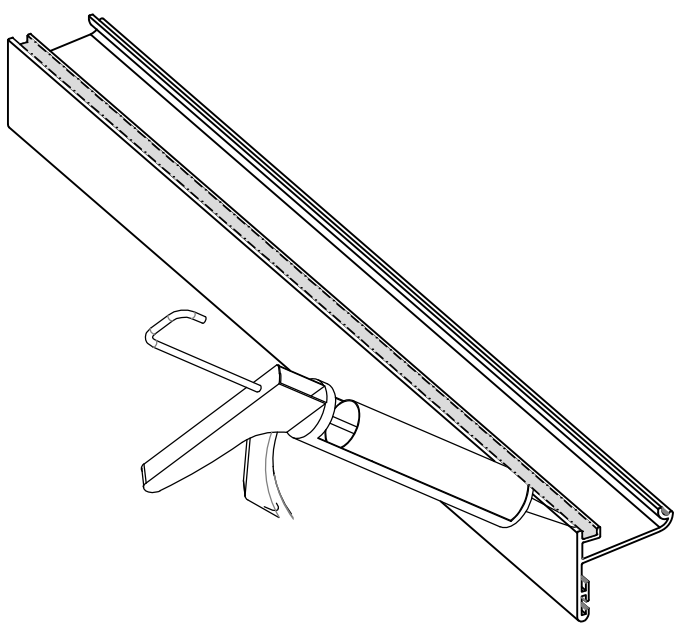


Fig.b

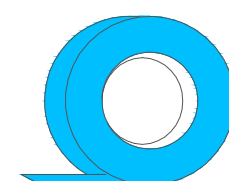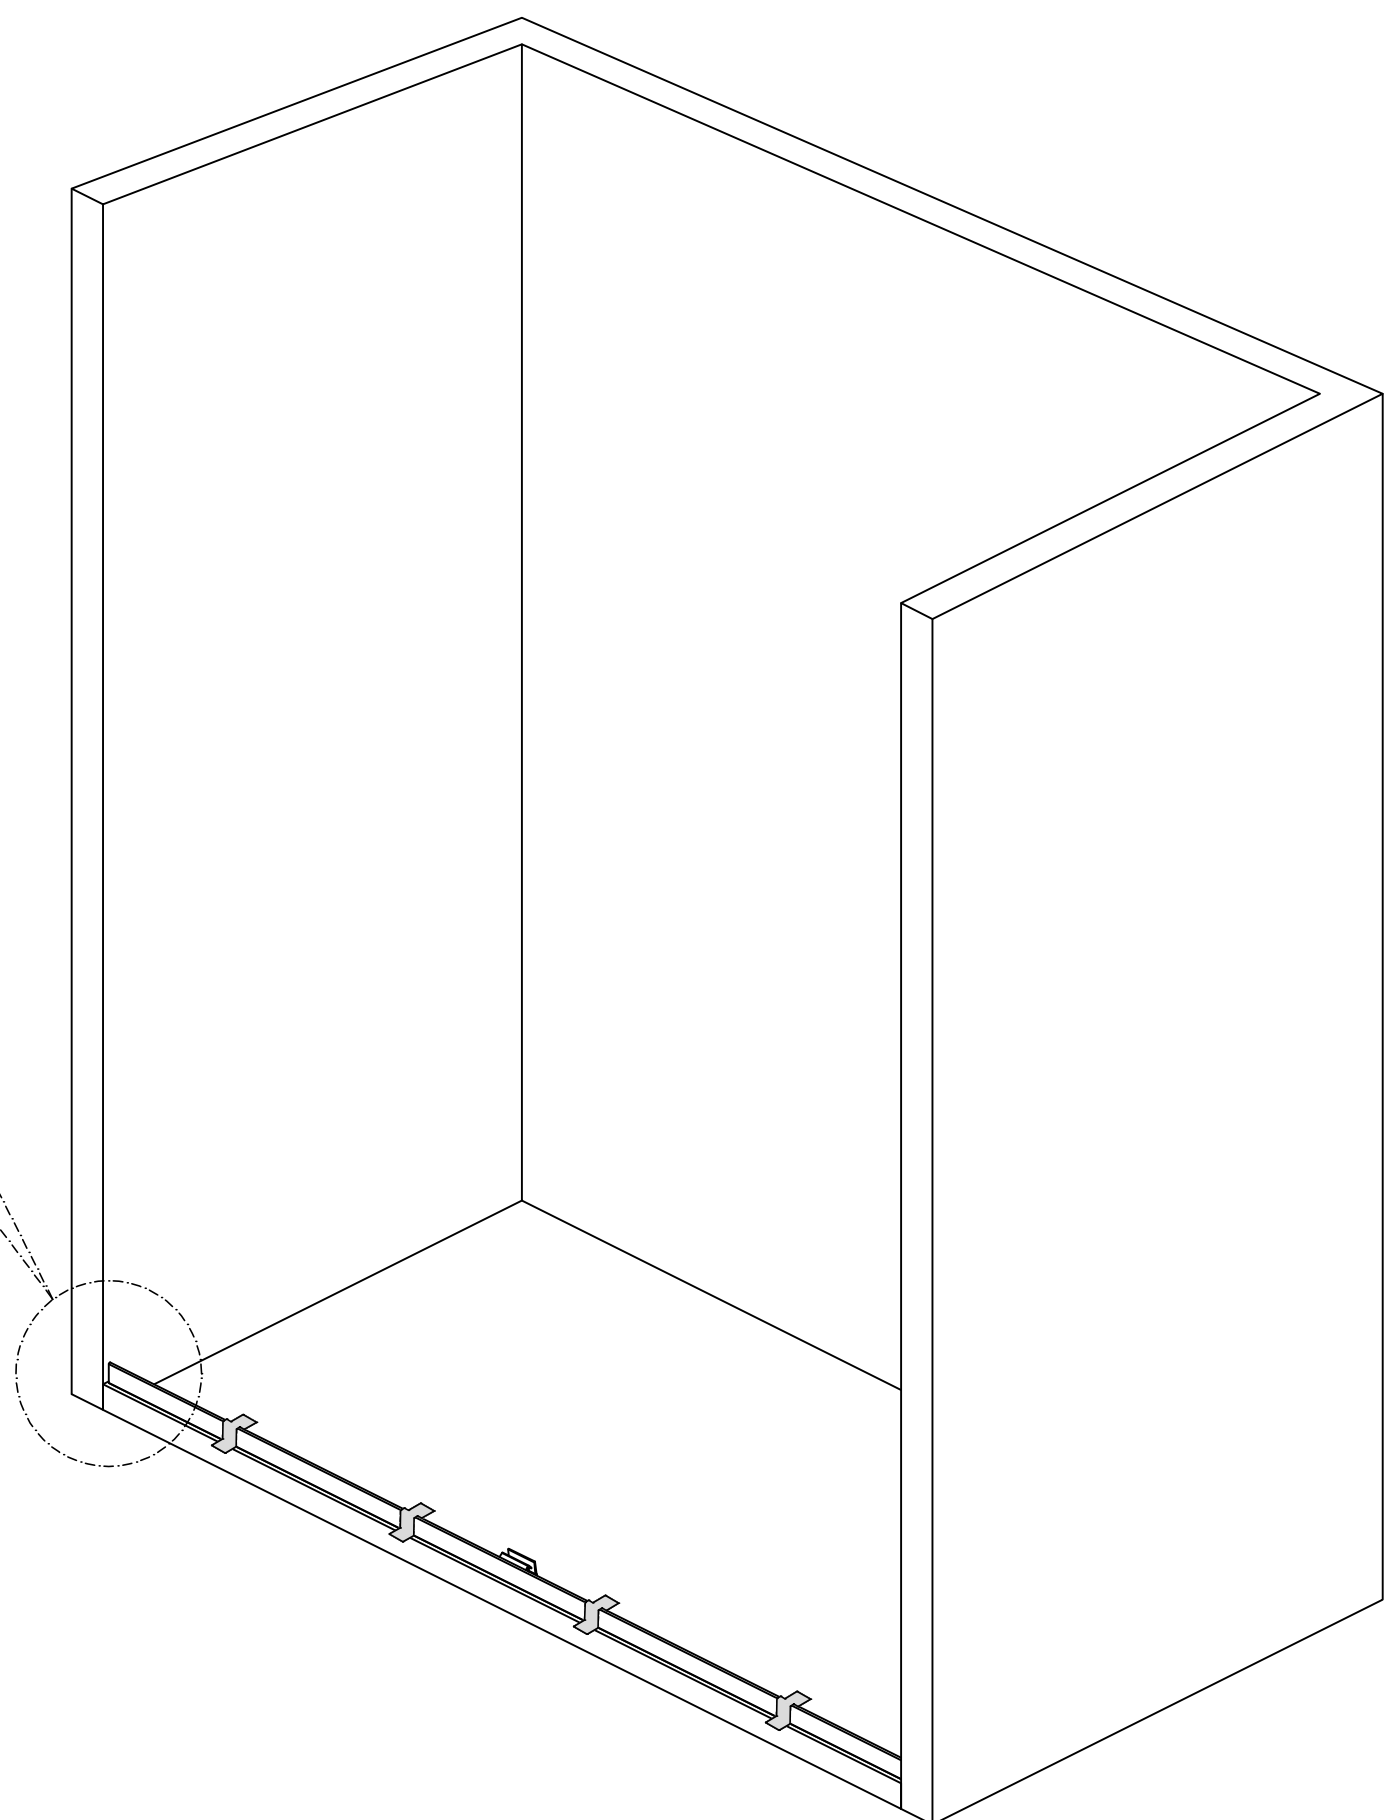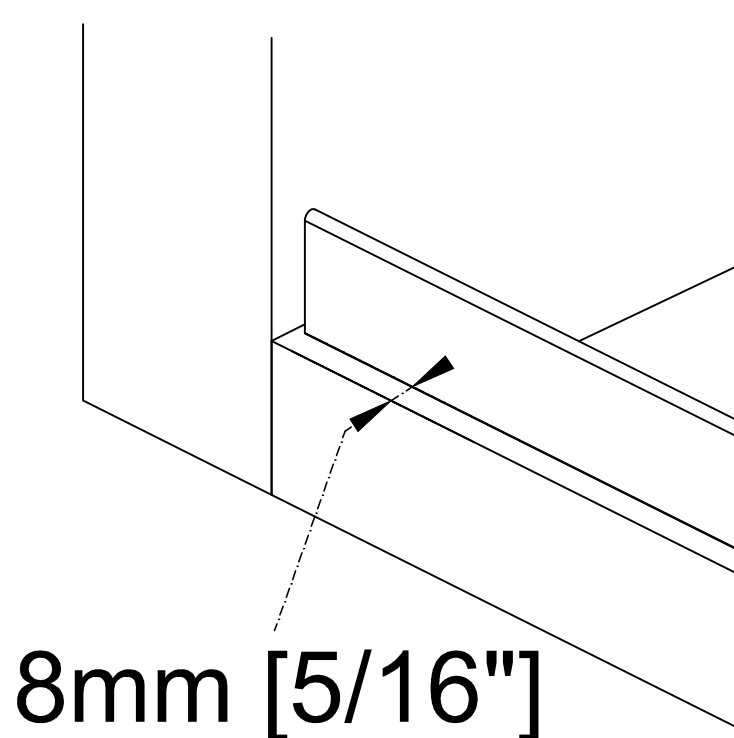


Use Painter's Tape to hold the Water seal tight in position while the silicone cures.

## 4 Wall Jamb(E) Installation


NOTE

1. Attach the **Cap(A & D)** to **Wall Jamb(E)** as Fig.a;
2. Attach the **Wall Jamb(E)** to **Bottom Rail(B)** as Fig.b;
3. Please note one end with 2 side holes faces up. Mark the location of the holes as Fig.c;
4. Drill the holes as Fig.d and Fig.e;
5. Apply silicone into the groove along the entire length of the **Wall Jamb(E)** as Fig f;
6. Attach the **Wall Jamb(E)** to the wall as Fig g.

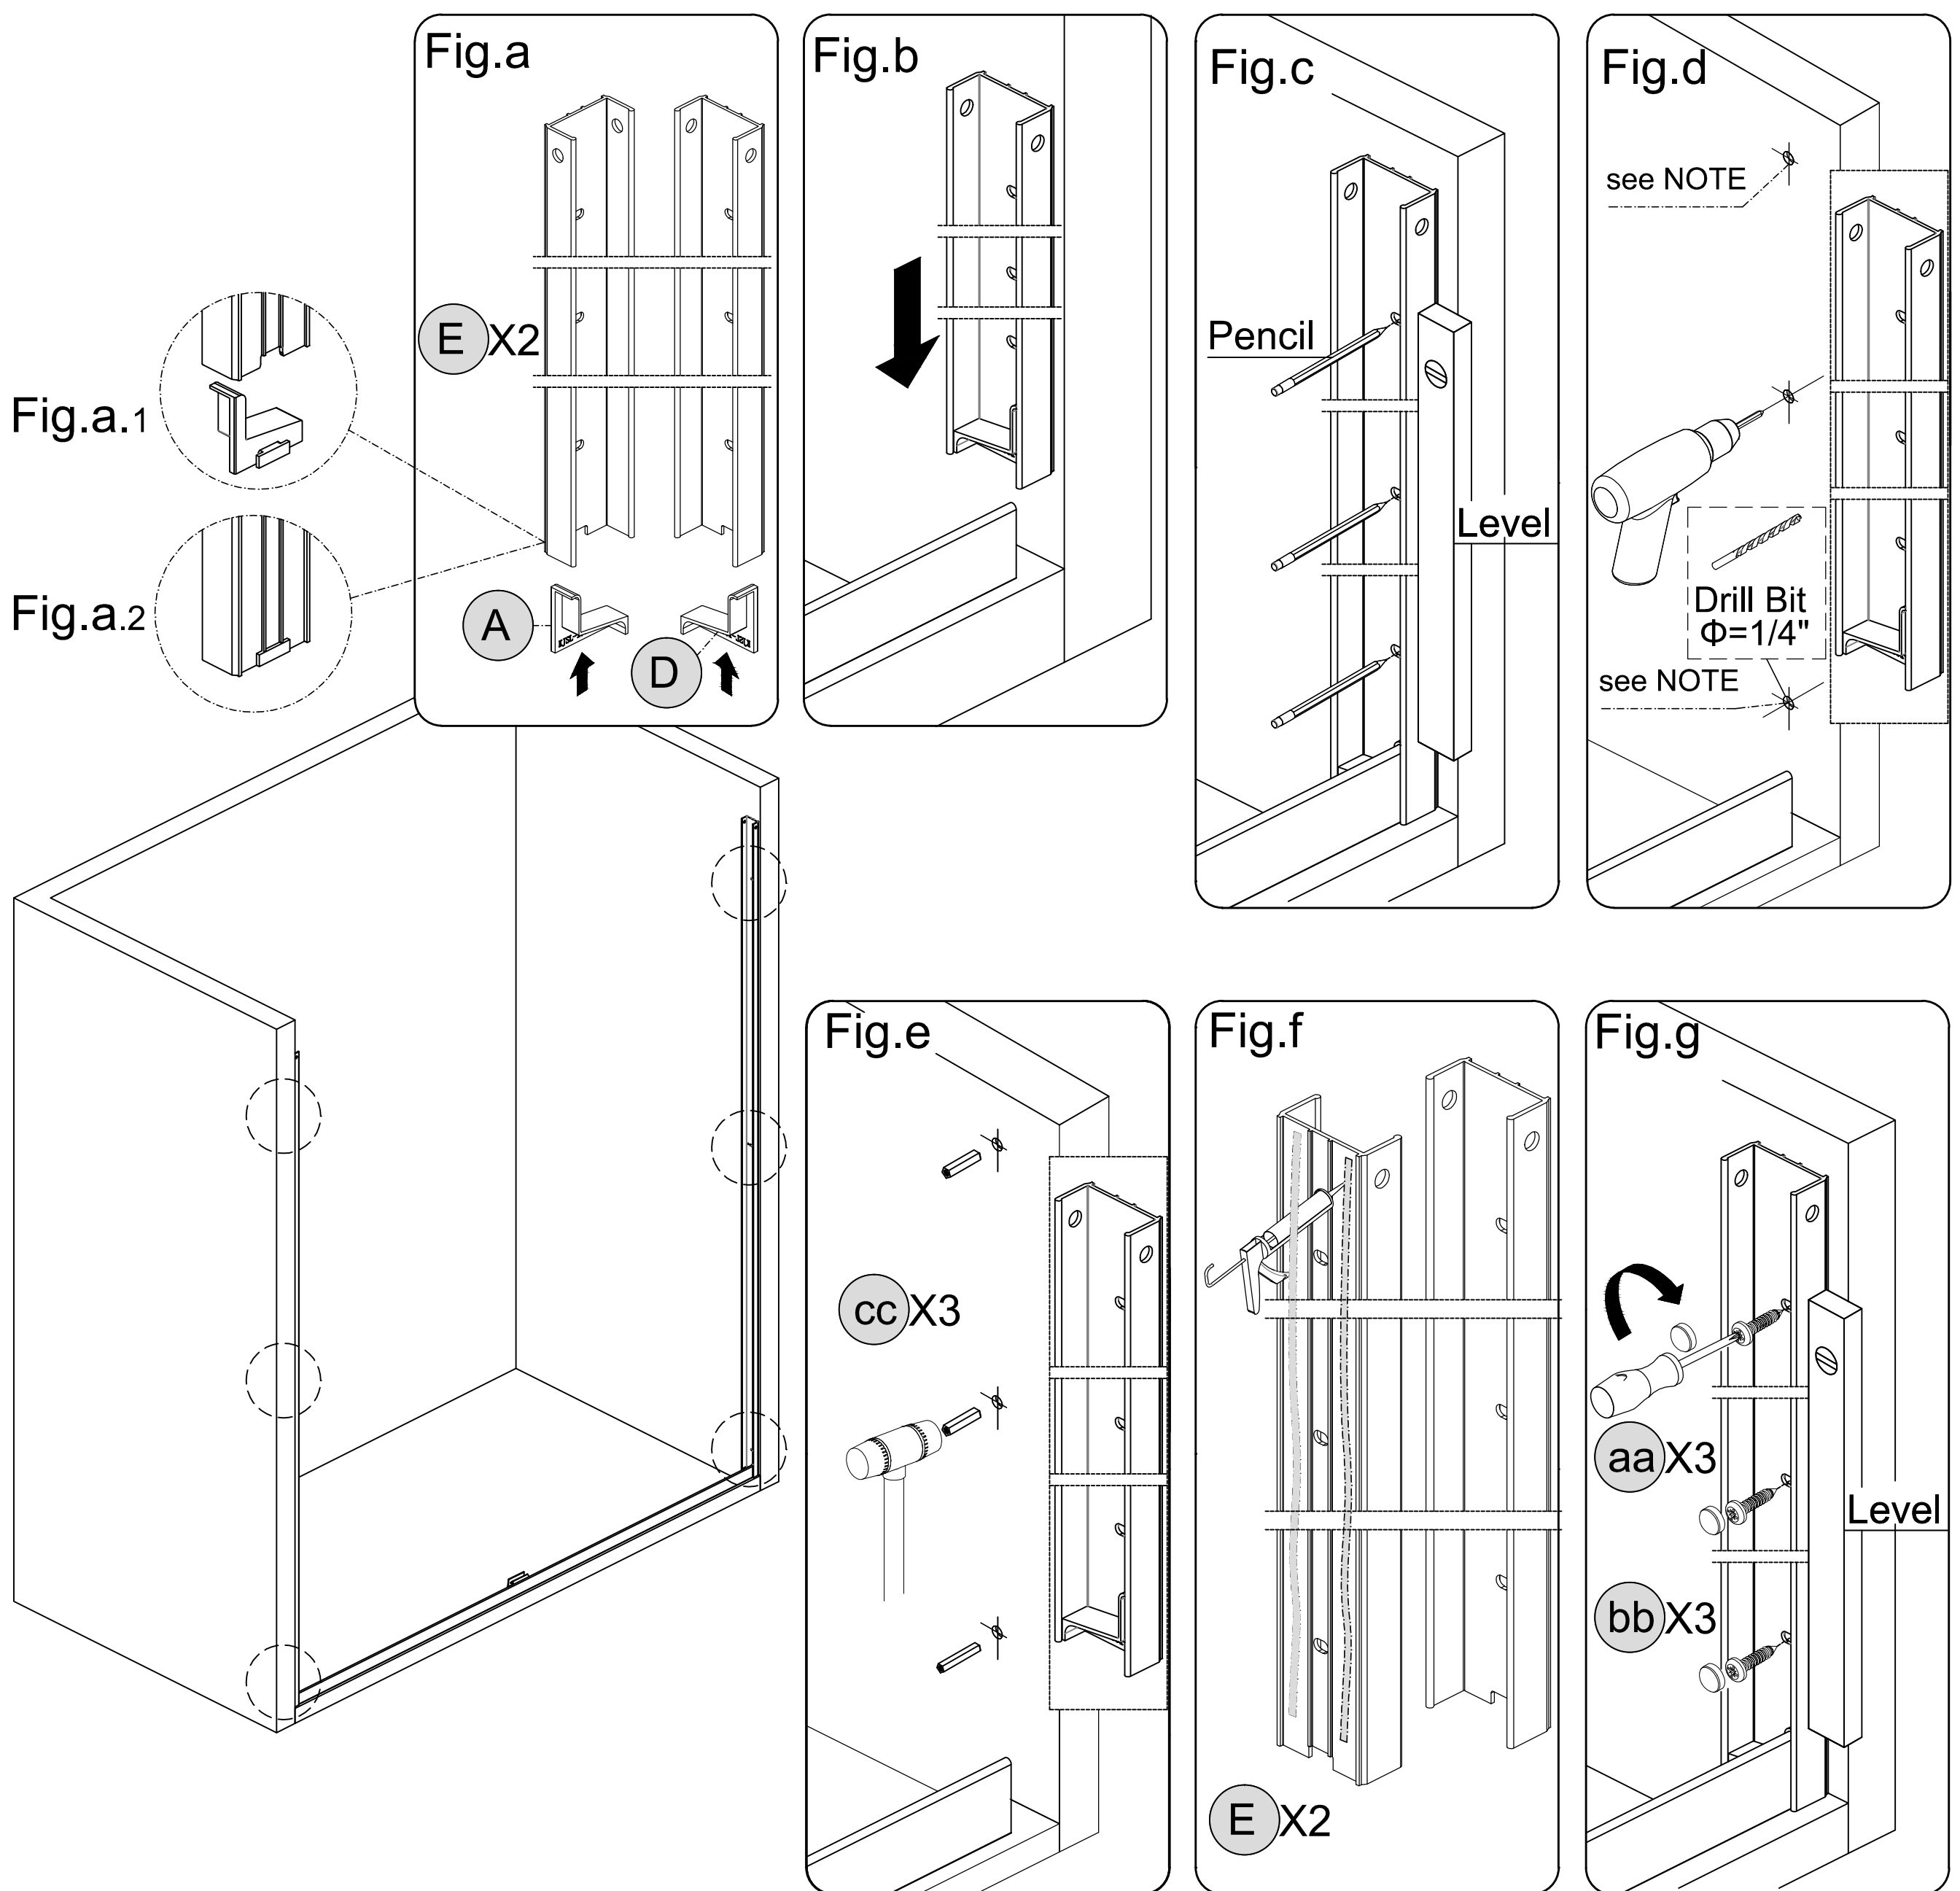

## 5

### The Roller(K&L) Installation on the Inside Door Panel (C1)

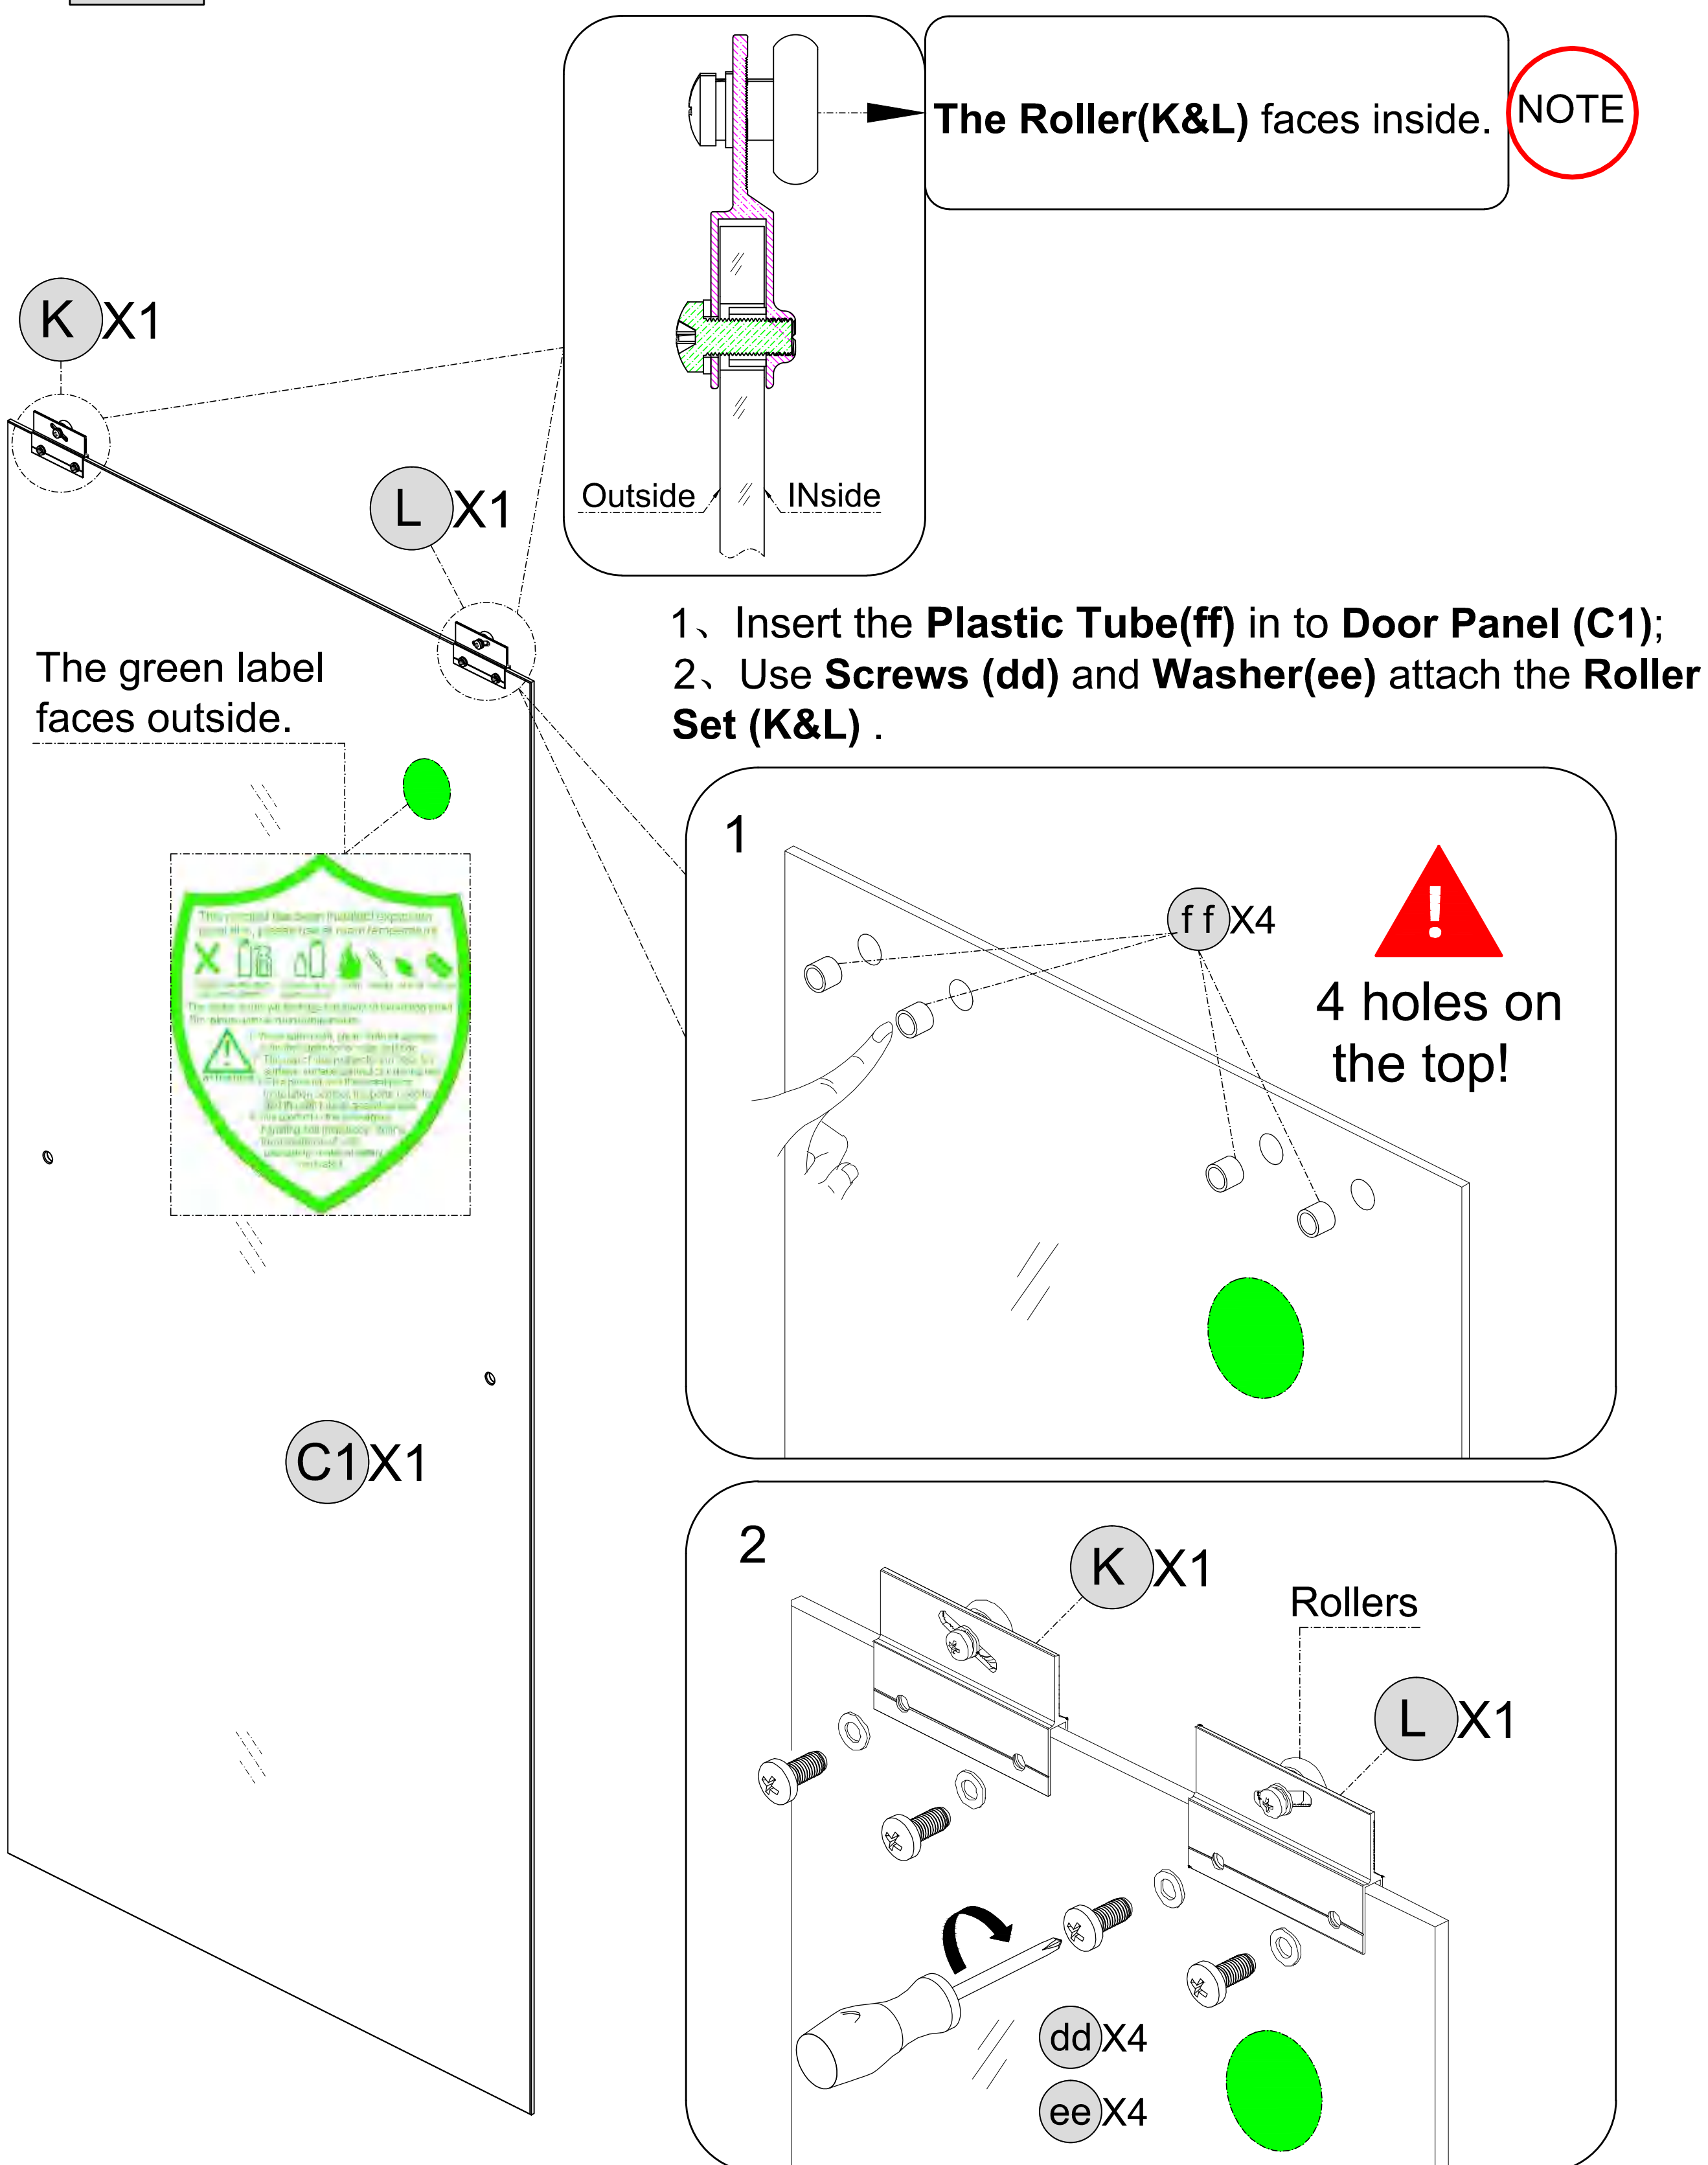



## 6

### Upper Guide Rail (M) Installation



NOTE

Put **Inside Glass Panel(C1)** inside the shower place before install the **Upper Guide Rail(M)**, and the green label faces outside.

The green label faces outside;  
The Roller faces inside.



Insert the **Upper Guide Rail(M)** into the installed **Wall Jamb(E)**.

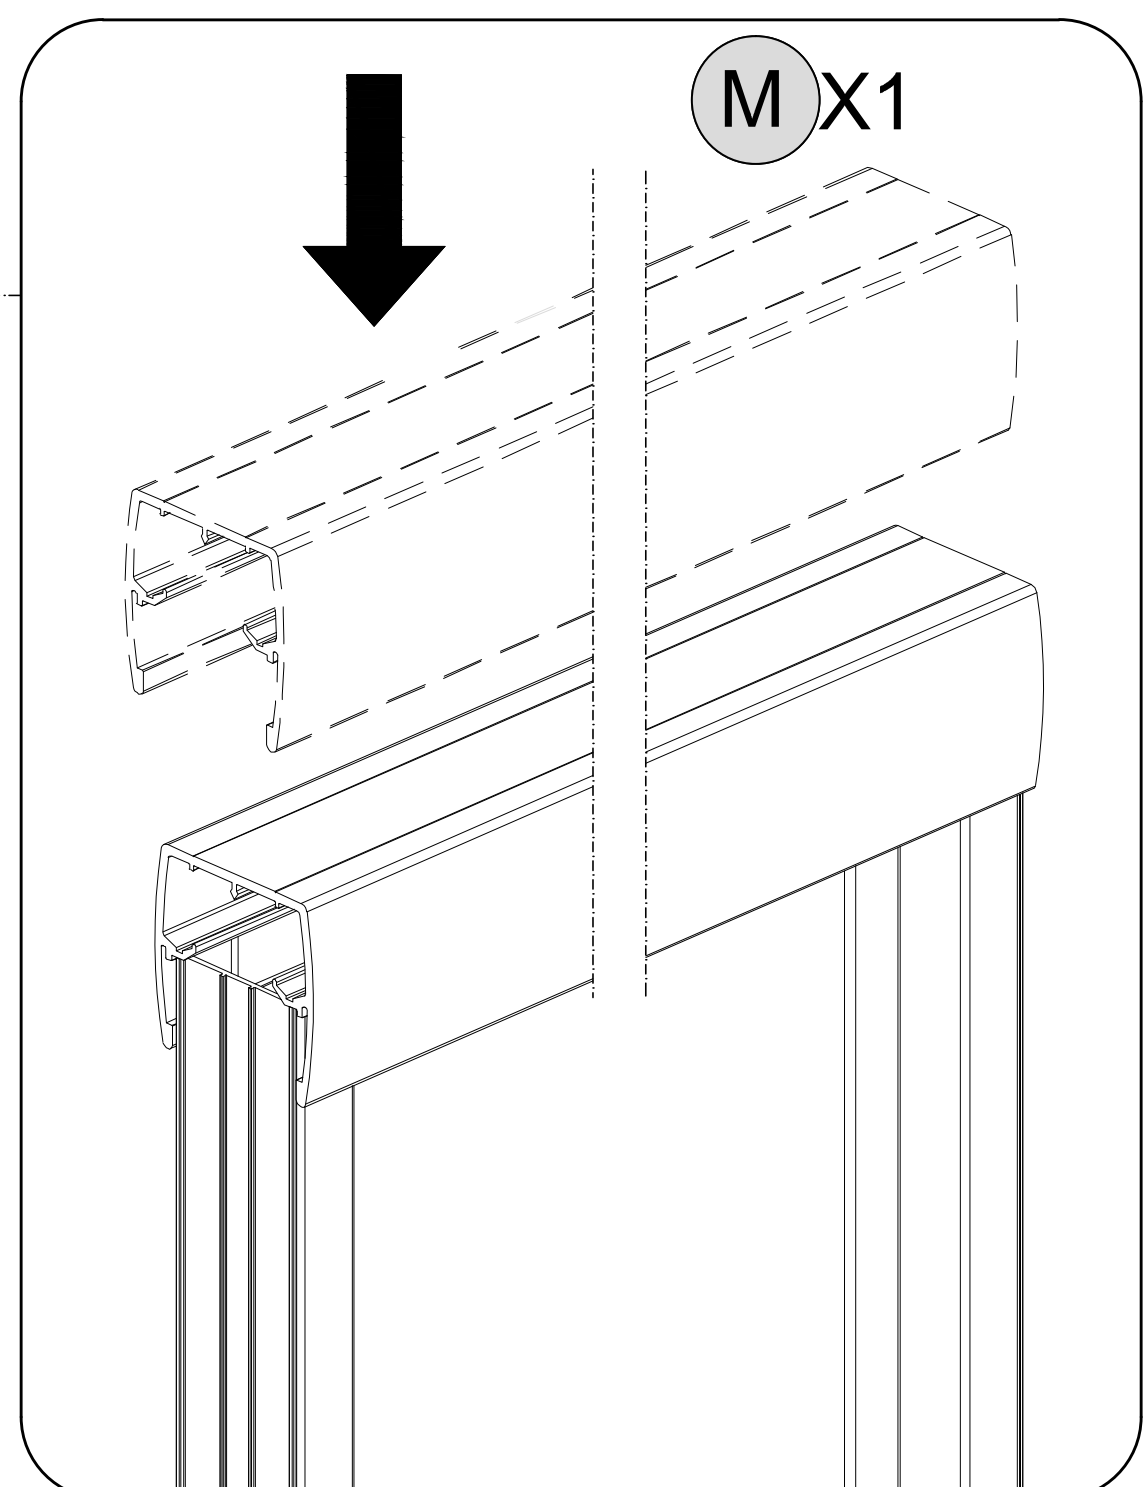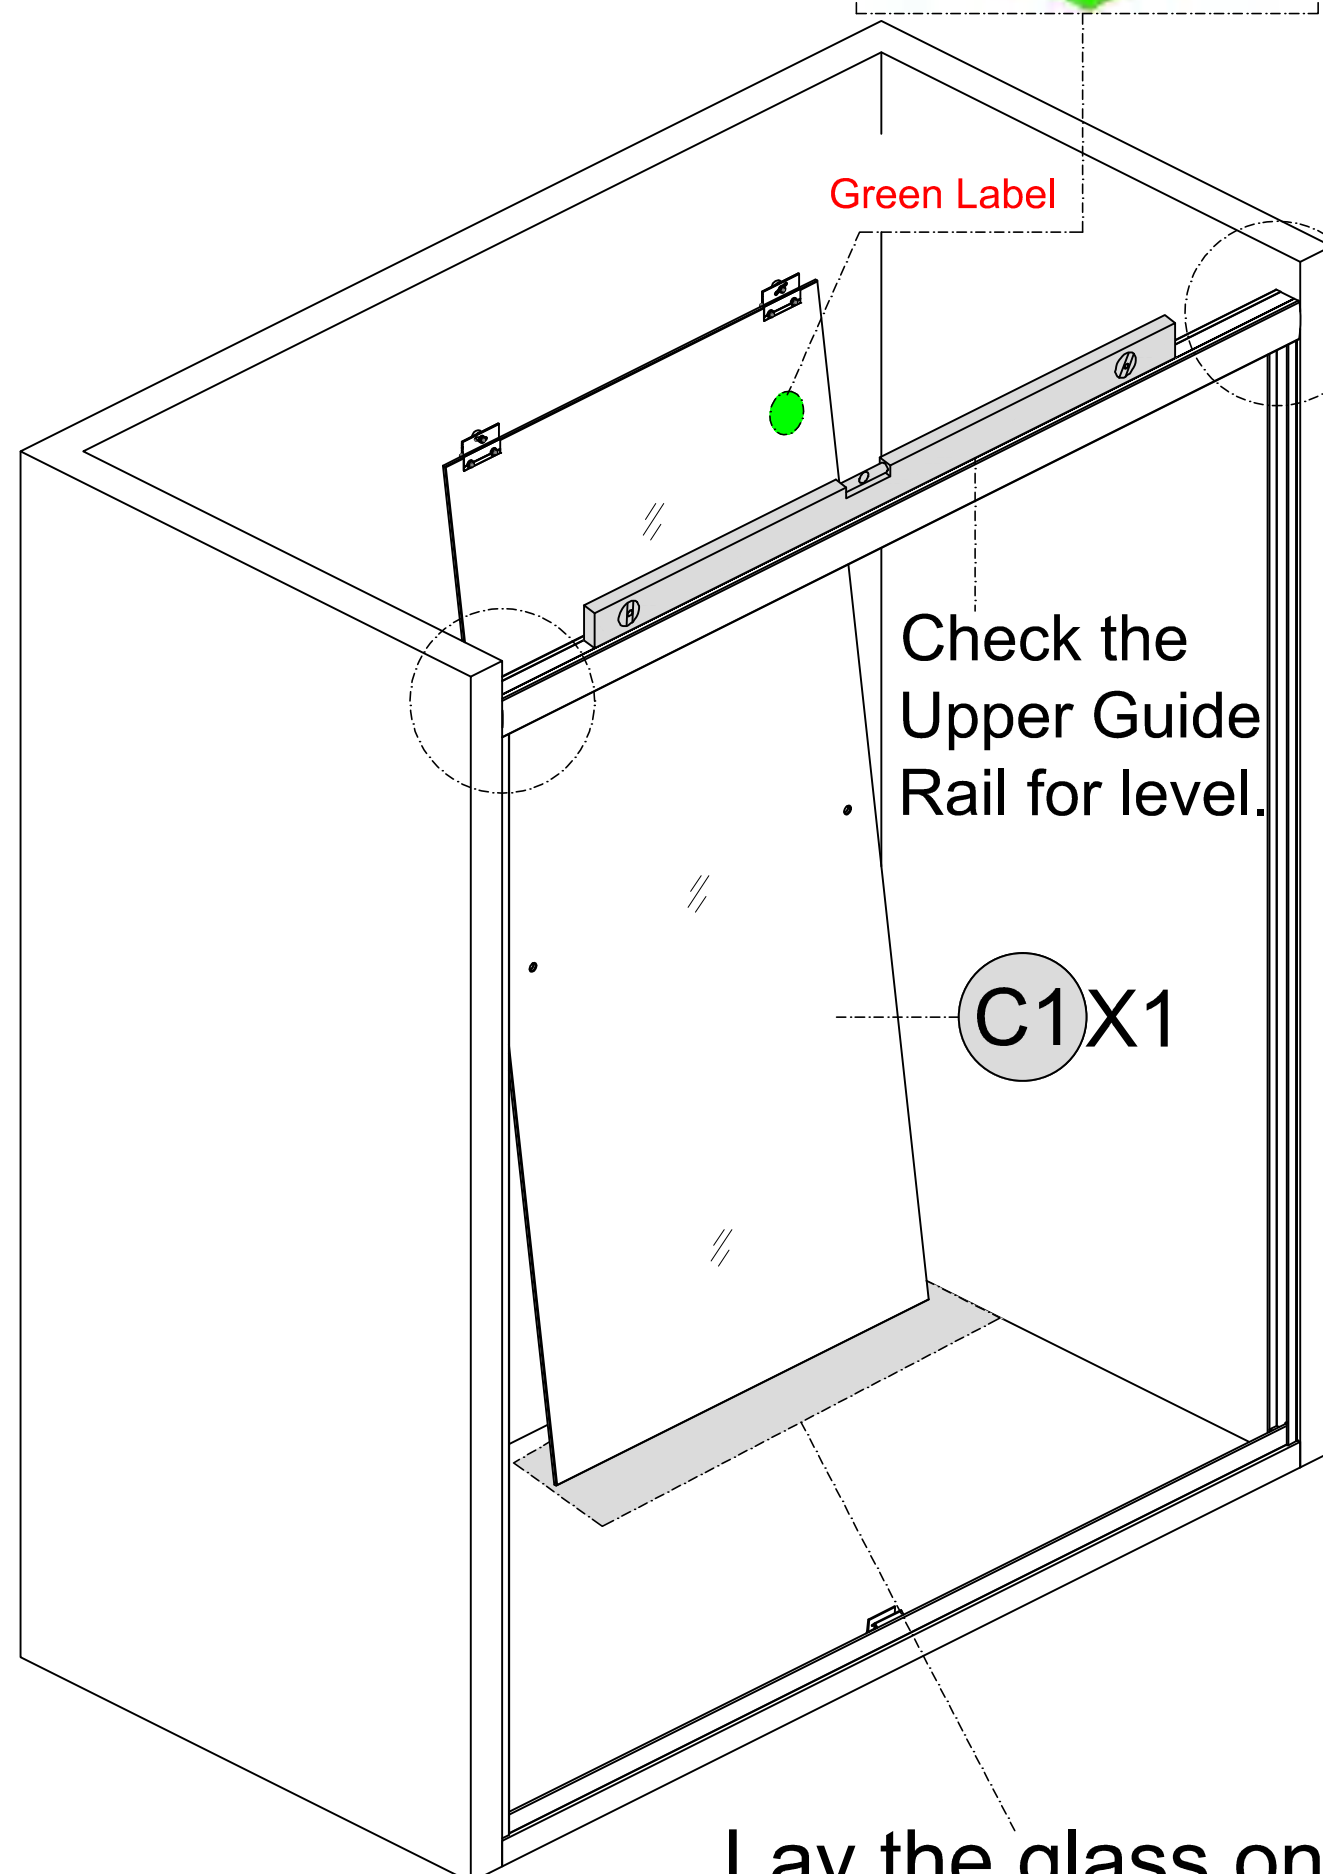

Lay the glass on a soft padded surface!



7

The Roller(K&L) Installation on the Outside Door Panel (C2)

NOTE

The Roller(K&L) faces Outside.


L X1

K X1

The green label  
faces outside.




C2 X1

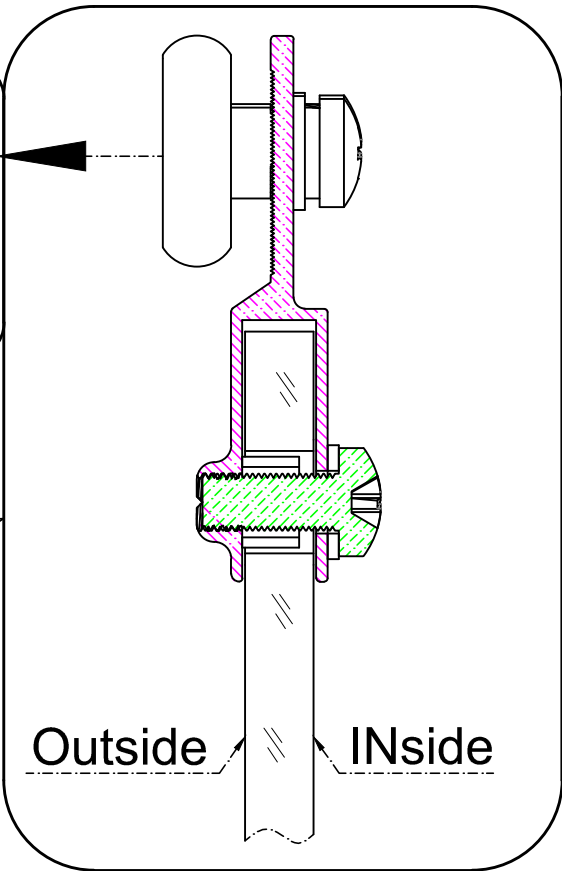


- 1、 Insert the **Plastic Tube(ff)** in to **Door Panel (C2)**;
- 2、 Use the **Screws (dd)** and **Washer(ee)** attach the **Roller Set (K&L)** .

1






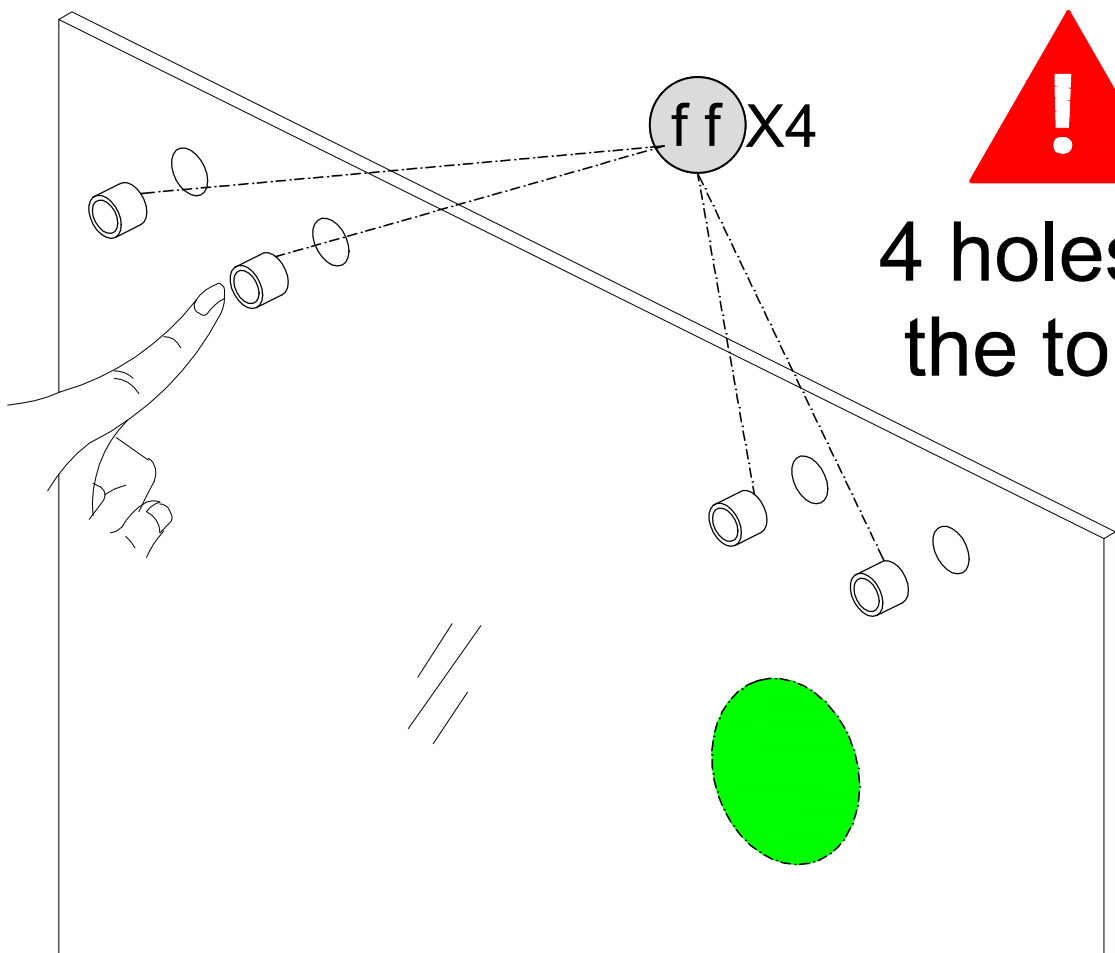


2

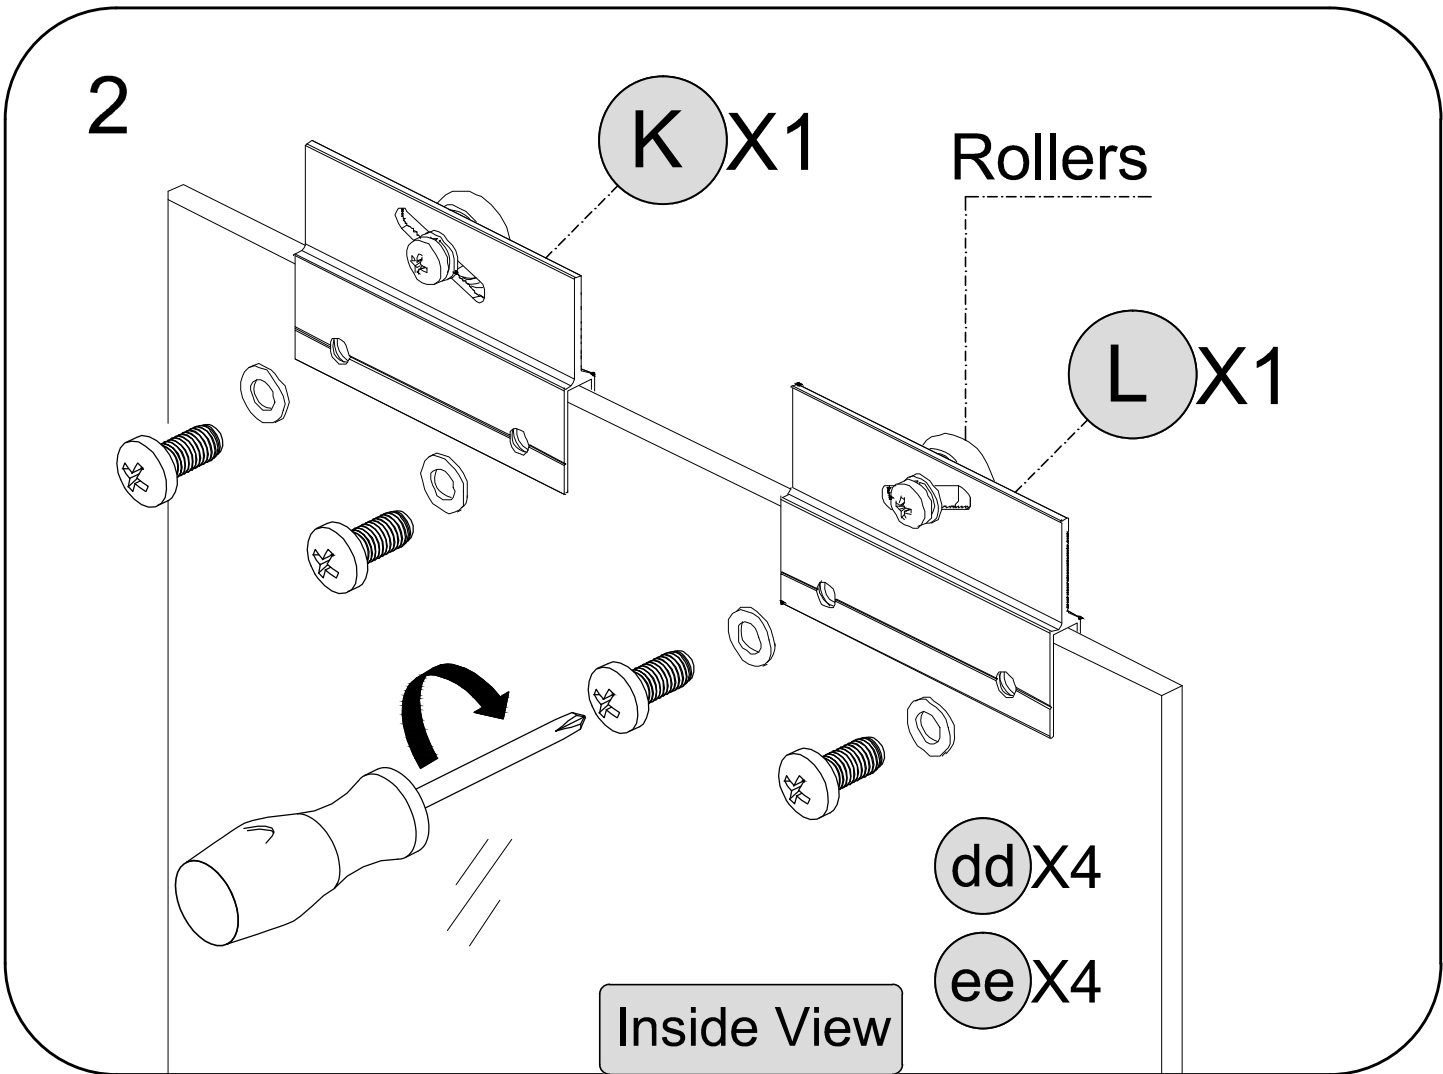

## 8

## Outside Door panel(C2) Installation

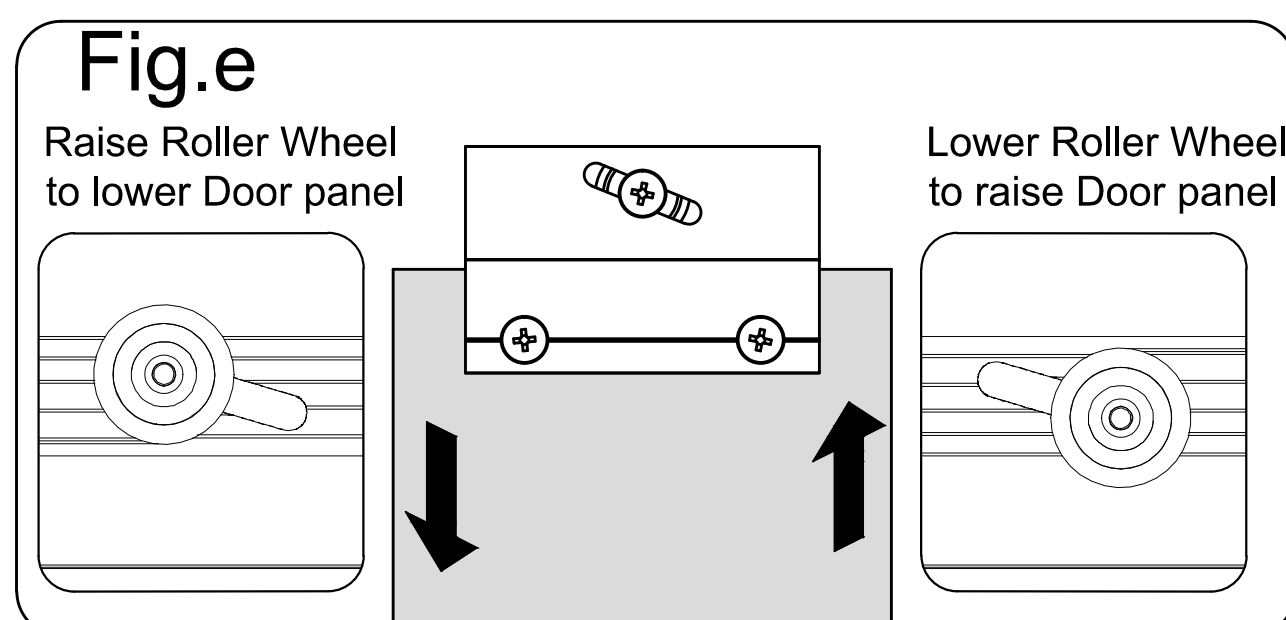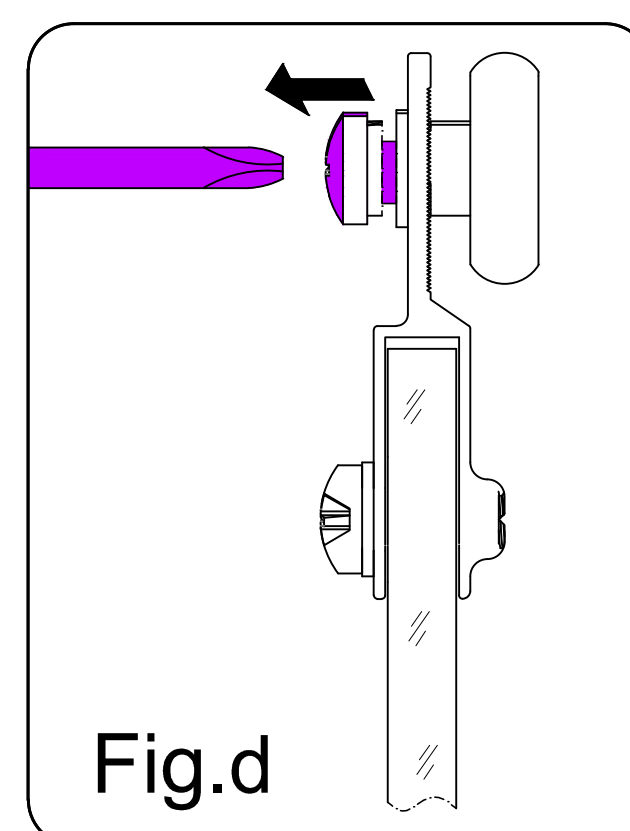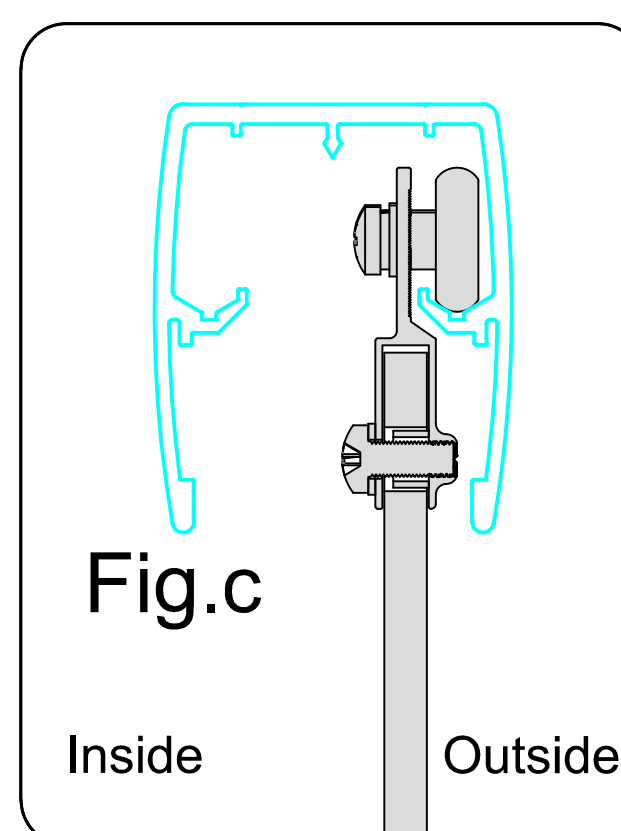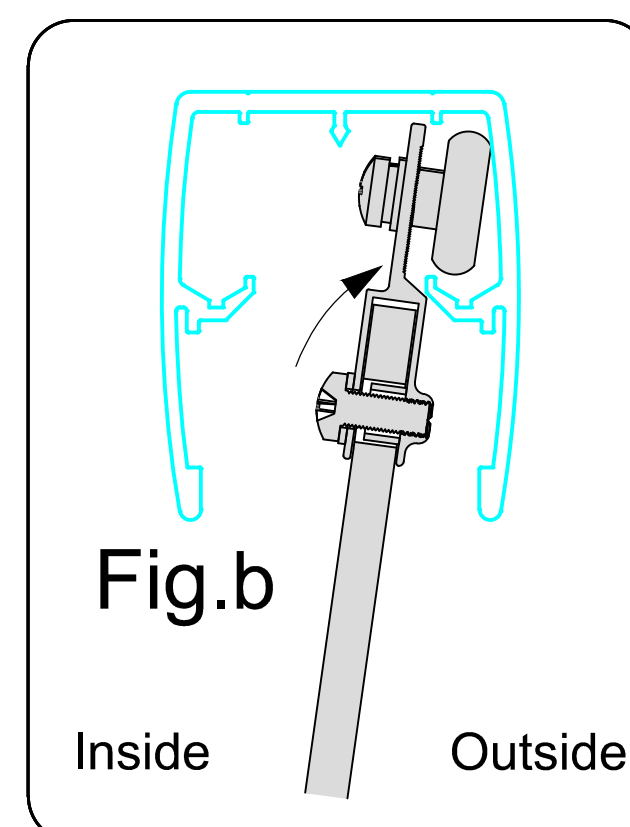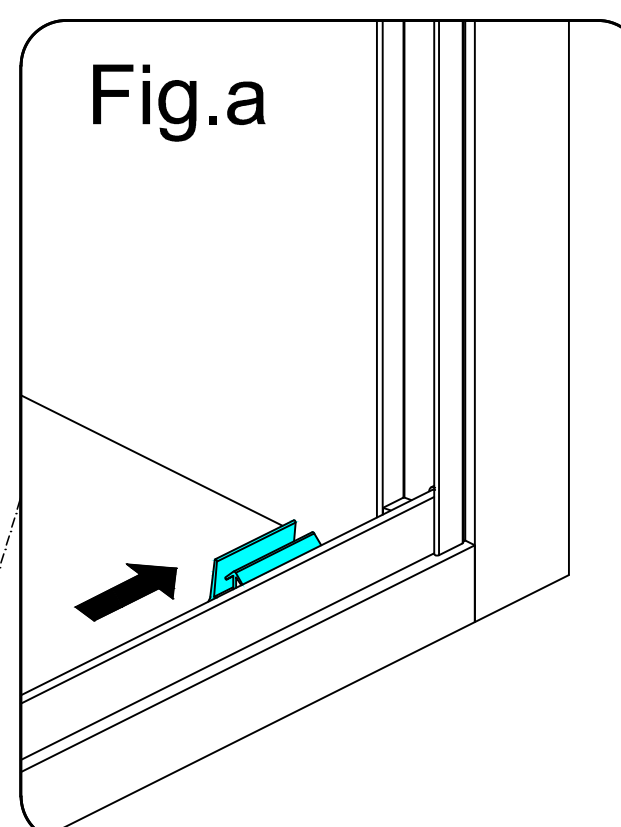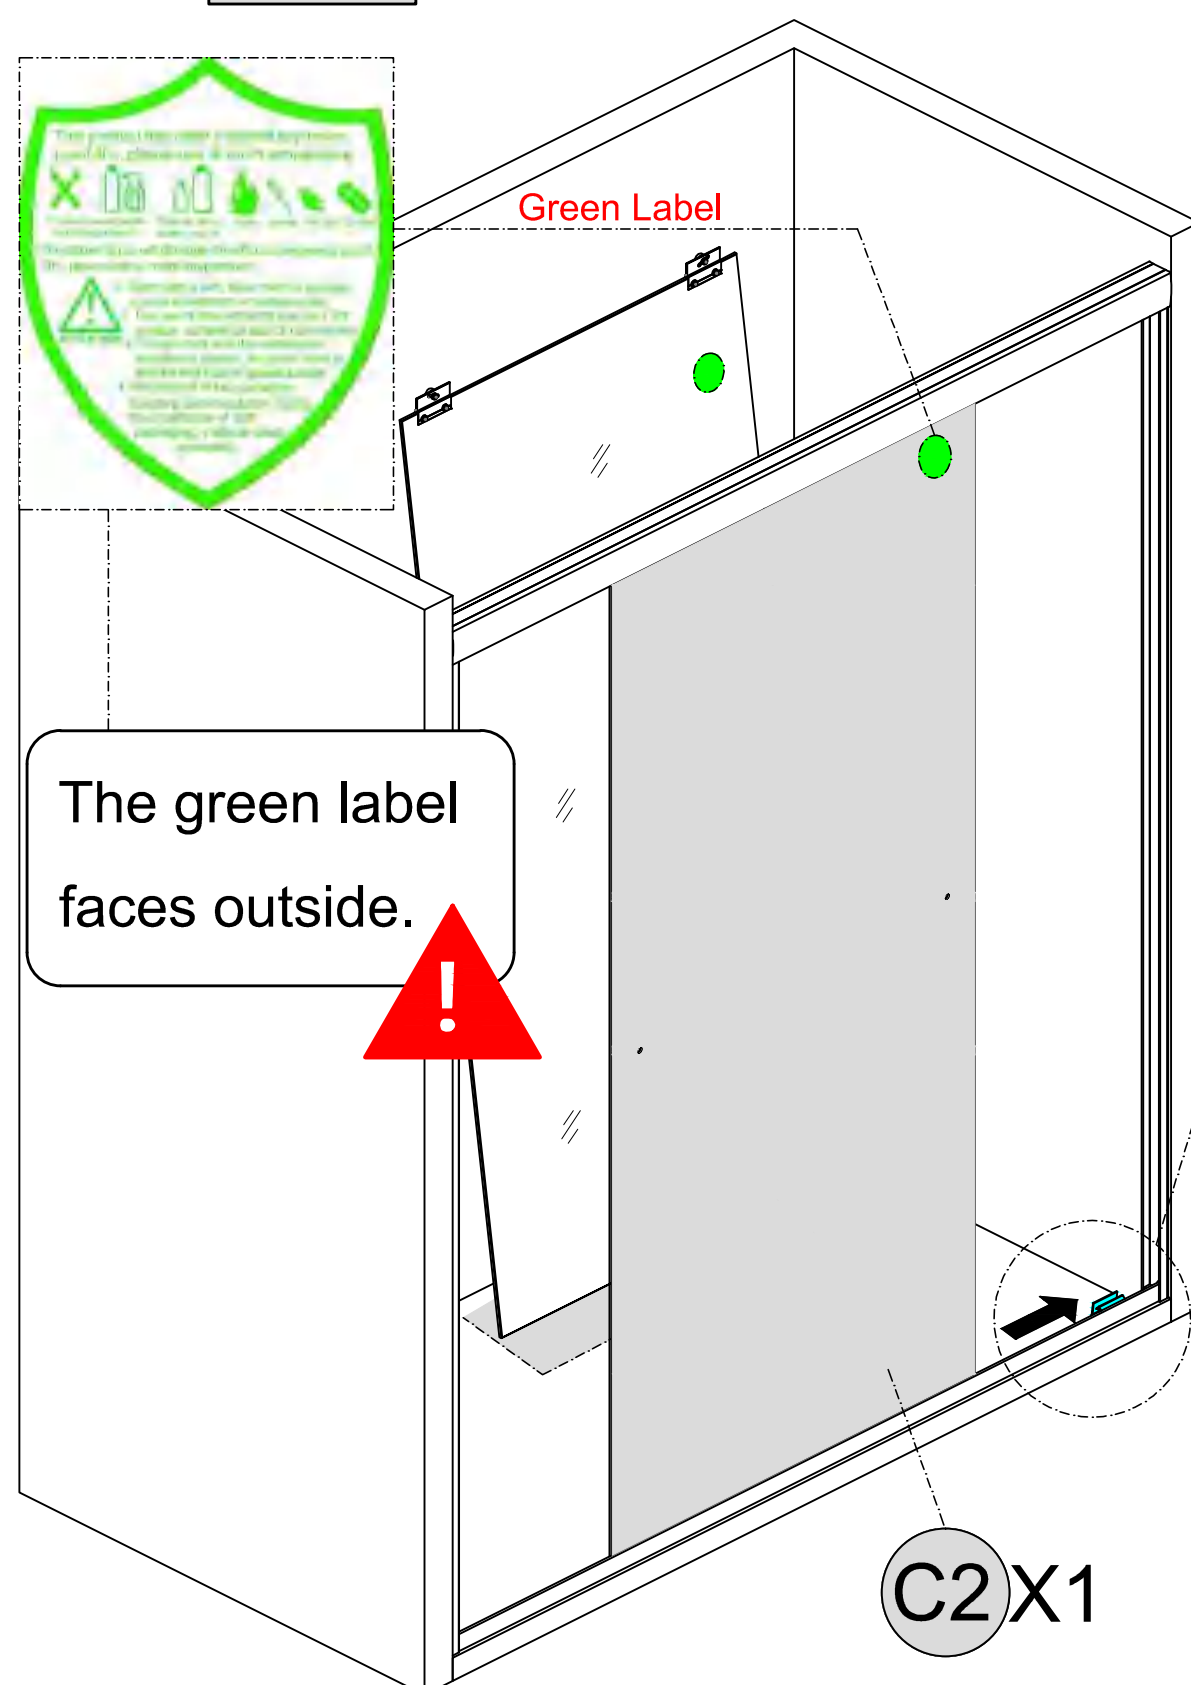







1. Move the bottom guide slider of the **Bottom Rail(B)** to the side as Fig.a;
2. Insert the **Outside Door Panel(C2)** into the **Upper Guide Rail(M)** as Fig.b and Fig.c .

### NOTE

- DO NOT install the towel bars on the glass until instructed.  
DO NOT lift the glass using the towel bars;
1. The **Roller Wheels (K & L)** can be adjusted to better align the vertical edges of the Door Glass with the Wall Profiles if needed, to prevent leaks;
  2. In order to adjust the **Roller Wheels (K & L)**, remove that door from the **Upper Guide Rail (M)**. Please make sure the glass is put on the padded surface;
  3. Unscrew the screw first with Phillips Screw Driver as Fig.d ;
  4. Adjusting a Roller Wheel up (higher in the slot) will lower the door glass, and adjusting a Roller Wheel down (lower in the slot) will raise the door glass as Fig.e;
  5. Tighten the screw, put the door on the guide rail, gently move the door and observe the door whether aligns with the **Wall Jamb(E)**;
  6. Repeat step 2-5 until the door aligns with the **Wall Jamb(E)**.

## 9

### Inside Door panel(C1) Installation

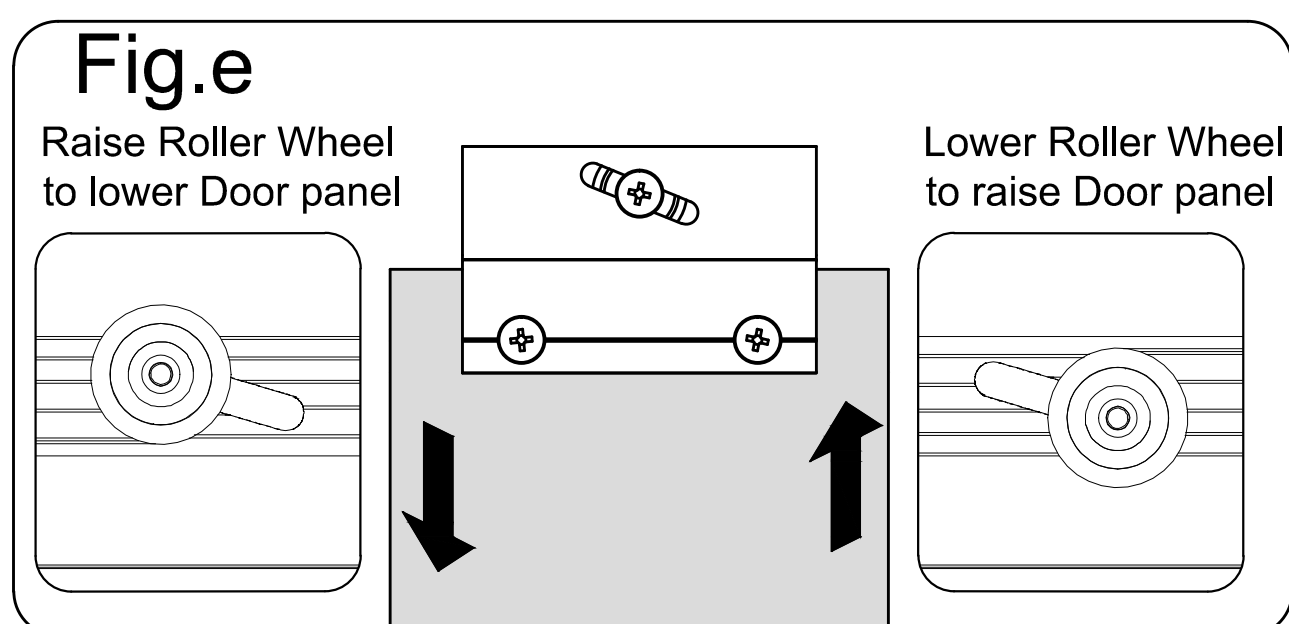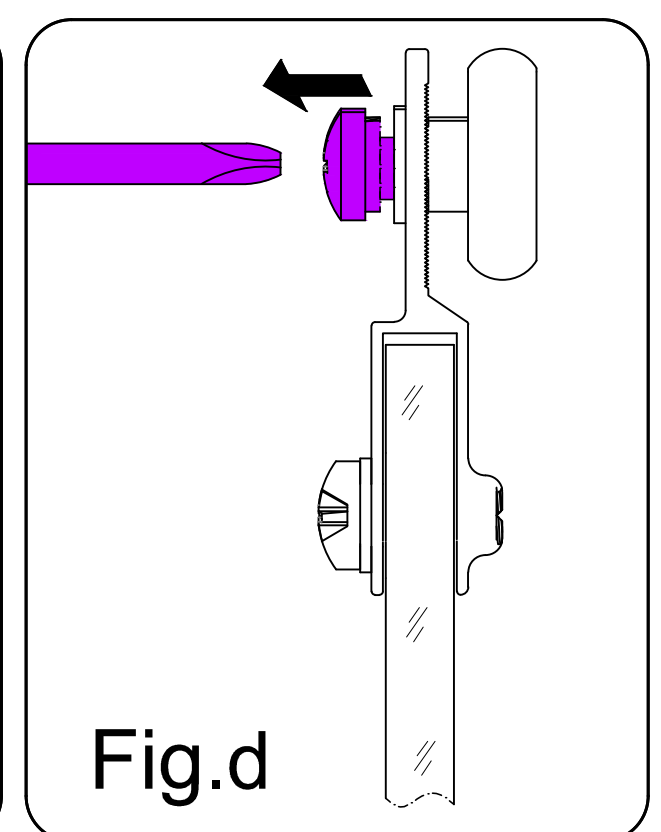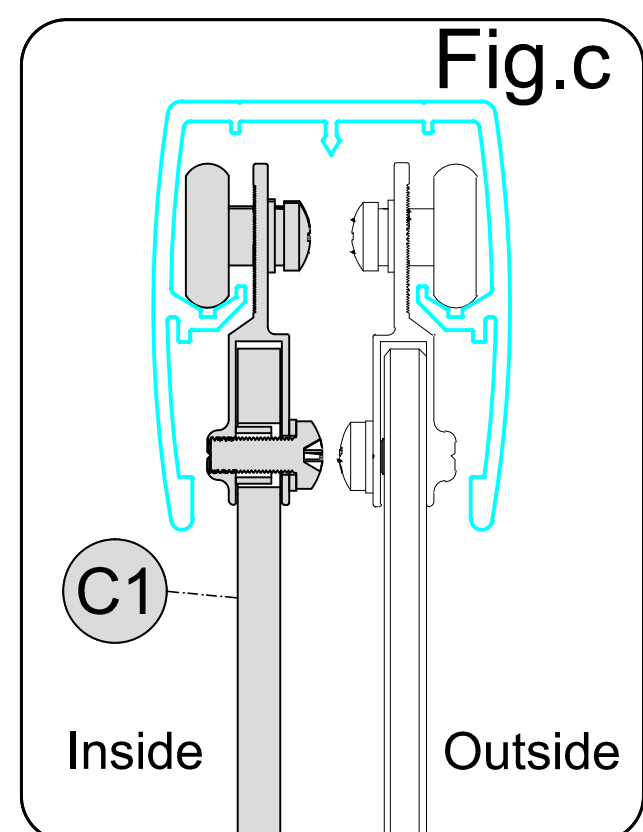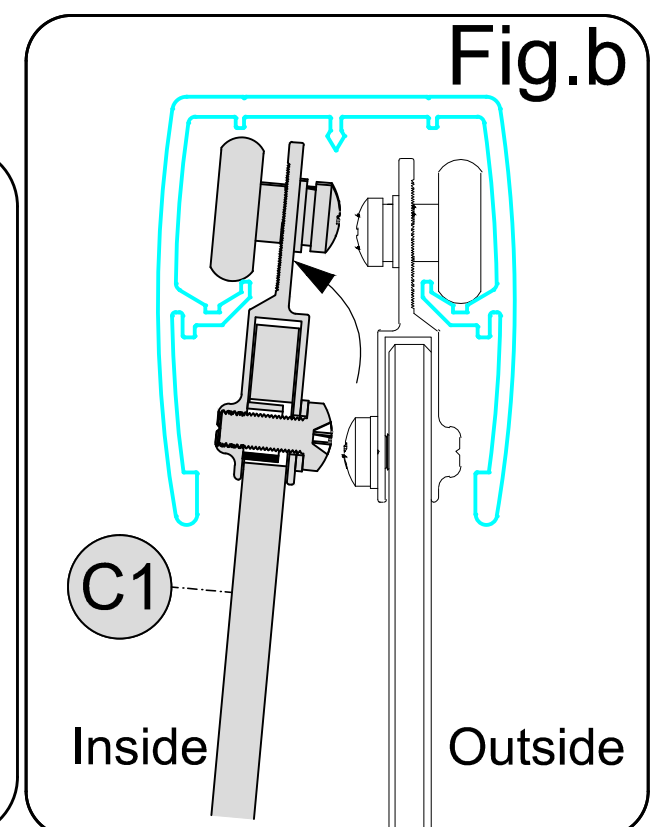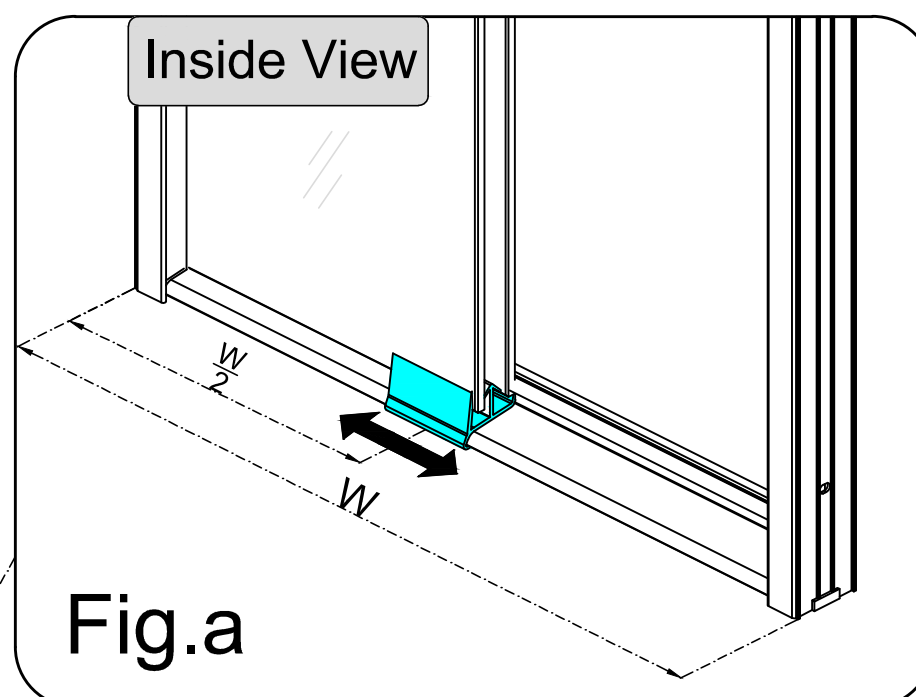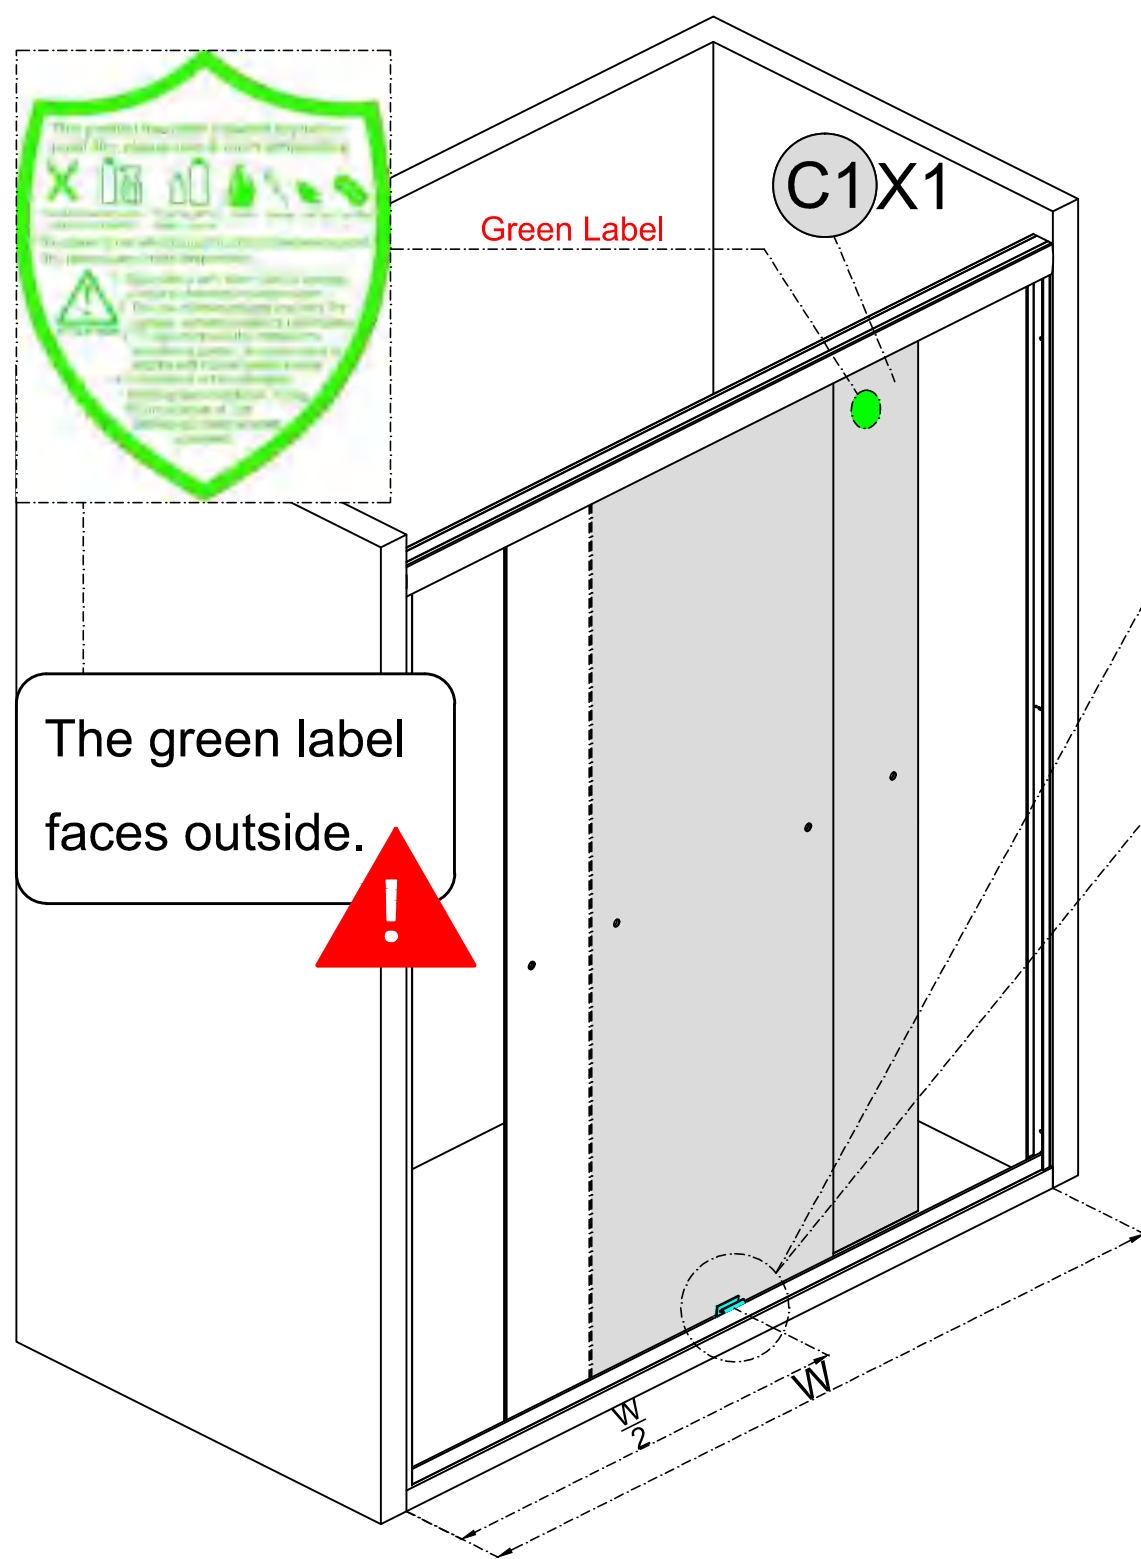

1. Move the bottom guide slider to the middle as Fig.a;
2. Insert the **Inside Door Panel** into the **Upper Guide Rail(M)** as Fig.b and Fig.c;

NOTE

DO NOT install the towel bars on the glass until instructed.

DO NOT lift the glass using the towel bars;




1. The **Roller Wheels (K & L)** can be adjusted to better align the vertical edges of the Door Glass with the Wall Profiles if needed, to prevent leaks;
2. In order to adjust the **Roller Wheels (K & L)**, remove that door from the **Upper Guide Rail (M)**. Please make sure the glass is put on the padded surface;
3. Unscrew the screw first with Phillips Screw Driver as Fig.d ;
4. Adjusting a Roller Wheel up (higher in the slot) will lower the door glass, and adjusting a Roller Wheel down (lower in the slot) will raise the door glass as Fig.e;
5. Tighten the screw, put the door on the guide rail, gently move the door and observe the door whether aligns with the **Wall Jamb(E)**;
6. Repeat step 2-5 until the door aligns with the **Wall Jamb(E)**.



# 10 Knob A (F) 、 Knob B(G) and Towel Bar (N) Installation

NOTE

Attach the **Knob A (F)** & **Knob B(G)** to the **Inside Door Panel(C1)** and Attach the **Towel Bar (N)** to the **Outside Door Panel(C2)** . Be sure to use all of the supplied rubber gaskets to protect the glass.

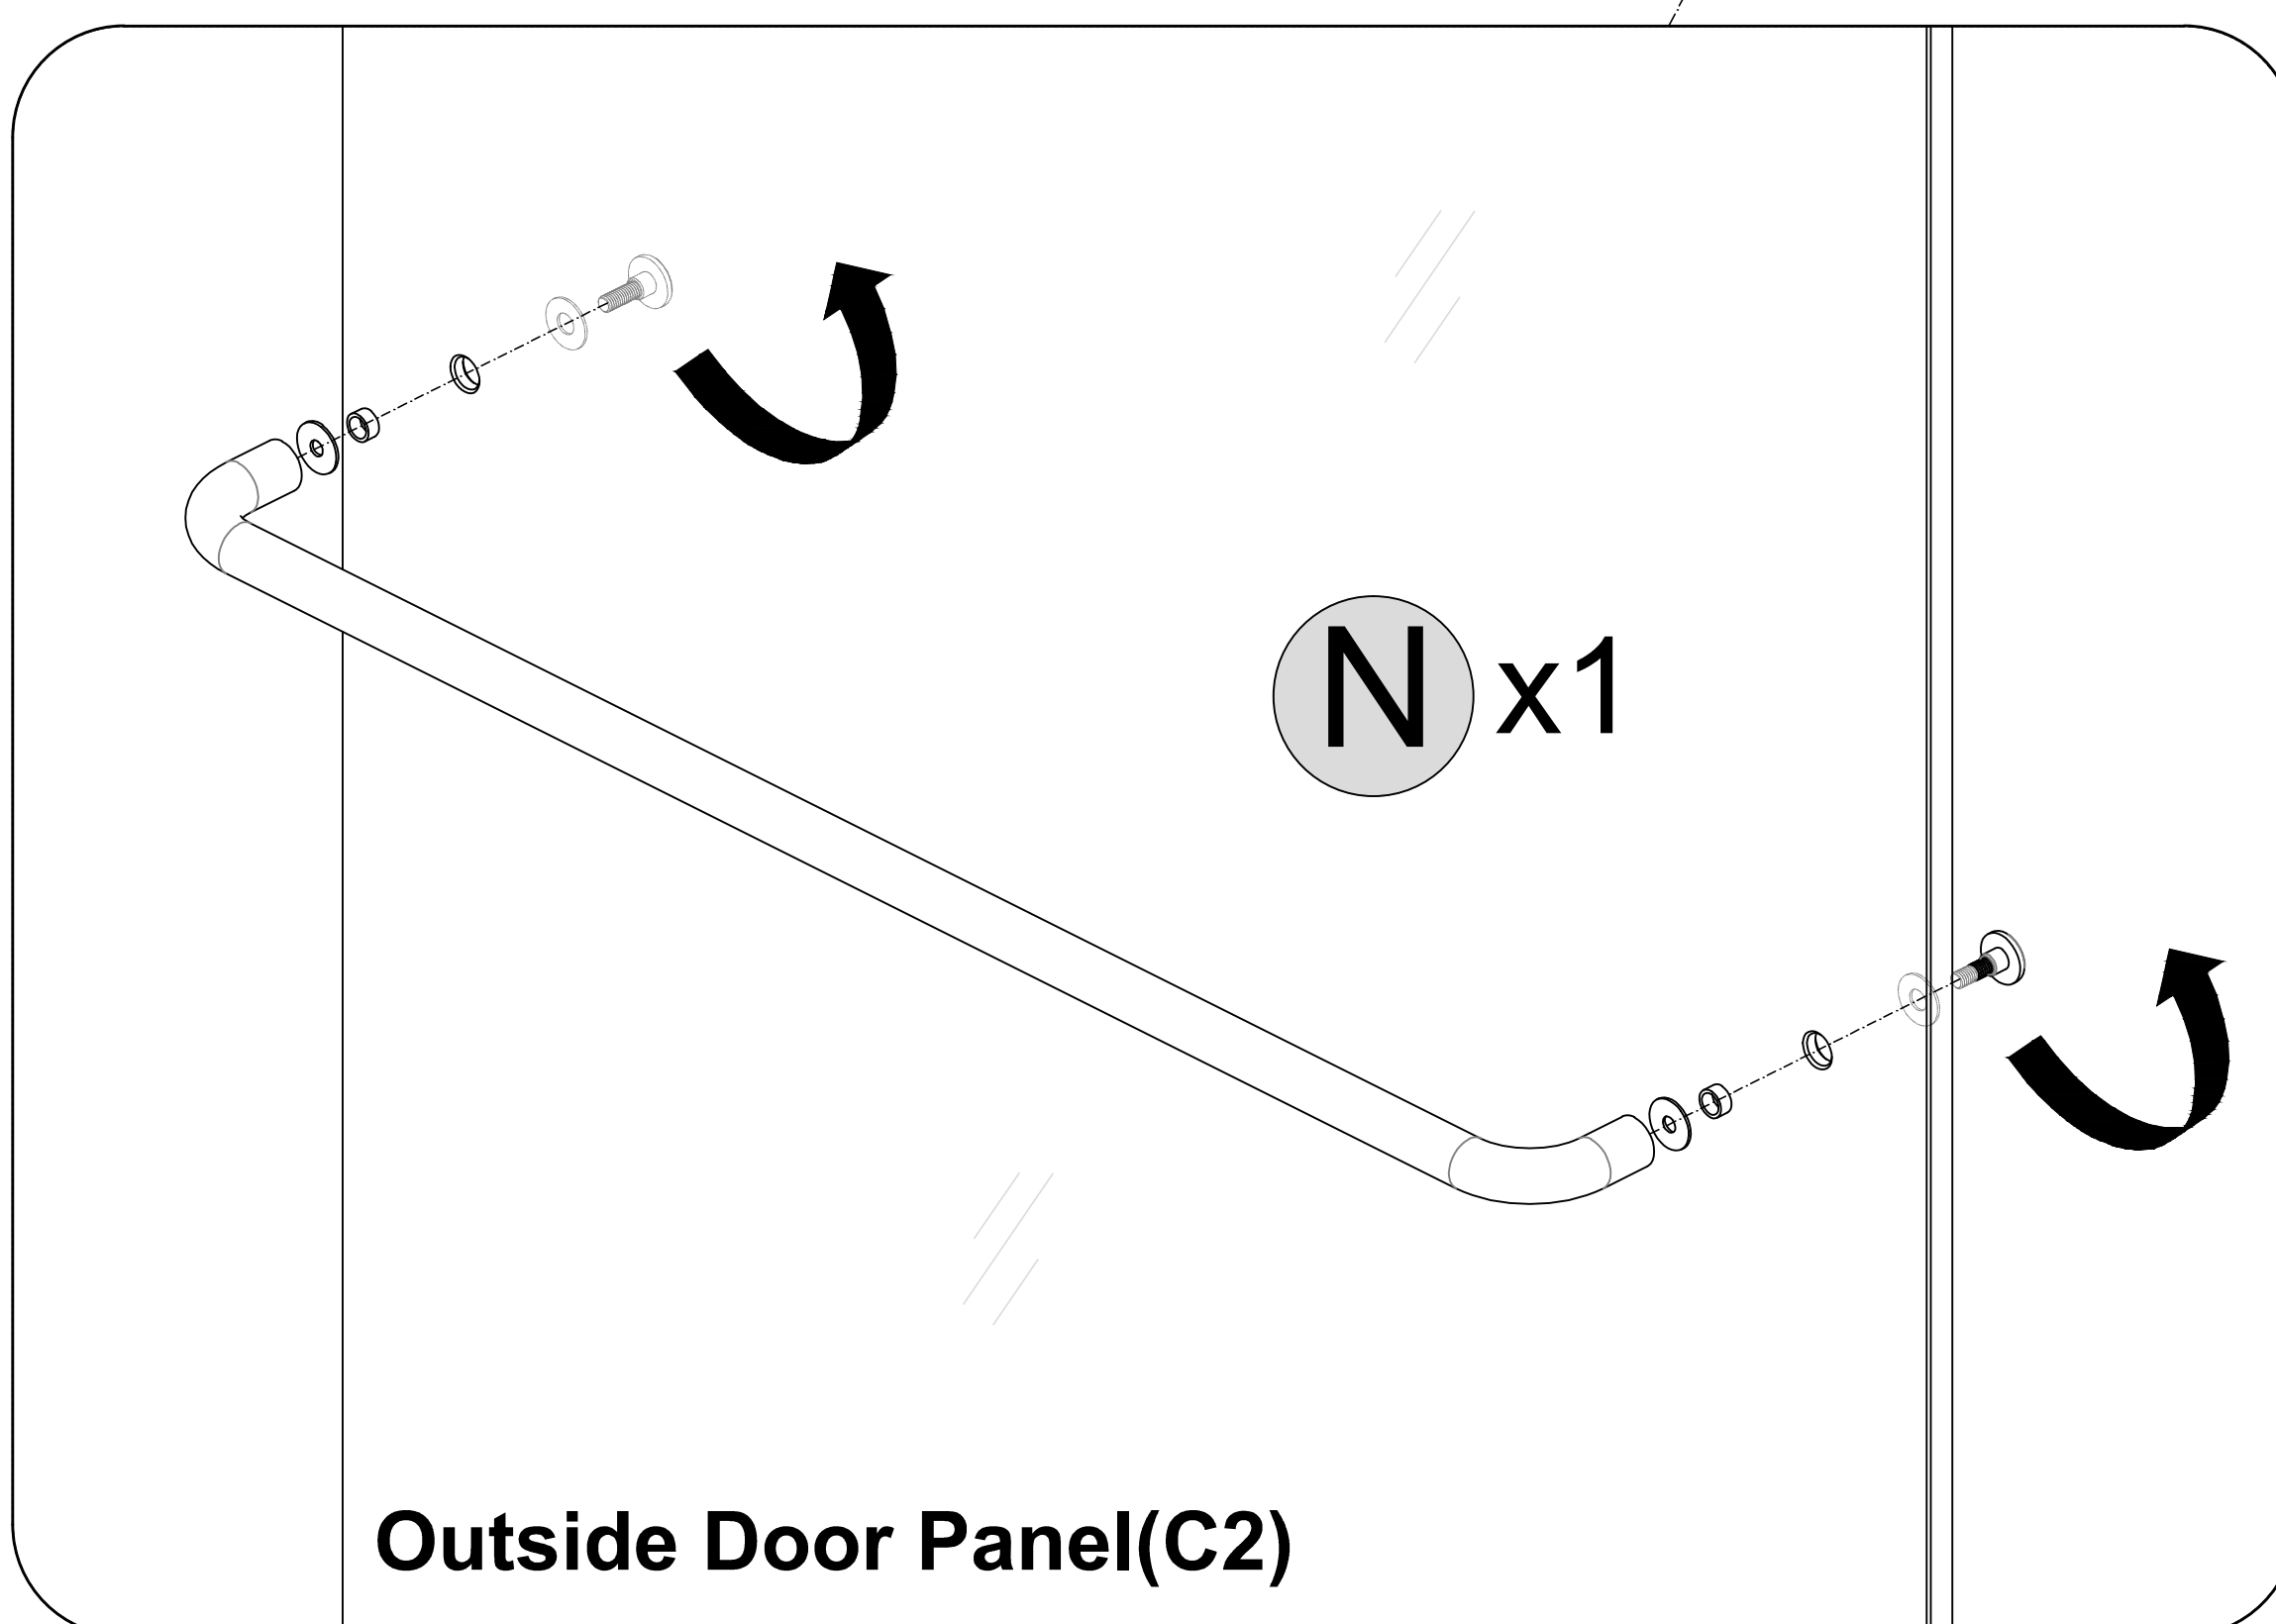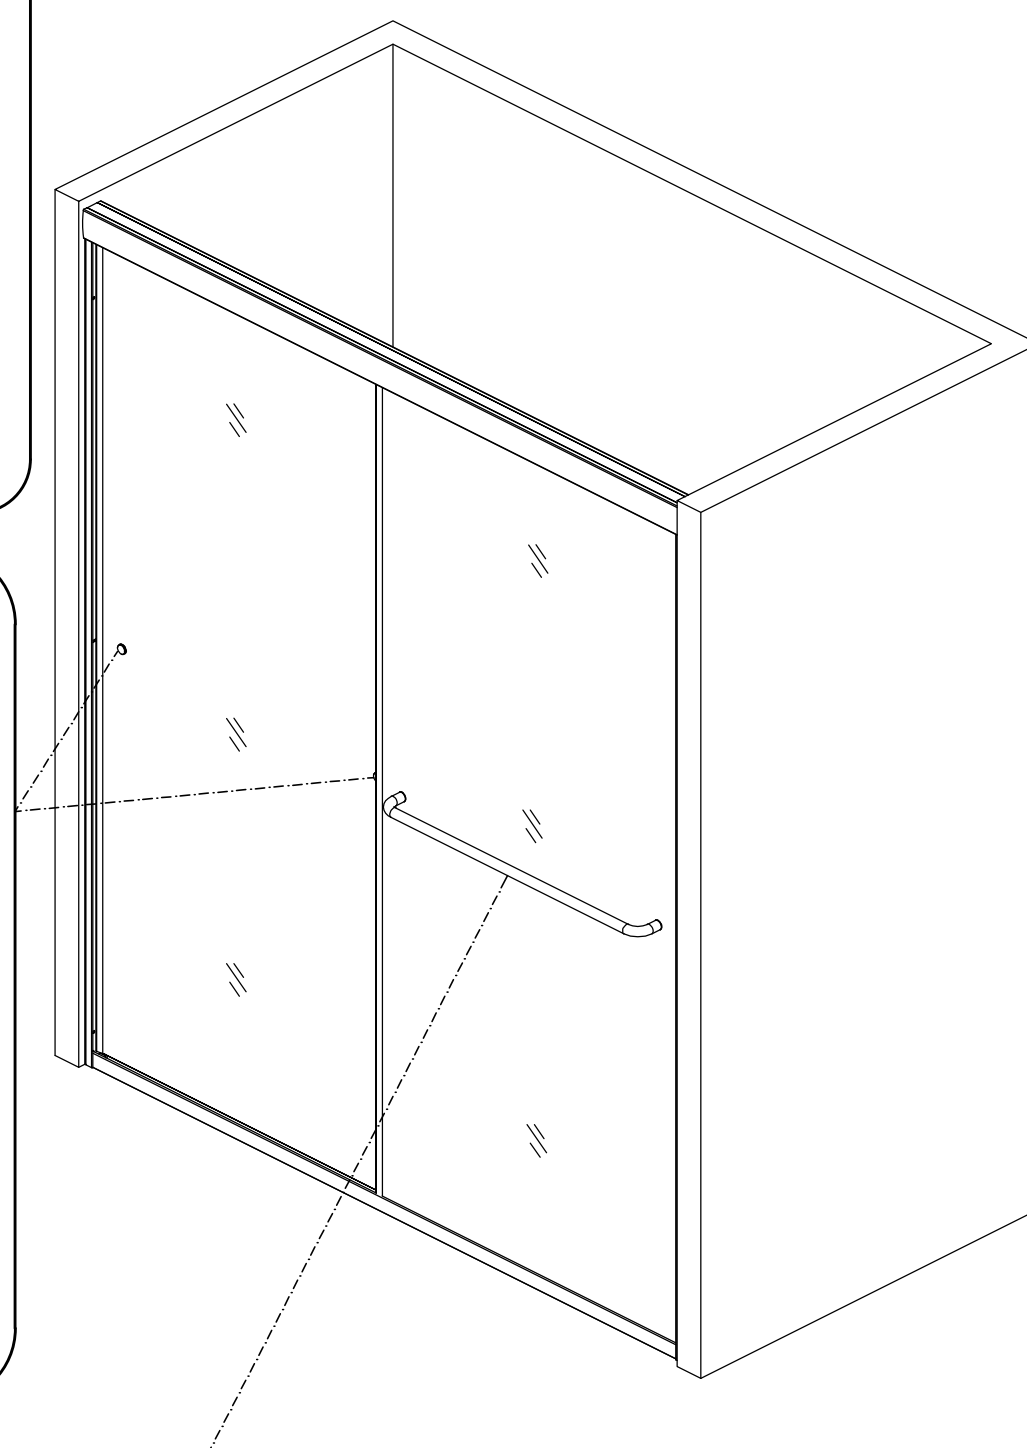
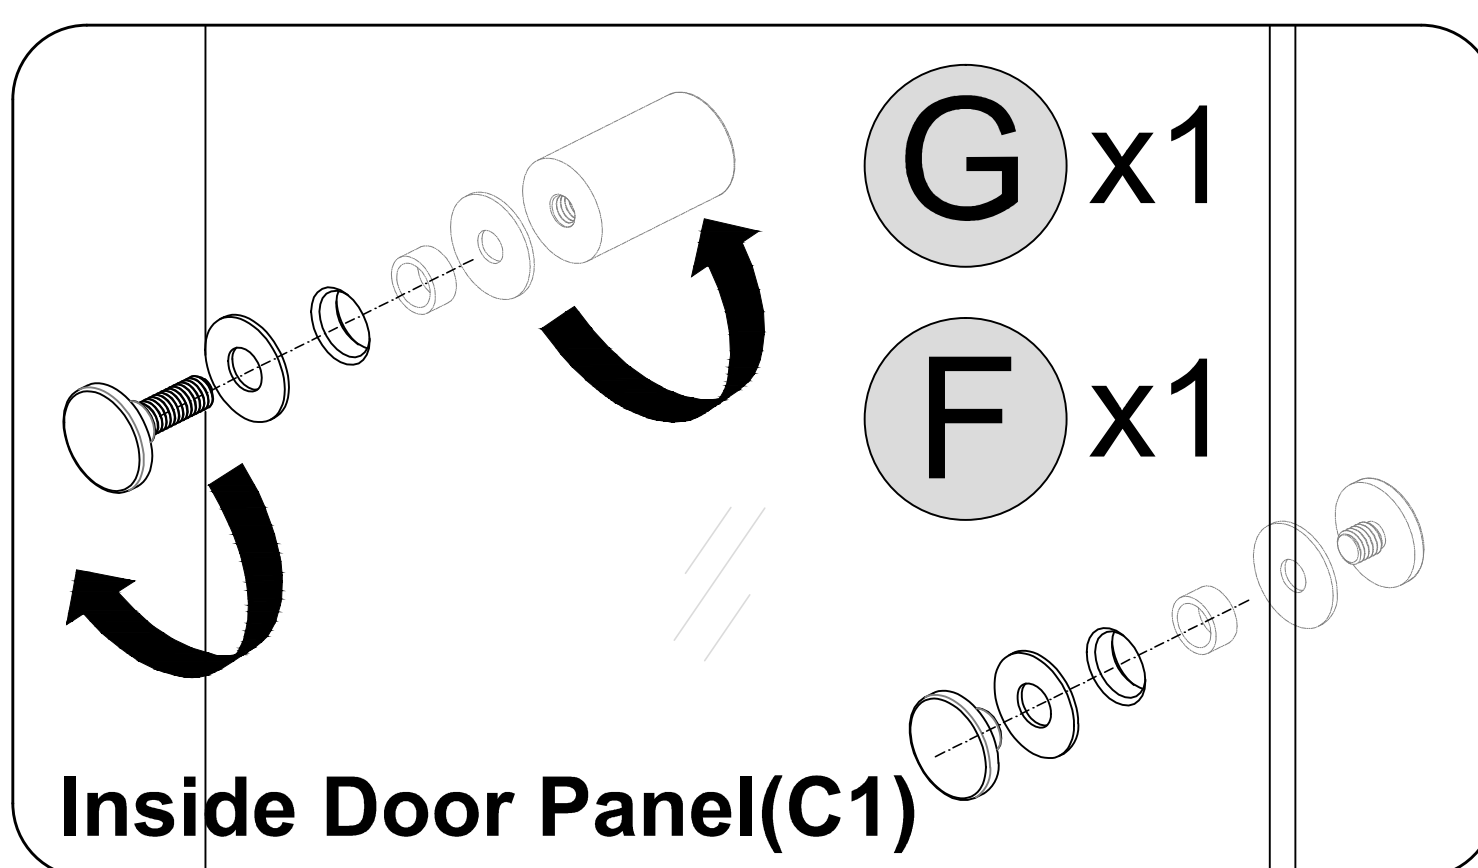


## 11

Attach the **PVC Seal(H)** to **Door Panel(C1&C2)**

NOTE

2 pieces on each door.

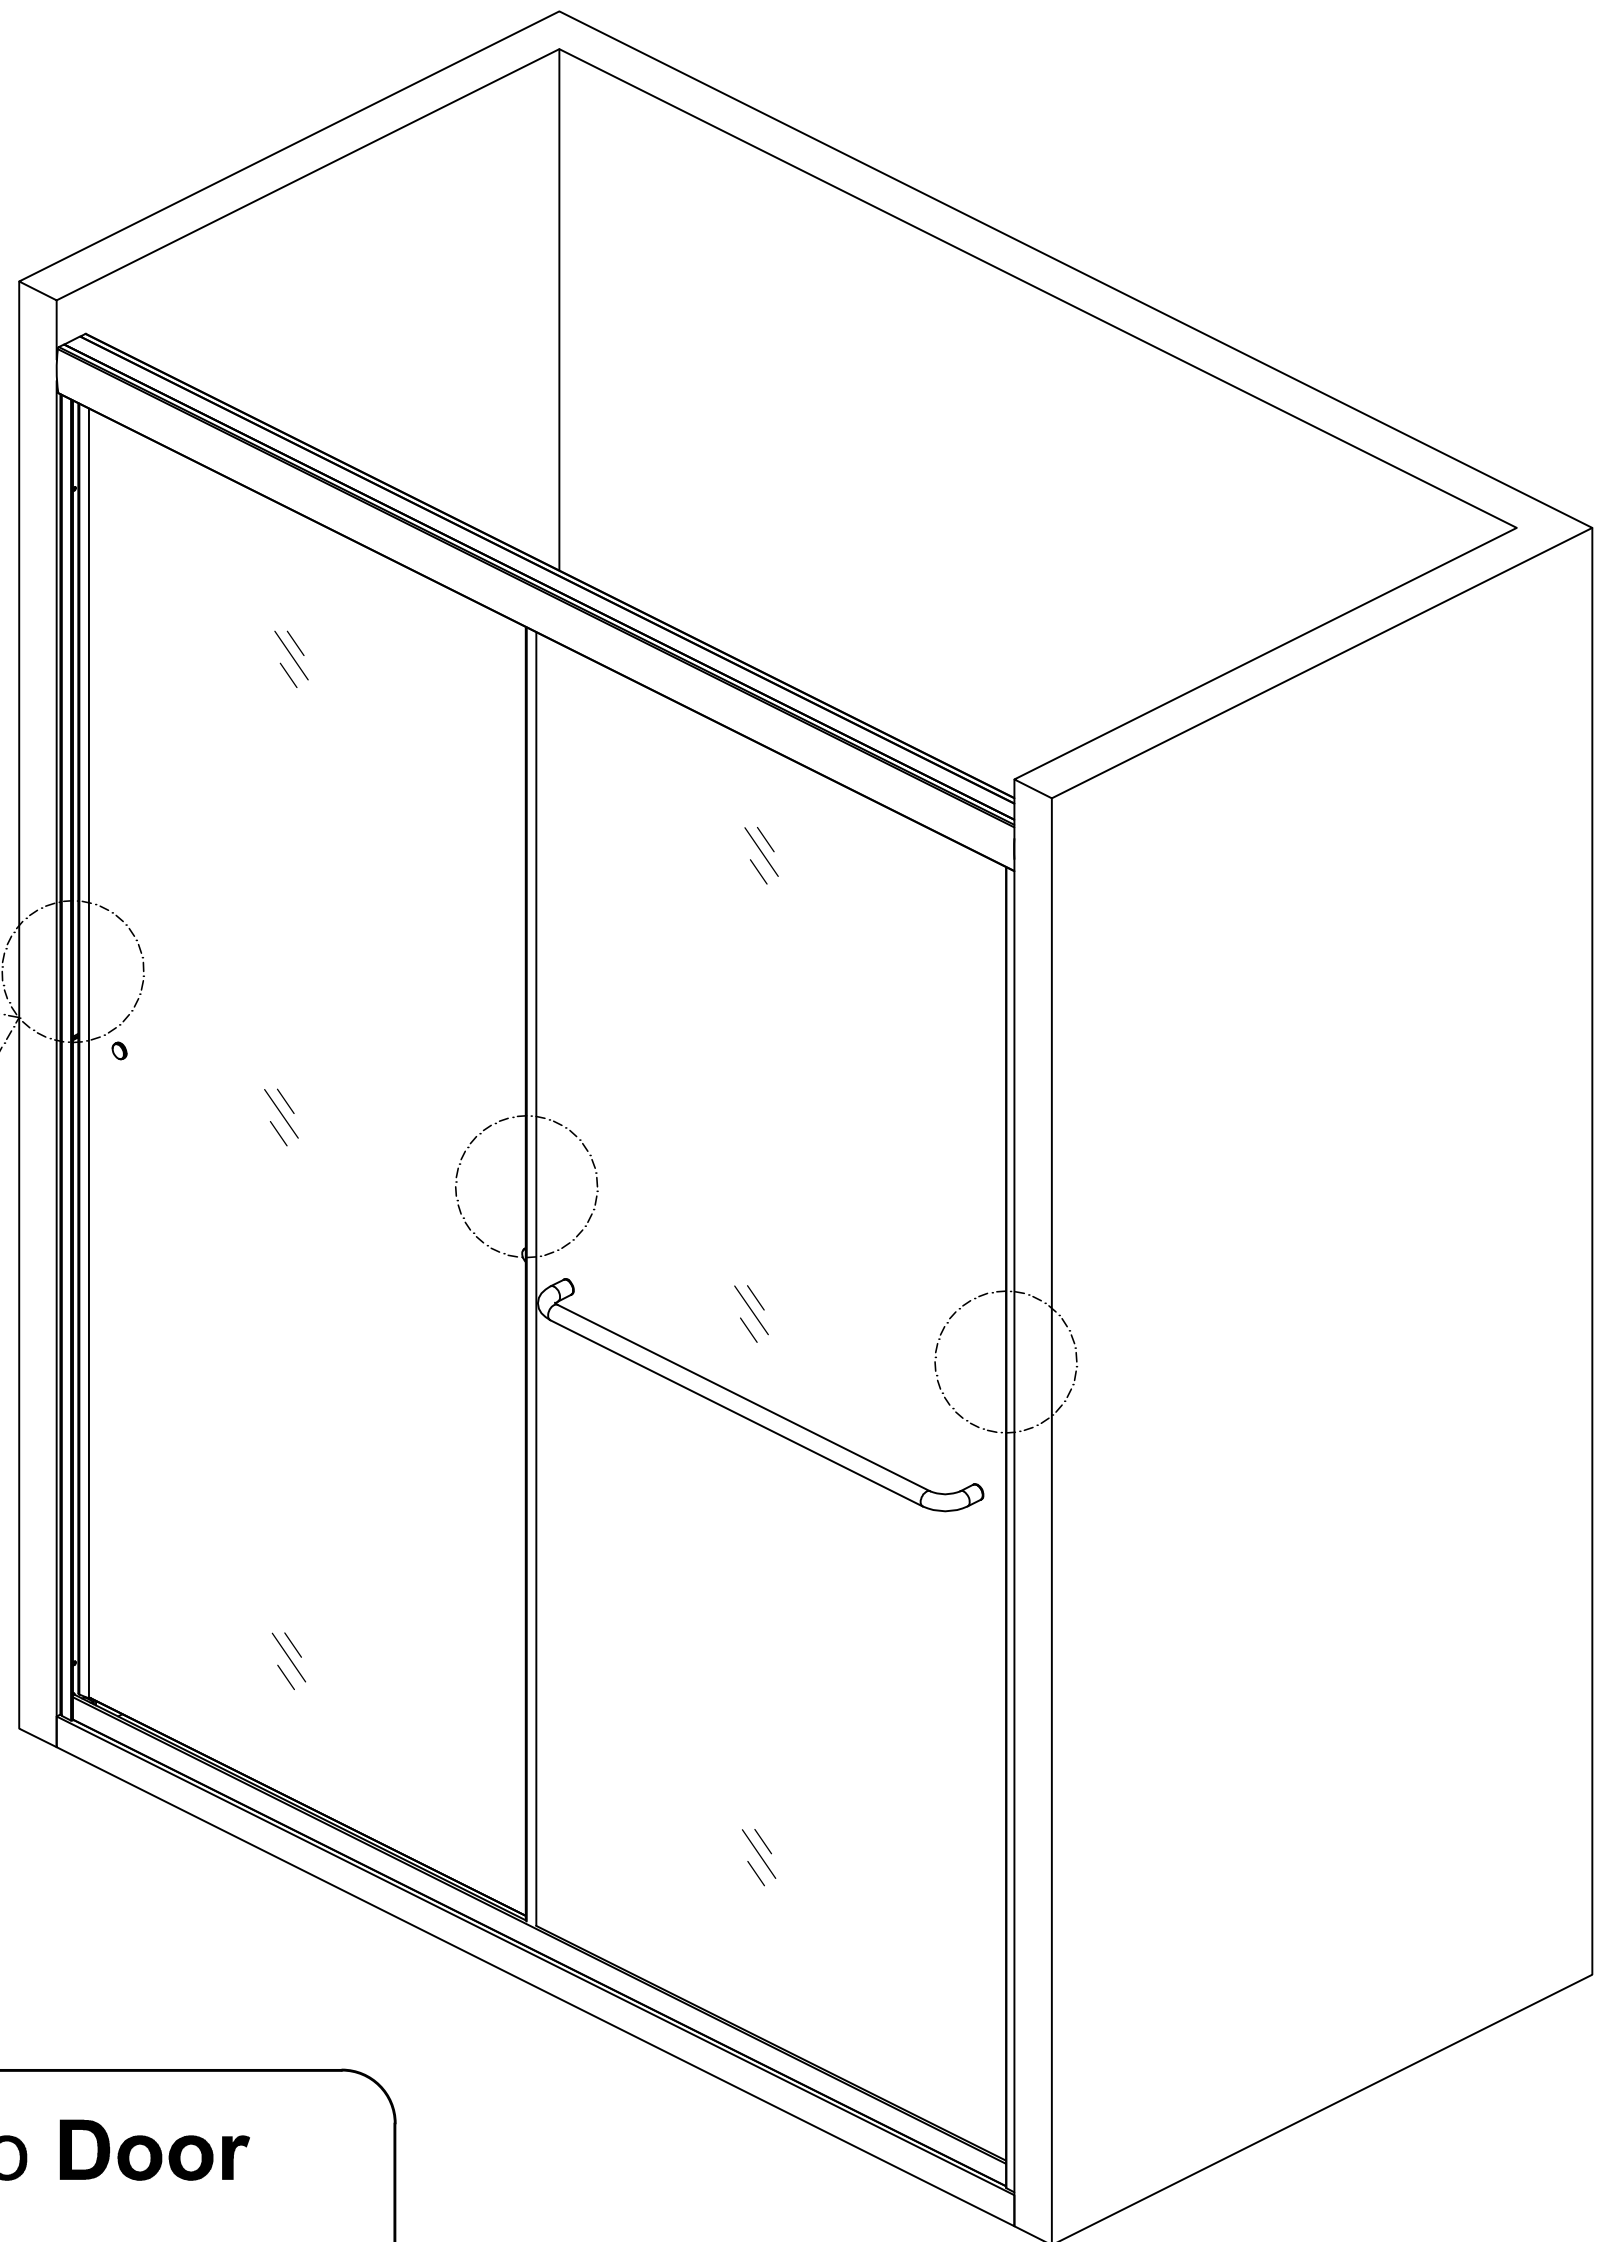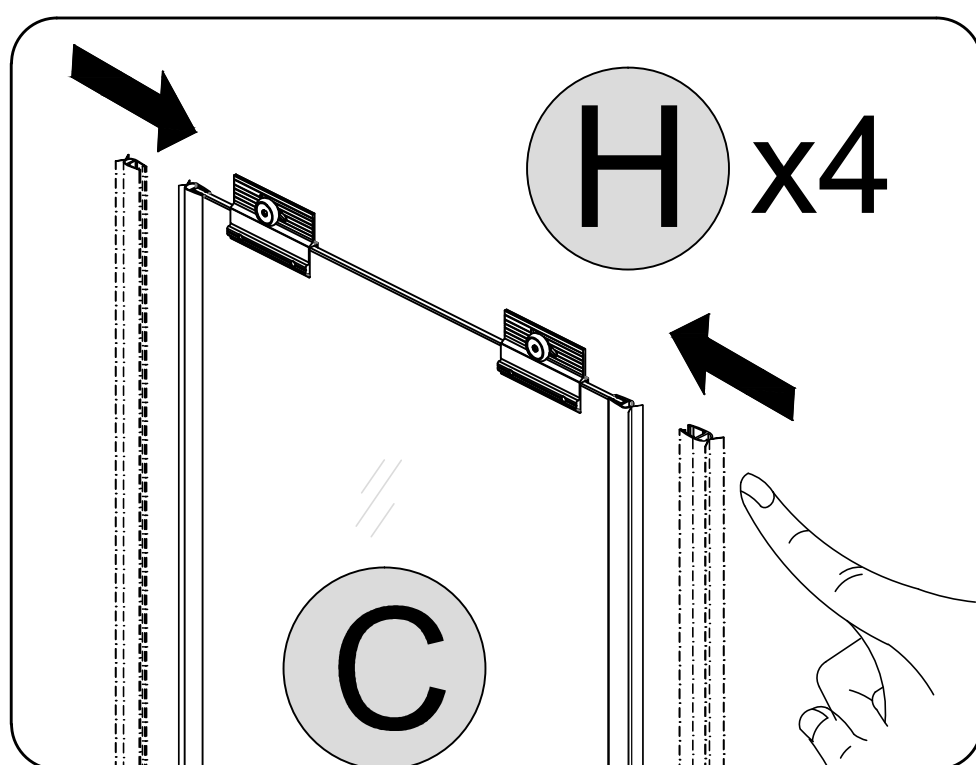

1. Attach the **PVC Seal(H)** to **Door Panel(C1&C2)**;
2. Seal is same height as **Door Panel(C1&C2)**.



12

Attach the **Lock(I & J)** to **Upper guide rail(M)** .

NOTE

Put one lock into the track of the **Upper Guide rail(M)** , and then move the lock to the side until the tab of the lock goes inside the hole of the **Wall Jamb(E)**. Repeat this installation to install all 4 locks as Fig. a

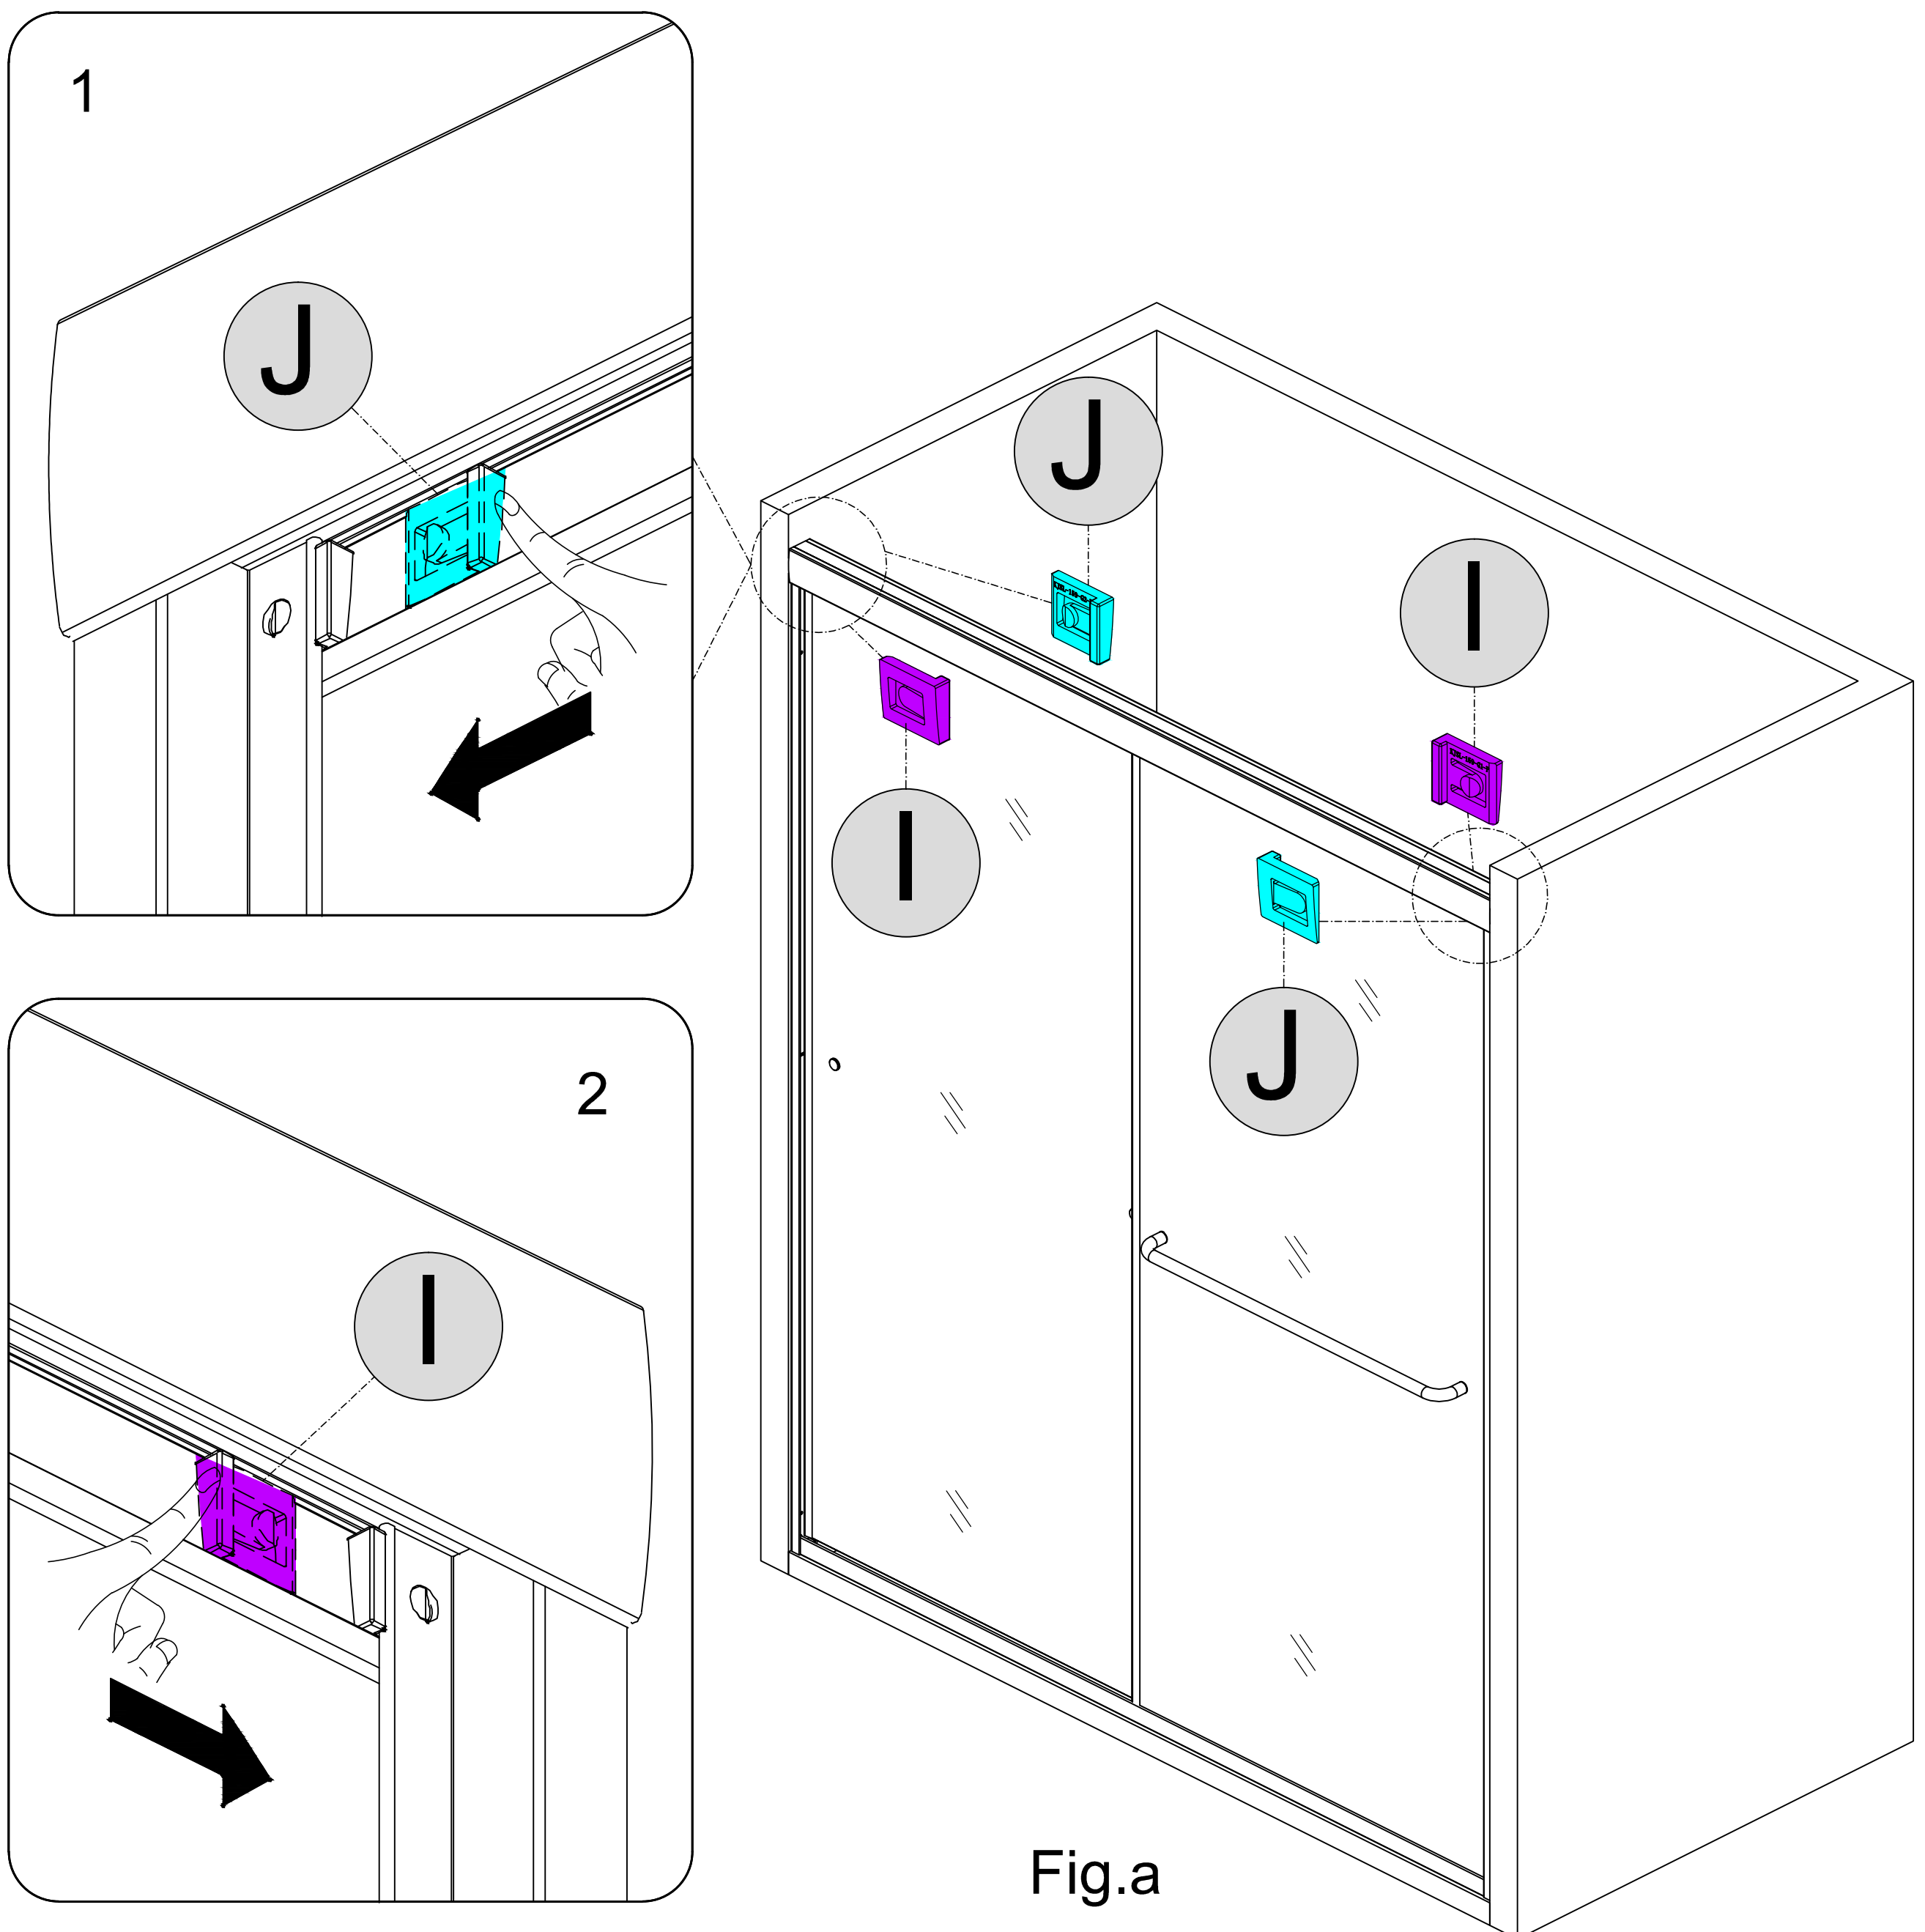


Fig.a





## 13 SEALING

**NOTE** The surfaces need to be clean and free of debris before applying silicone.



**NOTE** Ensure that the Shower door closes tightly and opens smoothly.  
**Apply a good quality silicone sealant along the wall Jamb(E) and Bottom Rail(B) .**

**!** Allow 24 hours for the silicone to cure before using the shower.

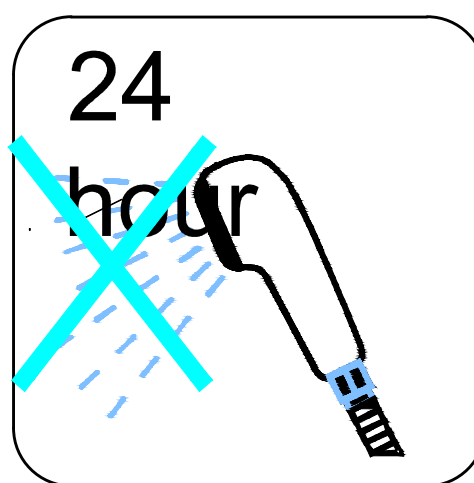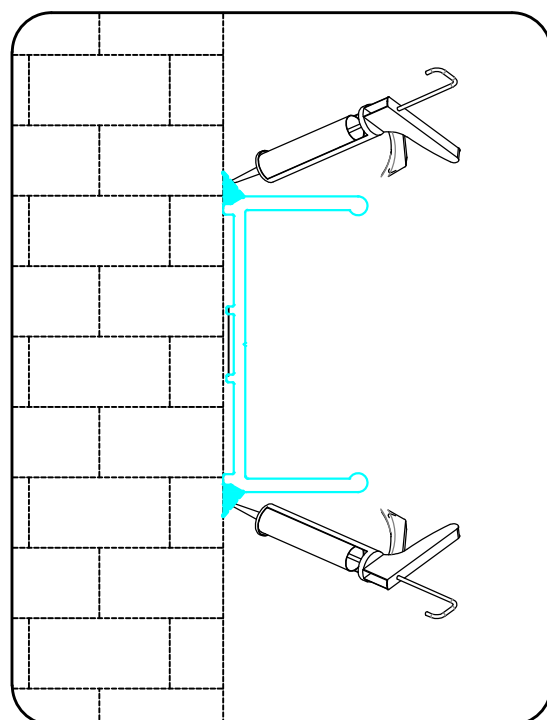


**!** Apply Silicone Sealant, (not supplied).

Inside View

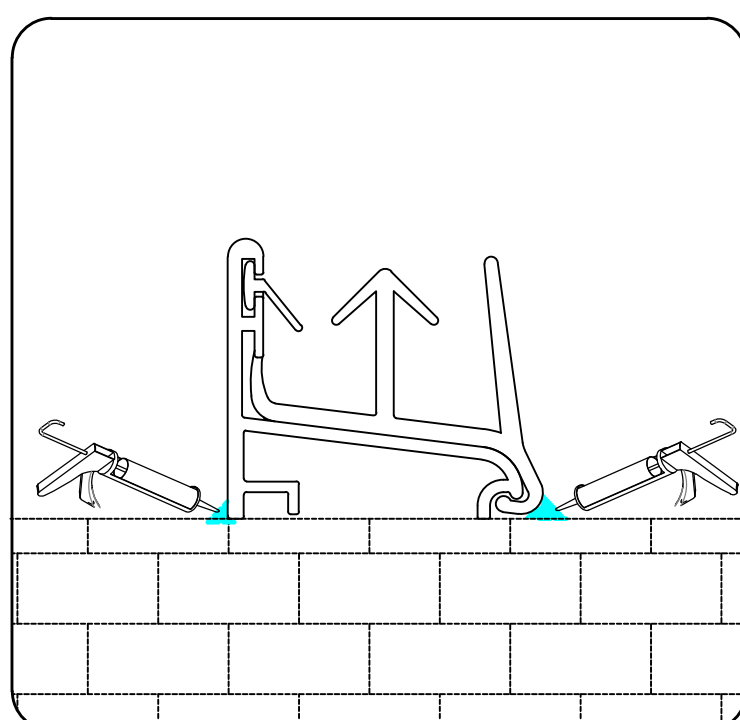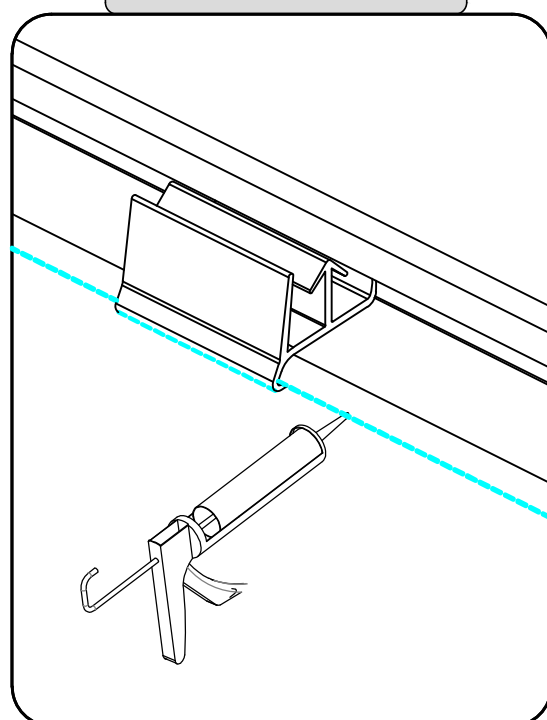

Apply silicone around the bottom rail.

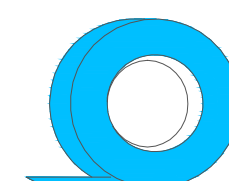

**Use Painter's Tape to hold the Water seal tight in position while the silicone cures.**