



These installation guidelines are for use with typical or standard applications. It is always recommended to seek advice from a licensed professional, and to check with your local building inspector or building permit office for approvals and possible variations that may apply.

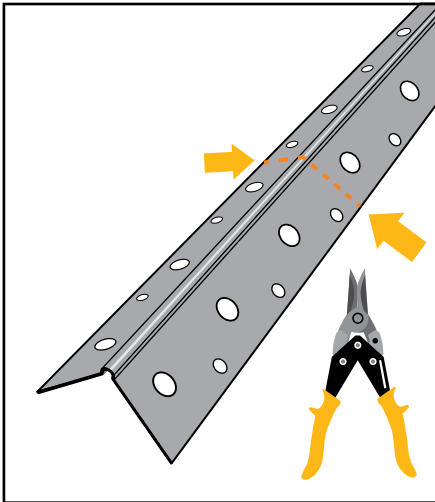


### MEASURE & CUT

Using one continuous length of corner bead, measure and cut it 1/2 inch shorter than the floor to ceiling distance by making two cuts in toward the centerline. Do not splice.

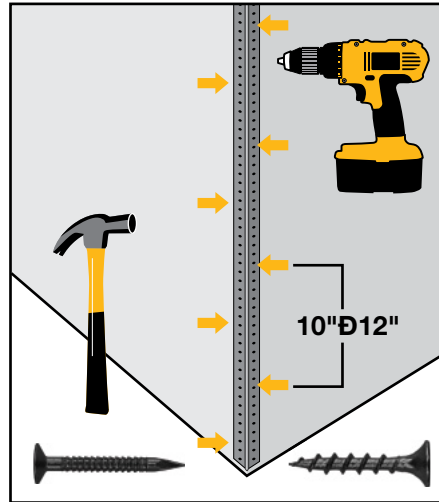


### CENTER & AFFIX

Hold corner bead firmly in place and affix with drywall nails or screws, every 10 to 12 inches. Slightly dimple each fastener.

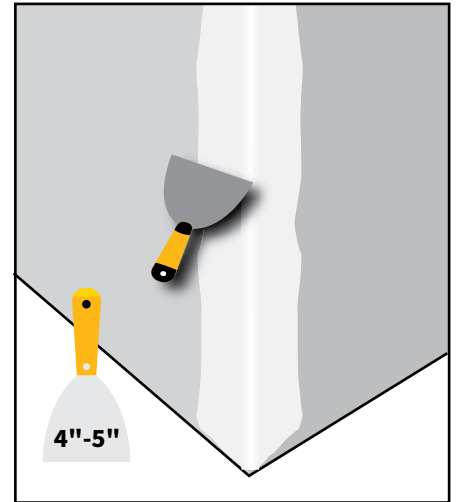


### FIRST MUD

Using a 4" - 6" drywall knife, apply a generous coat of drywall joint compound to each side. Feather the compound 4" - 5" from the corner. Allow to dry.

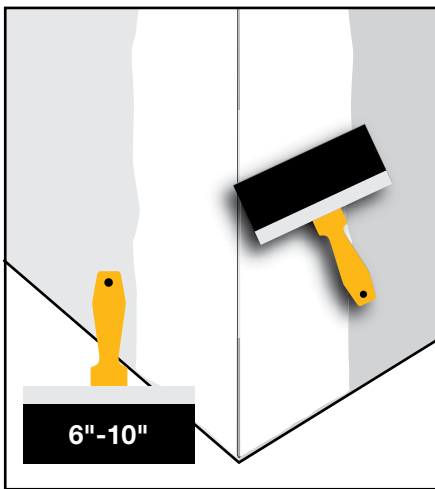


### SECOND MUD

Using a 6" - 10" drywall tapping knife, apply a thinner coat of drywall joint compound to each side. Feather the compound 8" - 10" from the corner. Allow to dry.

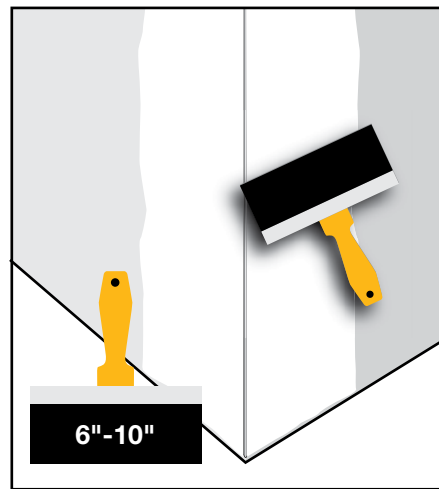

### SKIM COAT

Apply a thinner third coat of drywall joint compound to each side, feathered 10" - 12". Allow to dry.

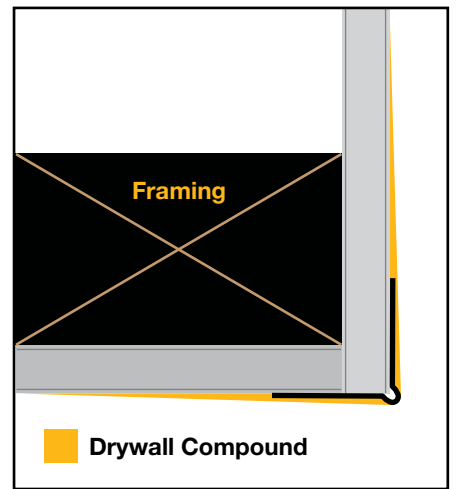

### TOP VIEW

Overlapping drywall sheets form the corner. The feathering of the drywall joint compound smoothly covers the nails & corner bead.