

TRIM FAST™ MOULDING

TOOLS NEEDED:

- Laser level • Caulk • Caulk gun • Putty knife
- Hand saw with Miter box or Miter saw,
(Recommended: 10" blade, 200 teeth)

WARNING! SUPER AGGRESSIVE ADHESIVE!



**ONCE APPLIED, MOULDING
CAN NOT BE REMOVED
WITHOUT DAMAGING WALLS.**


INSTALLING CROWN MOULDING:

1. Surface must be dry before installation. For best results, install on freshly painted dry walls; or, wipe walls with rubbing alcohol prior to installation. Do not use household cleaners or water, as they leave slippery residue.
2. **Recommended: Use a laser level or chalk line to ensure moulding is straight.**
3. Remove backing paper from the 1" **permanent adhesive** strip on the bottom back of the moulding. Press and hold moulding firmly against surface for 30 seconds. Allow 72 hours for adhesive tape to cure.
4. Not all walls are straight, so apply caulk where necessary to fill in any gaps and joints. Remove excess caulk, let dry and sand, if necessary. Make sure surface is clean and dry before painting.


NOTE: When installing moulding for Indirect Lighting, a minimum 6" distance must be kept from ceiling.

EXAMPLE DIAGRAMS



Crown Moulding

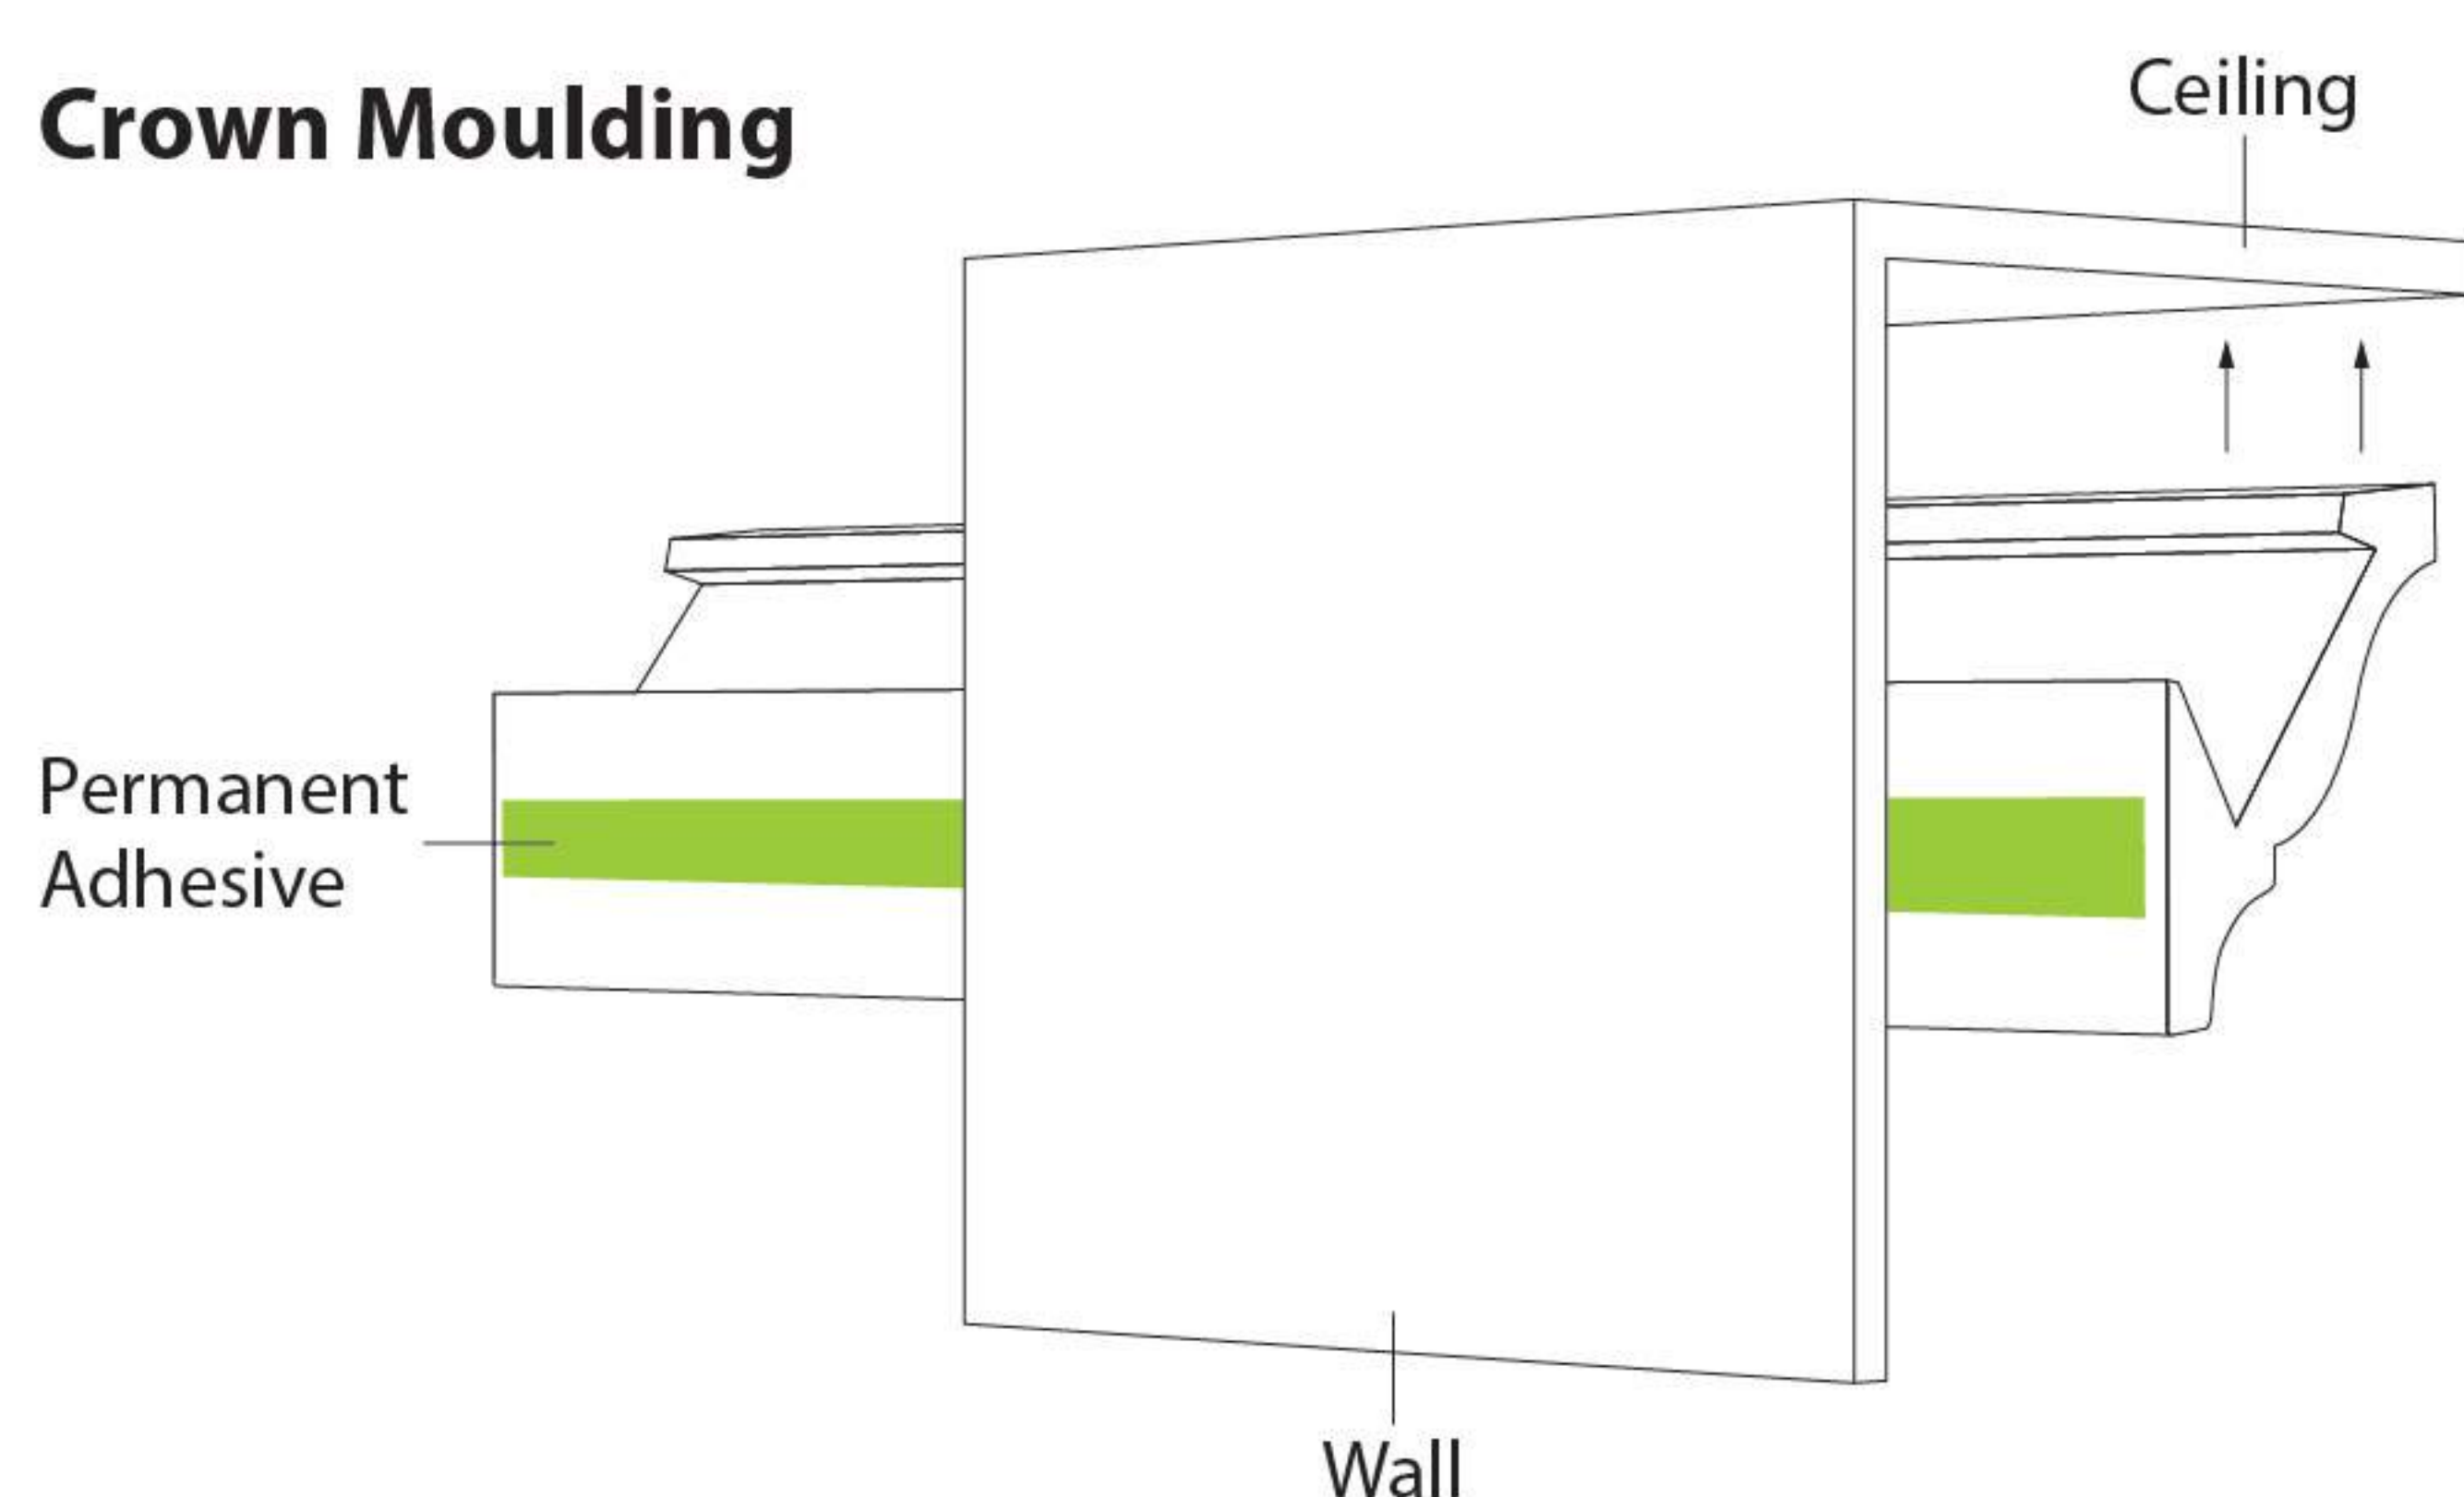

Crown Moulding for Indirect Lighting

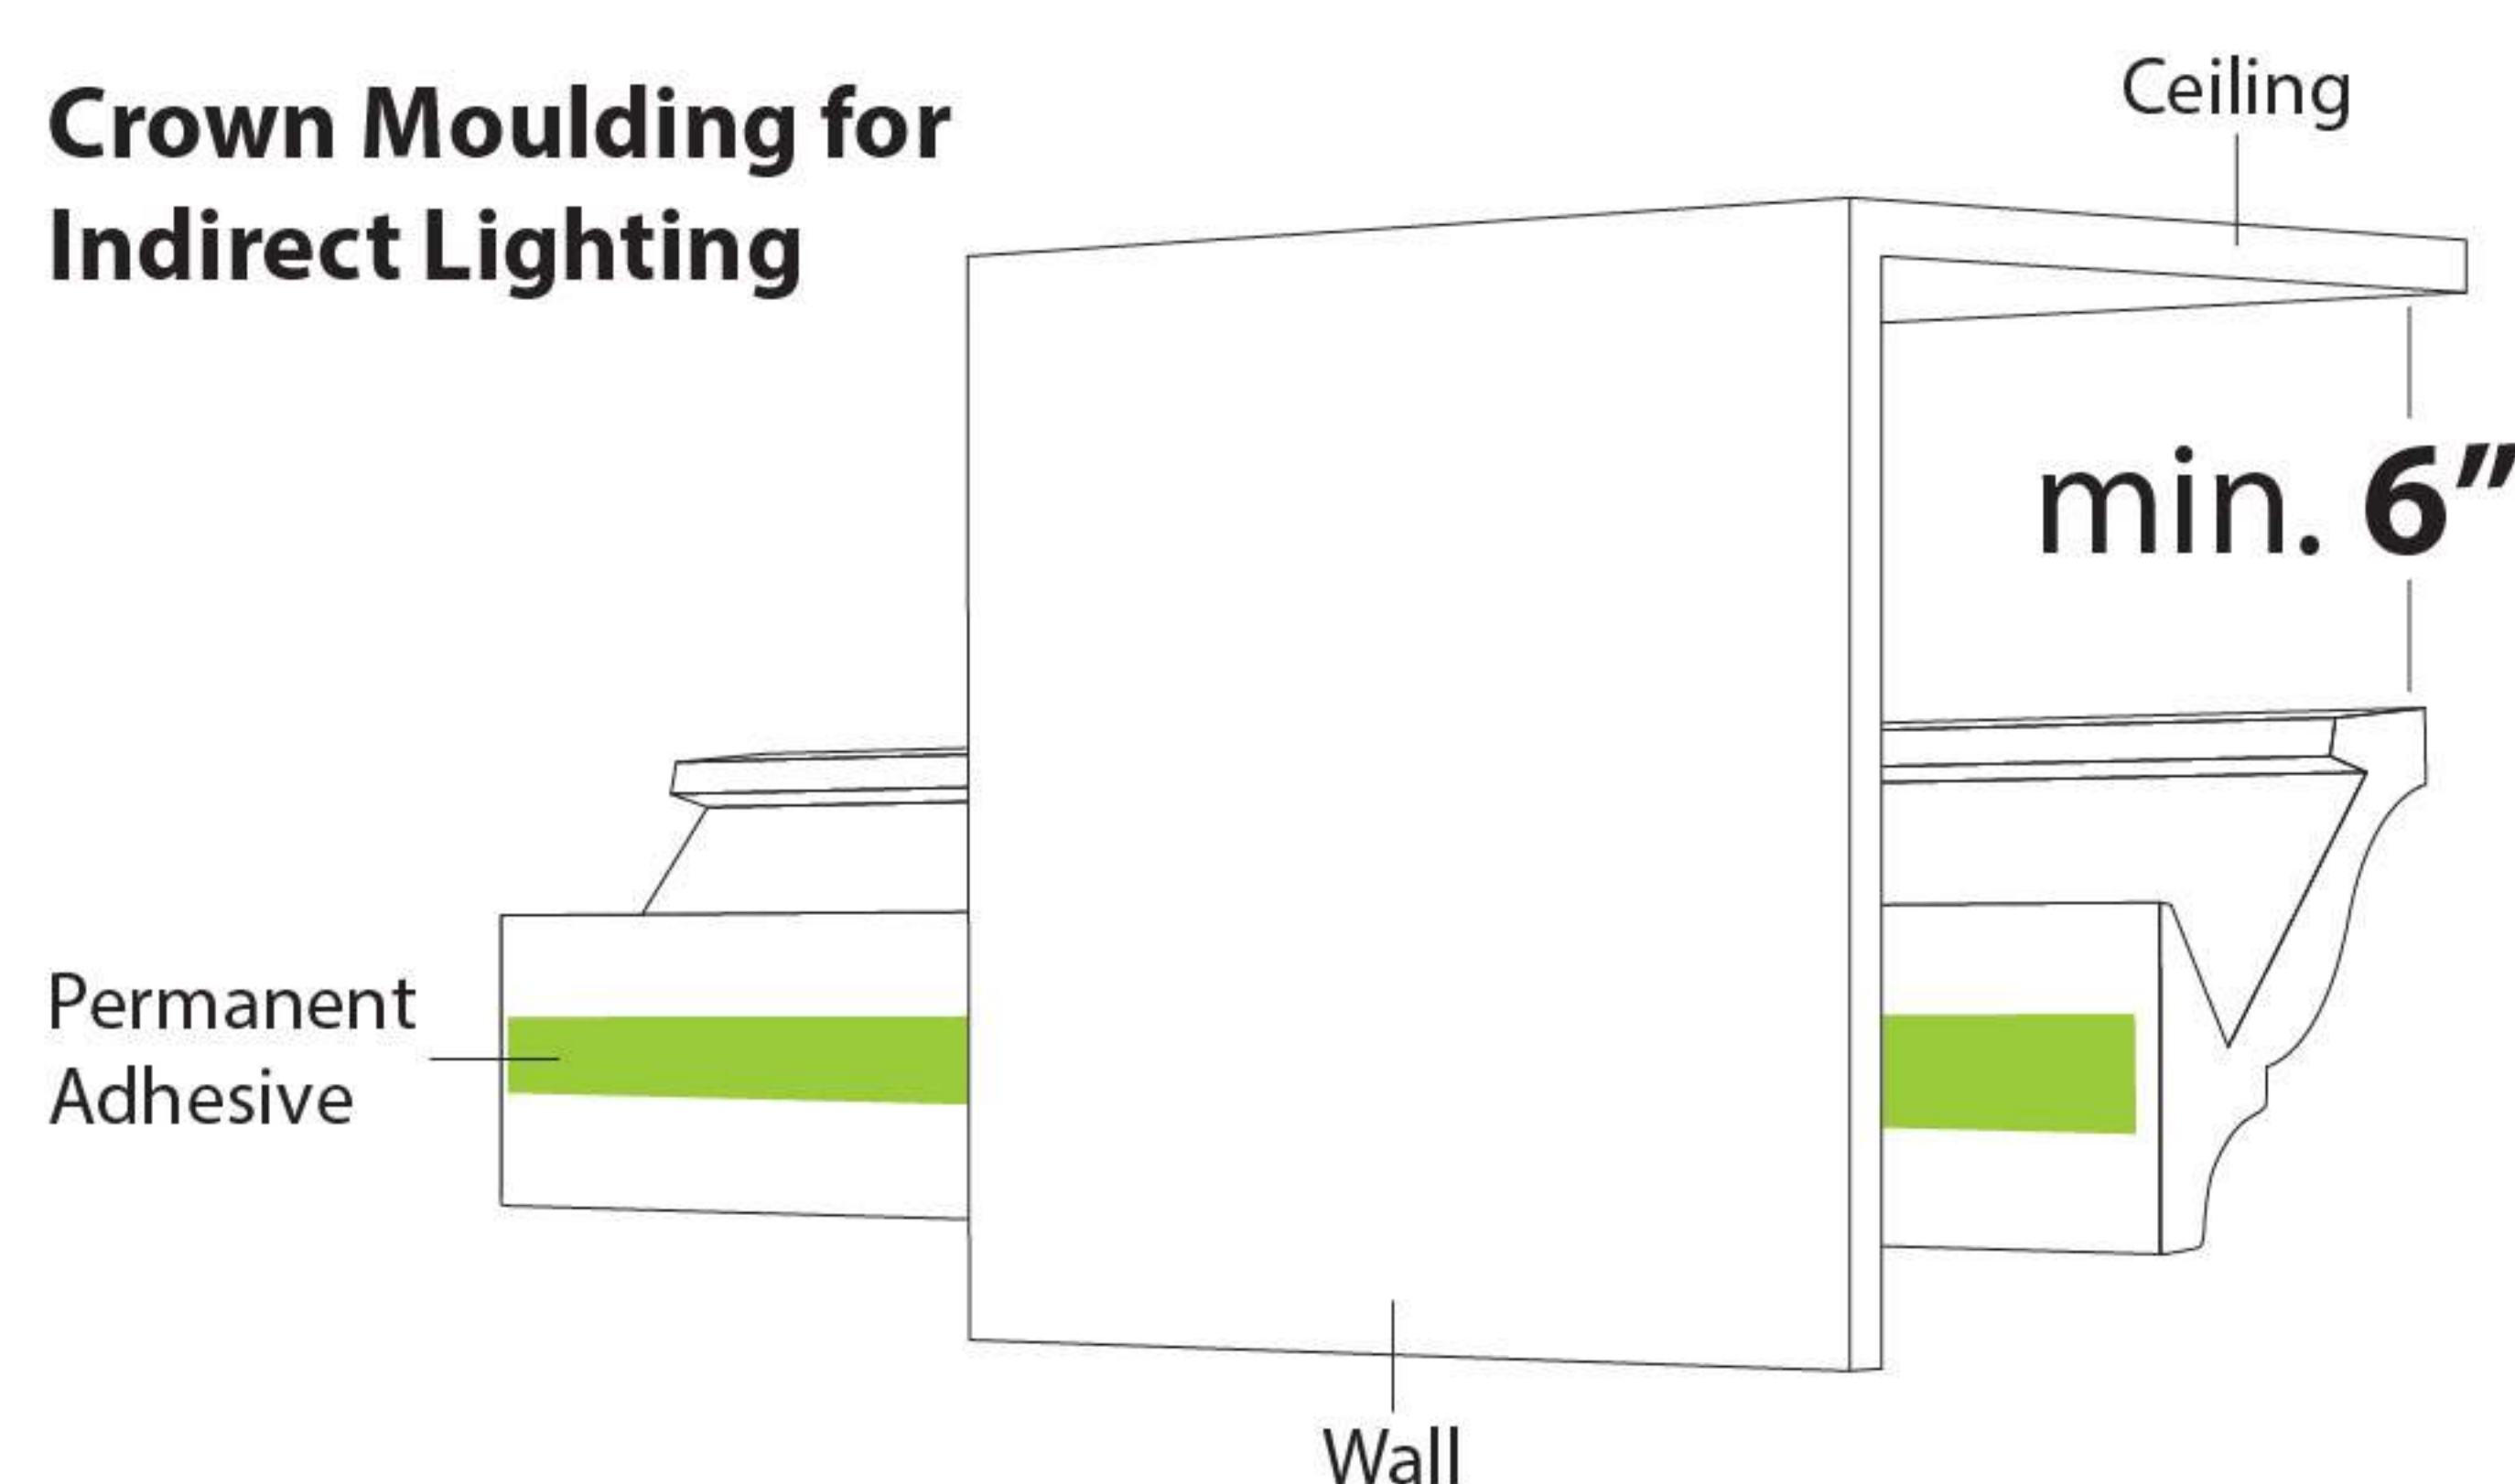

INSIDE AND OUTSIDE CORNERS AVAILABLE FOR CROWN AND BASEBOARD MOULDING

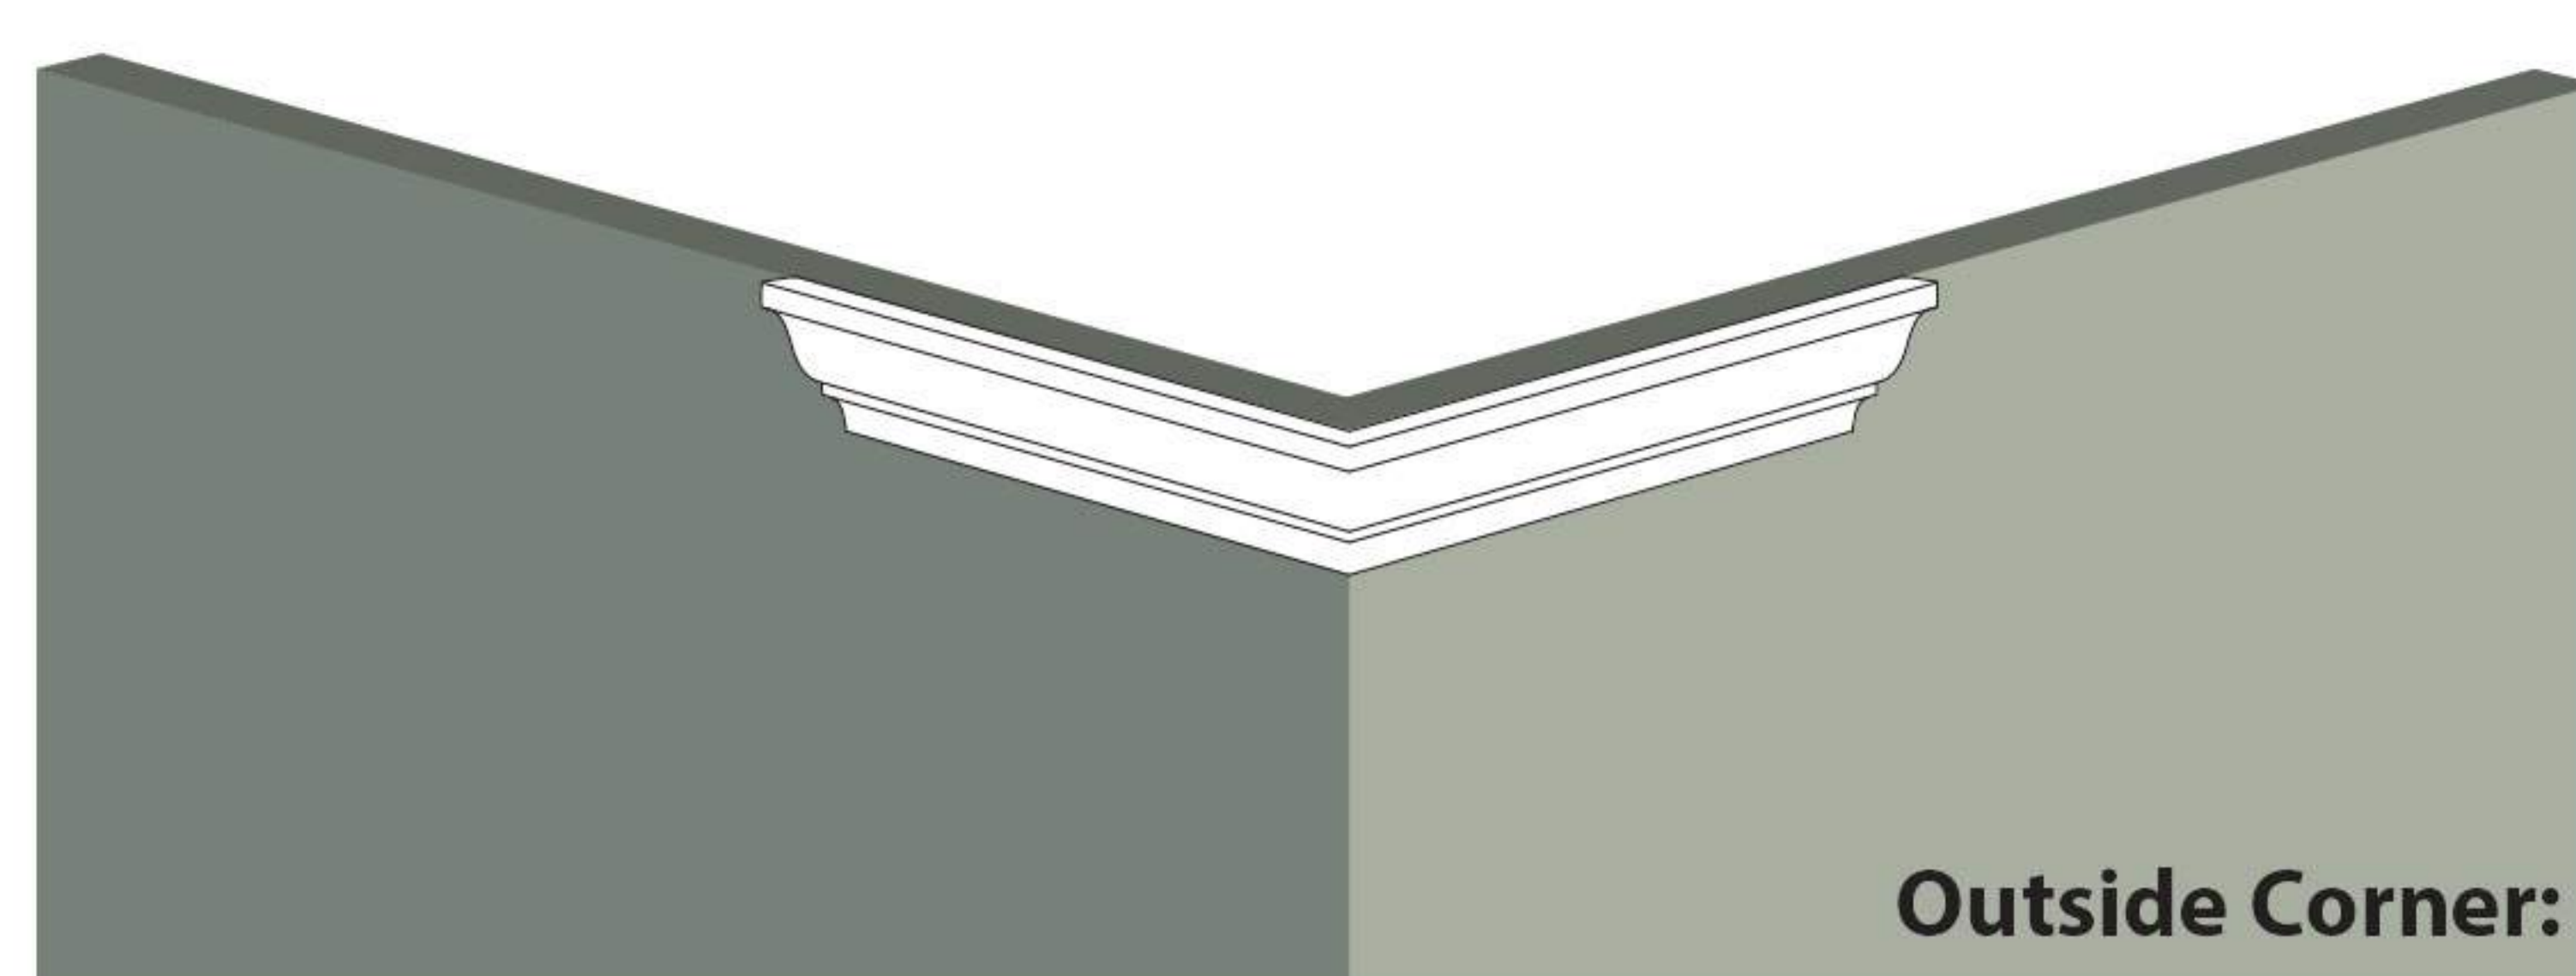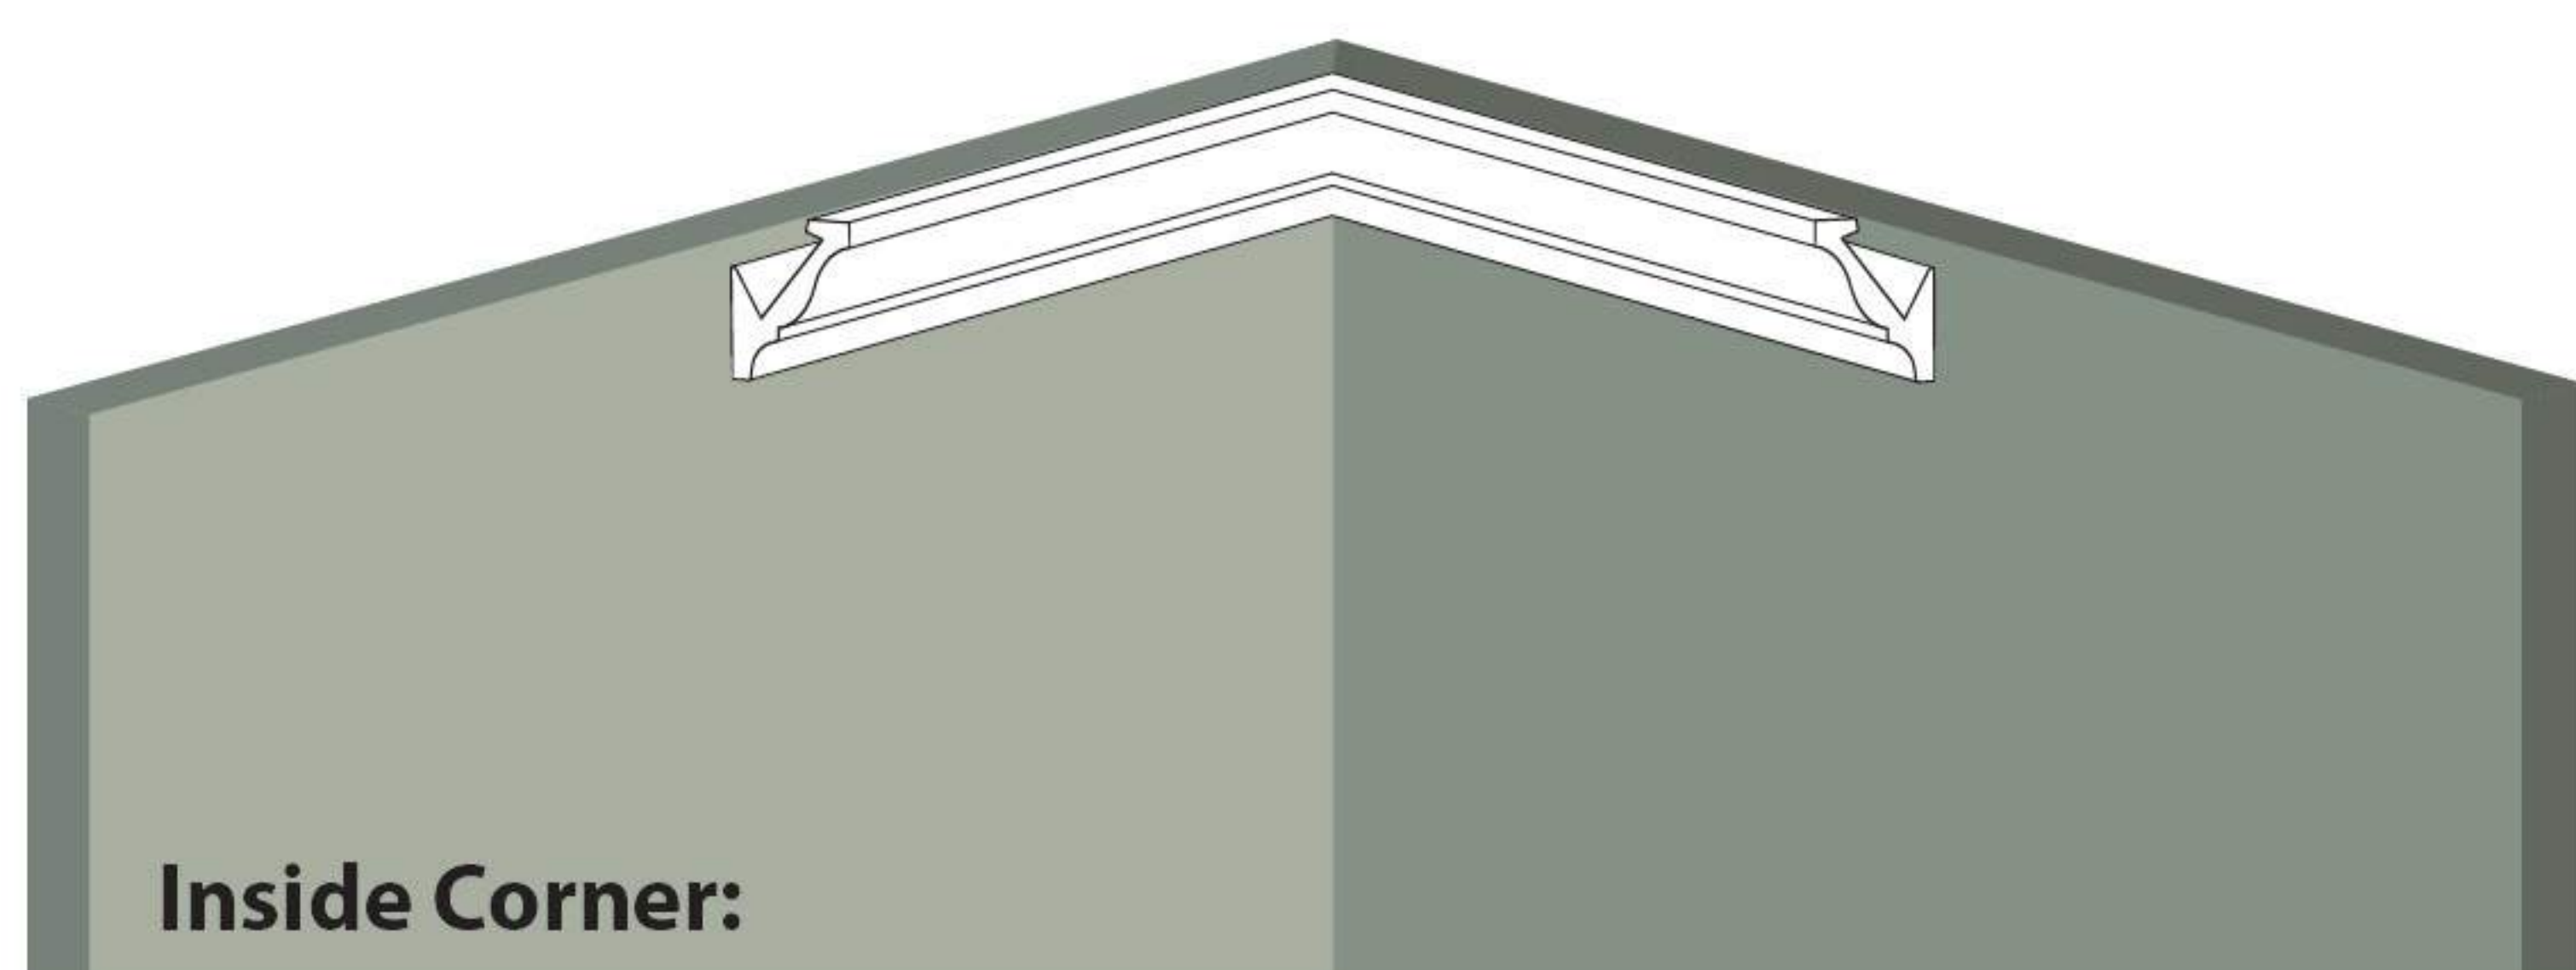

INSTALLATION INSTRUCTIONS FOR

TRIM FAST™ MOULDING

TOOLS NEEDED:

• Laser level

• Caulk

• Caulk gun

• Putty knife


• Hand saw with Miter box or Miter saw,

(Recommended: 10" blade, 200 teeth)

INSTALLING BASEBOARD MOULDING:

1. Surface must be dry before installation. For best results, install on freshly painted dry walls; or, wipe walls with rubbing alcohol prior to installation. Do not use household cleaners or water, as they leave slippery residue.
2. Recommended: Use a laser level or chalk line to ensure moulding is straight.
3. Remove backing paper from the 1" permanent adhesive strip on the bottom back of the moulding. Press and hold moulding firmly against surface for 30 seconds. Allow 72 hours for adhesive tape to cure.
4. Not all walls are straight, so apply caulk where necessary to fill in any gaps and joints. Remove excess caulk, let dry and sand, if necessary. Make sure surface is clean and dry before painting.

EXAMPLE DIAGRAM

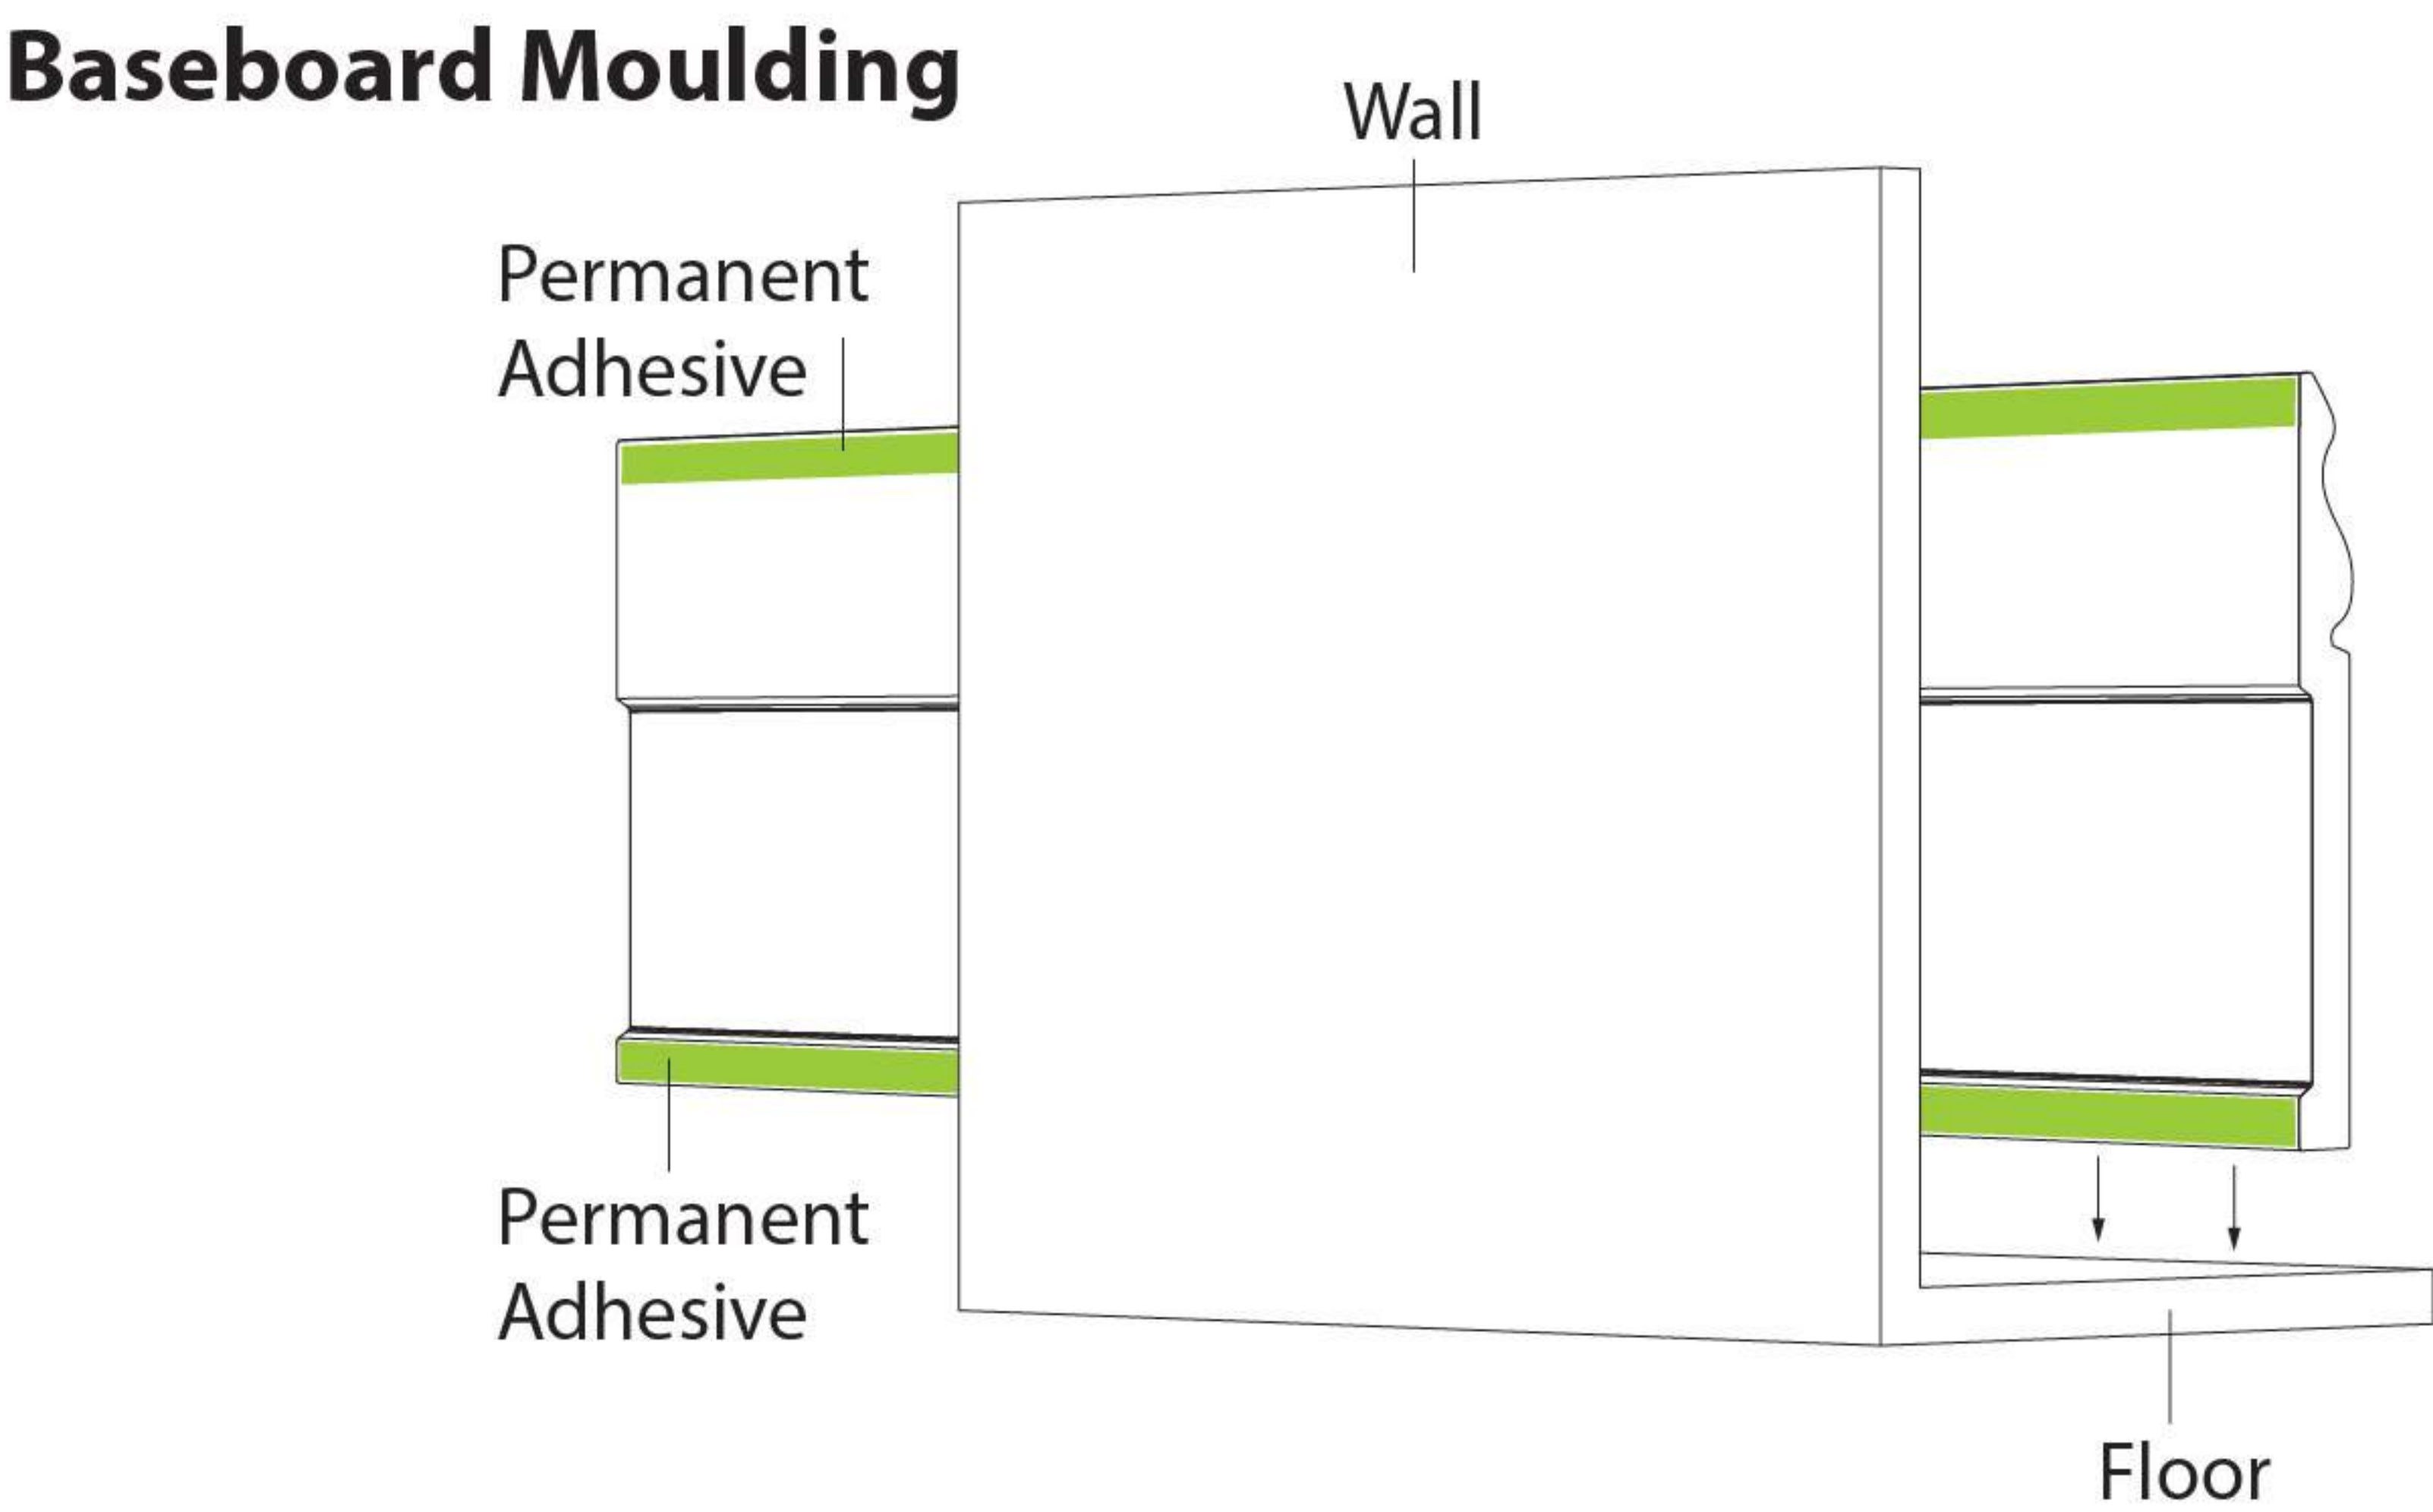

INSIDE AND OUTSIDE CORNERS AVAILABLE FOR CROWN AND BASEBOARD MOULDING

