

# *BATHROOM* LED MEDICINE CABINET INSTALLATION MANUAL

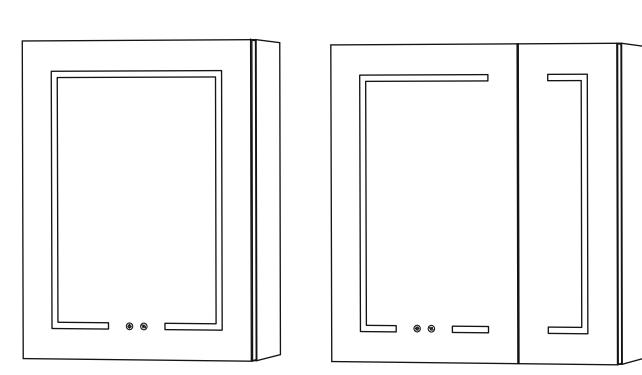

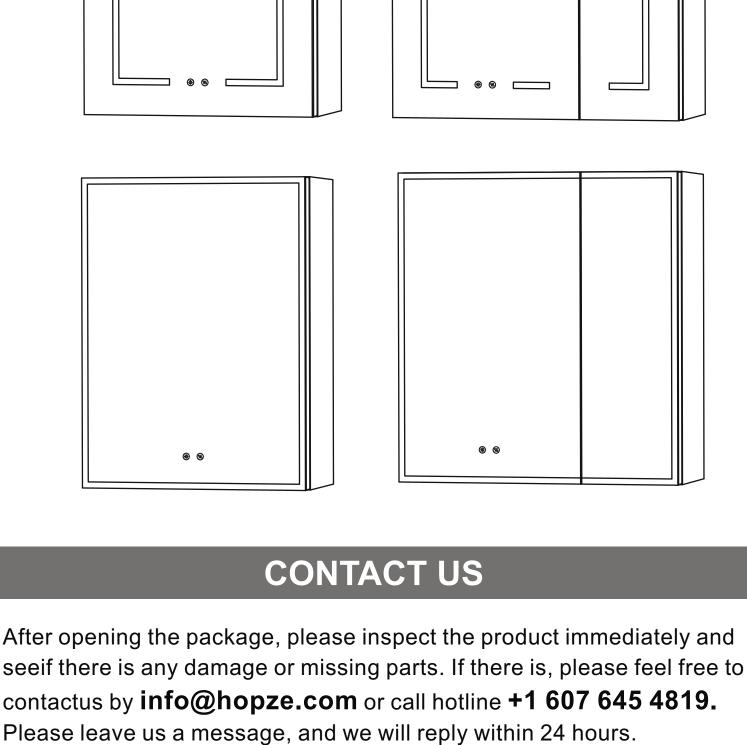



### 24x32 24x32

2

2

Glass Plate

30x32

2

30x32

2

**PACKING LIST** 

4 4 4 4 Shslf Clip 1 1 1 1 Lower Bracket 3 3 3 3 Anchors Screws

**BEFORE INSTALLATION** 

Thank you for choosing our products. To ensure the best experience,

pleaseread carefully and follow the instructions provided below before

assembling and installing the product.

missing parts.

3.Before Installation

\*\*) (§)

adjust the brightness steplesly.

**ANTI-FOG** 

1.Installation Tools

2. Installation Steps

Level Ruler

1. Important Safety Instructions: · Assembly by two or more adults is highly recommended, so as to ensure proper installation. • To connect the wires to the electrical junction box, a qualified technician or electrician is highly recommended. • Disconnect power before installing, adding, or changing any components. · Make sure that the fixing location can support the weight of the entire fixture (e.g. solid stone or brick walls). • To prevent injury, the glass shelves must be installed after the LED medicine cabinet hanged up and as per the instructions provided.

voltage exceeds 240V, please use a transformer.

**ON/OFF/LIGHTING COLOR / BRIGHTNESS** 

ON/OFF: Tap the button to turn on the light and tap again to turn it off.

• 3 Lighting Color Modes Adjustable: Short touch the power button to

- Separate Anti-fog Switch to Turn ON/OFFdefogger function at your needs. • The anti-fog function helps resist the troubling fog and keep a clear reflection. • To save your time, we suggest open the anti-fog function 5~10 minutes in advance.

1) Place the hanging strip on the wall, level it, and use a pencil

to draw a hole with a depth of 45mm at the screw hole

## Opening depth 45mm


screw.

cabinet hanging slot.

Plug-in Setup.

· Hardwired:

PS:Installation by 3 people

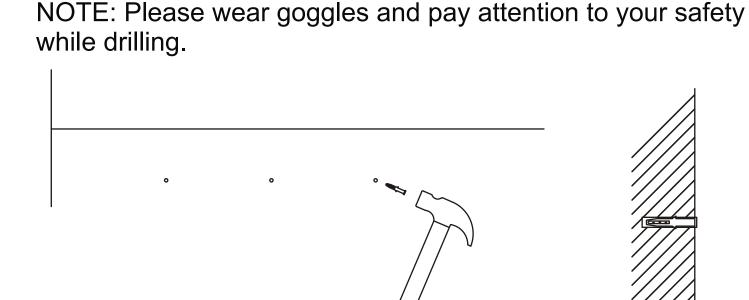

2 Use an impact drill to install a 6mm drill bit and drill a 45mm

(5) Stick the back of the mirror cabinet tightly to the wall, slowly

slide it down, and insert the hanging strip into the mirror

- WARNING: This medicine cabinet Reminder: Please make sure the power is cut off before installation must be earthed. Plug-in: If you want to connet power by plug-in, jsut simply plug into the socket.
- How to Use. 1. Please ensure that the product is used within the safe voltage range of 110V-240V.

aproper use and regular cleaning.

2. Please wrap electrical tape around the wires to prevent electrical leakage. 3. Avoid using hard or pointed items to strike the mirror glass so as to

**HOW TO USE AND CLEAN** 

In order to keep the LED medicine cabinet in perfect condition, we suggest

- prevent damage. How to Clean.
- or abrasive materials that may damage the surface. 2. Do not use any cleaning agents that may cause irritation or damage to the mirror's finish. Instead, use any of the recommended cleansers

to remove dirt and grime.

If you have any questions, please feel free to contact us Email: info@hopze.com, Hotline: +1 607 645 4819

2.Pre-assembly:

Inspect the product immediately upon receipt for any transit damage or

The voltage for your product should be between 110V and 240V. If the

You can connect the wires directly to your junction box or plug.

Please check and make sure that the mirror is functioning properly.

ON/OFF

Anti-fog

ighting Color/Brightness

10

Tape Measure

- switch the lighting colors. The first short touch is white light, the second is warm light, and the third one is natural light. Dimmable Brightness Adjustable: Long touch the power button to
- SURFACE WALL MOUNT INSTALLATION
- Electric Drill Phillips Screwdriver Safety Goggles

Hammer

Marker

PS: It is recommended to install the product at a height greater than 1.15m above the ground, with 3 people installing outside.

position to mark the punching point.

6mm drill bit

deep hole on the marked positioning hole.

3. Hammer the expansion screw tube into the pre drilled positioning hole with a hammer

Align the screw hole of the hanging strip with the 6mm drill

Hanging strip stuck in slot

pipe of the already drilled expansion screw, and lock the

glide

(6) Insert the provided shelf clips into the round hole on both sides of the cabinet After installing the shelf clips, insert the glass shelves. Note: The glass shelves can be moved into different heights as needed, since we deberately design extra sets of holes for installation. For the holes that you don't use, we suggest to fill them with hole covers.

3. Connect the Power through a Hardwired or

(1) Cut off the plug that comes with the medicine cabinet;

(2) Connect the cables into the household wirings

WHITE WRE-POWER SUPPLYN(NEUTRAL)

GREEN WIRE-POWERSUPPLYE(EARTH)

**BLACKWIRE-POWER SUPPLYL(HOT)** 

- When cleaning the mirror, please follow these steps: 1. Use a soft, non-abrasive cloth to clean the mirror. Avoid using rough
- Warranty 1-year warranty from the date of your purchase.