




SHOWER DOOR INSTALLATION GUIDE

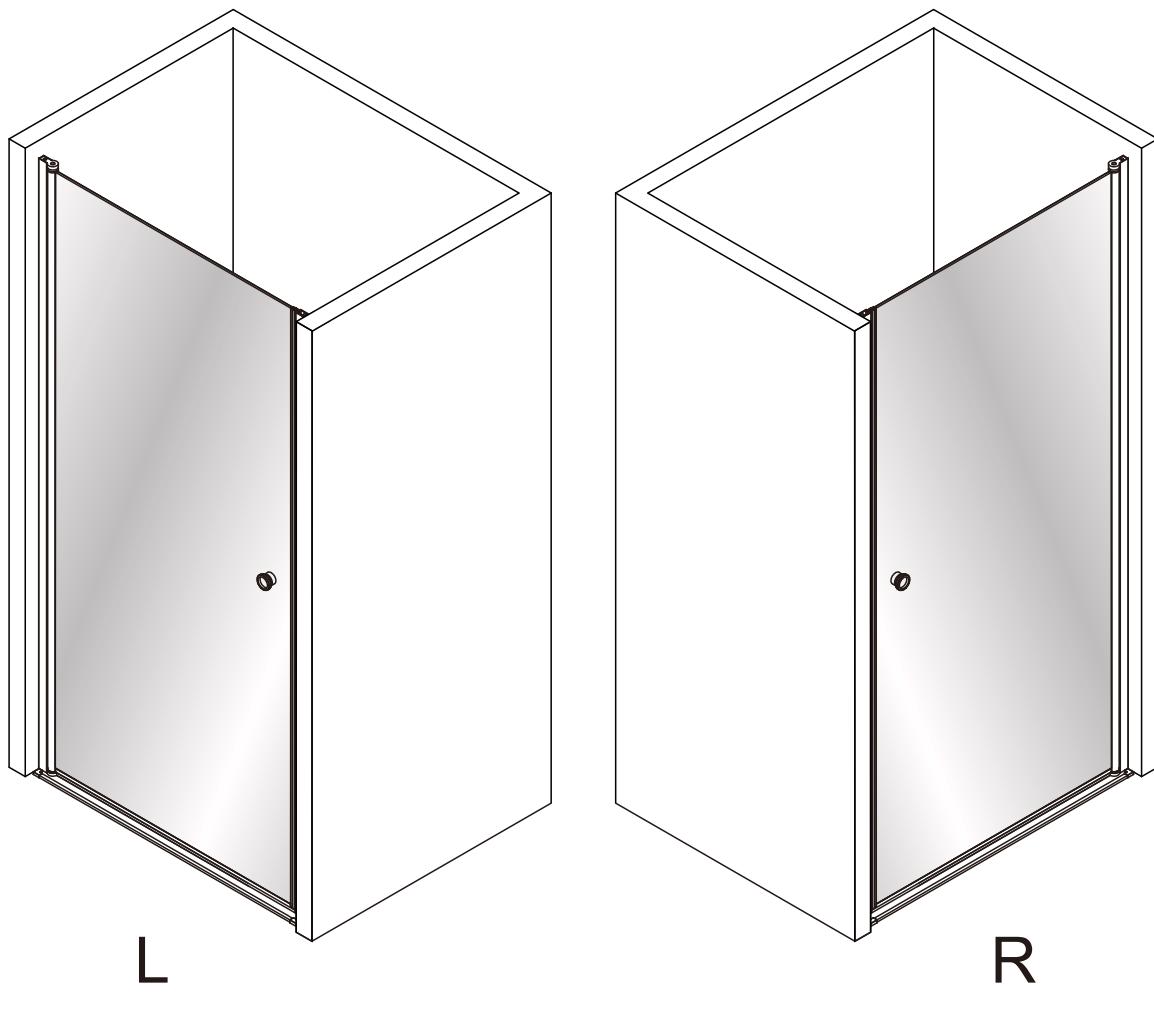

Reversible For a Left or Right Door



BFH installation video

This shower door excludes shower base.

Customer service:

For more information about TOOLKISS® products please visit WWW.TOOLKISS.COM




+1(832)3768443



sales@toolkiss.com

Do not return product to the store. Contact **TOOLKISS® directly with any questions.**

PACKAGE CONTENT

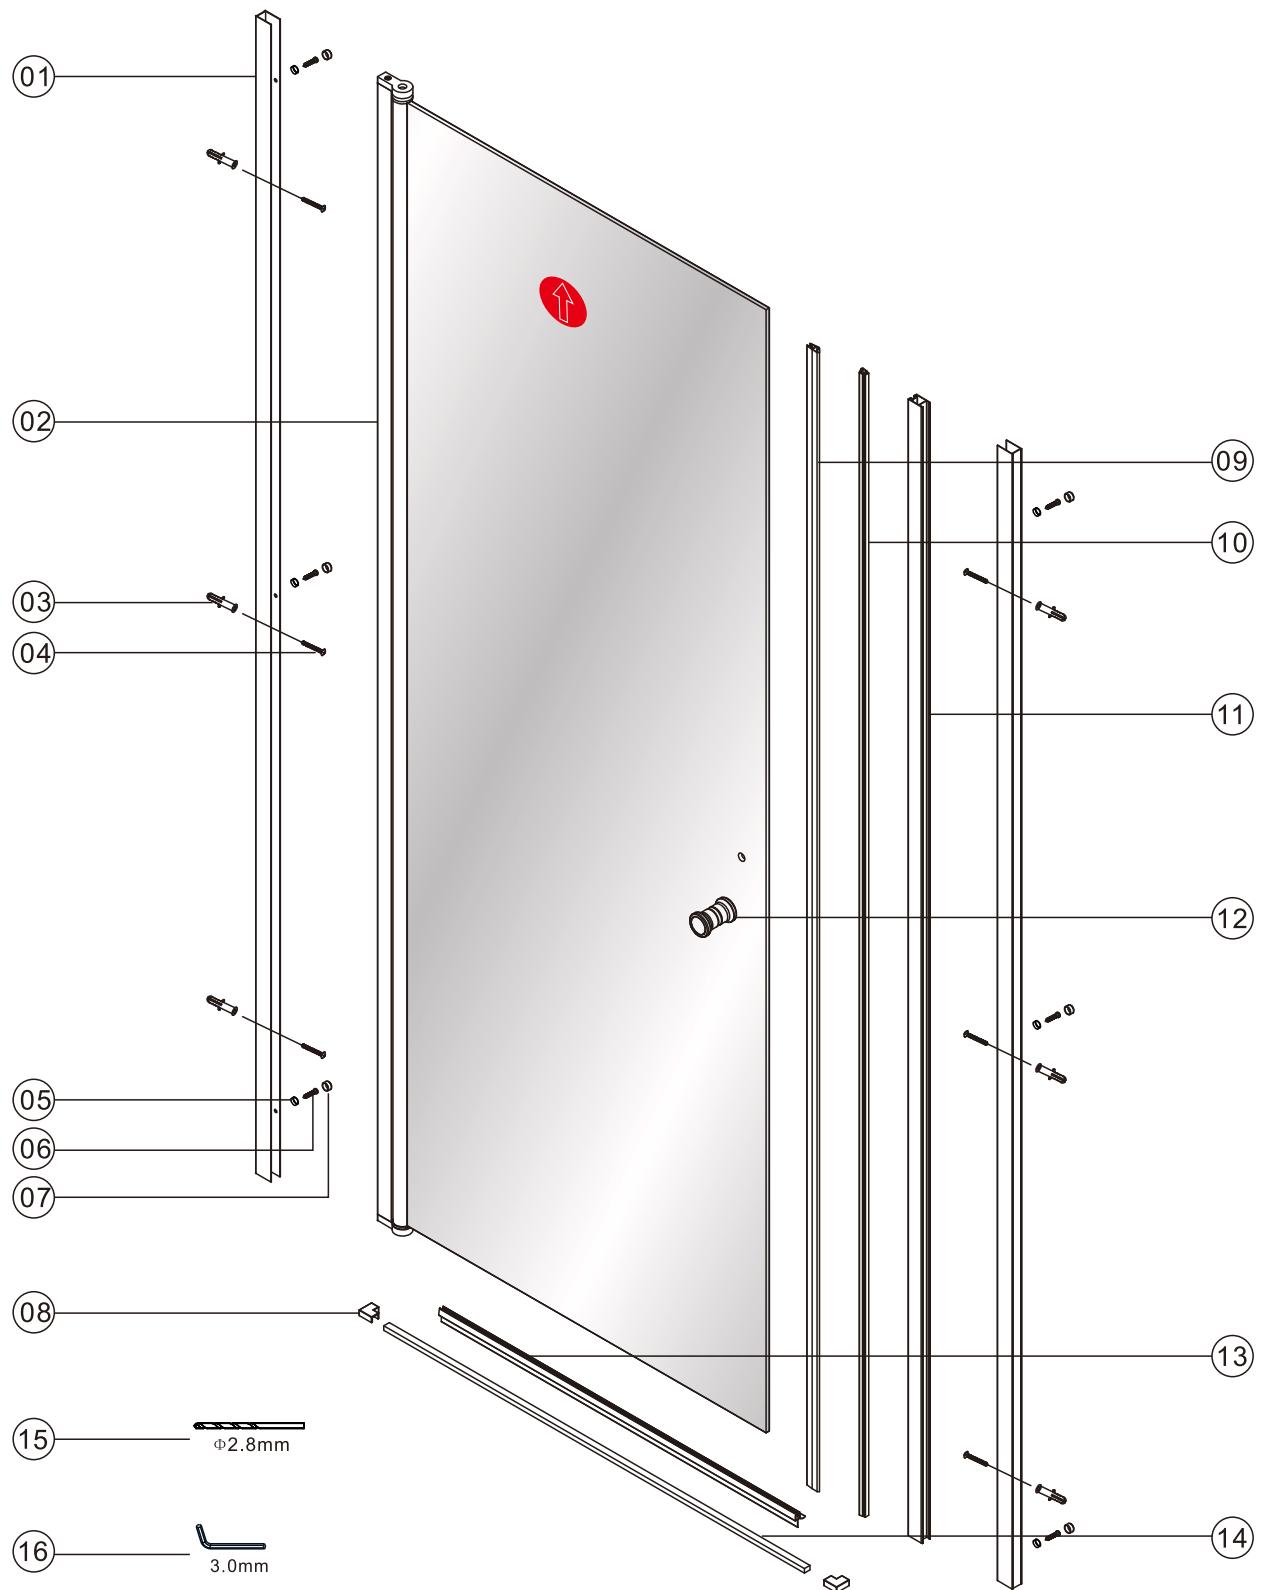

SHOWER DOOR

PACKAGE CONTENT

(01)	 x2	(02)	 x1	(03)	 x6	(04)	 x6 ST4*30十字圆头自攻螺丝
(05)	 x6	(06)	 x6 ST3.5*10十字圆头自攻螺丝	(07)	 x6	(08)	 x2
(09)	 x1	(10)	 x1	(11)	 x1	(12)	 x1
(13)	 x1	(14)	 x1	(15)	 Ø2.8mm	(16)	 3.0mm x1

SHOWER DOOR

TOOLS REQUIRED

Drill Bits



2.8 /6mm dia.
HSS

Screw Driver




Drill



Level



Silicone

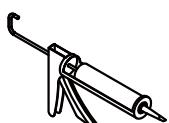

Measuring Tape




Soft Head Hammer




Pencil



Knife

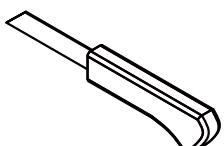

Sealant



MASONRY DRILL
BIT FOR TILE
Ø6mm




Safety Glasses



Glove




Carpenter's Squarer




Masking or painter's
tape



Hack Saw

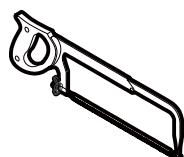

Metal File



电钻



剪刀



SAFETY INFORMATION

CAUTION

Please carefully read the following important safety information before handling or installing this shower. There is a risk of serious injury while handling this product.

To minimize these risks, please note:

- Always wear safety glasses and gloves while handling.
- Always follow the installation instructions.
- Inspect glass for damage before installation.
- Extreme caution should be taken while handling the glass during installation as the tempered glass may shatter if in contact with a hard surface.
- Do not cut or modify the tempered glass as it will shatter if cut.
- Carefully remove product from packaging and keep packaging until installation is complete.
- Inspect all parts for damage or missing; if there is damage or part missing to the unit prior to installation, please contact customer service at the number provided in this guide.
- Cover the drain with tape to prevent the loss of small parts.
- The shower base and finished walls should be installed before beginning the shower door installation.
- During the installation, protect the shower floor with a drop cloth to avoid damage.
- This product should be installed by two people who are familiar with construction requirements. Professional installation is recommended!
- Keep this installation manual for future reference.



NOTE: Two people should perform this installaton.



Model Dimensions


configuration dimensions:

A (mm) 房体高度	B (mm) 宽度尺寸	C (mm) 调节尺寸	D (mm) 开门尺寸
1829	610	580-610	489
	762	732-762	641
	813	783-813	692
	864	834-864	743

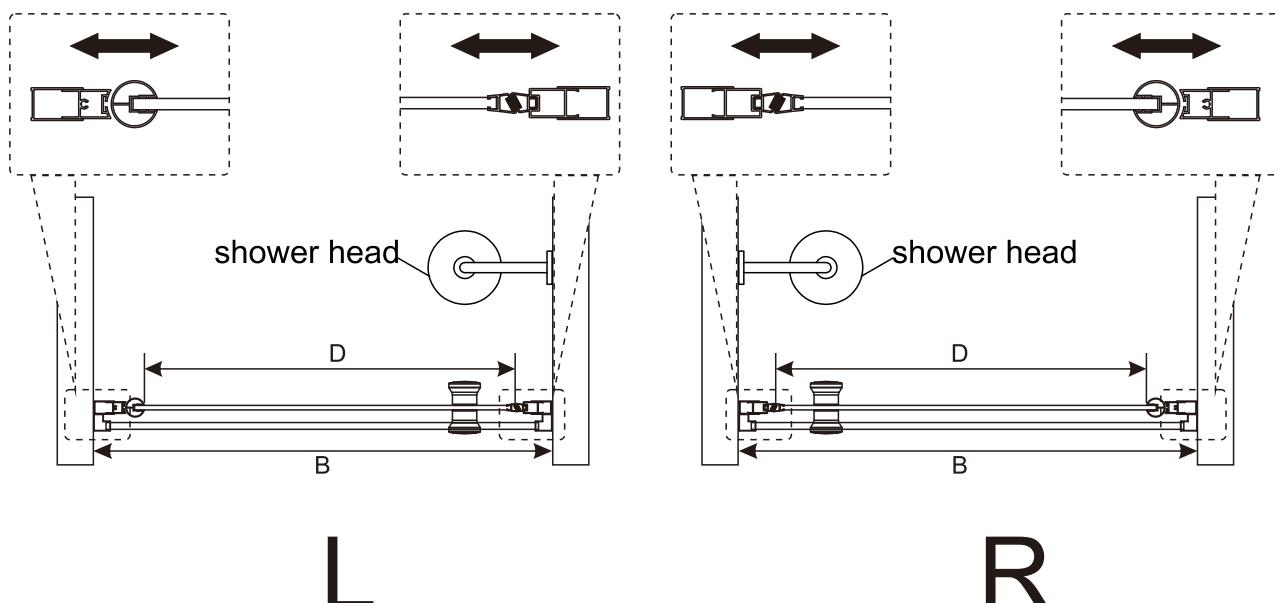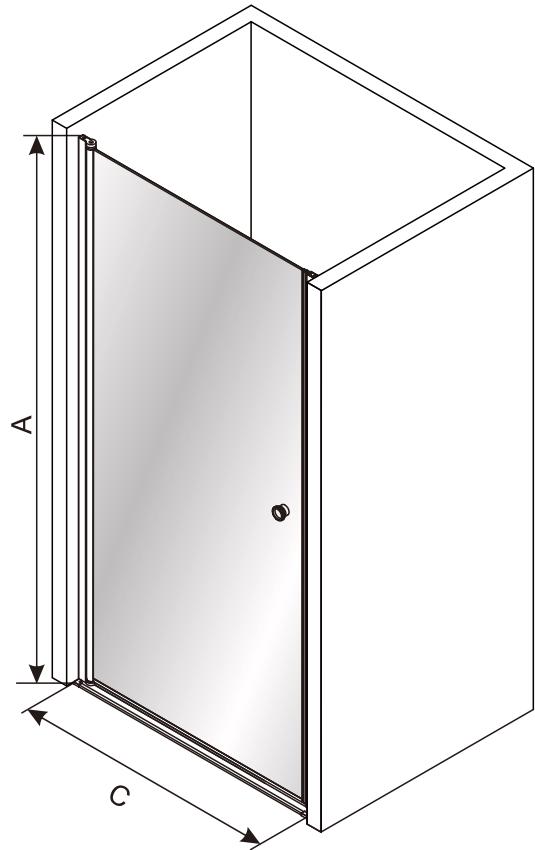

L

R

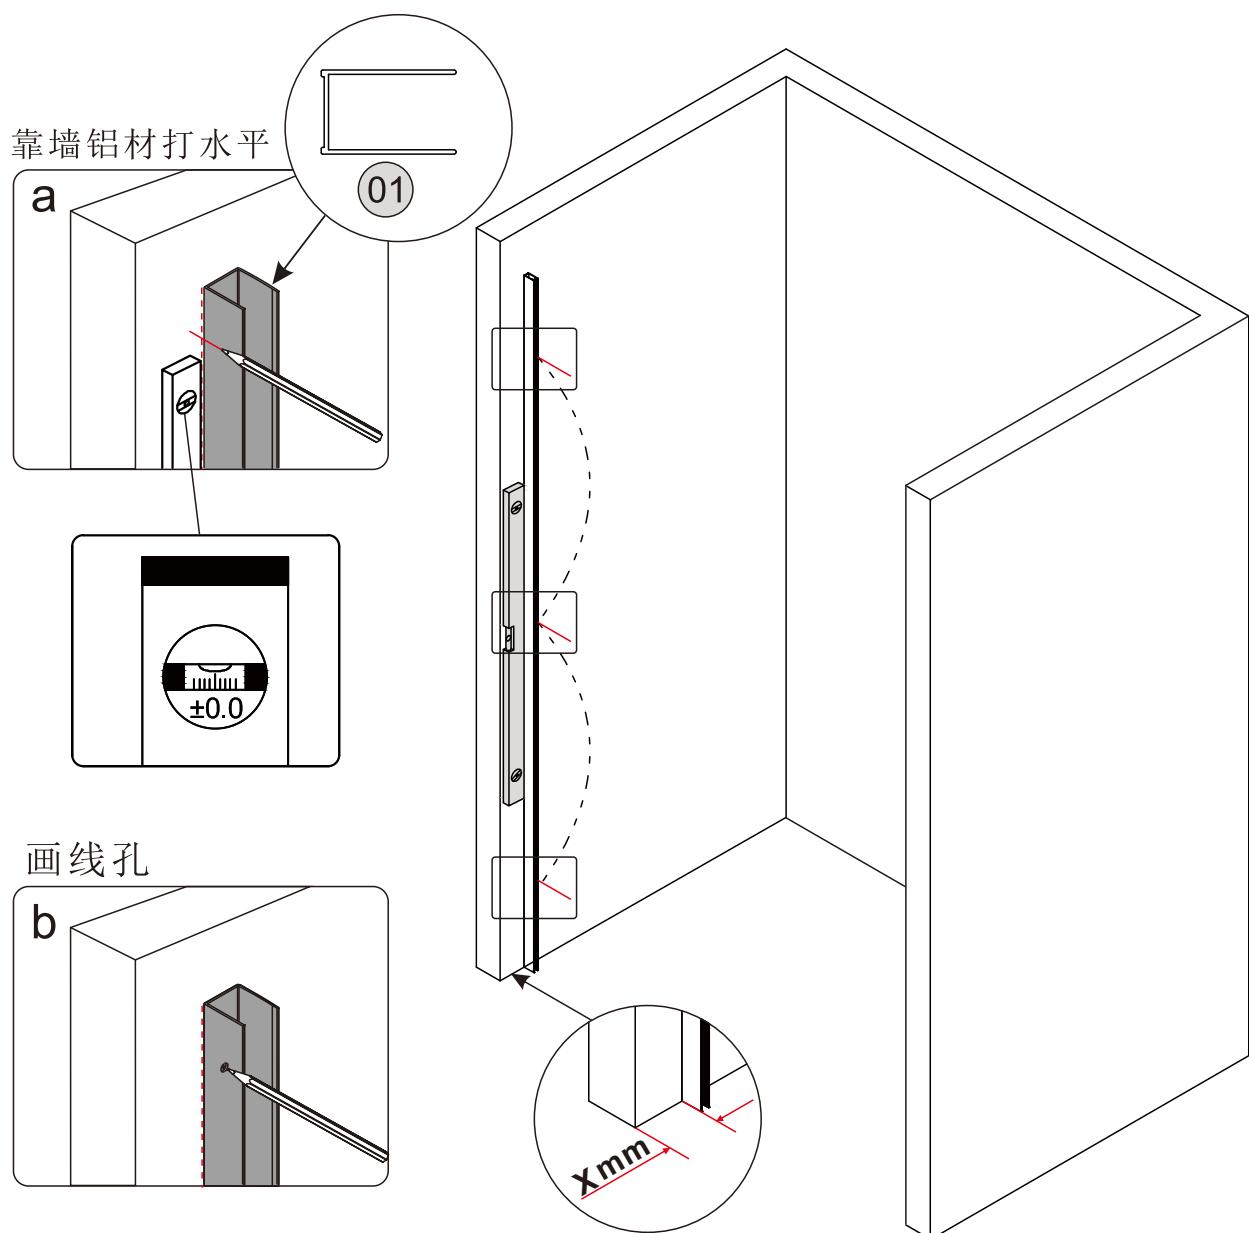
1-1**靠墙铝材安装步骤**

注意：靠墙铝材需水平垂直


1-2

靠墙铝材安装步骤



电钻用Ø6钻头打孔

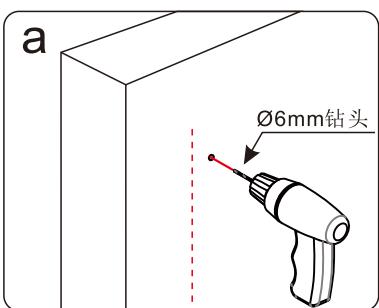

敲入尼龙入墙胶粒

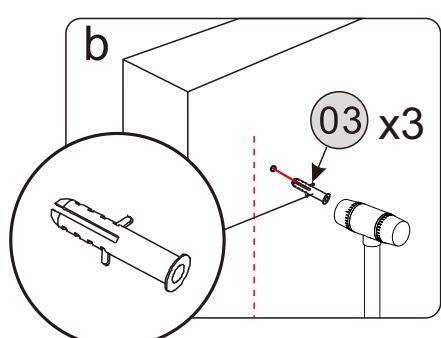


锁自攻螺丝

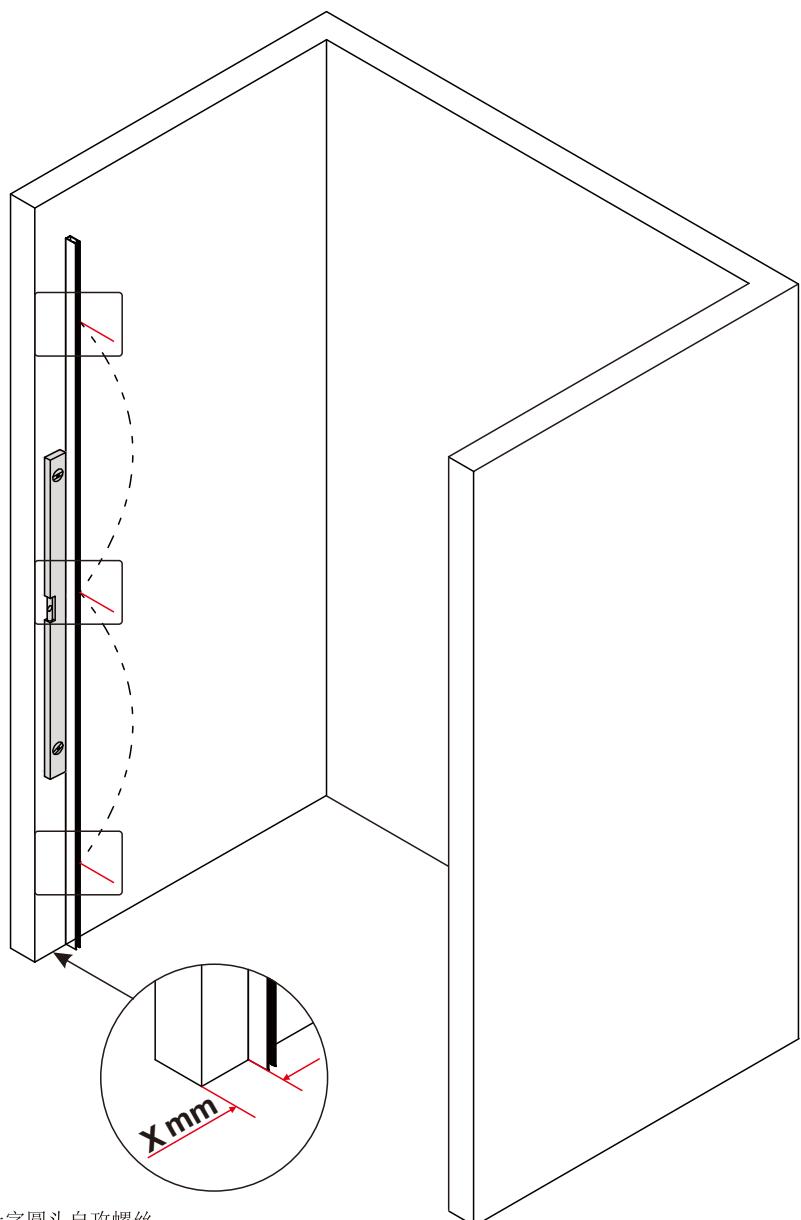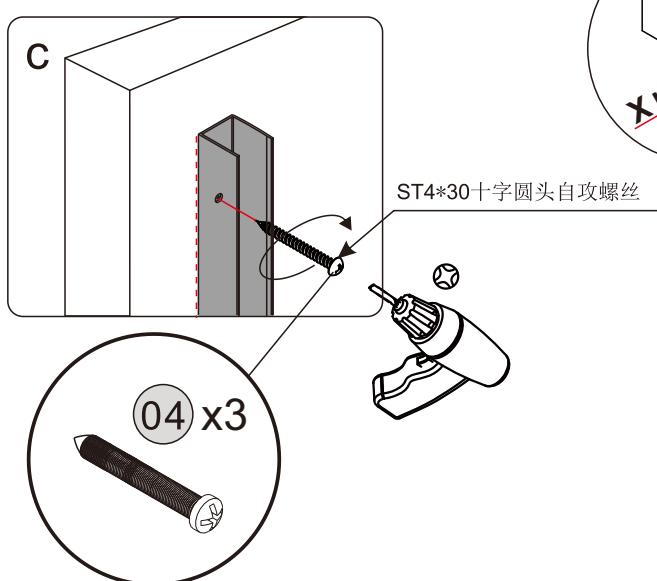

1-3


靠墙铝材安装步骤

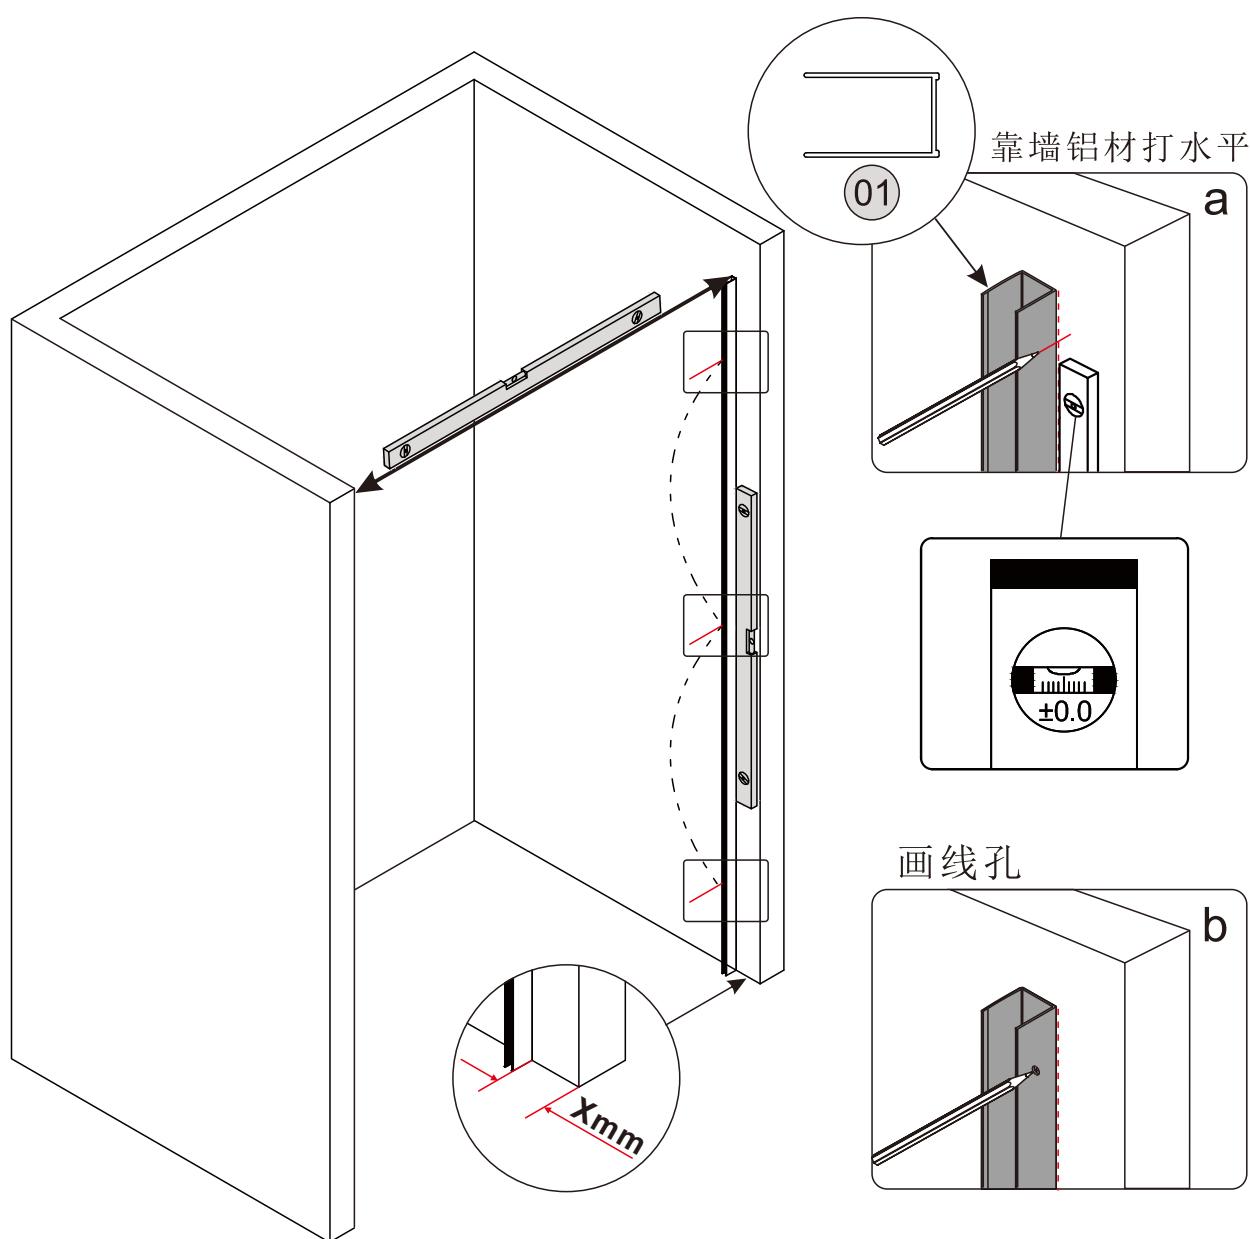


注意：靠墙铝材需水平垂直

1-4


靠墙铝材安装步骤

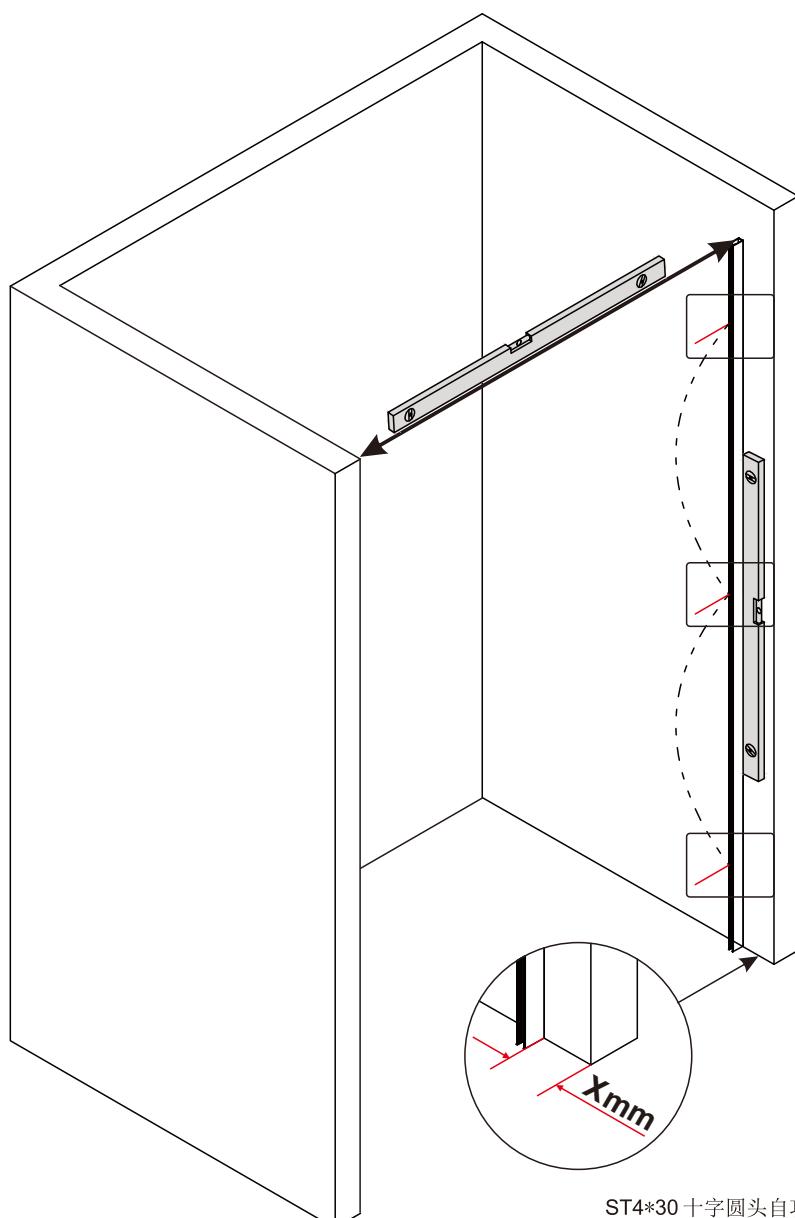


电钻用Ø6钻头打孔

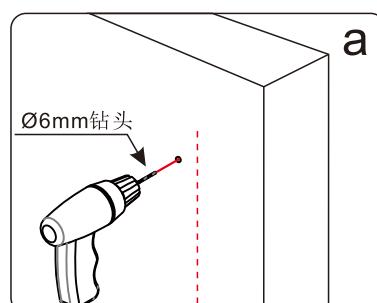

敲入尼龙入墙胶粒




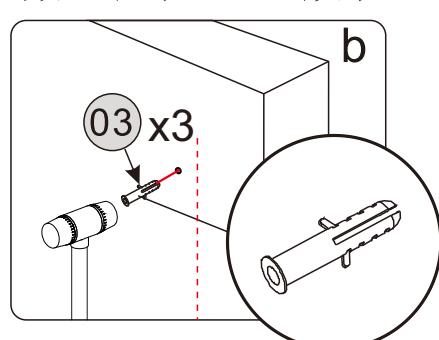


锁自攻螺丝

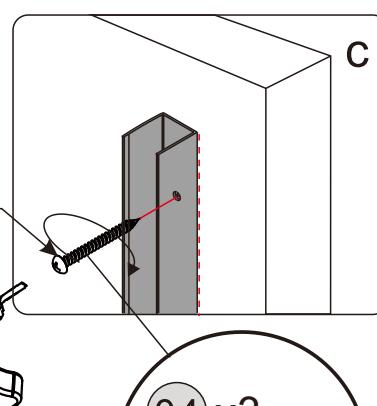

2


磁条铝材安装步骤

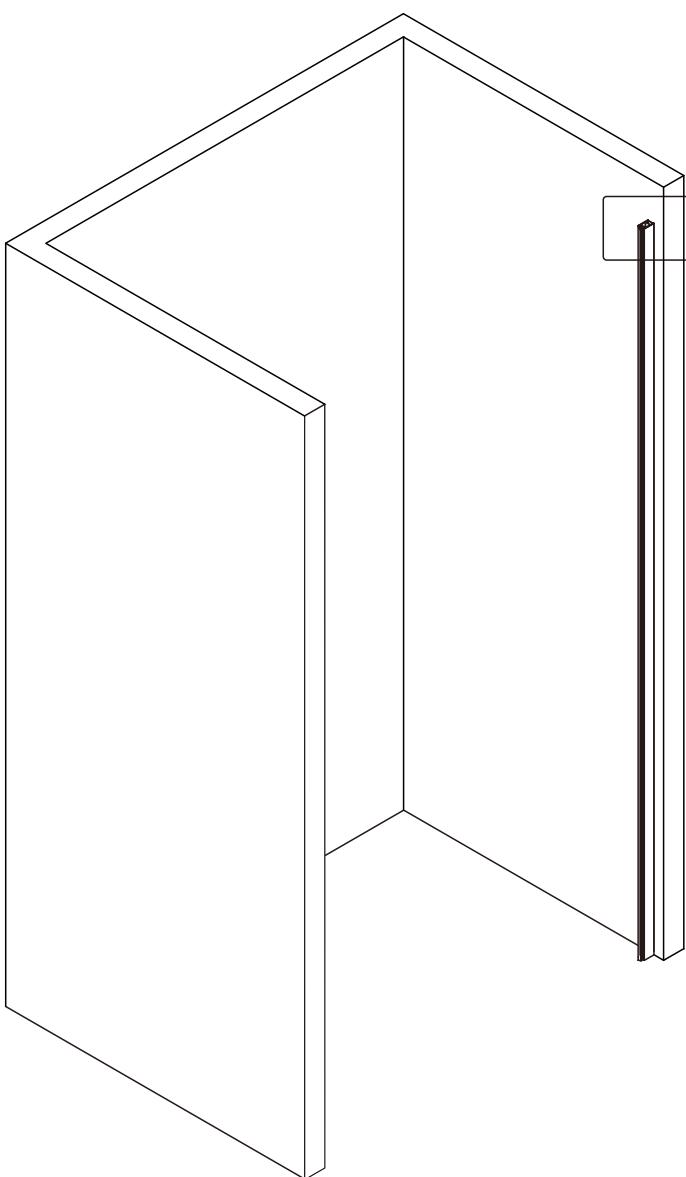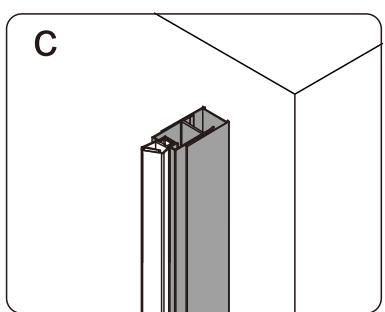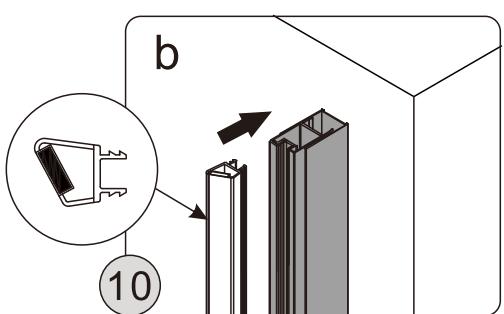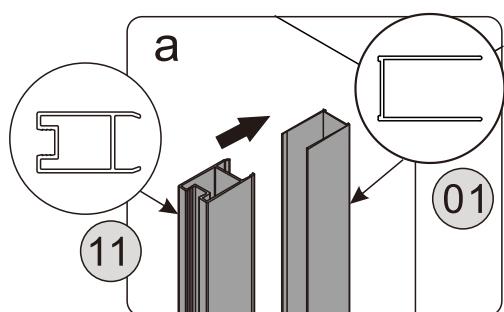


注意：磁条与铝材需组装好再画垂直线

3-1



玻璃安装步骤

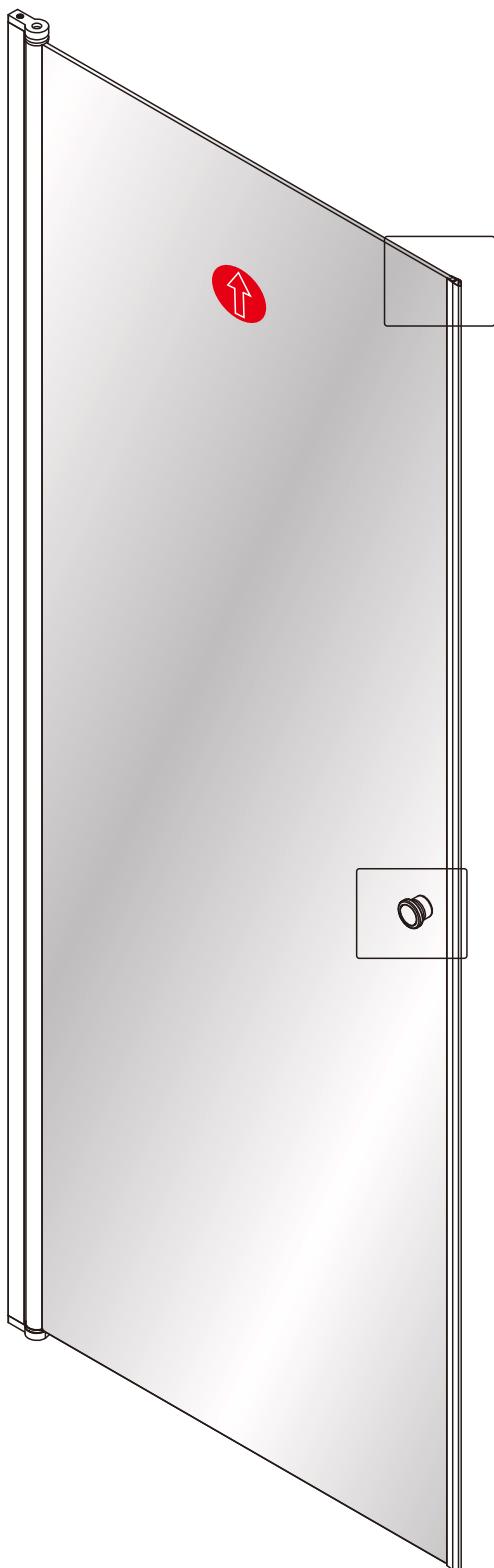

组装磁条

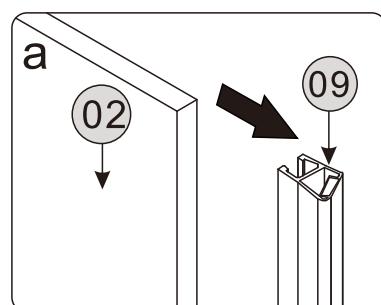


组装拉手

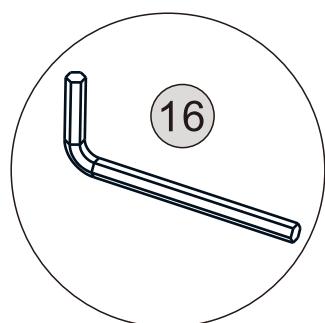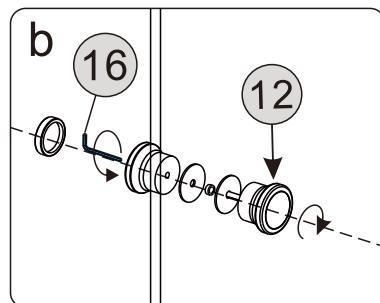


3-2

左方向玻璃门门底挡水胶条安装步骤


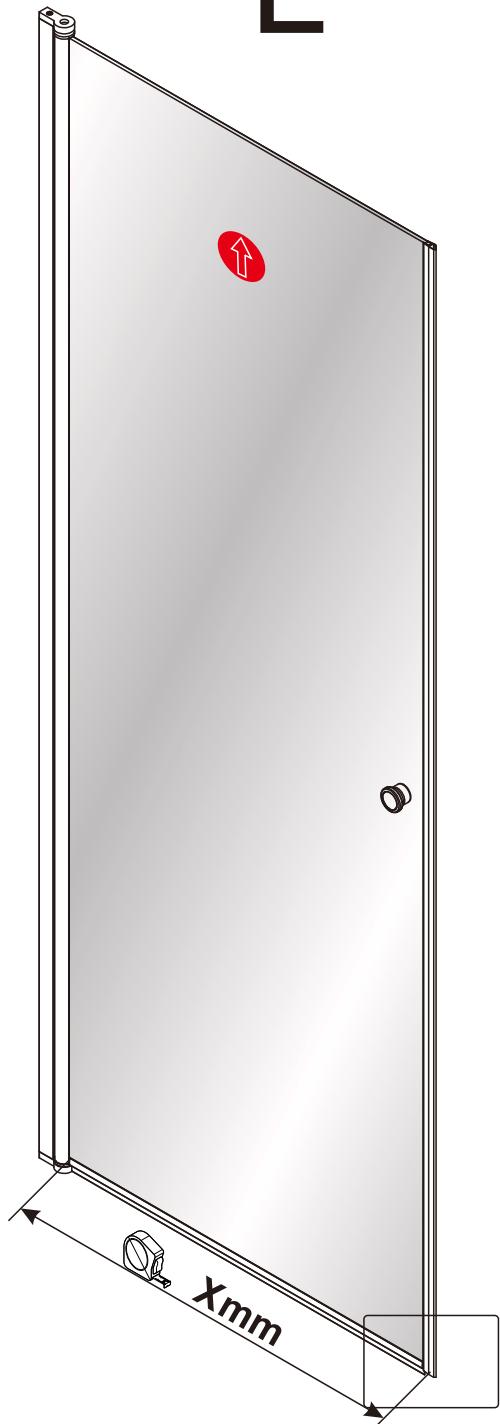


胶条按实际测量尺寸切短

a

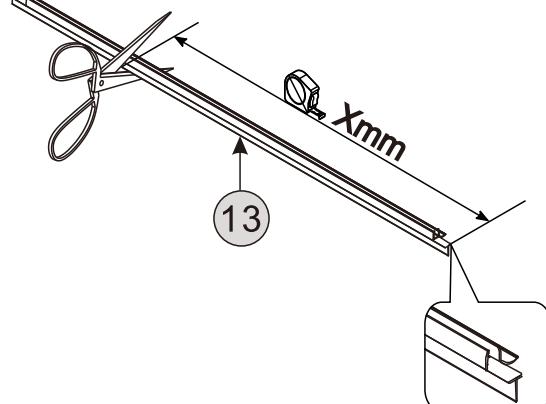

打胶装下挡水胶条

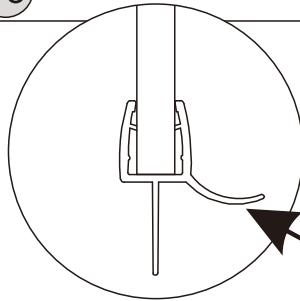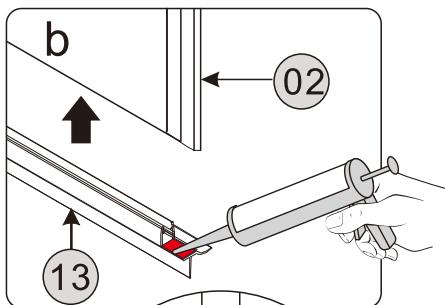

注意：下挡水胶条内外方向，打胶组装不能溢出玻璃胶


3-3

右方向玻璃门门底挡水胶条安装步骤




胶条按实际测量尺寸切短

a

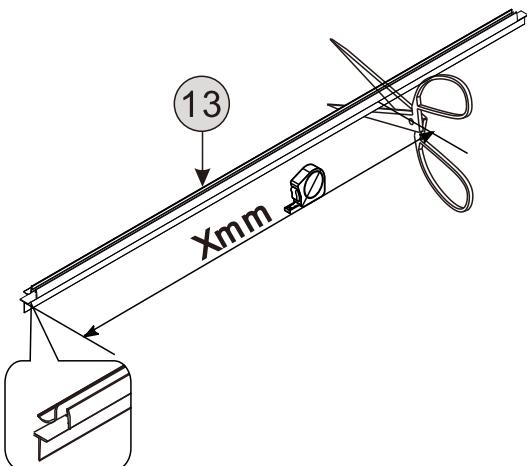




打胶装下挡水胶条

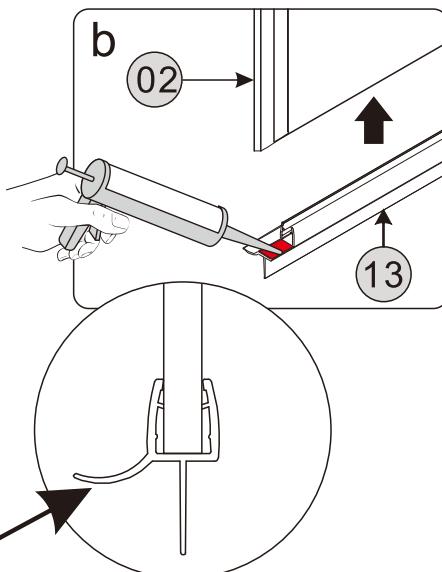inside

注意：下挡水胶条内外方向，打胶组装不能溢出玻璃胶

4

玻璃与靠墙铝材安装步骤

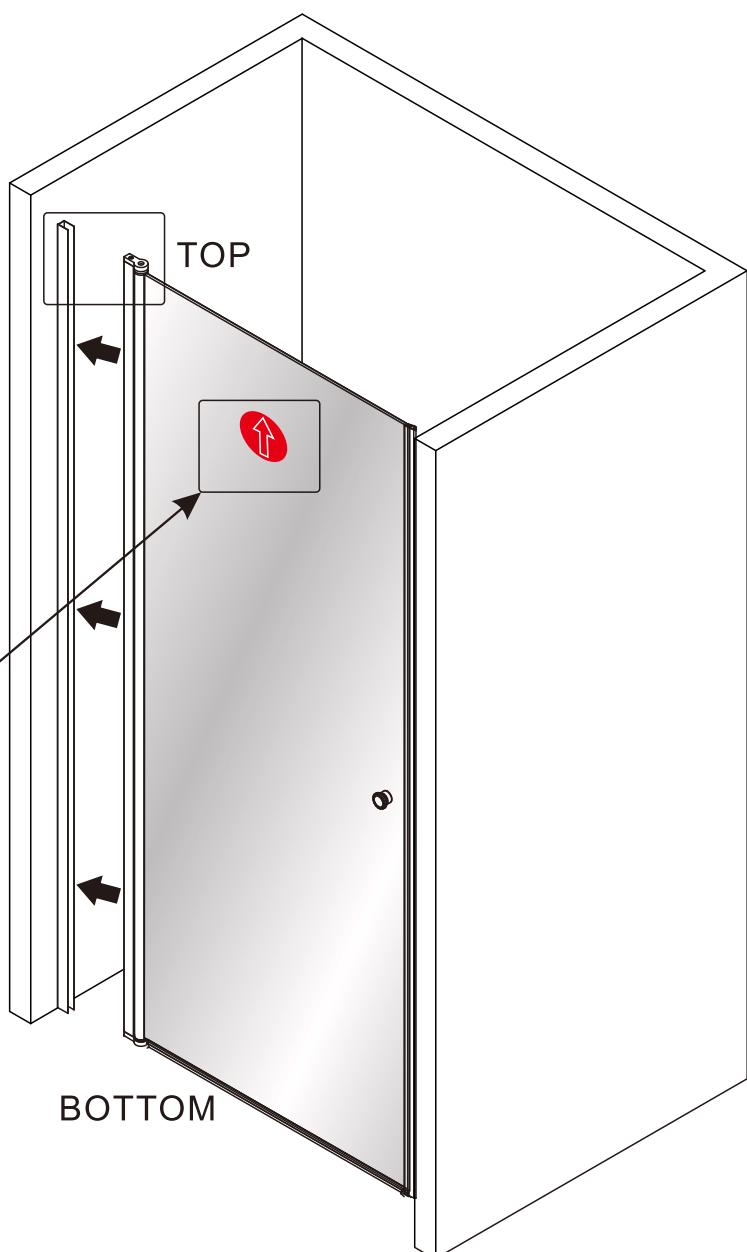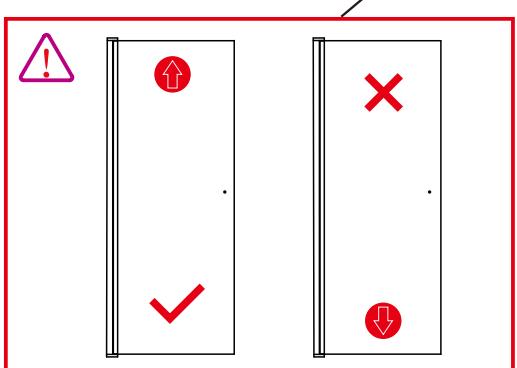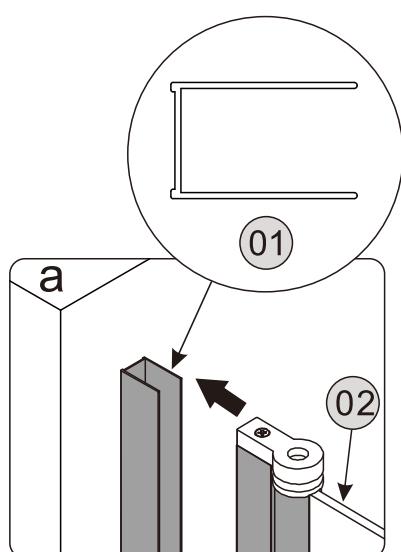


注意：安装玻璃方向，不能装反



5

调节磁条的配合步骤


15mm左右调节

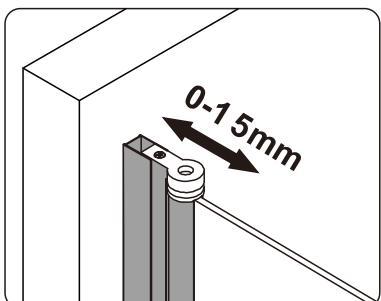

左右调节确保磁条贴合完整

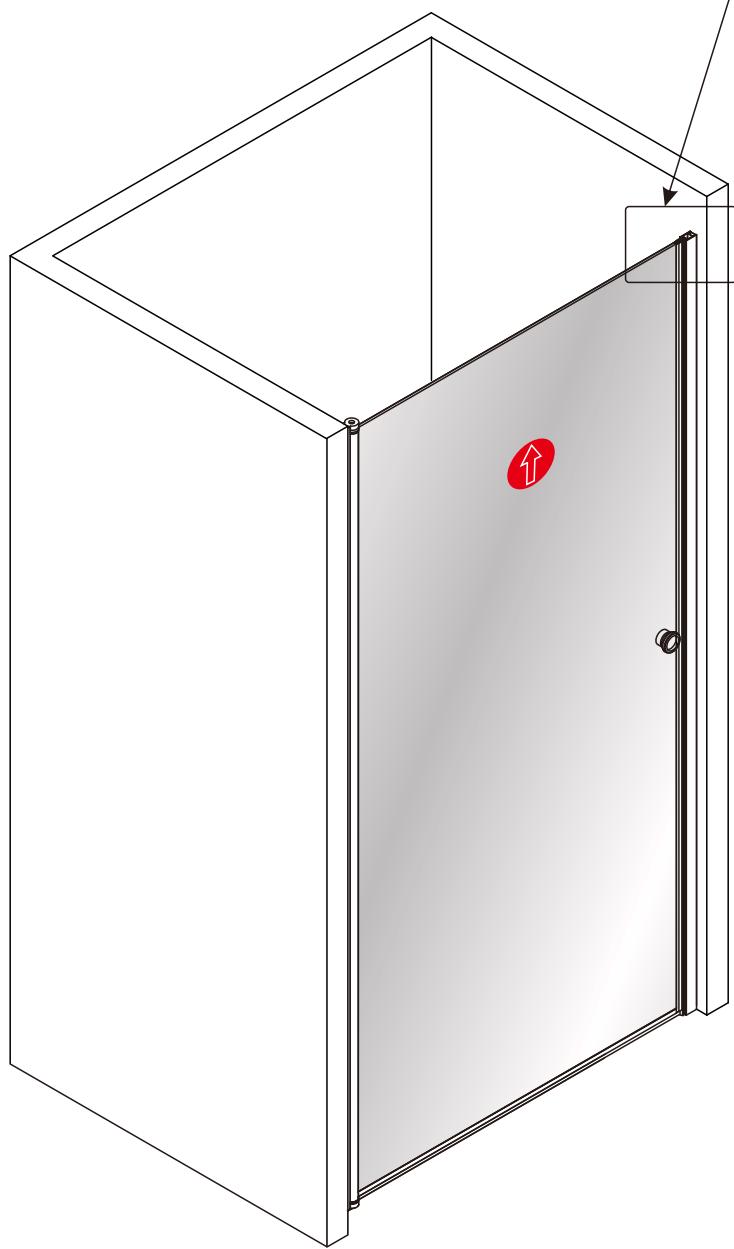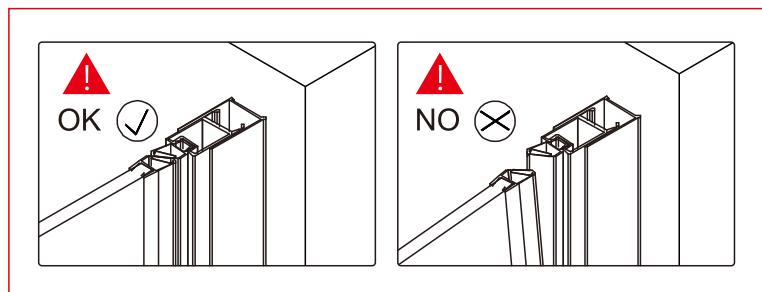

15mm左右调节

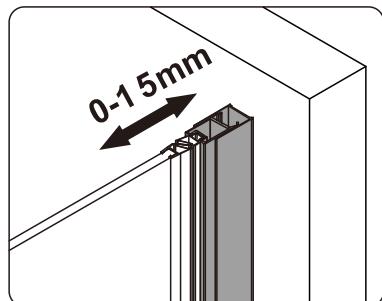


注意：配对磁条水平并垂直贴合完整。


6

靠墙铝材与玻璃锁紧步骤



电钻用Ø2.8钻头打孔

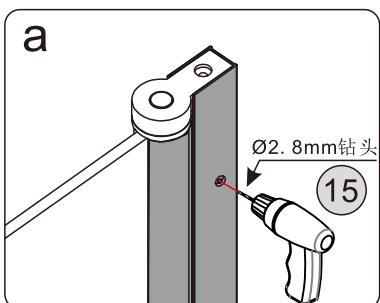

放ABS垫圈锁紧螺丝

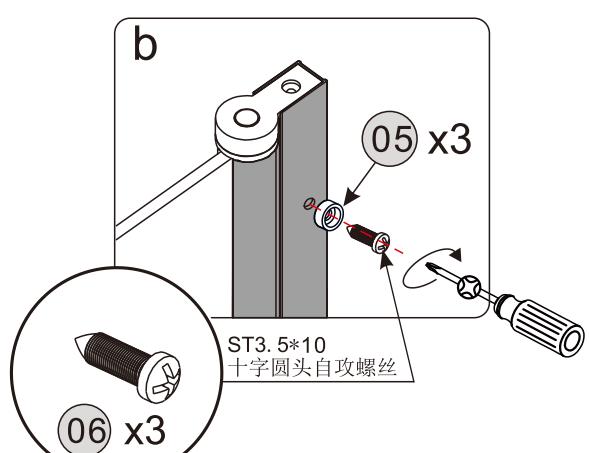

扣牢装饰盖

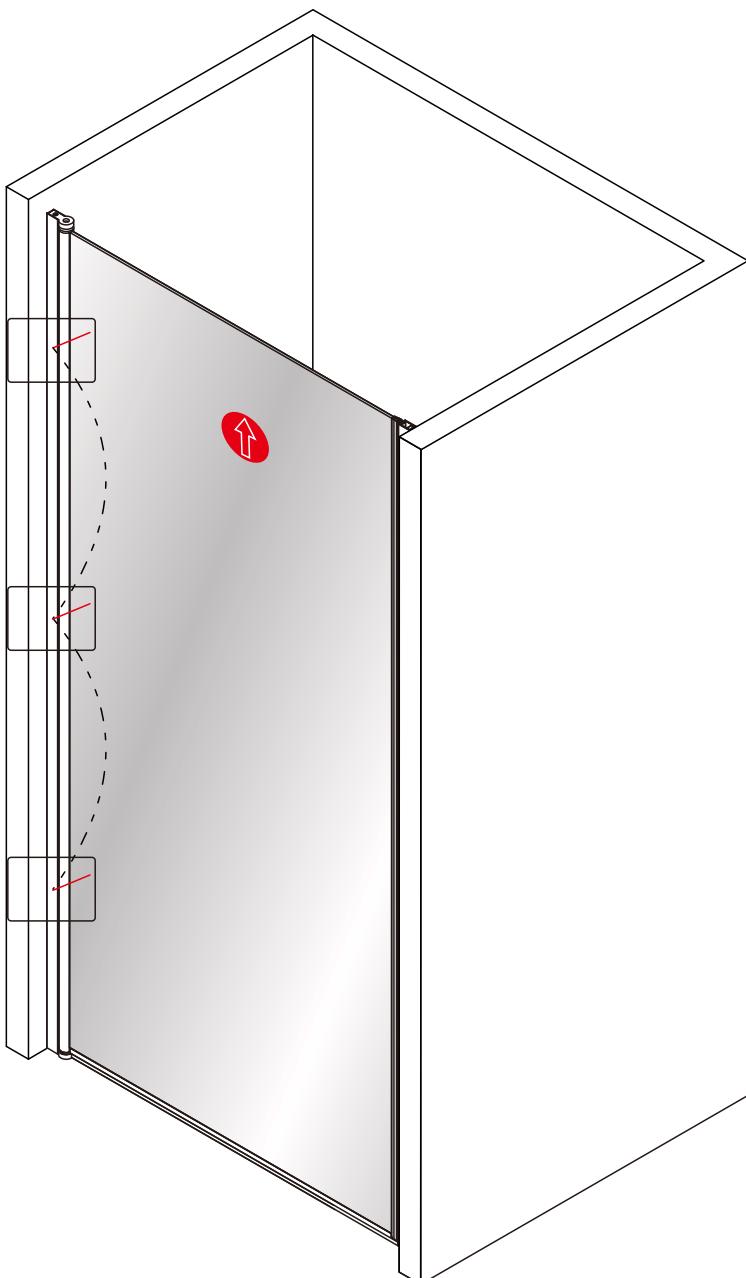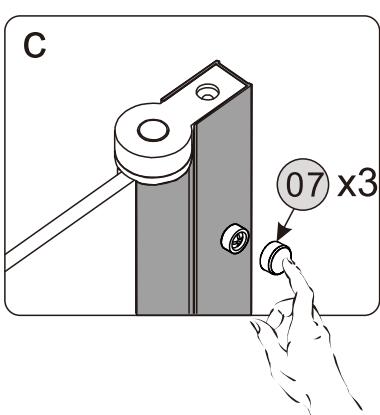



注意：螺丝锁紧，装饰盖扣牢。

7



靠墙铝材与磁条铝材锁紧步骤

左右调节确保磁条贴合完整


电钻用Ø2.8钻头打孔

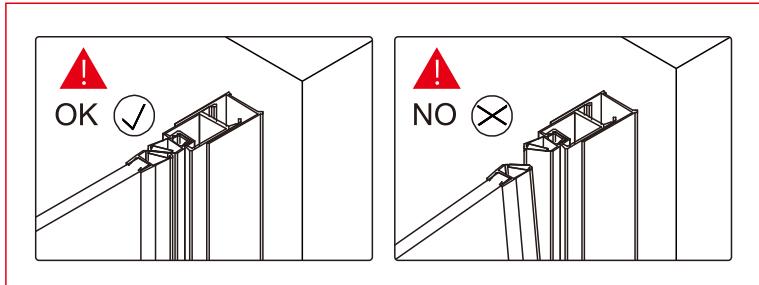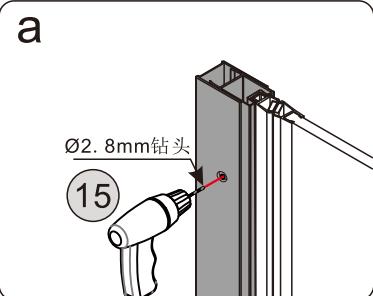

放ABS垫圈锁紧螺丝

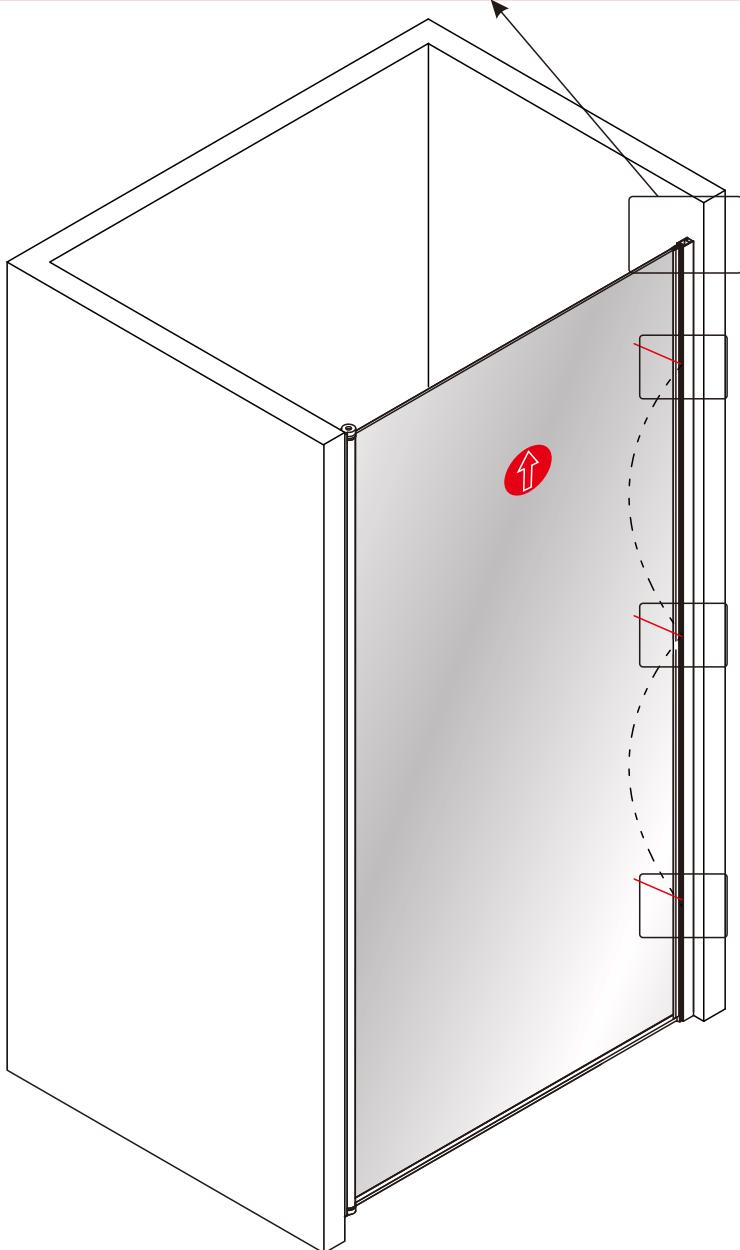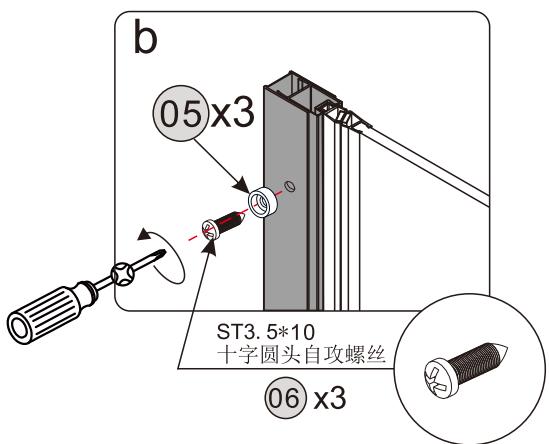

扣牢装饰盖






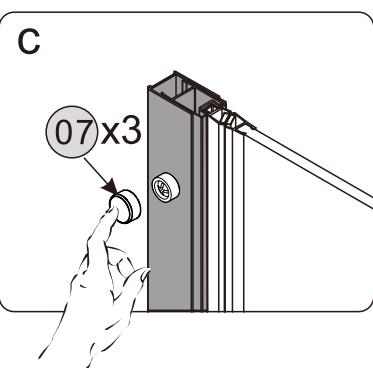


注意：螺丝锁紧，装饰盖扣牢。






8

下挡水铝材及两侧端盖安装步骤

注意：打胶组装不能溢出胶

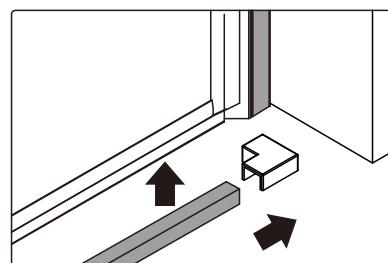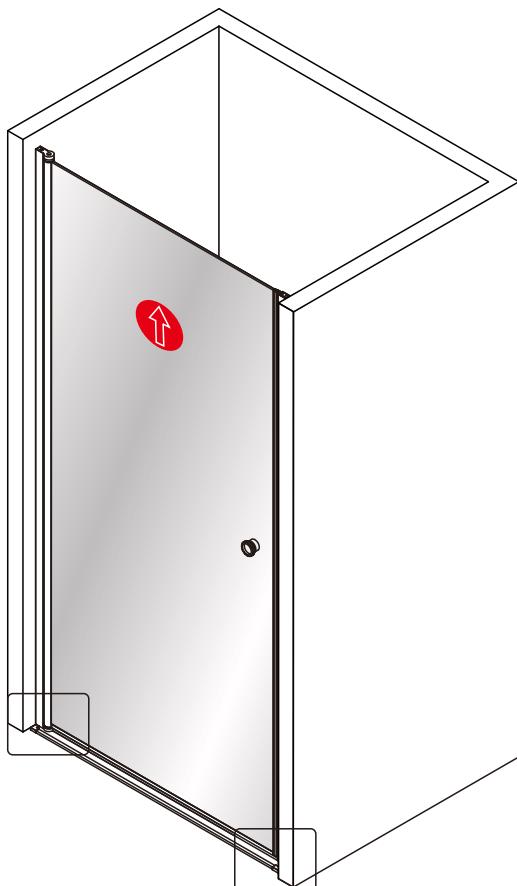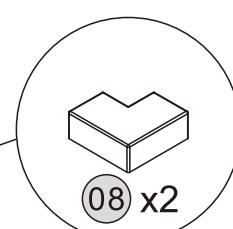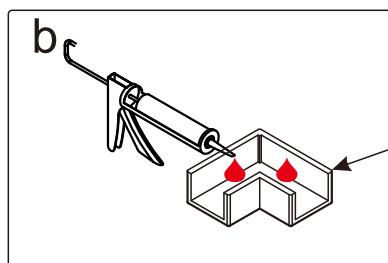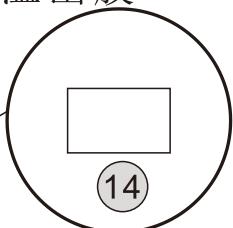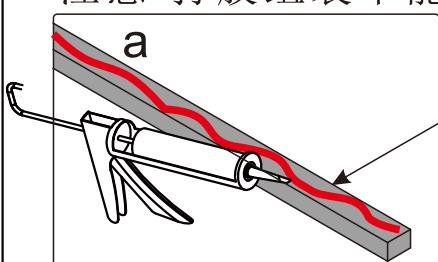


注意：下挡水盖与墙面需持平。

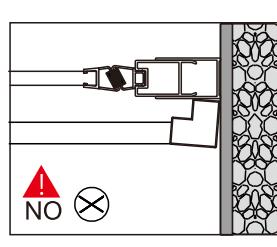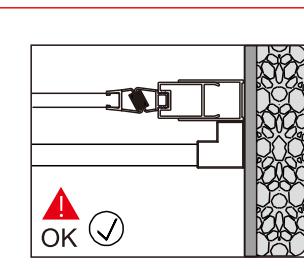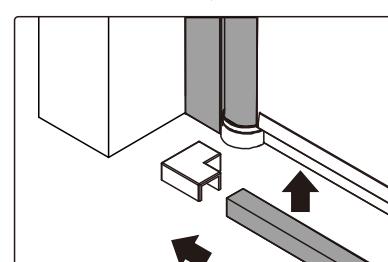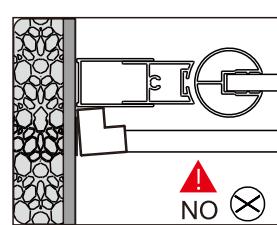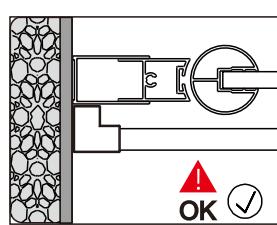

9

安装好整体打胶注意步骤

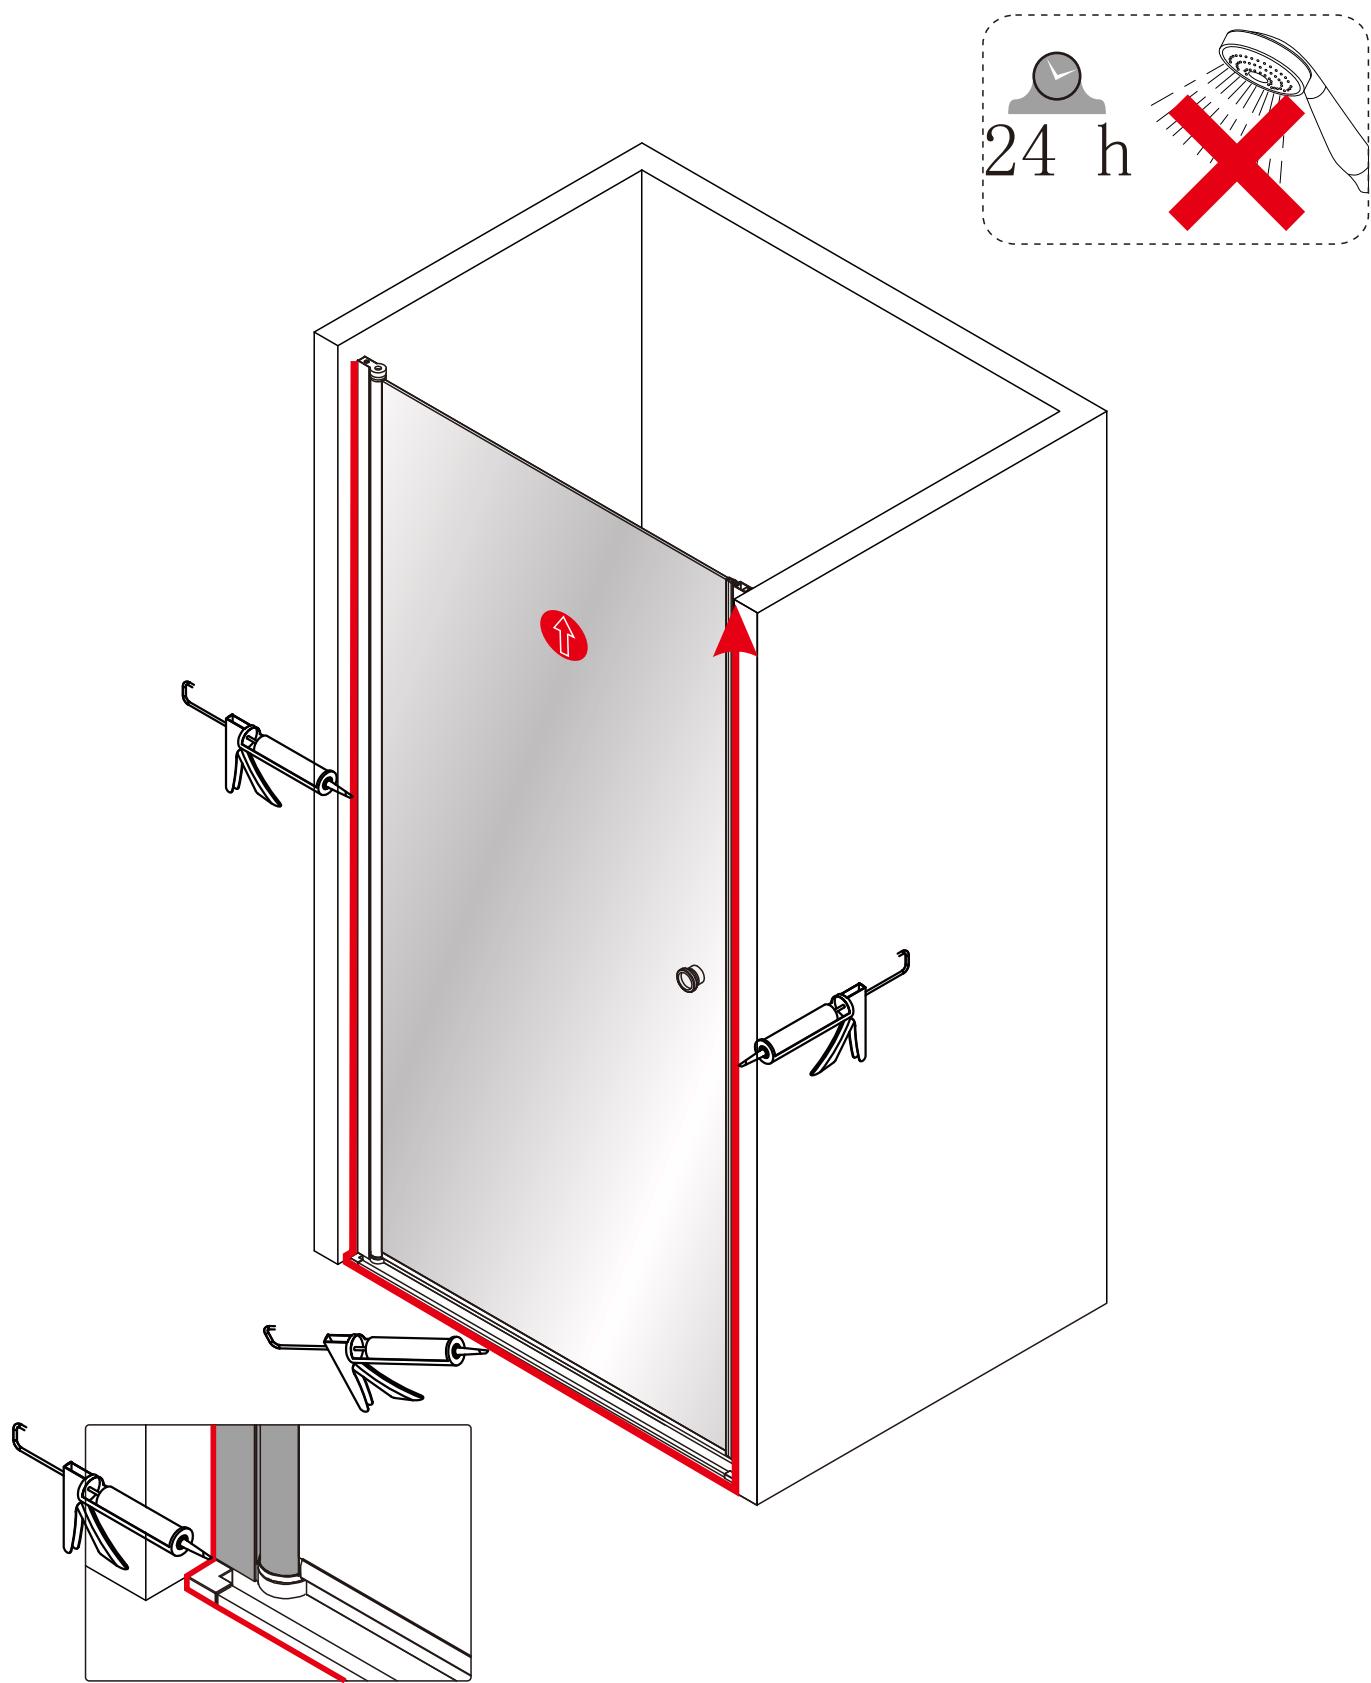

注意：打胶需过24小时干透方可使用。