


# ASSEMBLY INSTRUCTION

## WALL CABINET


### MODEL#

W3012 W3612 W3015 W3615 W361524  
W3018 W3618 W361824 W2418 W2718  
W361224 W331524 W301224 W301524  
W301824 W331224 W331824 W361224  
W361524

Estimated Assembly Time: 30 - 40 minutes  
2-person assembly recommended

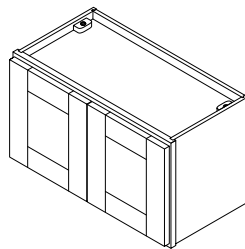


### TOOLS REQUIRED

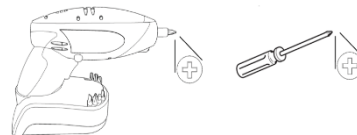

| PART | DESCRIPTION            | QTY | PART | DESCRIPTION             | QTY |
|------|------------------------|-----|------|-------------------------|-----|
| A1   | Box side panel - left  | 1   | C    | Box back panel          | 1   |
| A2   | Box side panel - right | 1   | D    | Face frame & door panel | 1   |
| B    | Box bottom panel       | 1   | L    | Box top panel           | 1   |

## HARDWARE CONTENTS


**DD** Rubber bumper x 4




**FF** 1" Flat head phillips screw x 8




1

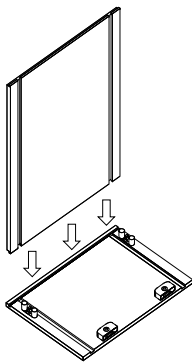


2

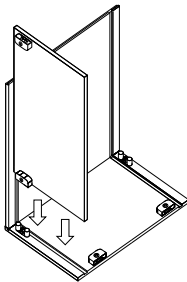


3

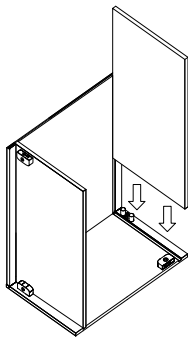


4

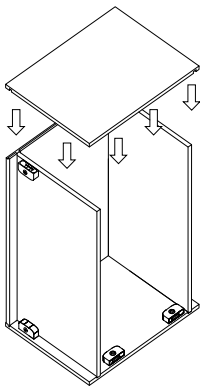


5

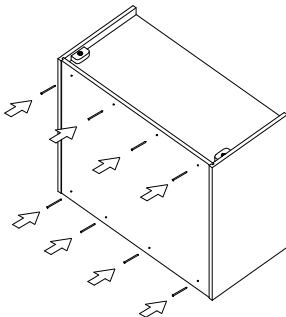

6

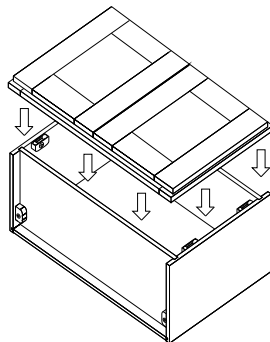



7

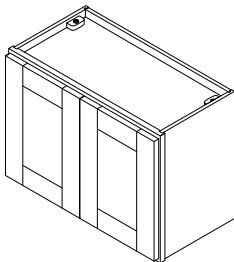


## CAMLOCK CONNECTION

---

1. Insert the camlock to the locker.

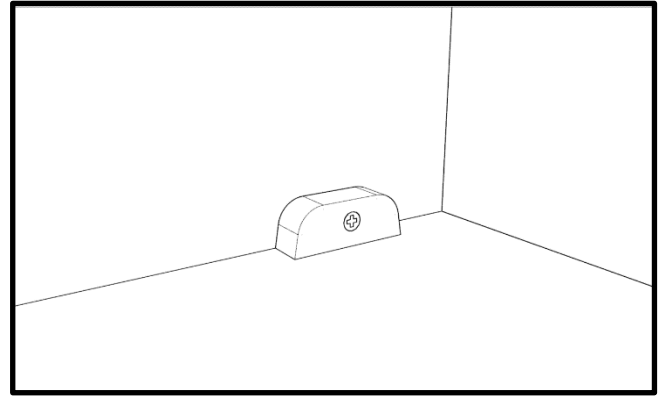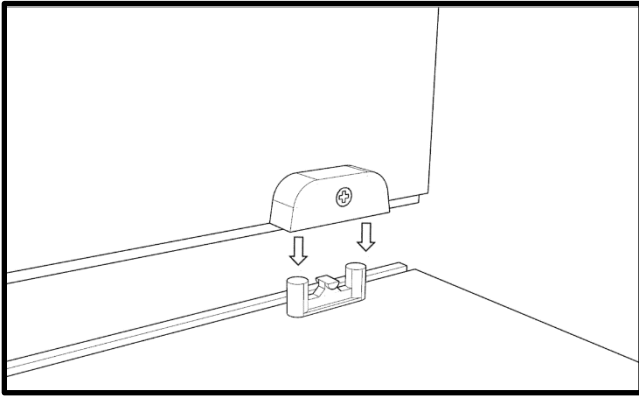


2. Turn the nut clockwise to latch two parts.

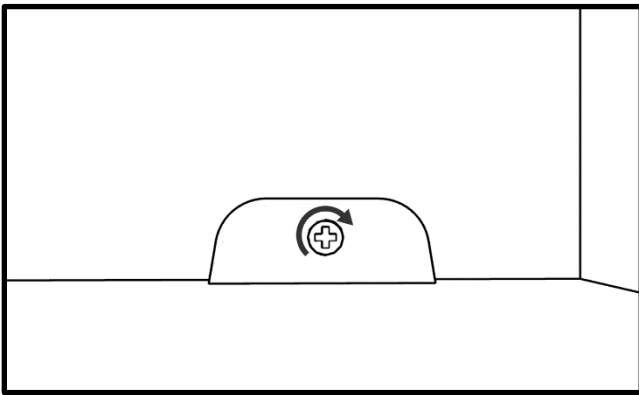

## FASTEN BOX BOTTOM PANEL AND BOX BACK PANEL

1. Drill 1" flat head Phillips screw to the predrilled holes and fasten box bottom panel with box back panel

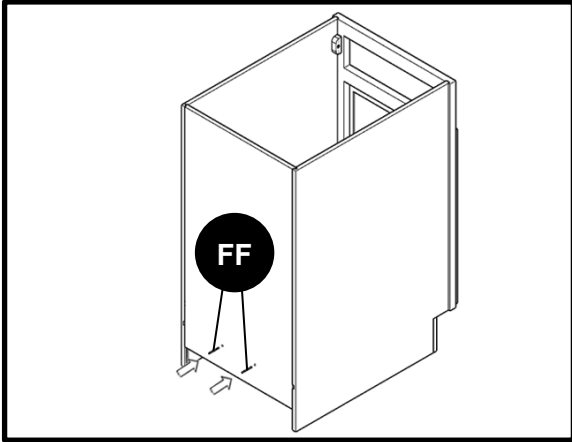

## RUBBER BUMPER INSTALLATION

1. Attach rubber bumpers to 4 corners of each drawer face panel and 2 outside corners of each door panel.

