


INSTALLATION

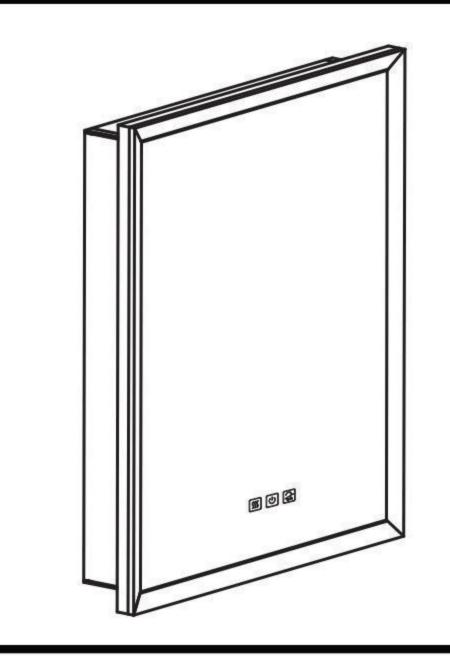



LIGHTED MEDICINE CABINET Lighting and Defogger

PRODUCT SERIES INFORMATION

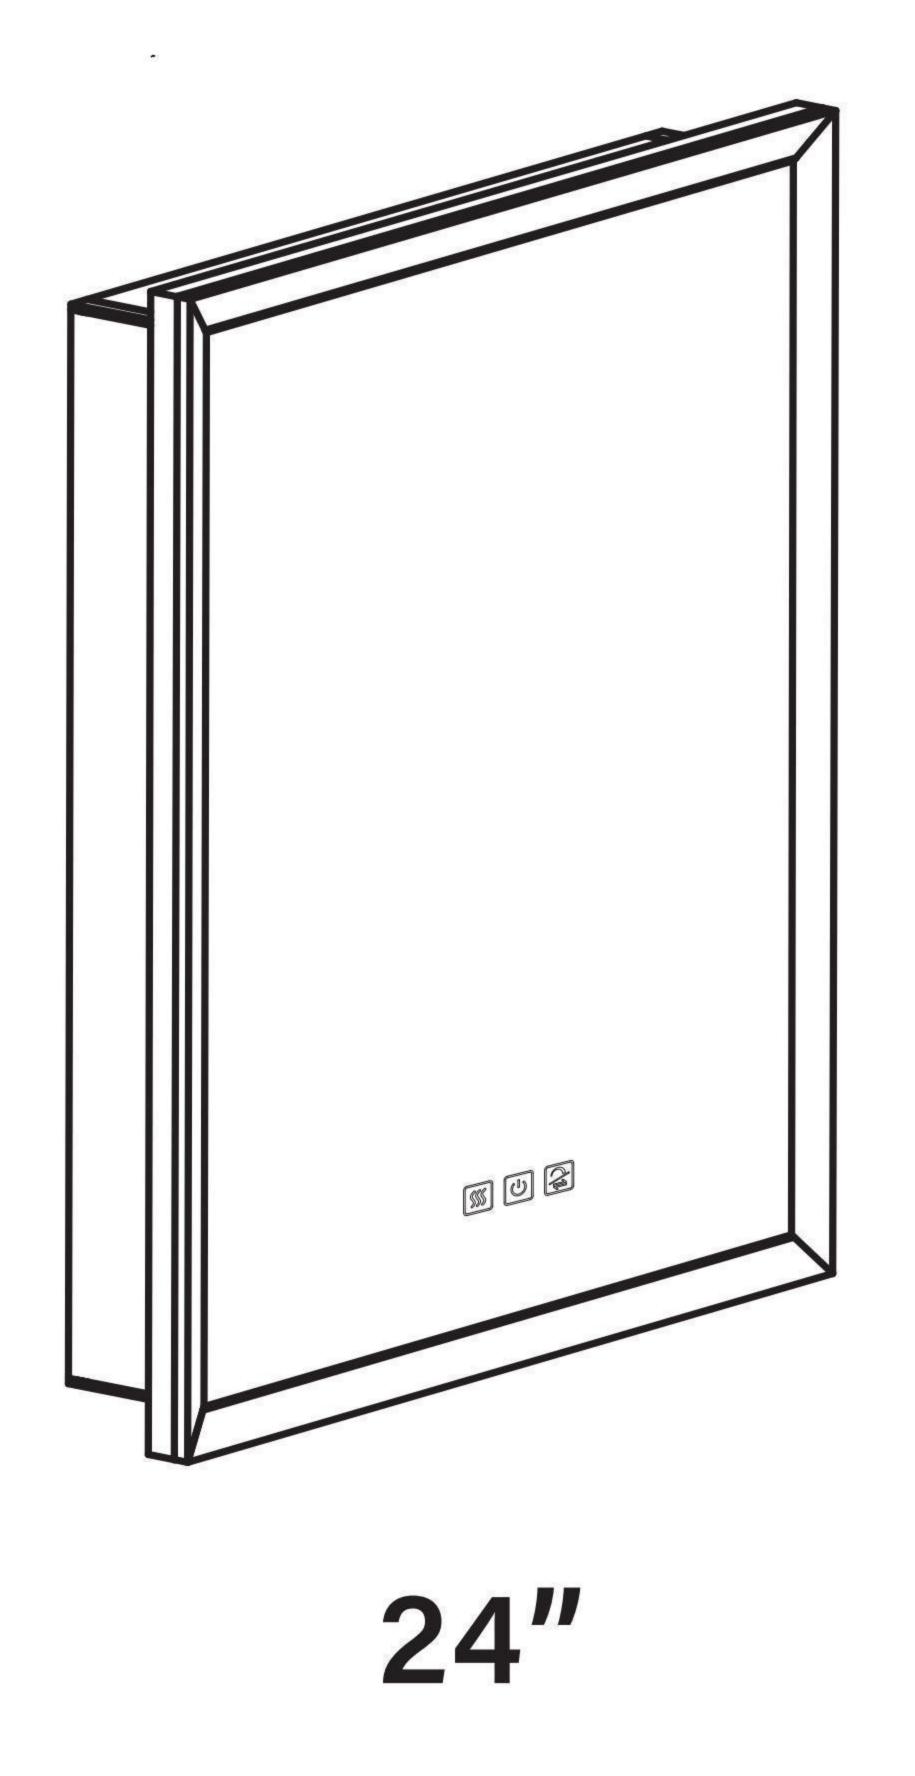

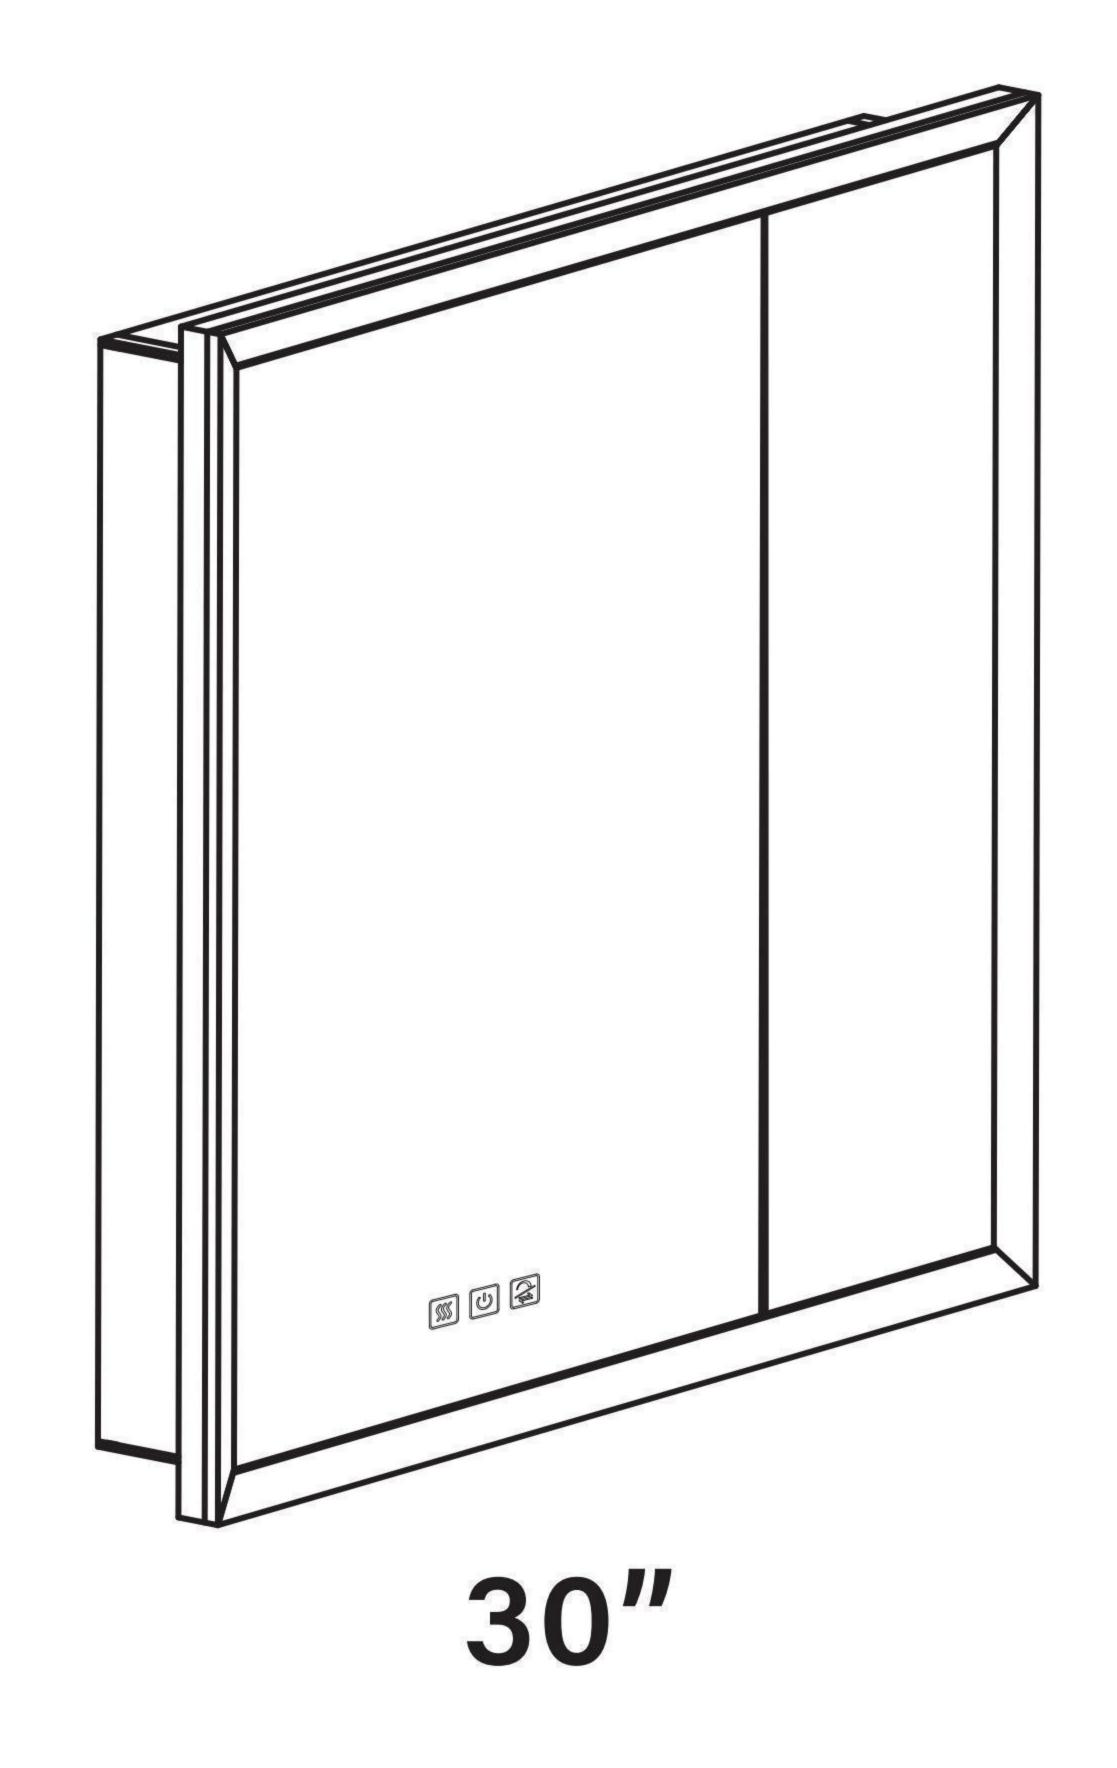


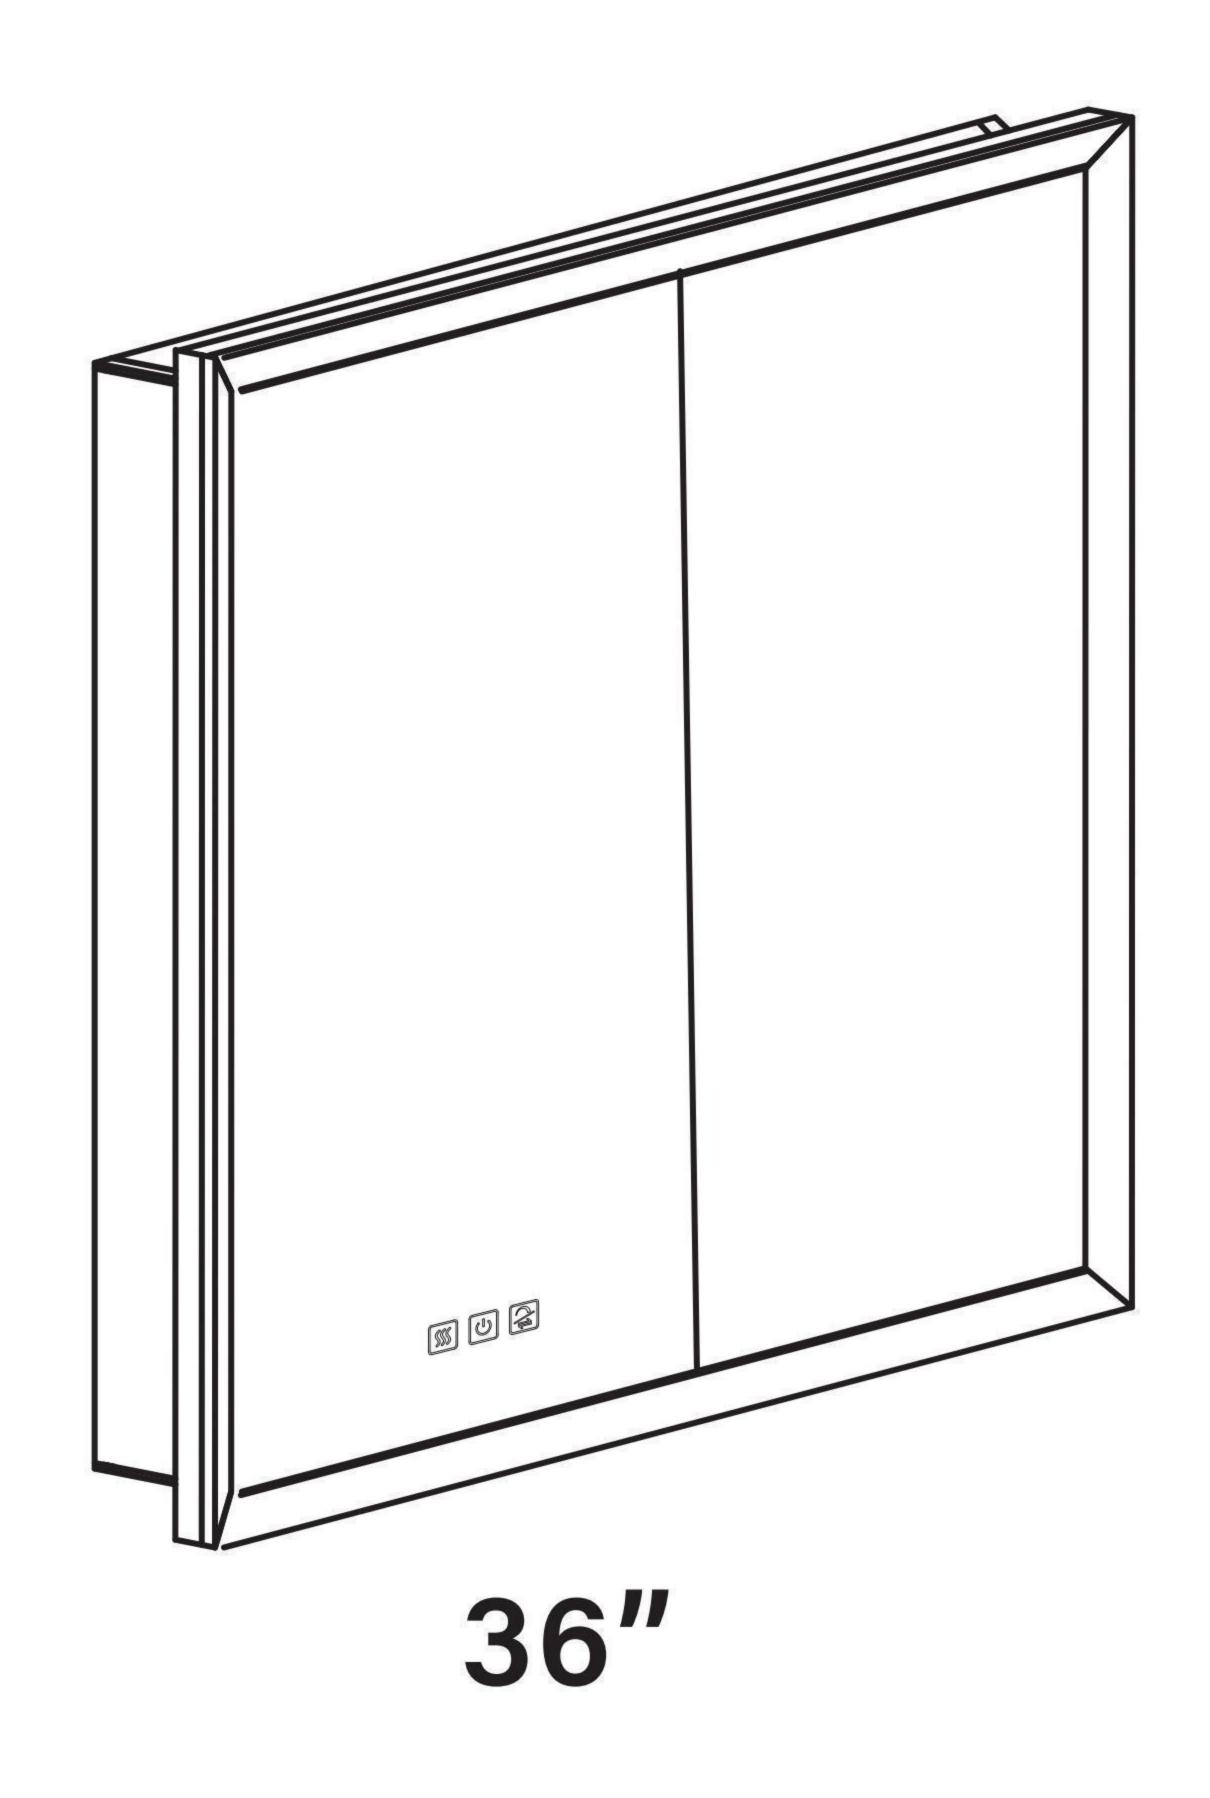

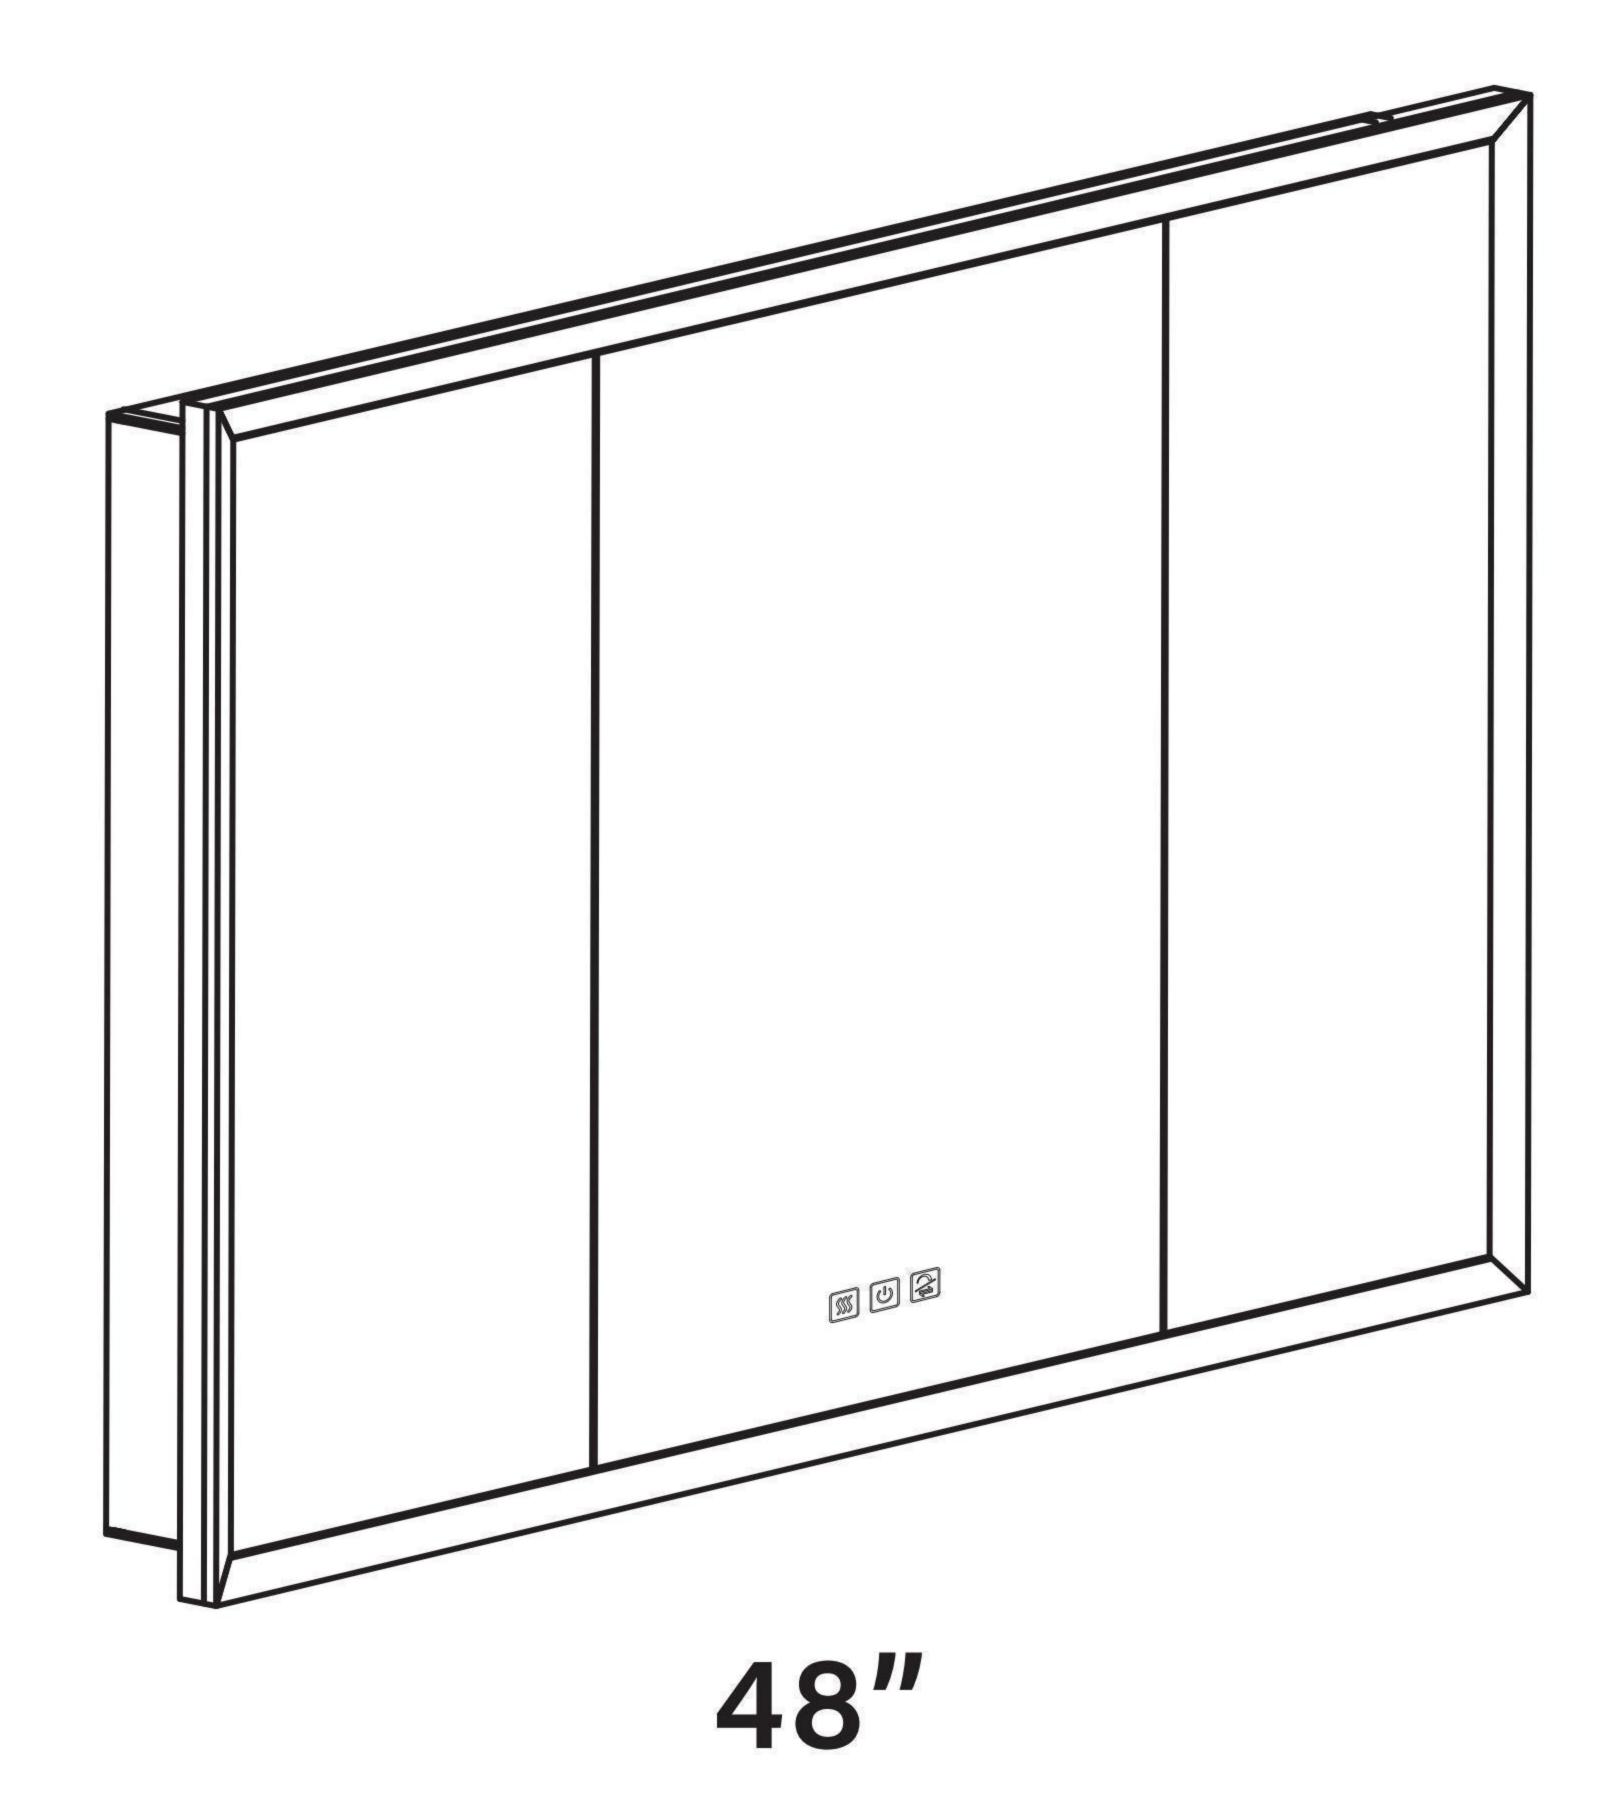

*WARNING: Do not remove corner proctors & paper cusions, please remove after installation. Please retain the cabinet accessories during the installation process for future needs, for example, screws, nuts, cap and other similar components. Requires three(3) person in installation.

PAGE 1

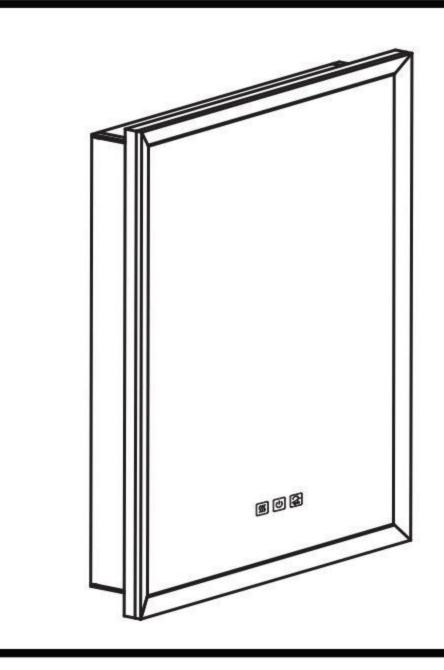

LIGHTED MEDICINE CABINET Lighting and Defogger


IMPORTANT SAFETY INSTRUCTIONS

When using an electrical furnishing, basic precautions should always be followed, Requires three (3) person in installation.



DANGER

READ AND FOLLOW ALL INSTRUCTIONS BEFORE USING THIS MIRROR CABINET

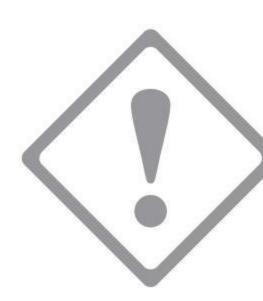

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer. Never drop or insert any object into any opening. Do not use outdoors.



WARNING

Risk of electric shock. Connect this furnishing to a properly grounded circuit only. See Grounding instructions.

GROUNDING INSTRUCTIONS:



WARNING

This product must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the product.


An Electrical option cabinet must be wired to a 20 Amp GFI (Ground Fault Interrupter) protected circuit when used in bathrooms and all other locations required by the National Electric Code.

NOTE: To ensure the normal use of product, it is required to set out wires as per the regulations of IEE. The product is only applicate to the indoor installation. The installation must be executed by a professional electrician, wrong installation may lead to product damage and personal injury.

PLEASE SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

ALL RIGHTS RESERVED

INSTALLATION

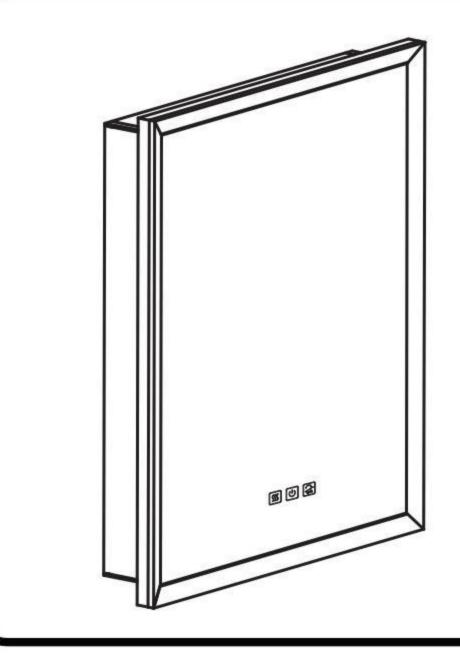

LIGHTED MEDICINE CABINET Lighting and Defogger

ELECTRIC CONNECTIONS

ALL WIRING SHOULD BE DONE BY A QUALIFIED LICENCED ELECTRICIAN



WARNING: Shut off power before wiring the mirror.




WARNING: An Electrical option mirror must be wired to a 20 Amp GFI (Ground Fault Interrupter) protected circuit when used in bathrooms and all other locations required by the National Electric Code.




WARNING: This mirror must be connected to a grounded, metal permanent wiring system or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the mirror.



CAUTION: Requires 120 VAC 20 Amp GFI protected circuit.

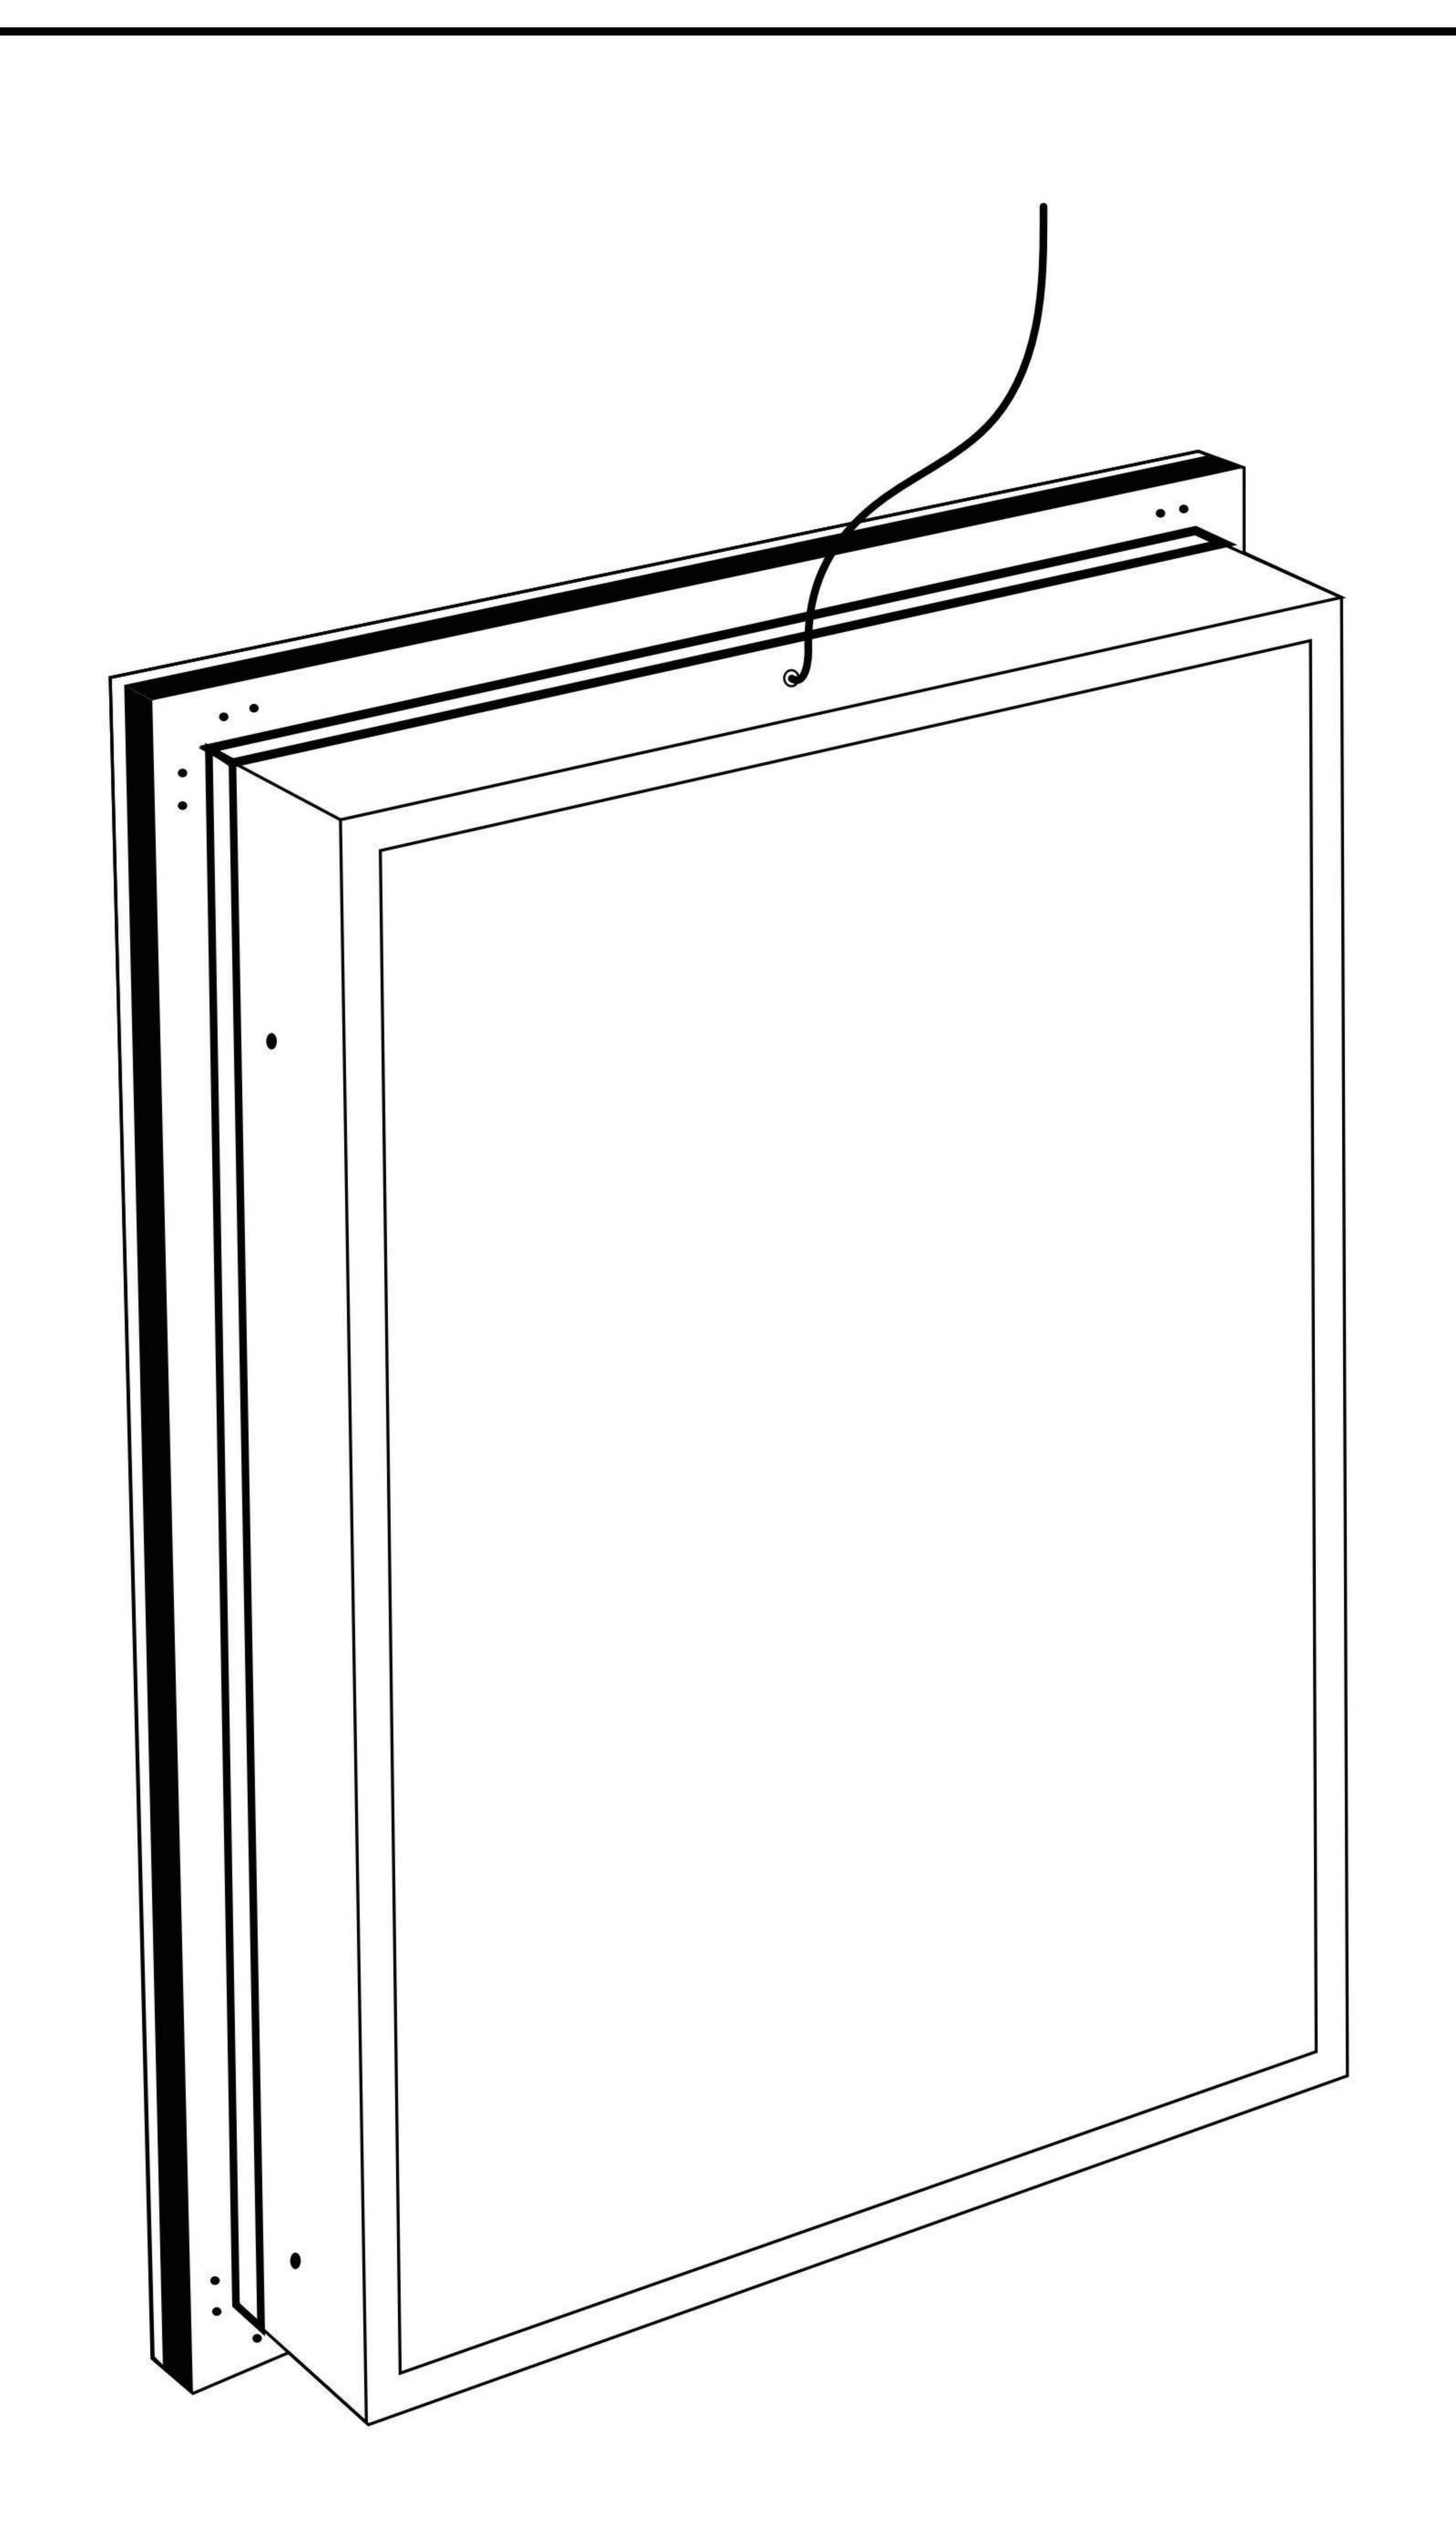


Electric wiring: Be sure to provide enough wire to make the proper and safe connection to the Field/Power.

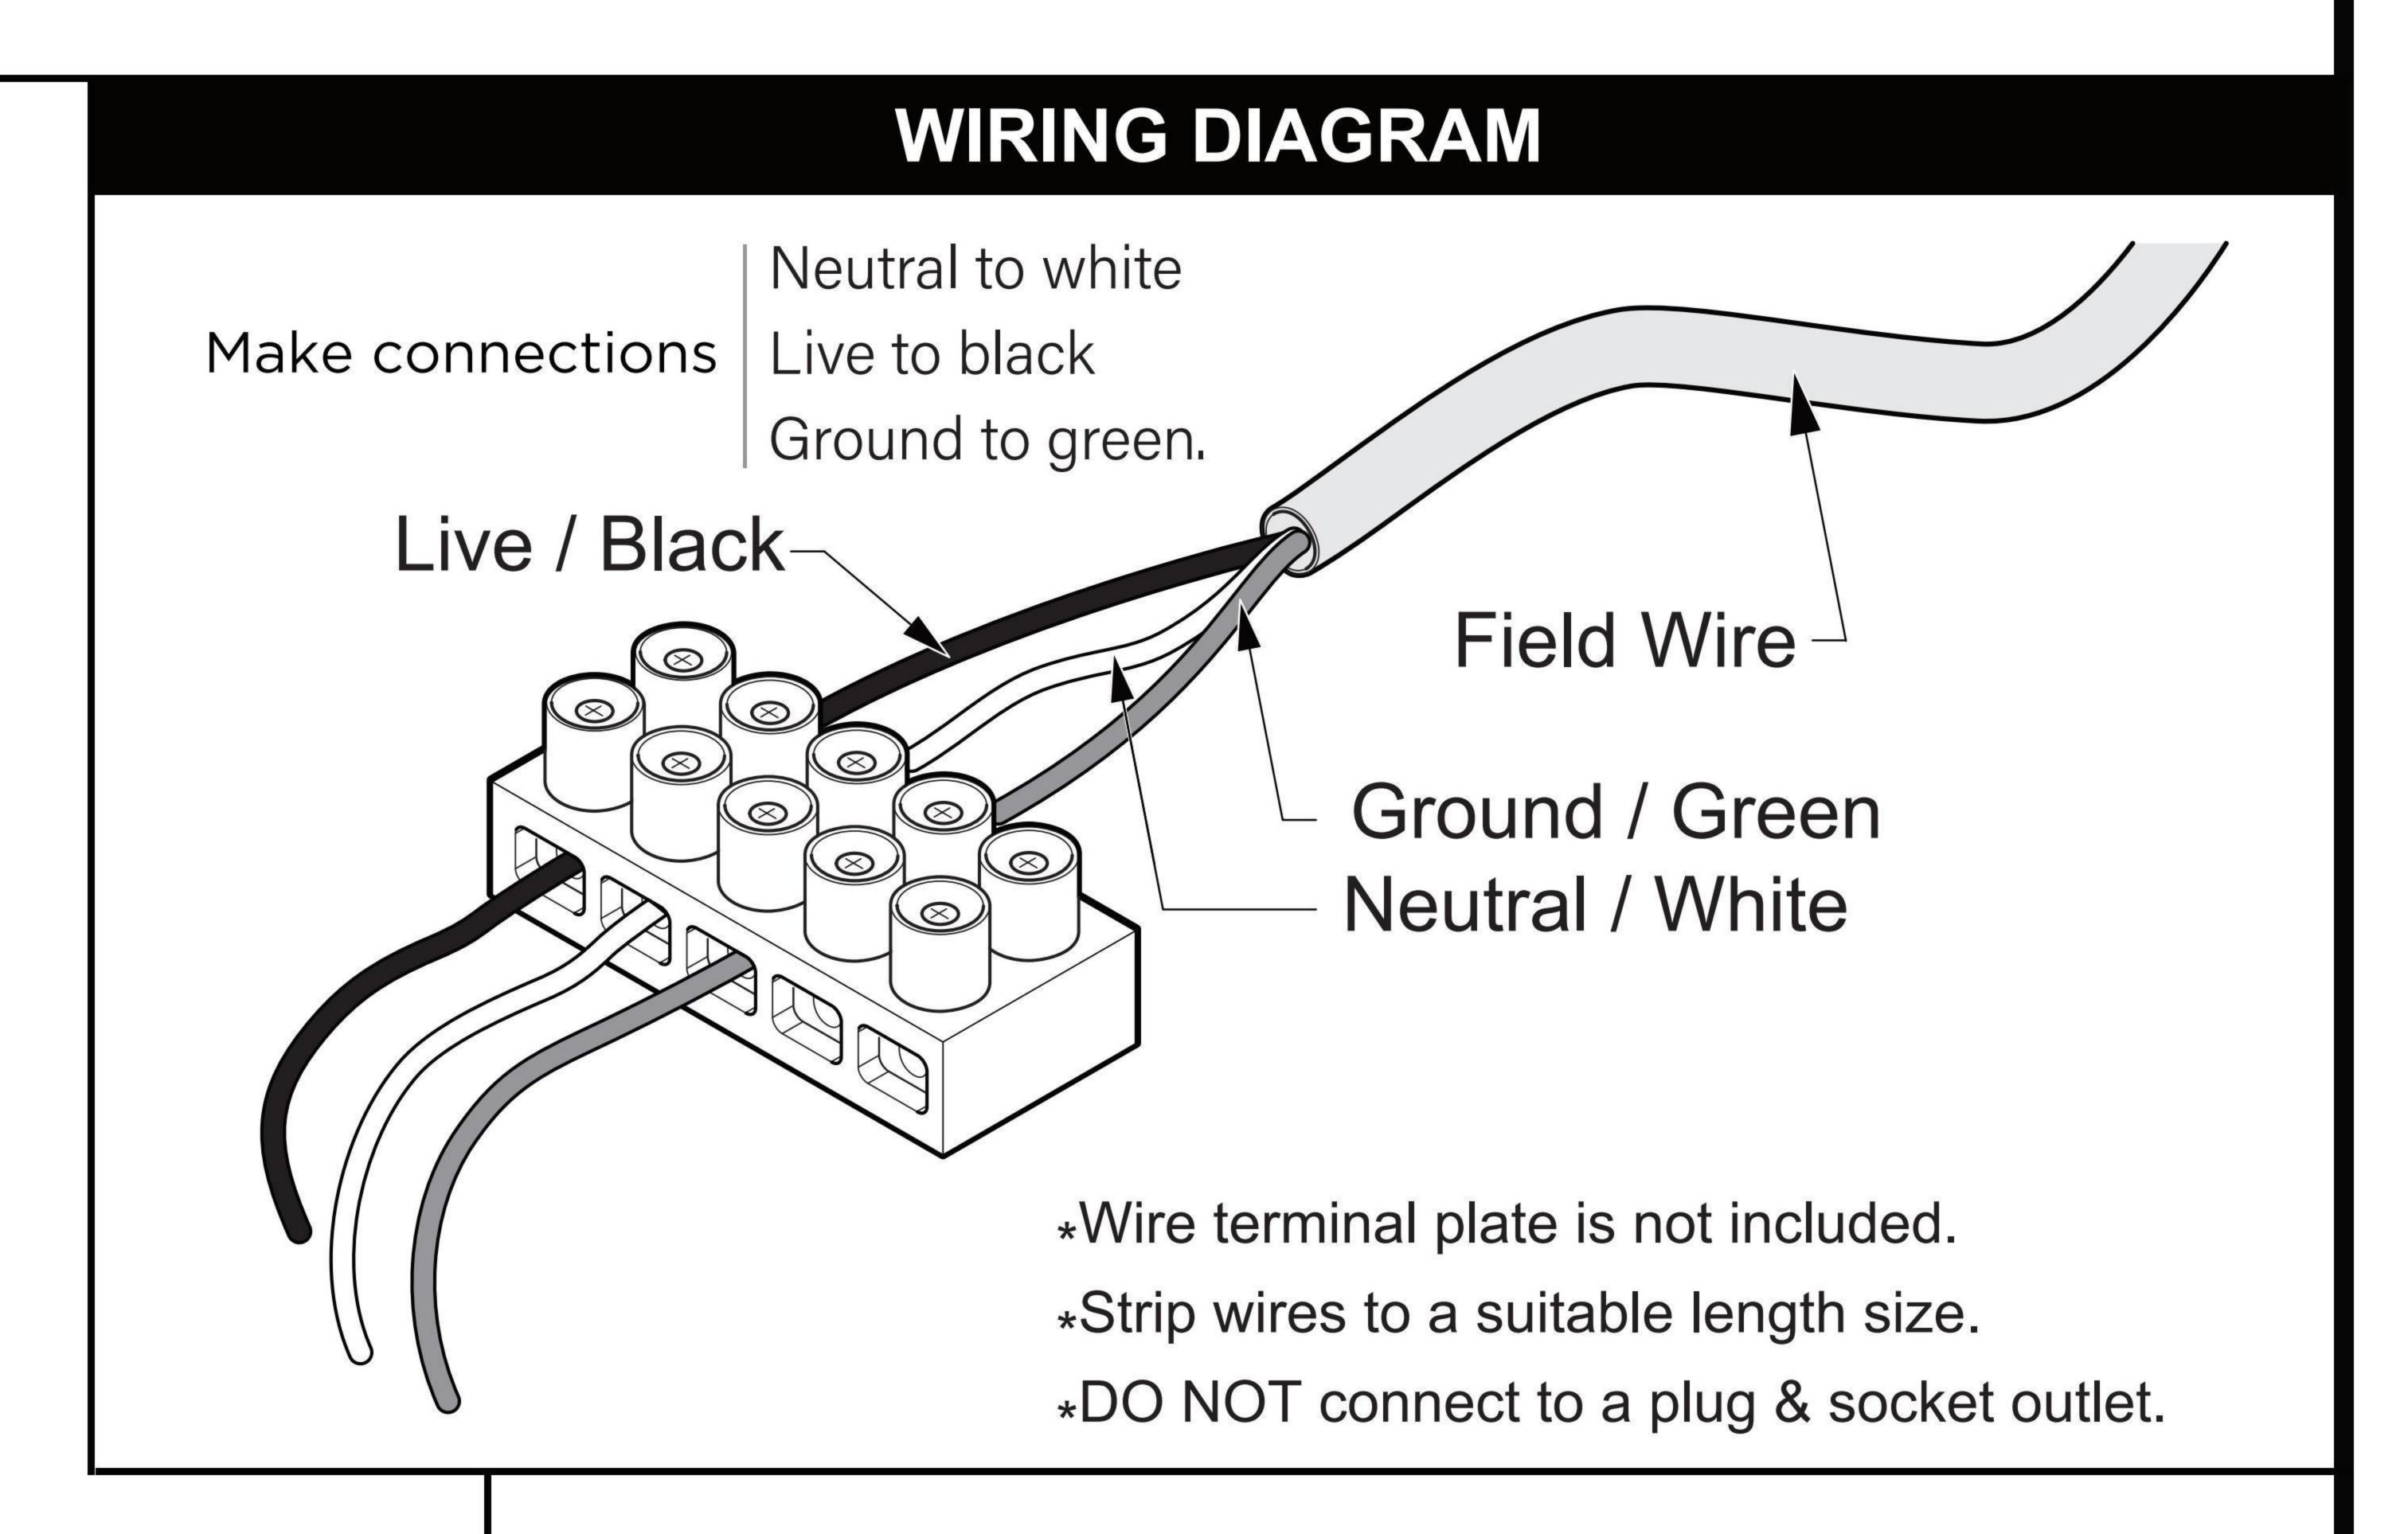

MIRROR FEATURES


- Copper free silver mirror
- High output LED lighting:
 CRI 90+,3000-6000K CCT, IP44
- Color Temperature changing
- Light Brigheness changing
- Recess mount or wall surface mount
- Defogger

INSTALLATION

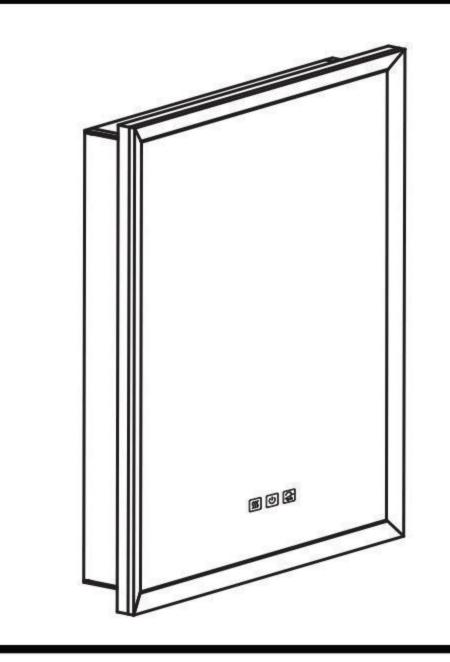


LIGHTED MEDICINE CABINET Lighting and Defogger


TOOLS REQUIRED FOR ASSEMBLY

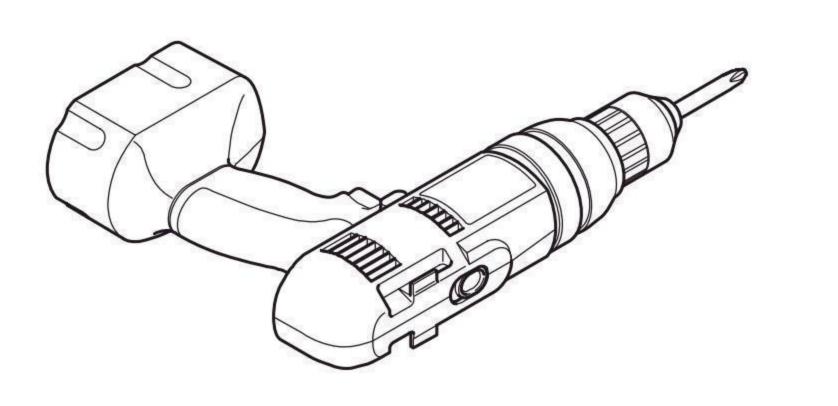


Electrical Drill

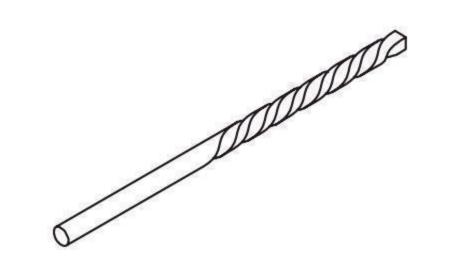


1/8" Drill Bit

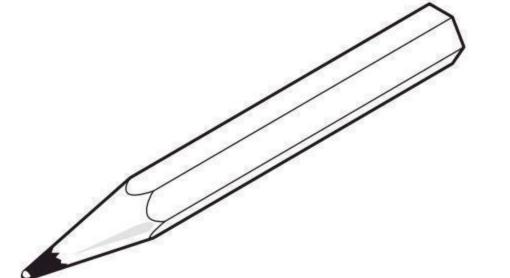


Pencil

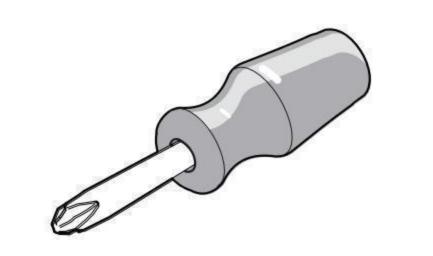

Phillips Screwdriver

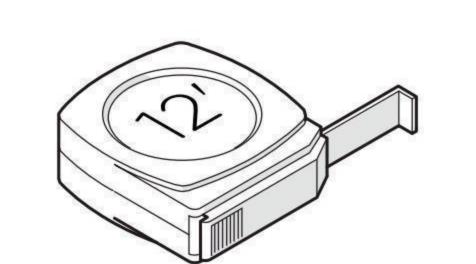


Tape Measure

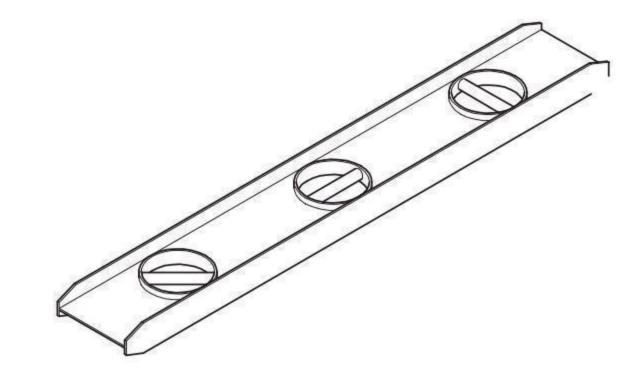

Level

PARTS INCLUDED

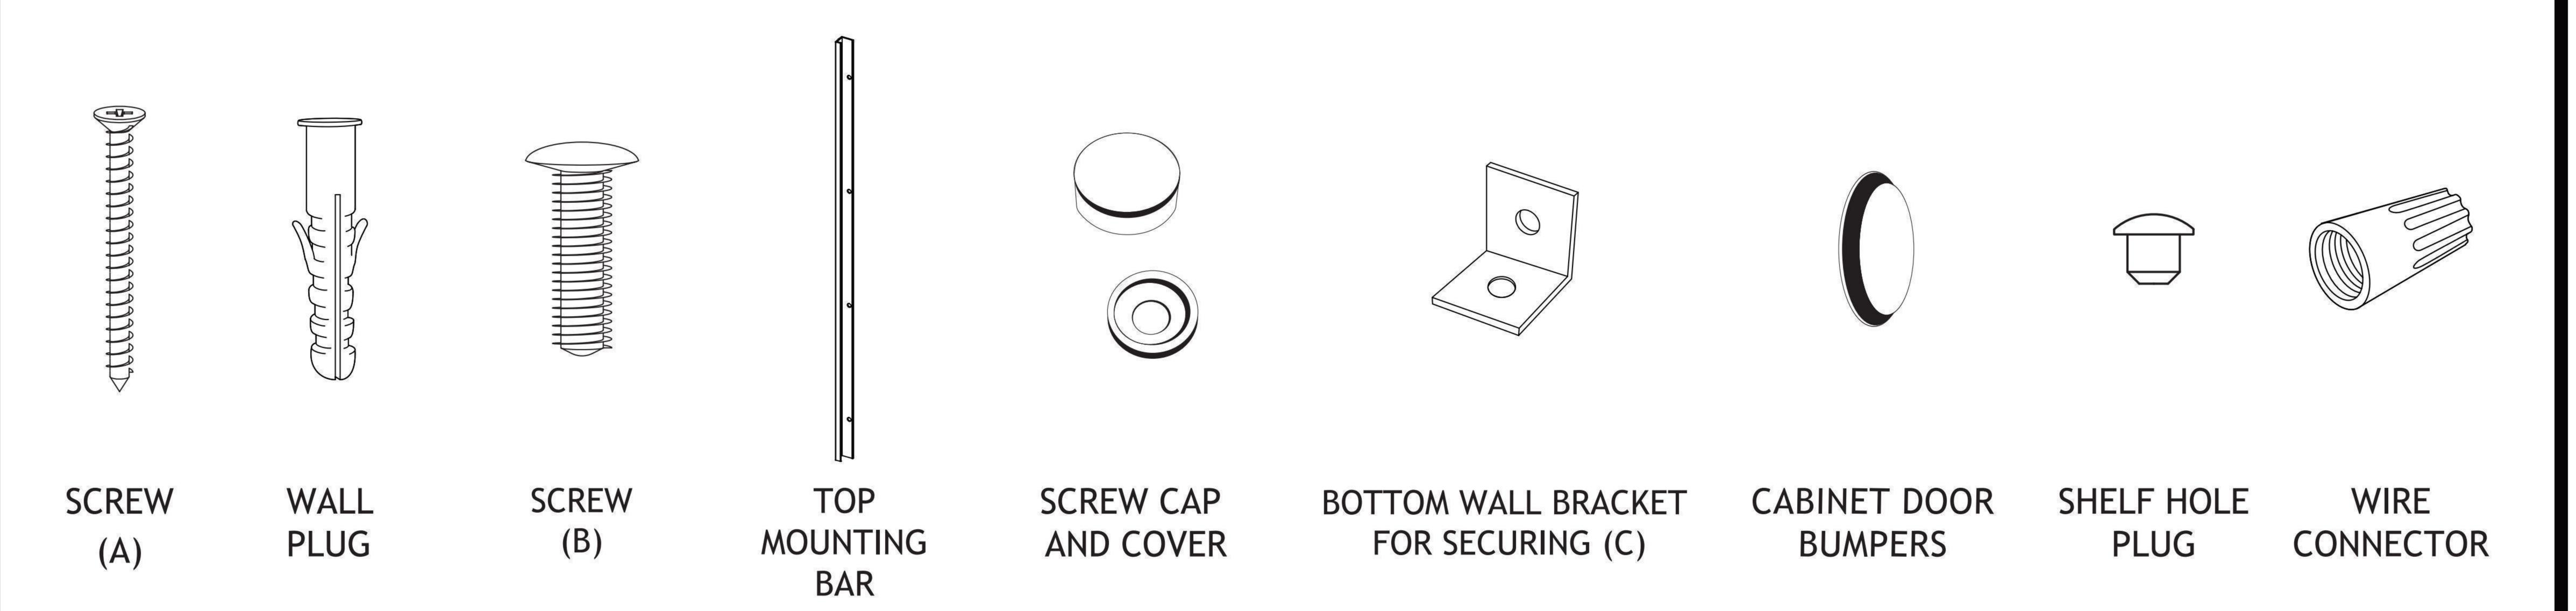




NOTE: Determine overall mirror dimensions before installation. Requires three(3) person in installation.

Accessories and parts may vary from the picture above.Depends on the product model and size.

DIMENSIONS

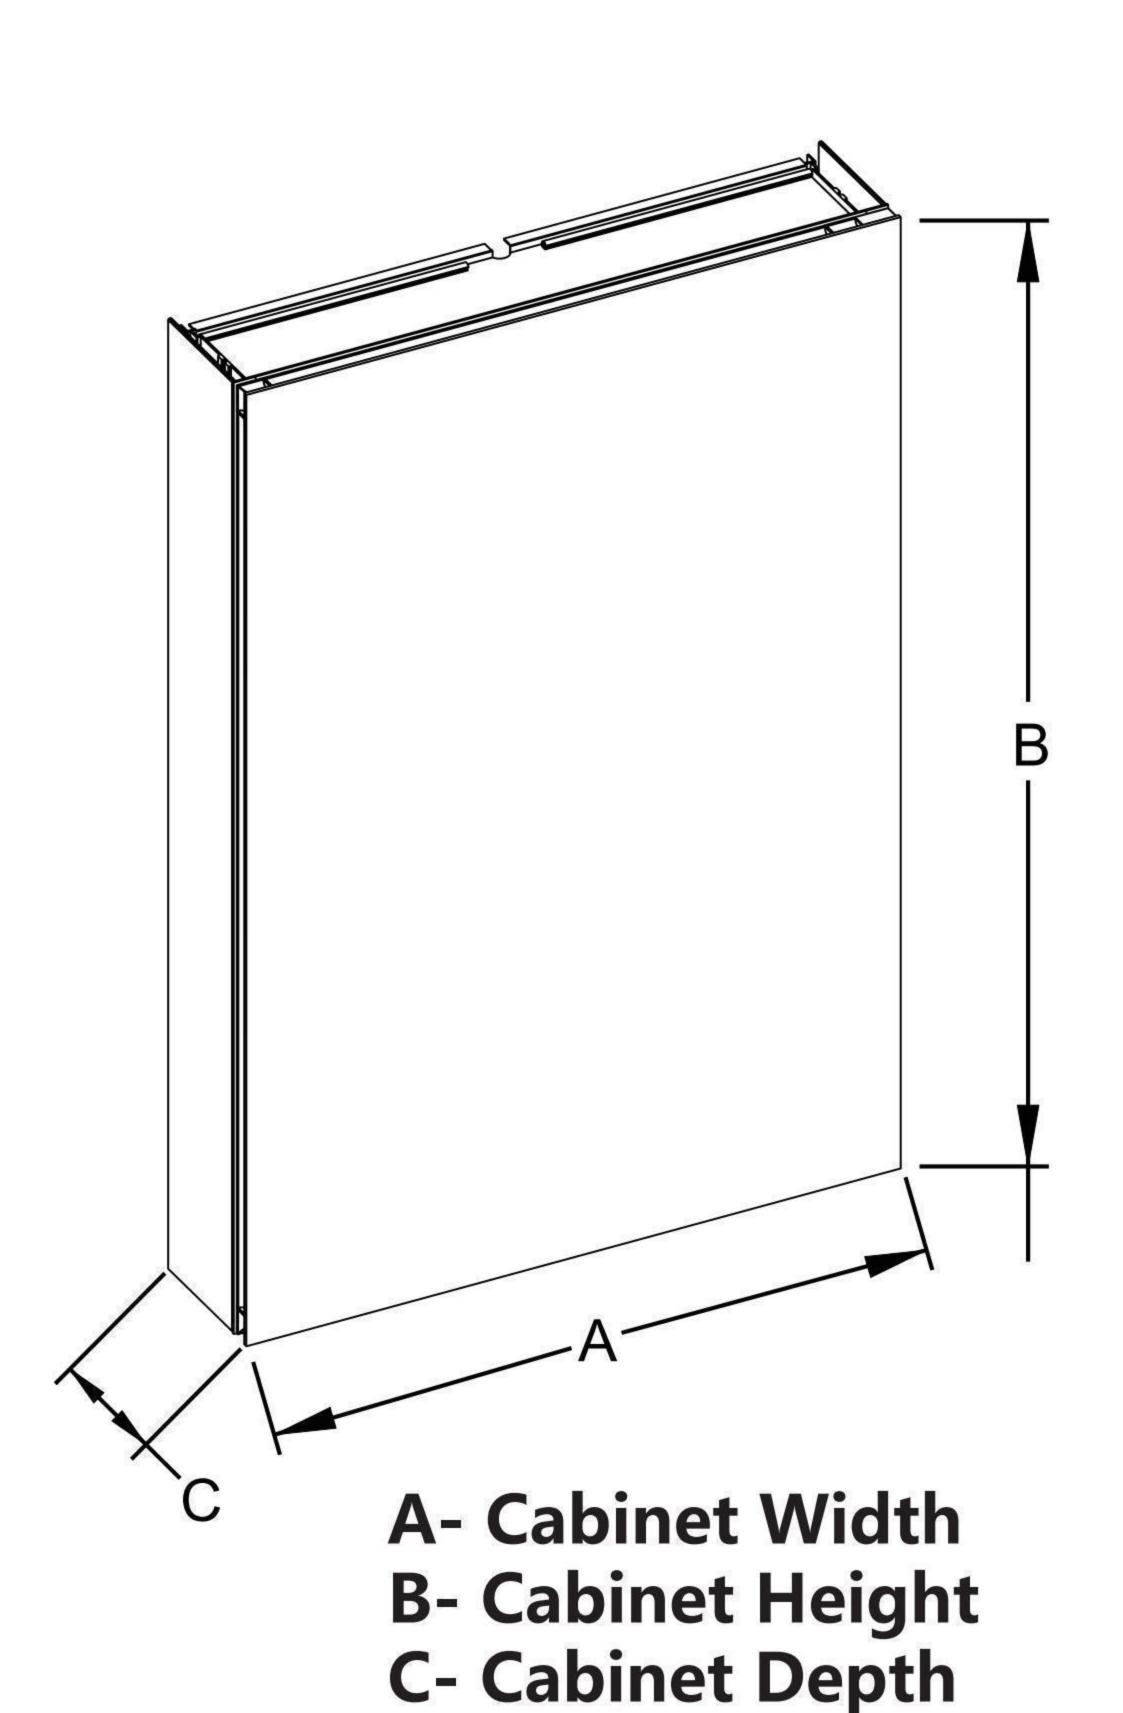

Model Item Number	A	В	C	Rough in size
	24"	32"	5-1/2"	21-5/8"x29-5/8"x3-3/4"
	30"	32"	5-1/2"	27-5/8"x29-5/8"x3-3/4"
	36"	32"	5-1/2"	33-5/8"x29-5/8"x3-3/4"
	48"	32"	5-1/2"	45-5/8"x29-5/8"x3-3/4"


NOTE: All rough-in dimensions for reference only!

NOTE: Please use rough in size for recess mounting installation(wall cut-out). All dimensions and specifications are nominal and may vary. Use actual products for accuracy in critical situations. *Style and shape may vary from the picture above. Instructional purpose only *


SURFACE-MOUNTED INSTALLATION

* No need to take off the door(s) before installing the cabinets.

1 Level and mark the cabinet's location on the wall. 2

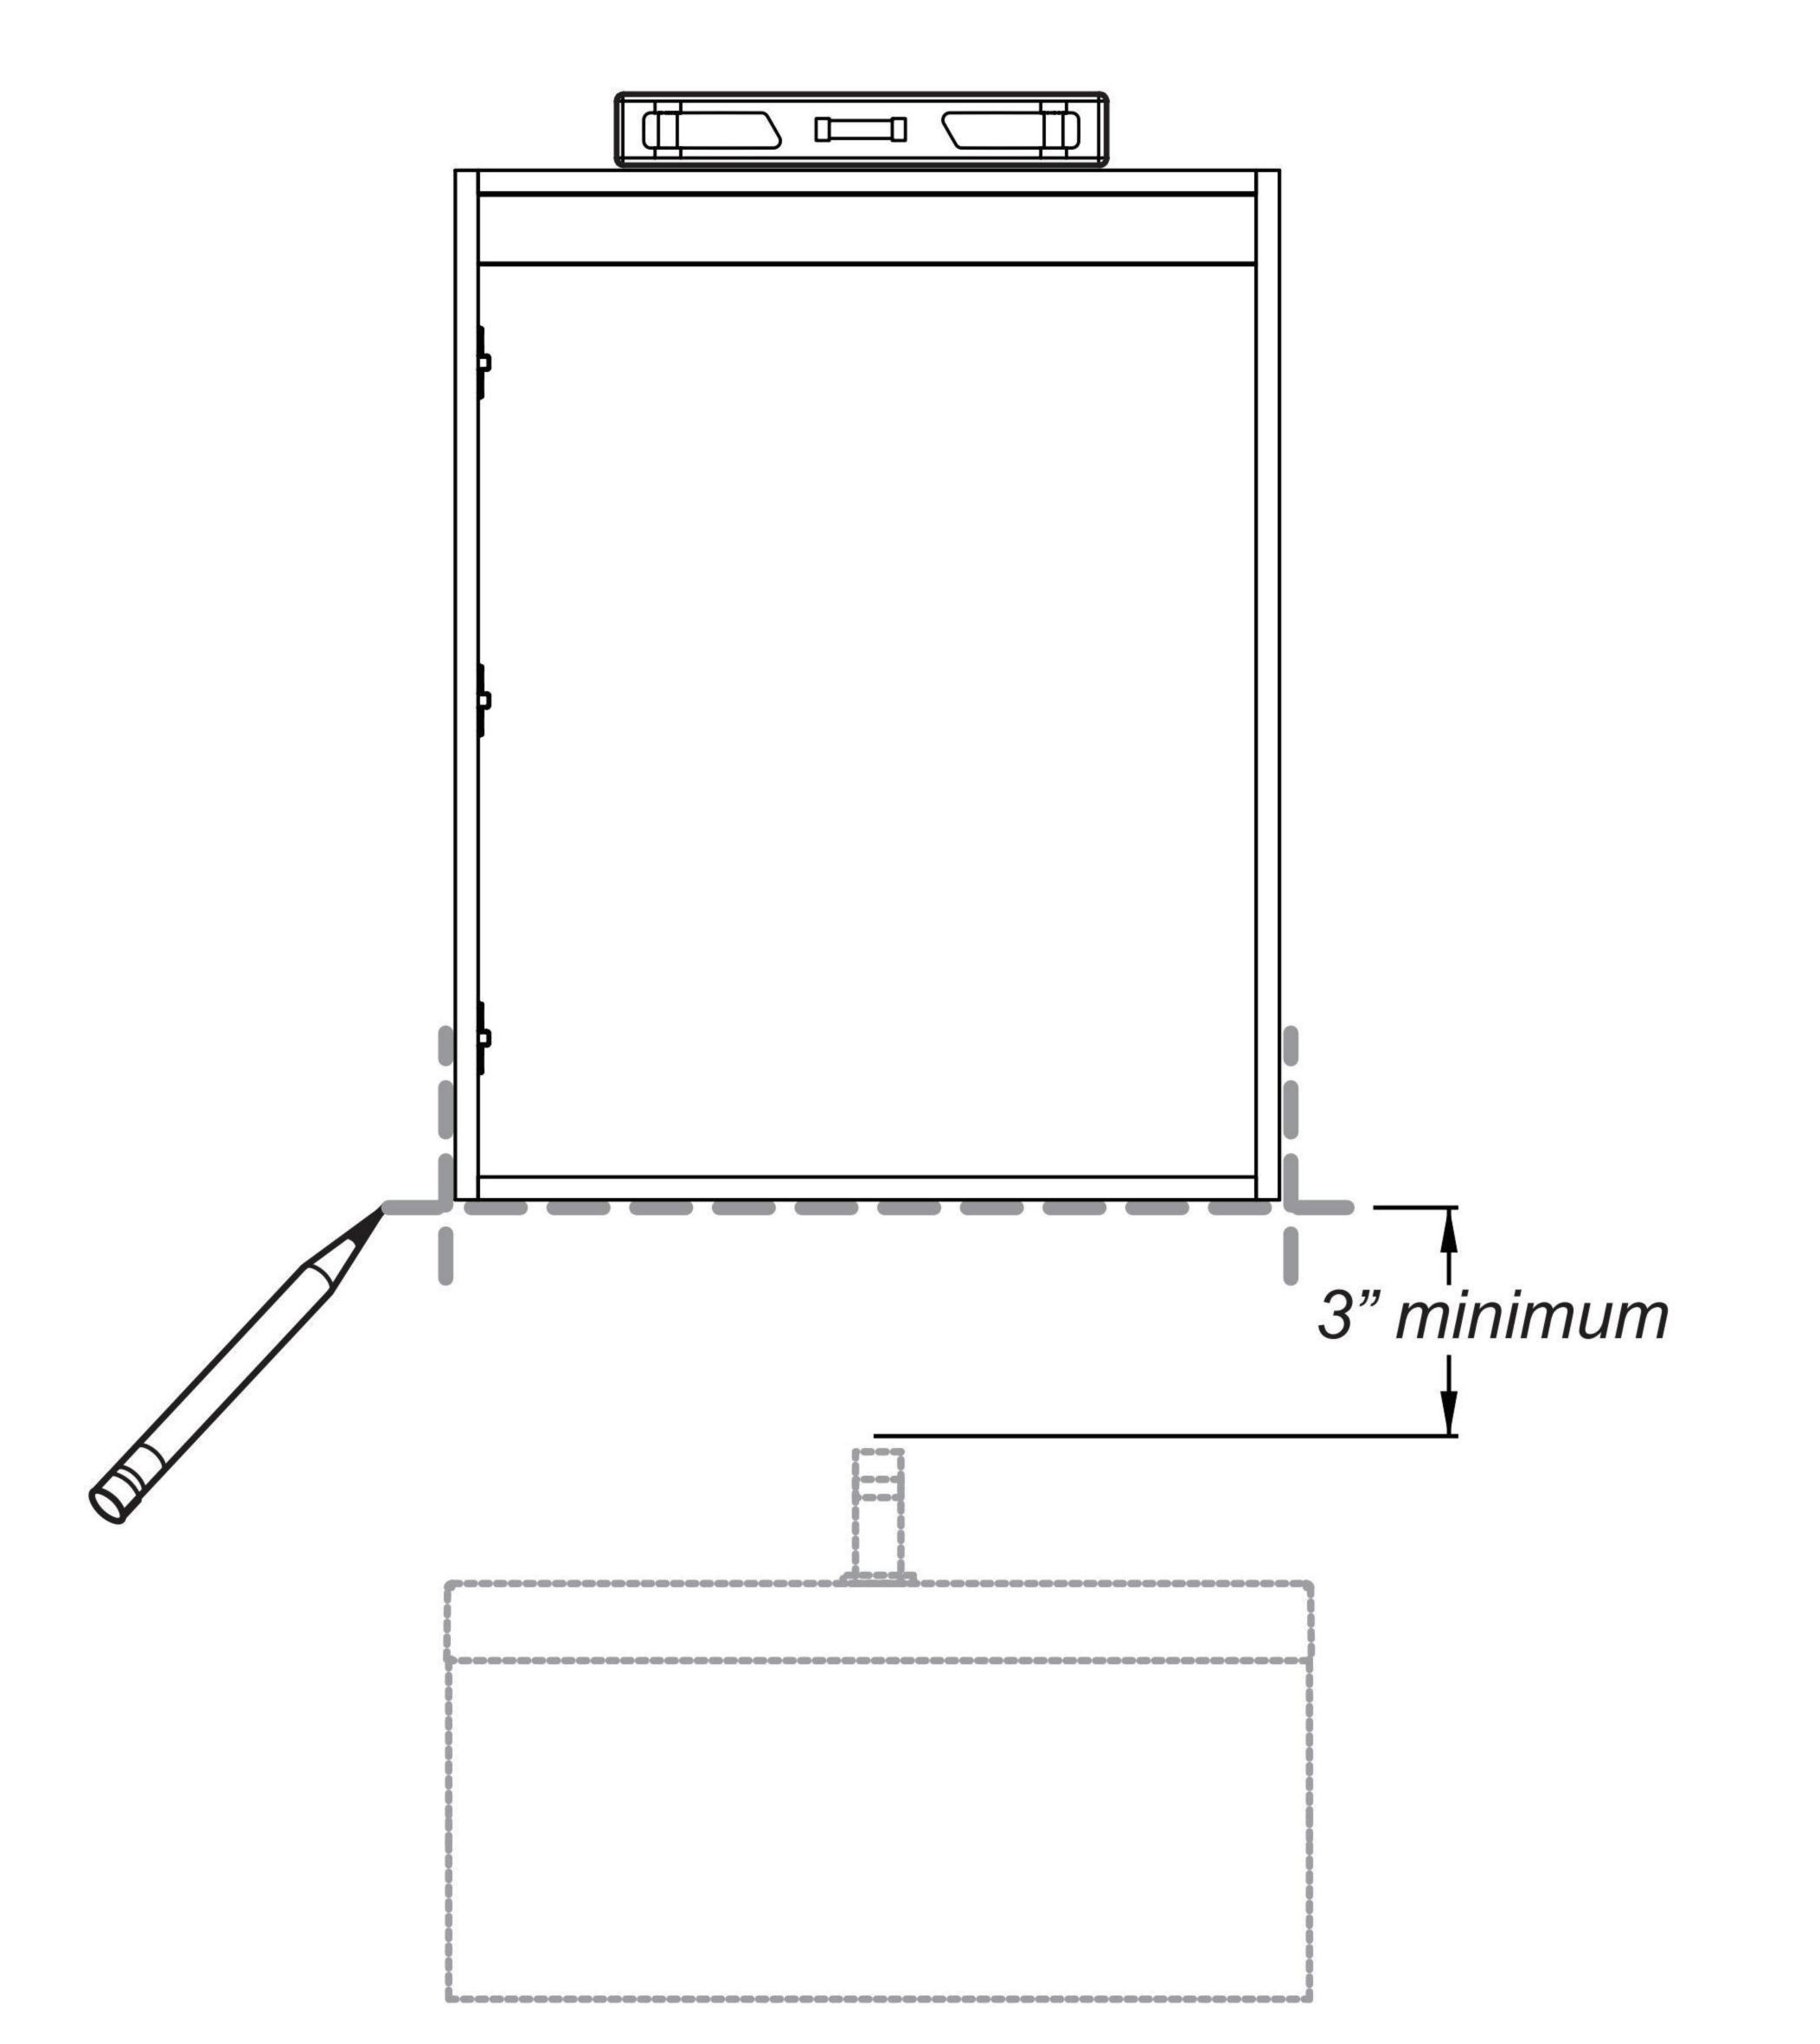


2 Mark the position of the Top Mounting Bar and Punch.

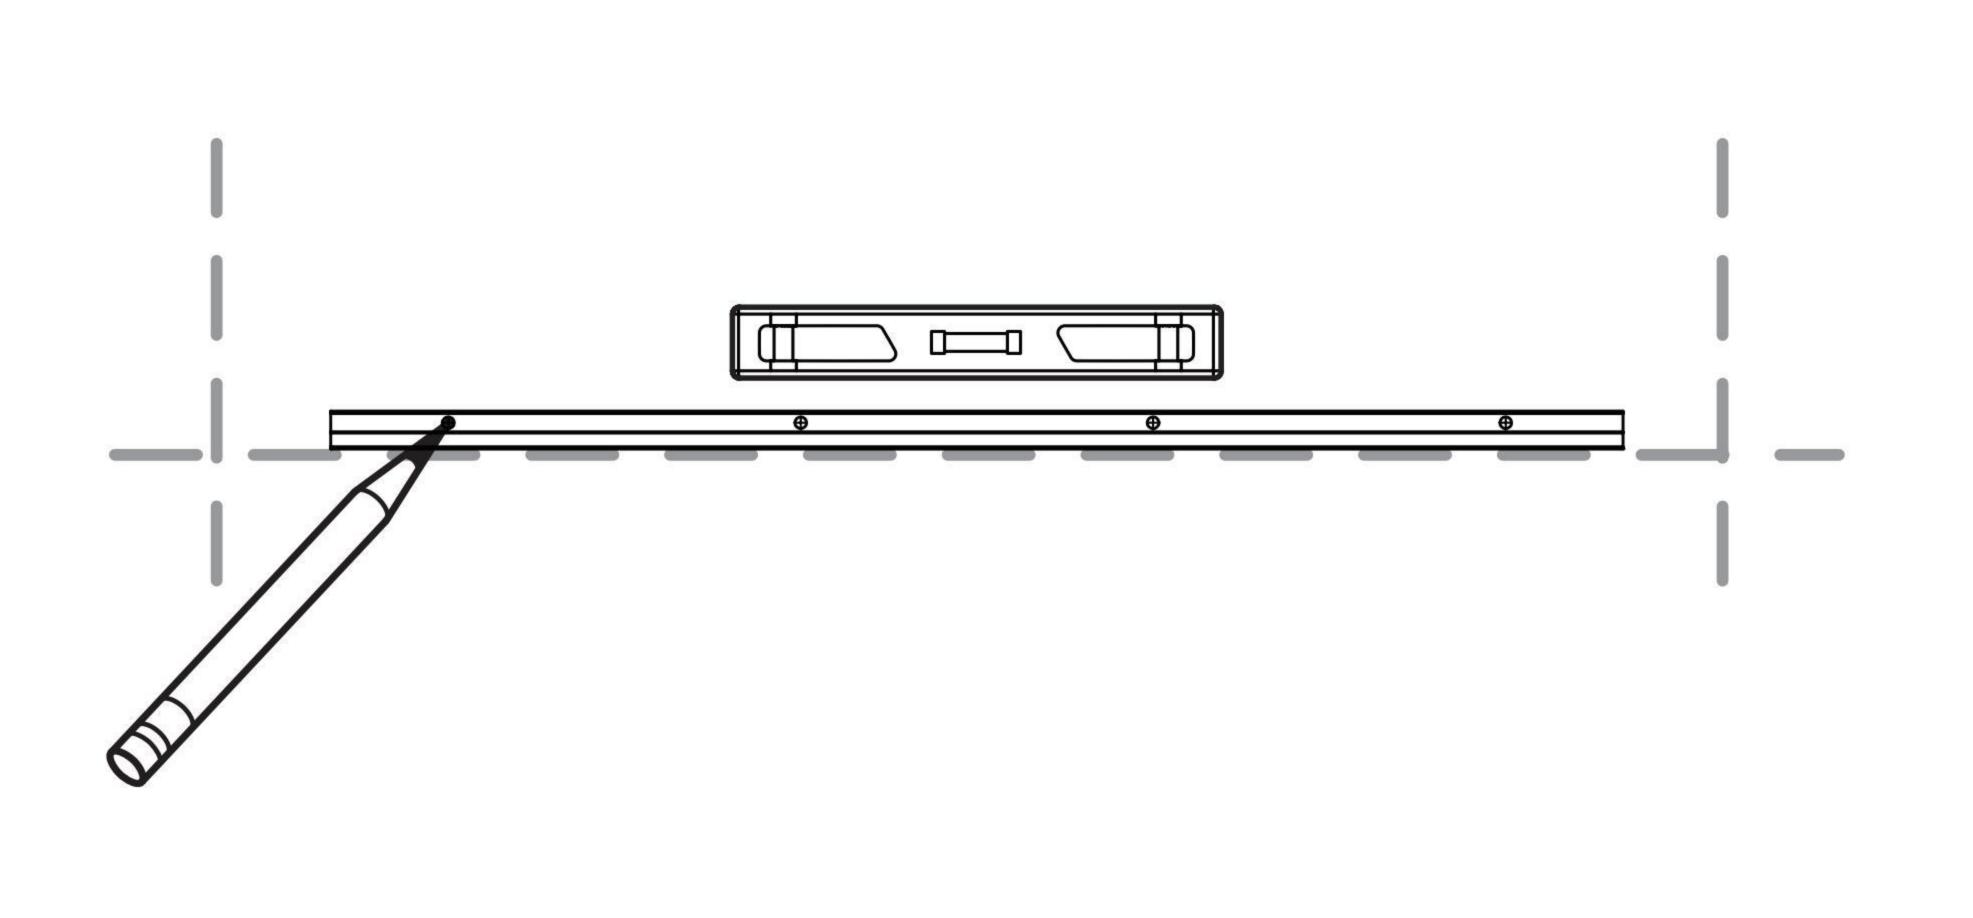


Top mounting bar must be attached to furring strip/channel or wall studs

- Using a drill, make holes on solid wall, and fill with supplied plugs and screws into hanging bar holes tightly.
- 4

Please turn off all the power before the mirror cabinet wires connection.

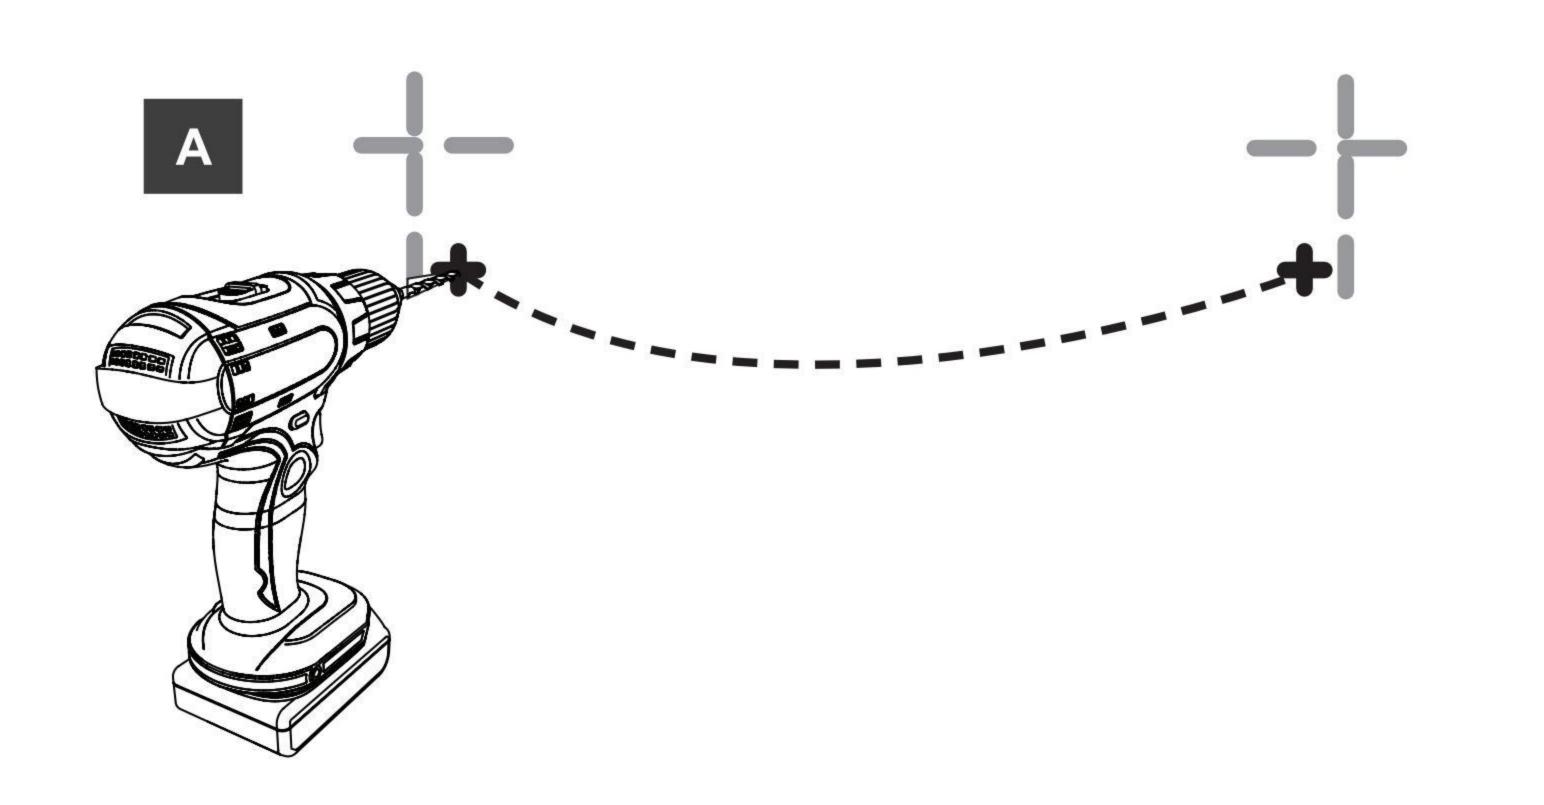


В

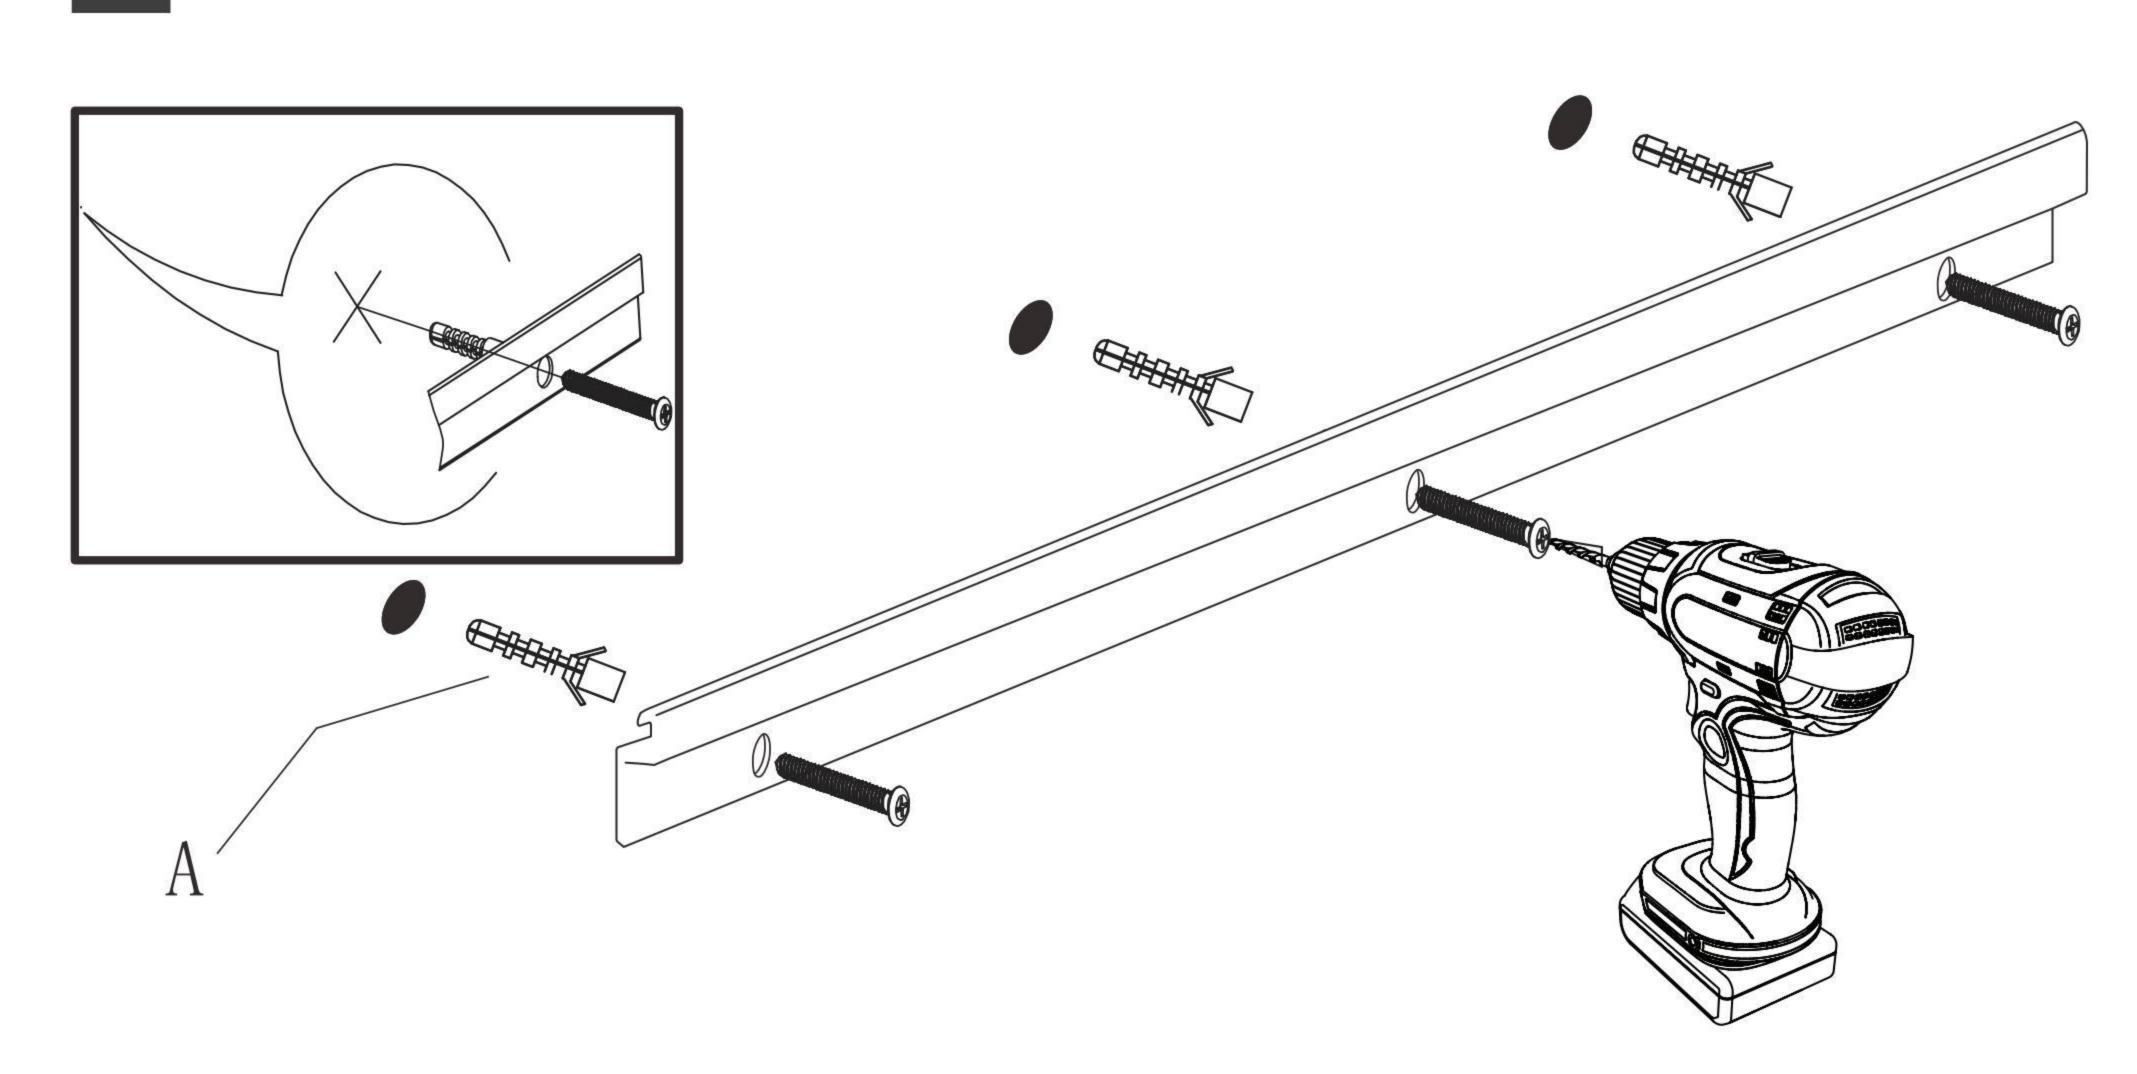


Attach Top Mounting Bar to wall.

Power Off

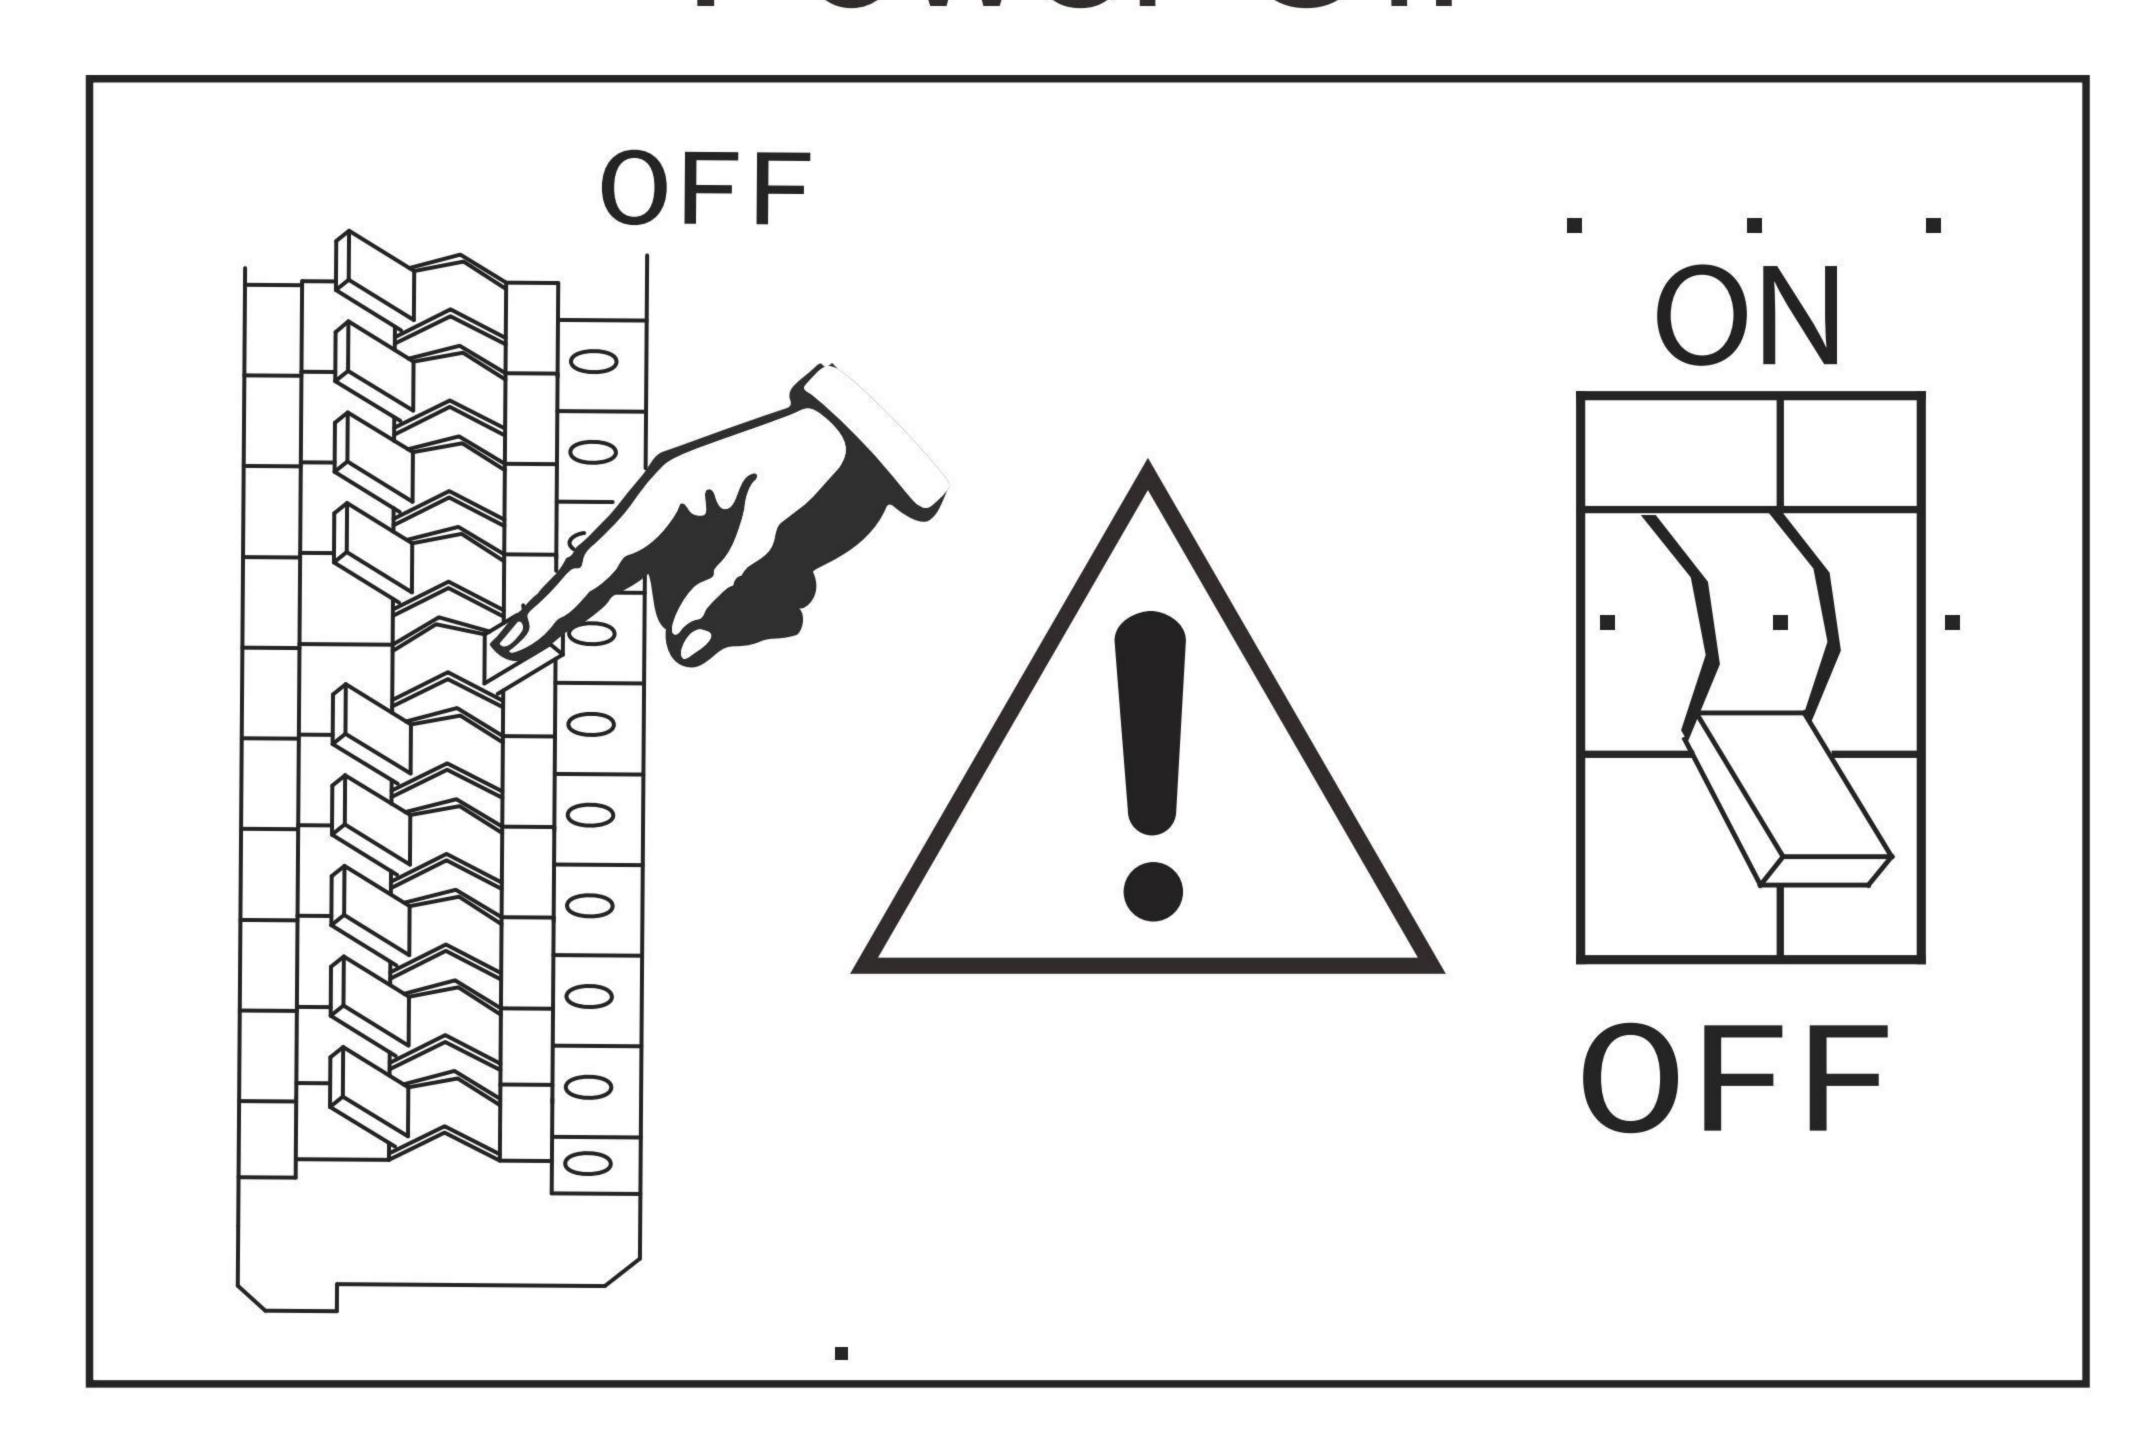


SURFACE-MOUNTED INSTALLATION


With assistance, to rest the cabinet on the mounting bar and hold in place.

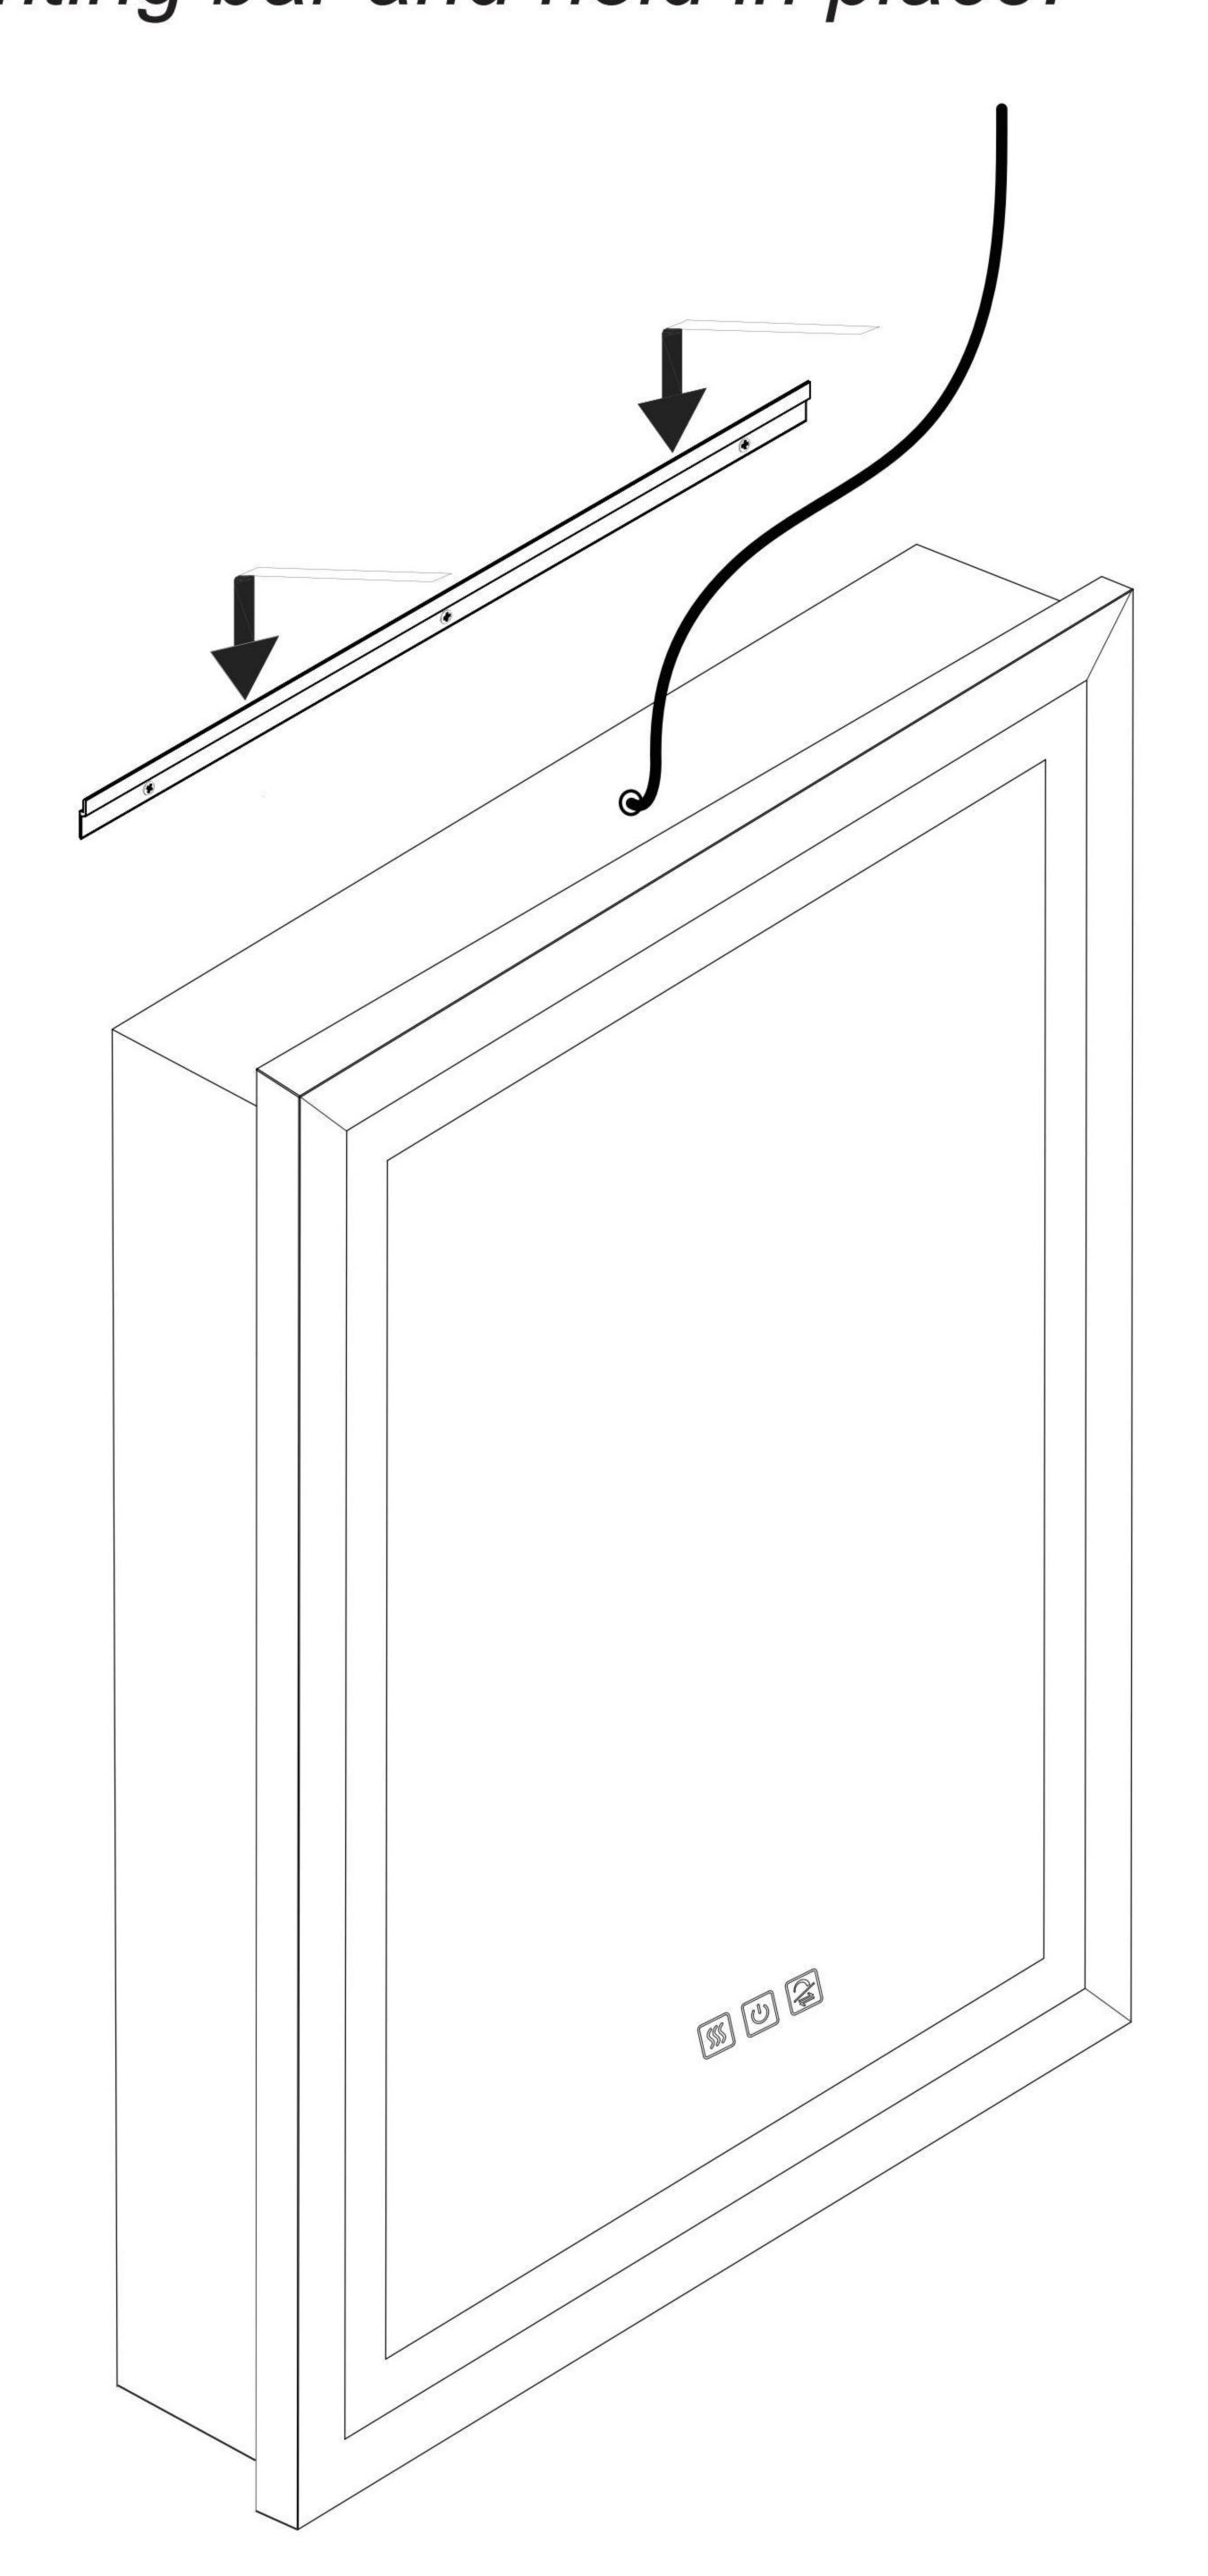


Install the bottom wall bracket to secure the mirror cabinet to the wall. Screw B is located on the bottom of the cabinet, while Screw A is positioned on the wall.

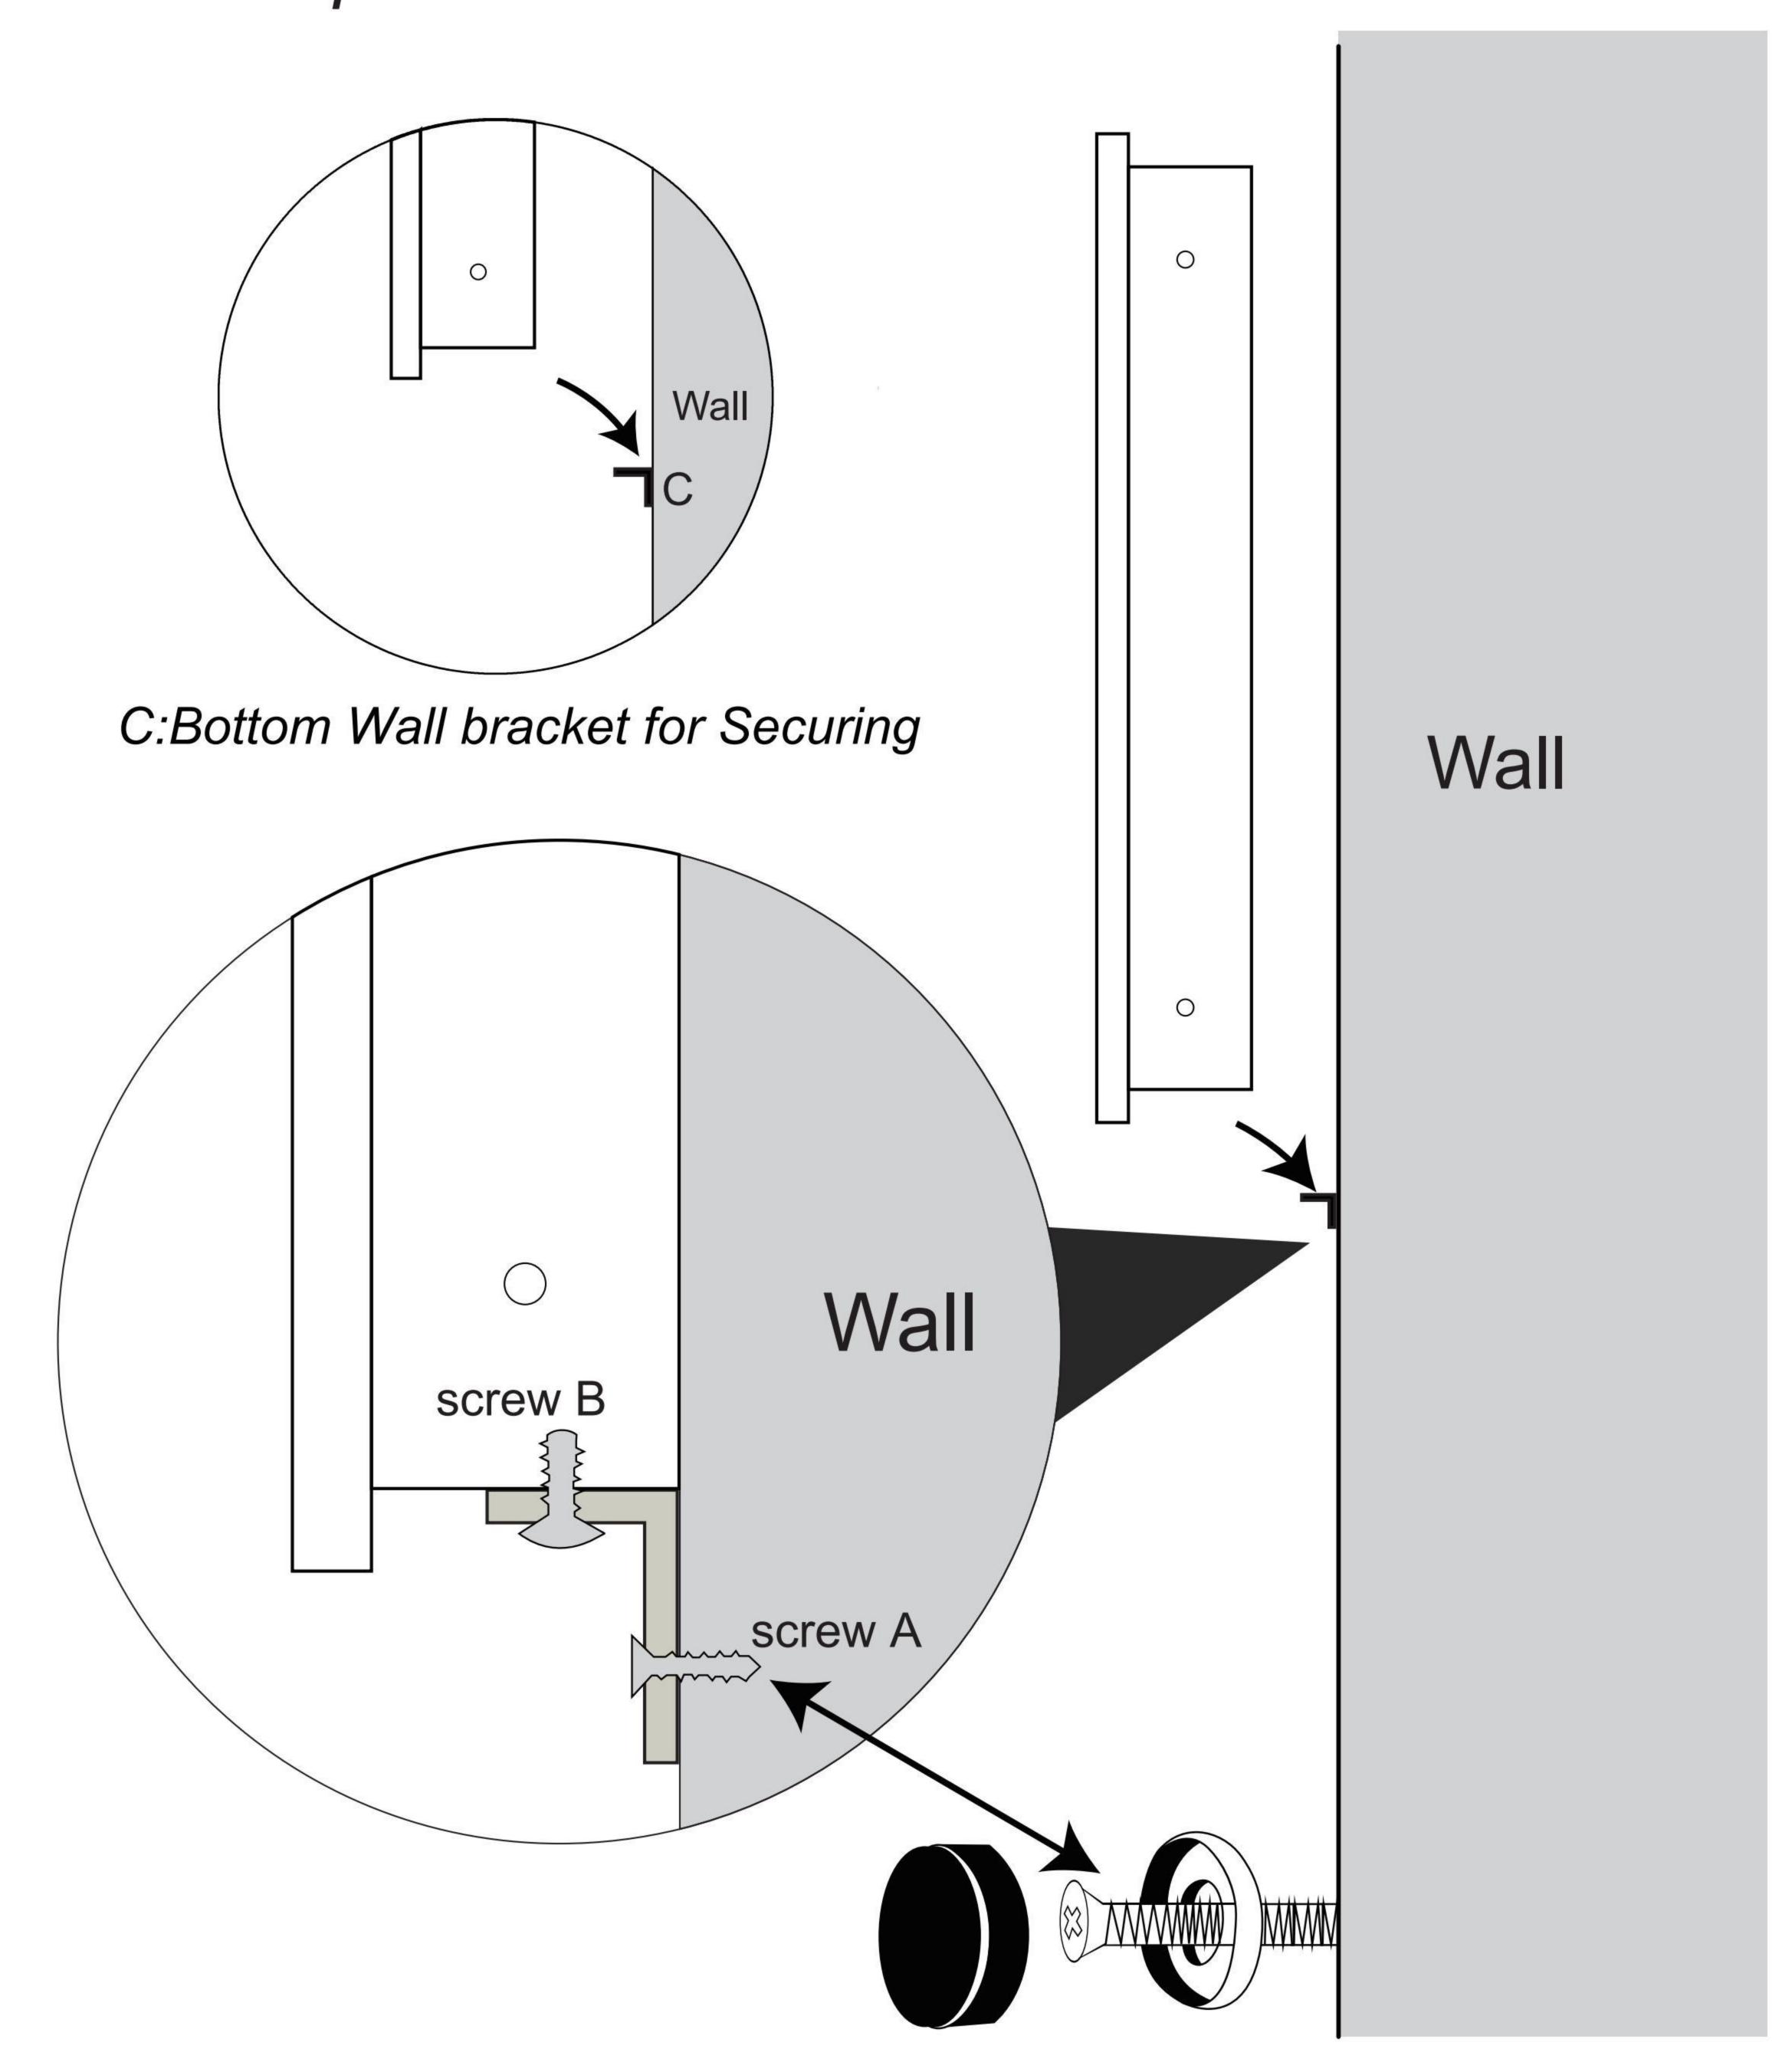

Wiring the power line.

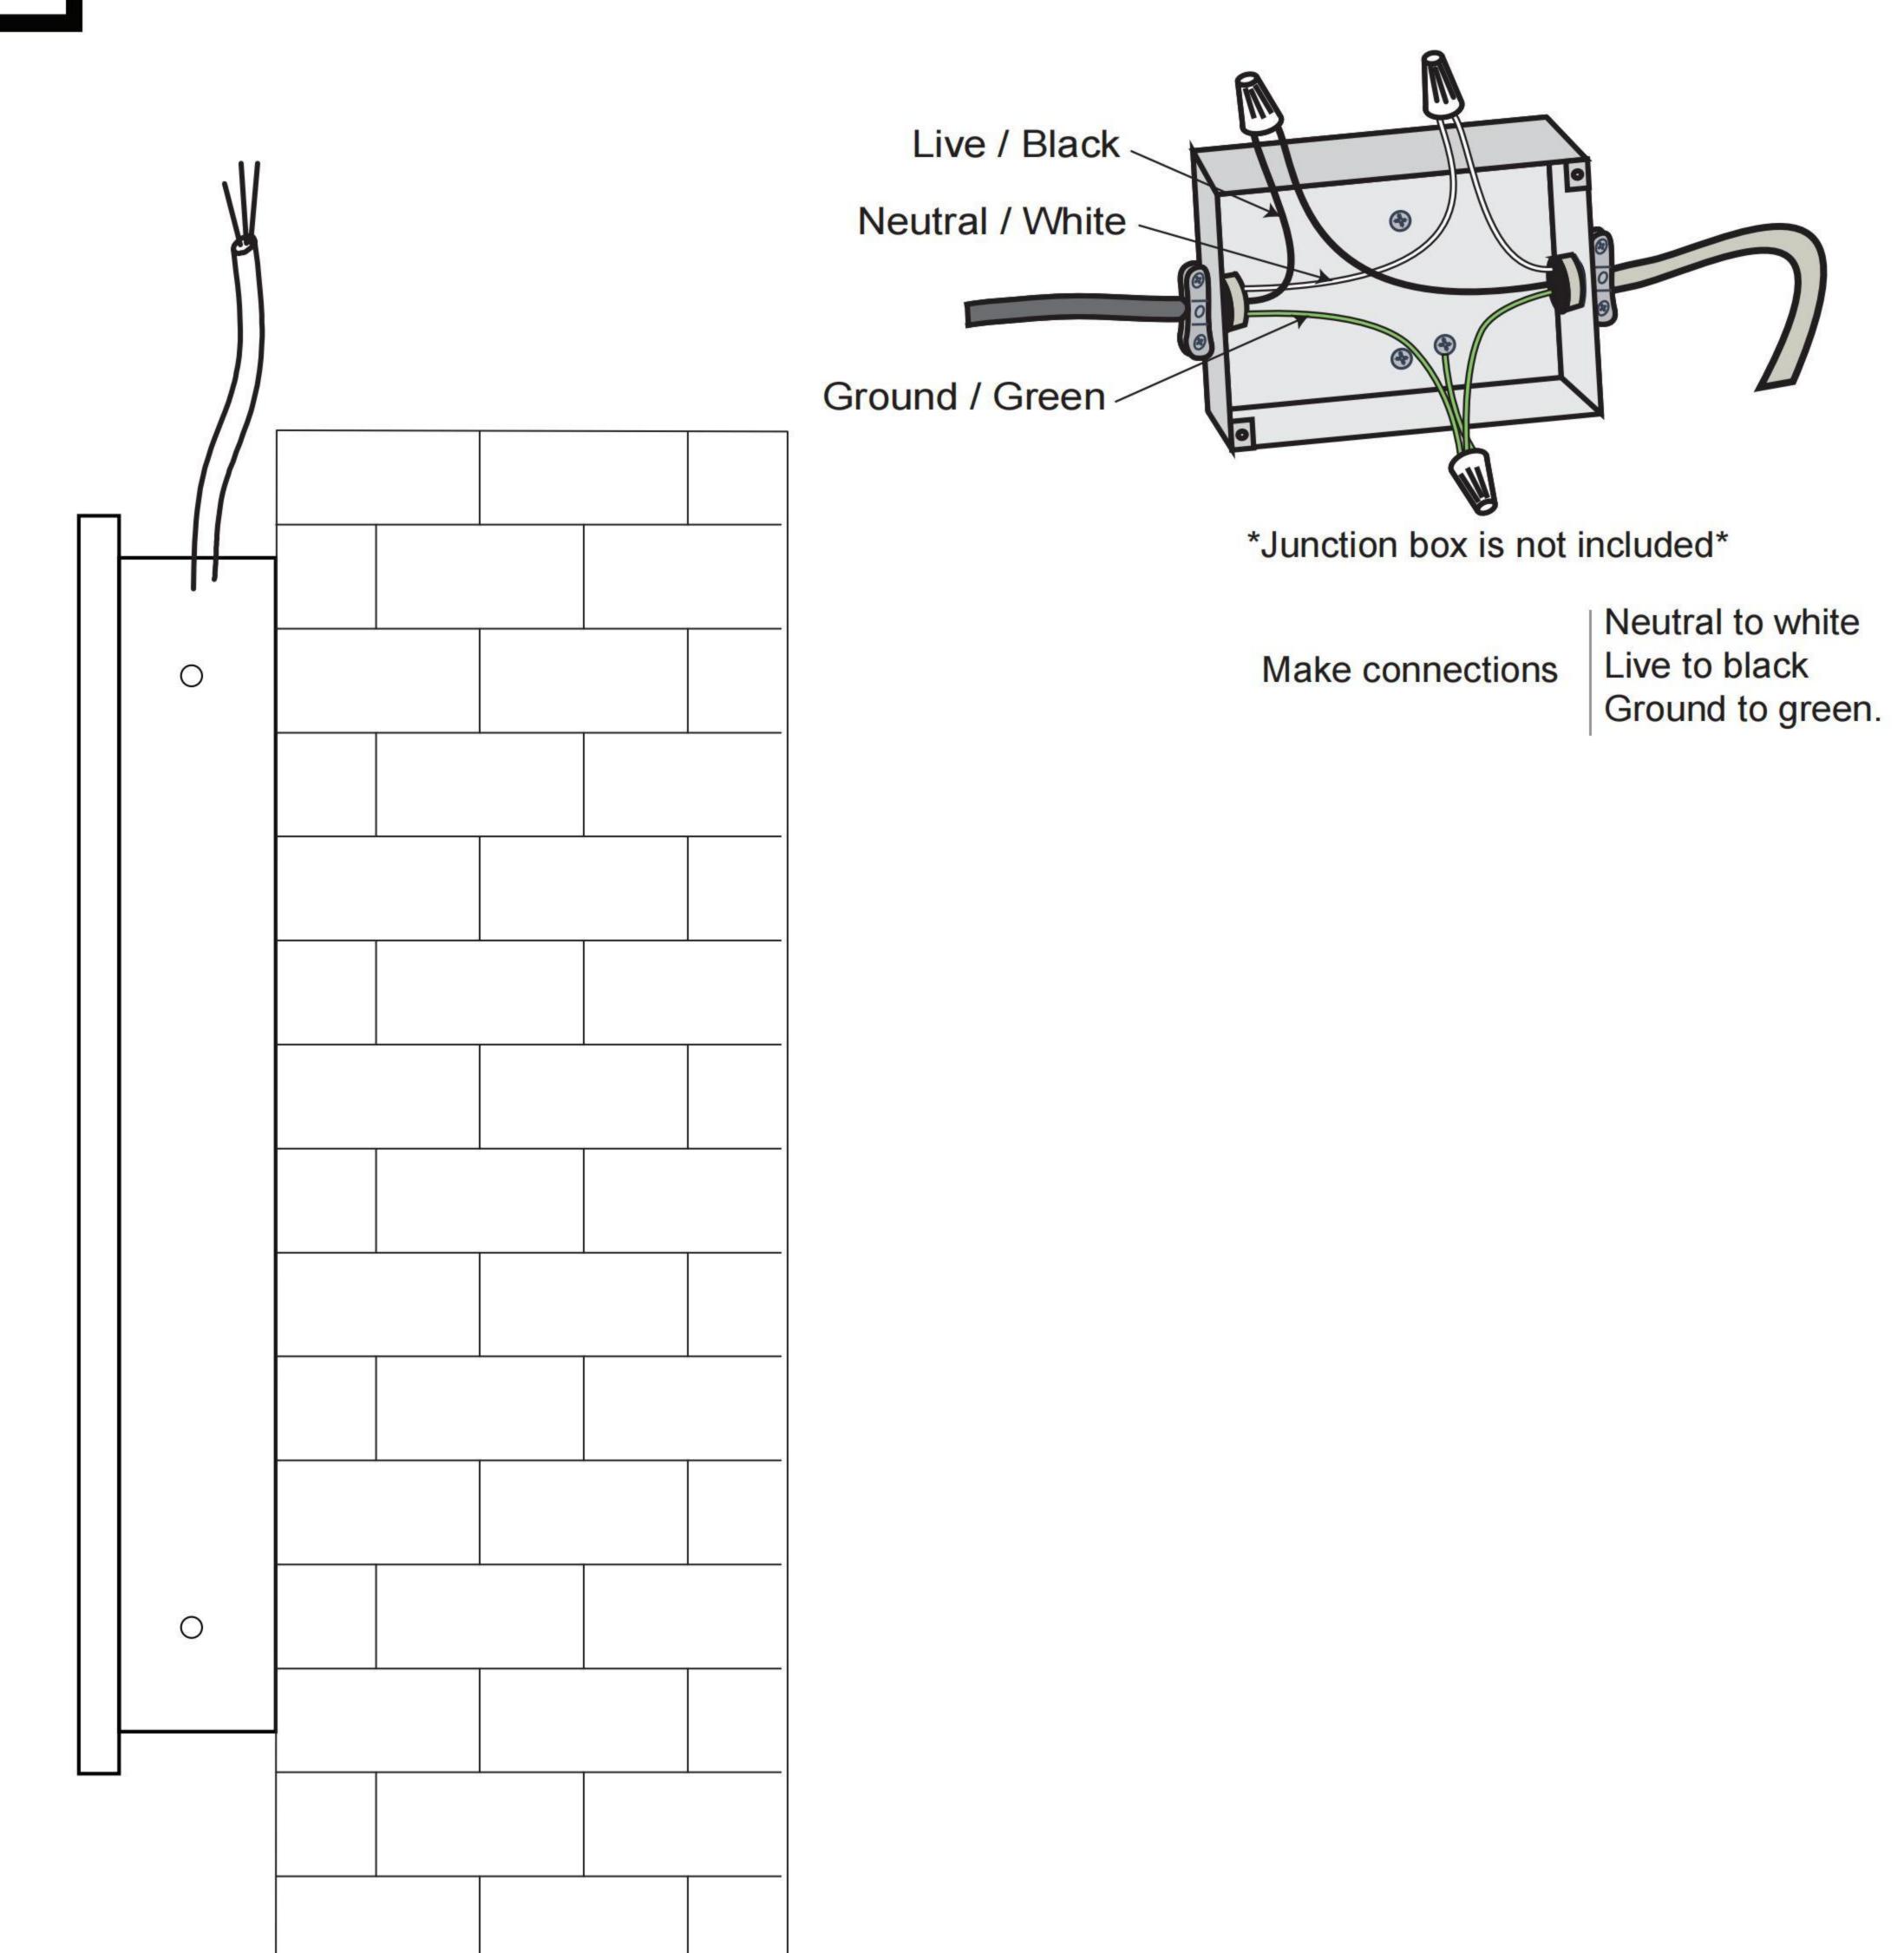

Hang up the mirror cabinet stable then turn on the power.

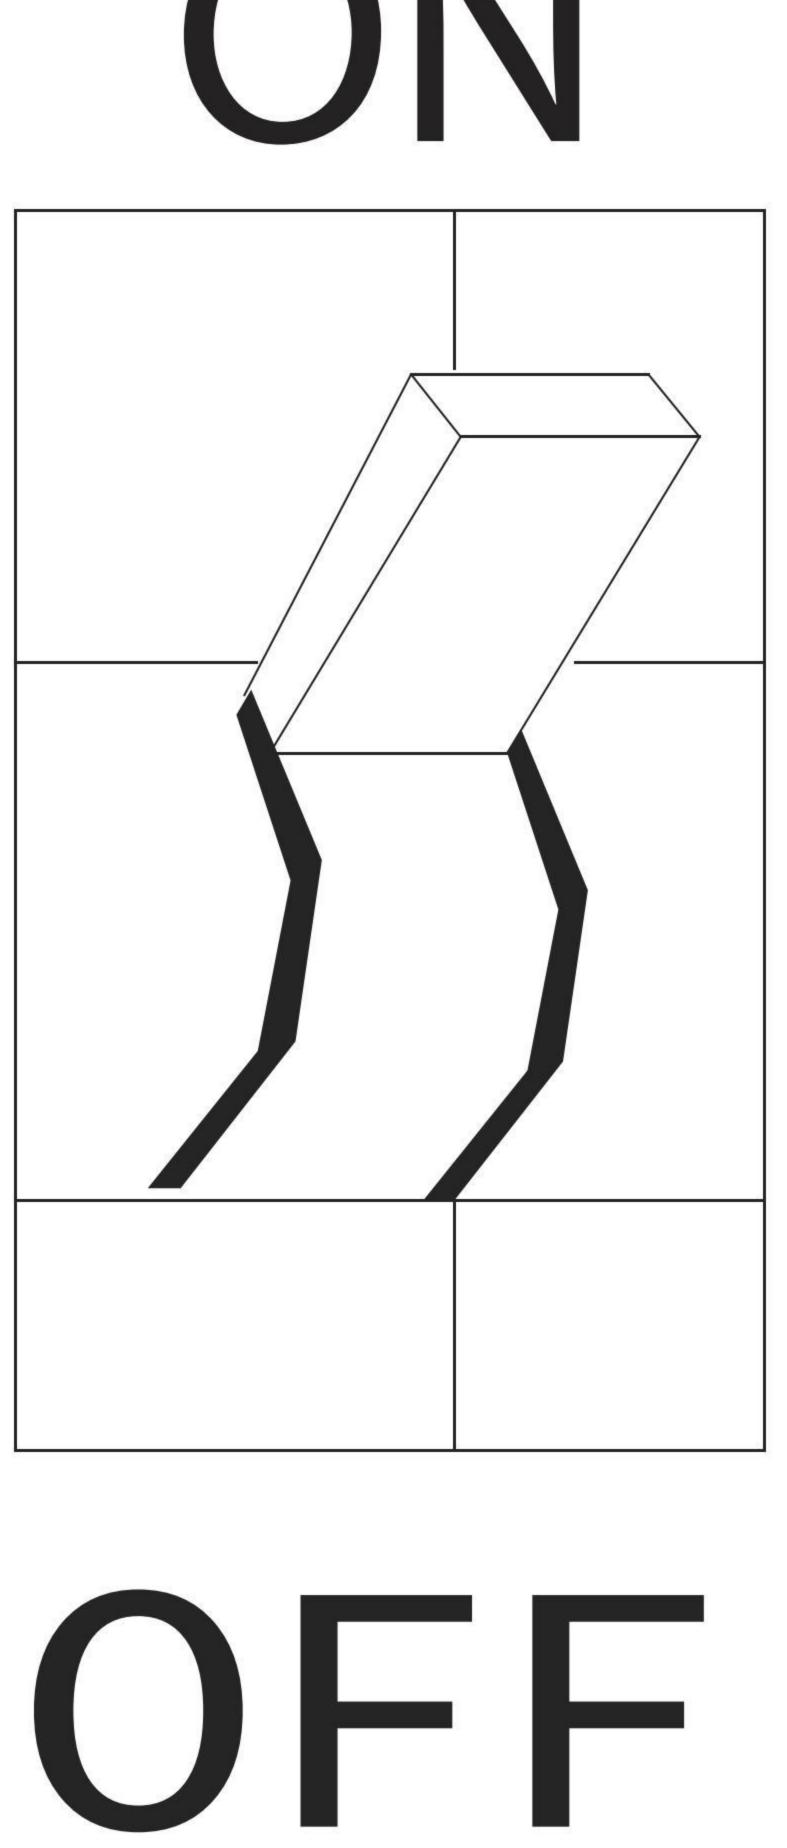


WARNING: Turn off the power before wire connection!

RECESS INSTALLATION


* No need to take off the door(s) before installing the cabinets.

1 Refer to "dimensions" on page 4 to measure 2 Rough in size.

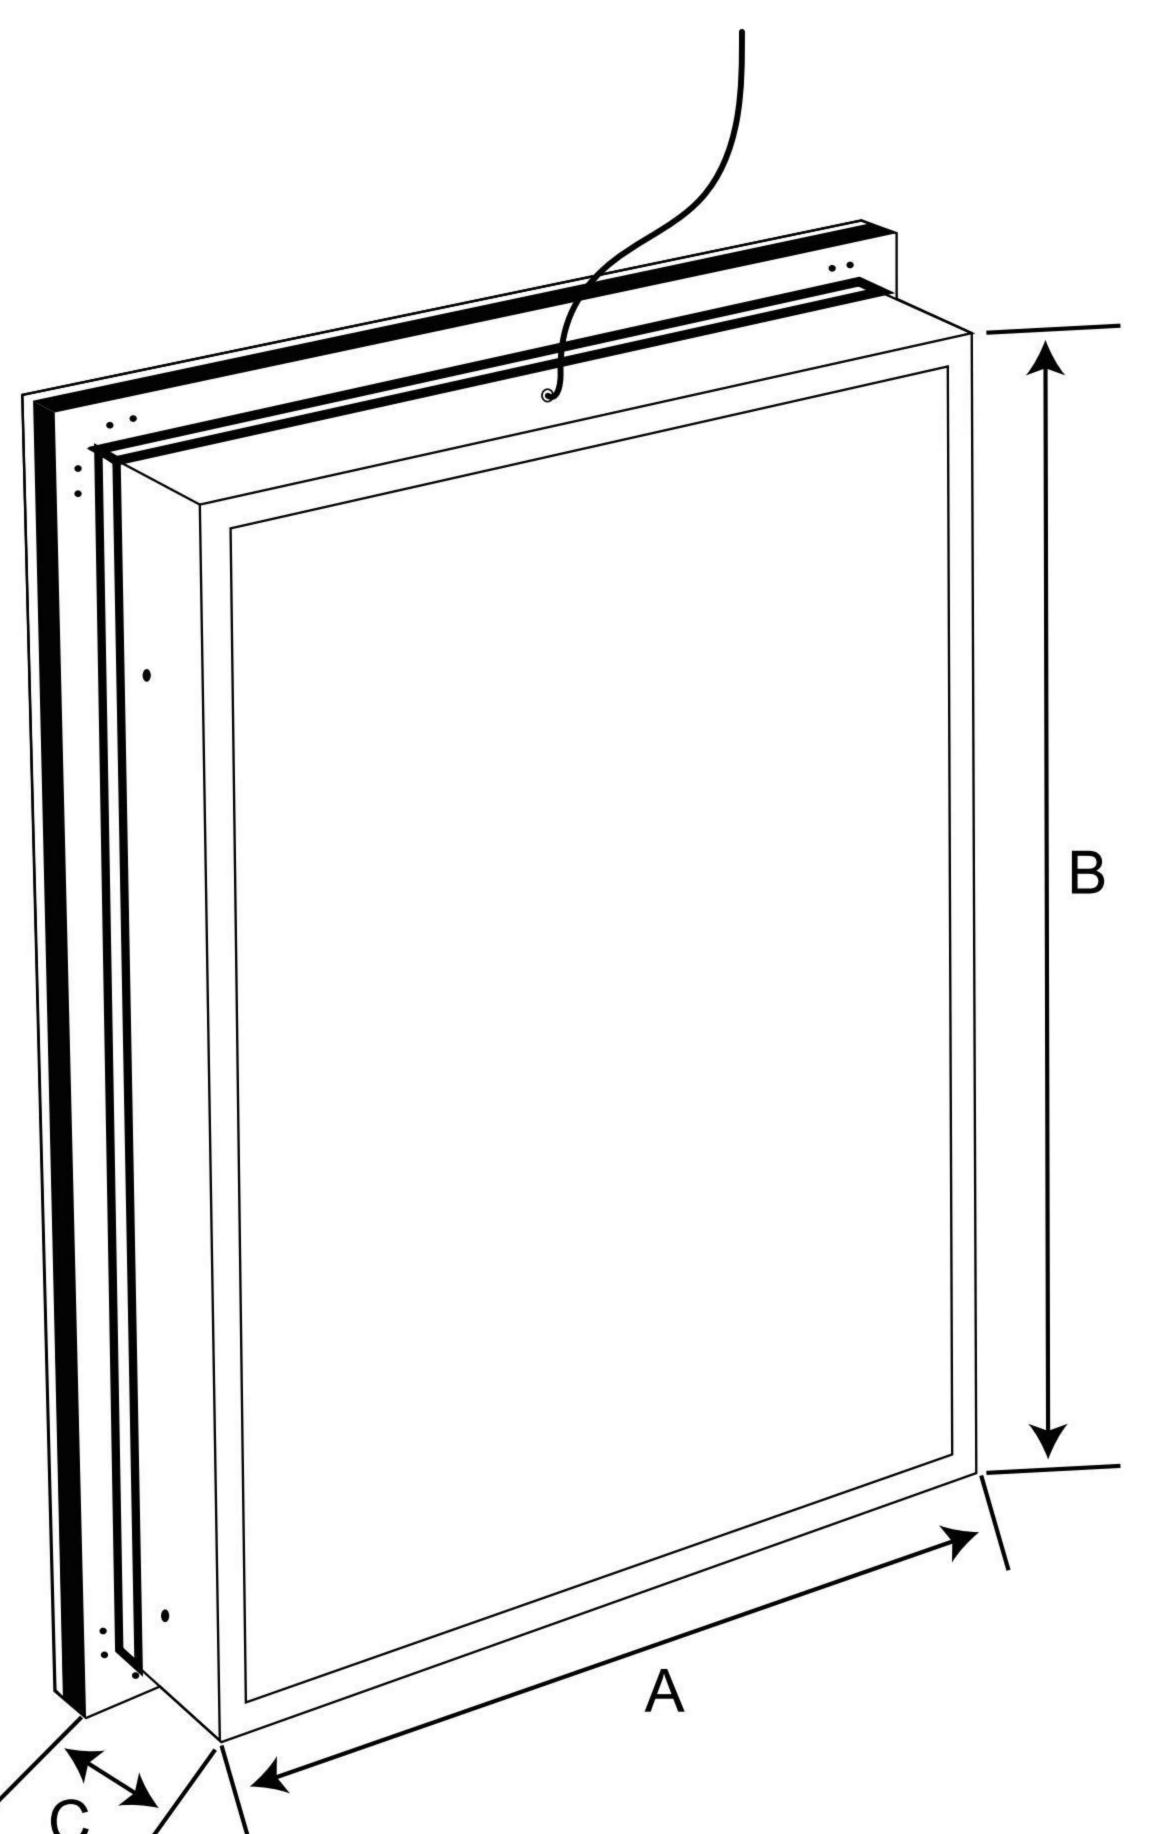


NOTE: To recess mount, the wall cavity must be framed and the cabinet secured to framing studs. Reroute electrical or water supply lines from the cavity. Consult a professional if drain or vent piping is encountered, or if the wall is load-bearing.


2 Draw the perimeter of the cabinet on the wall.

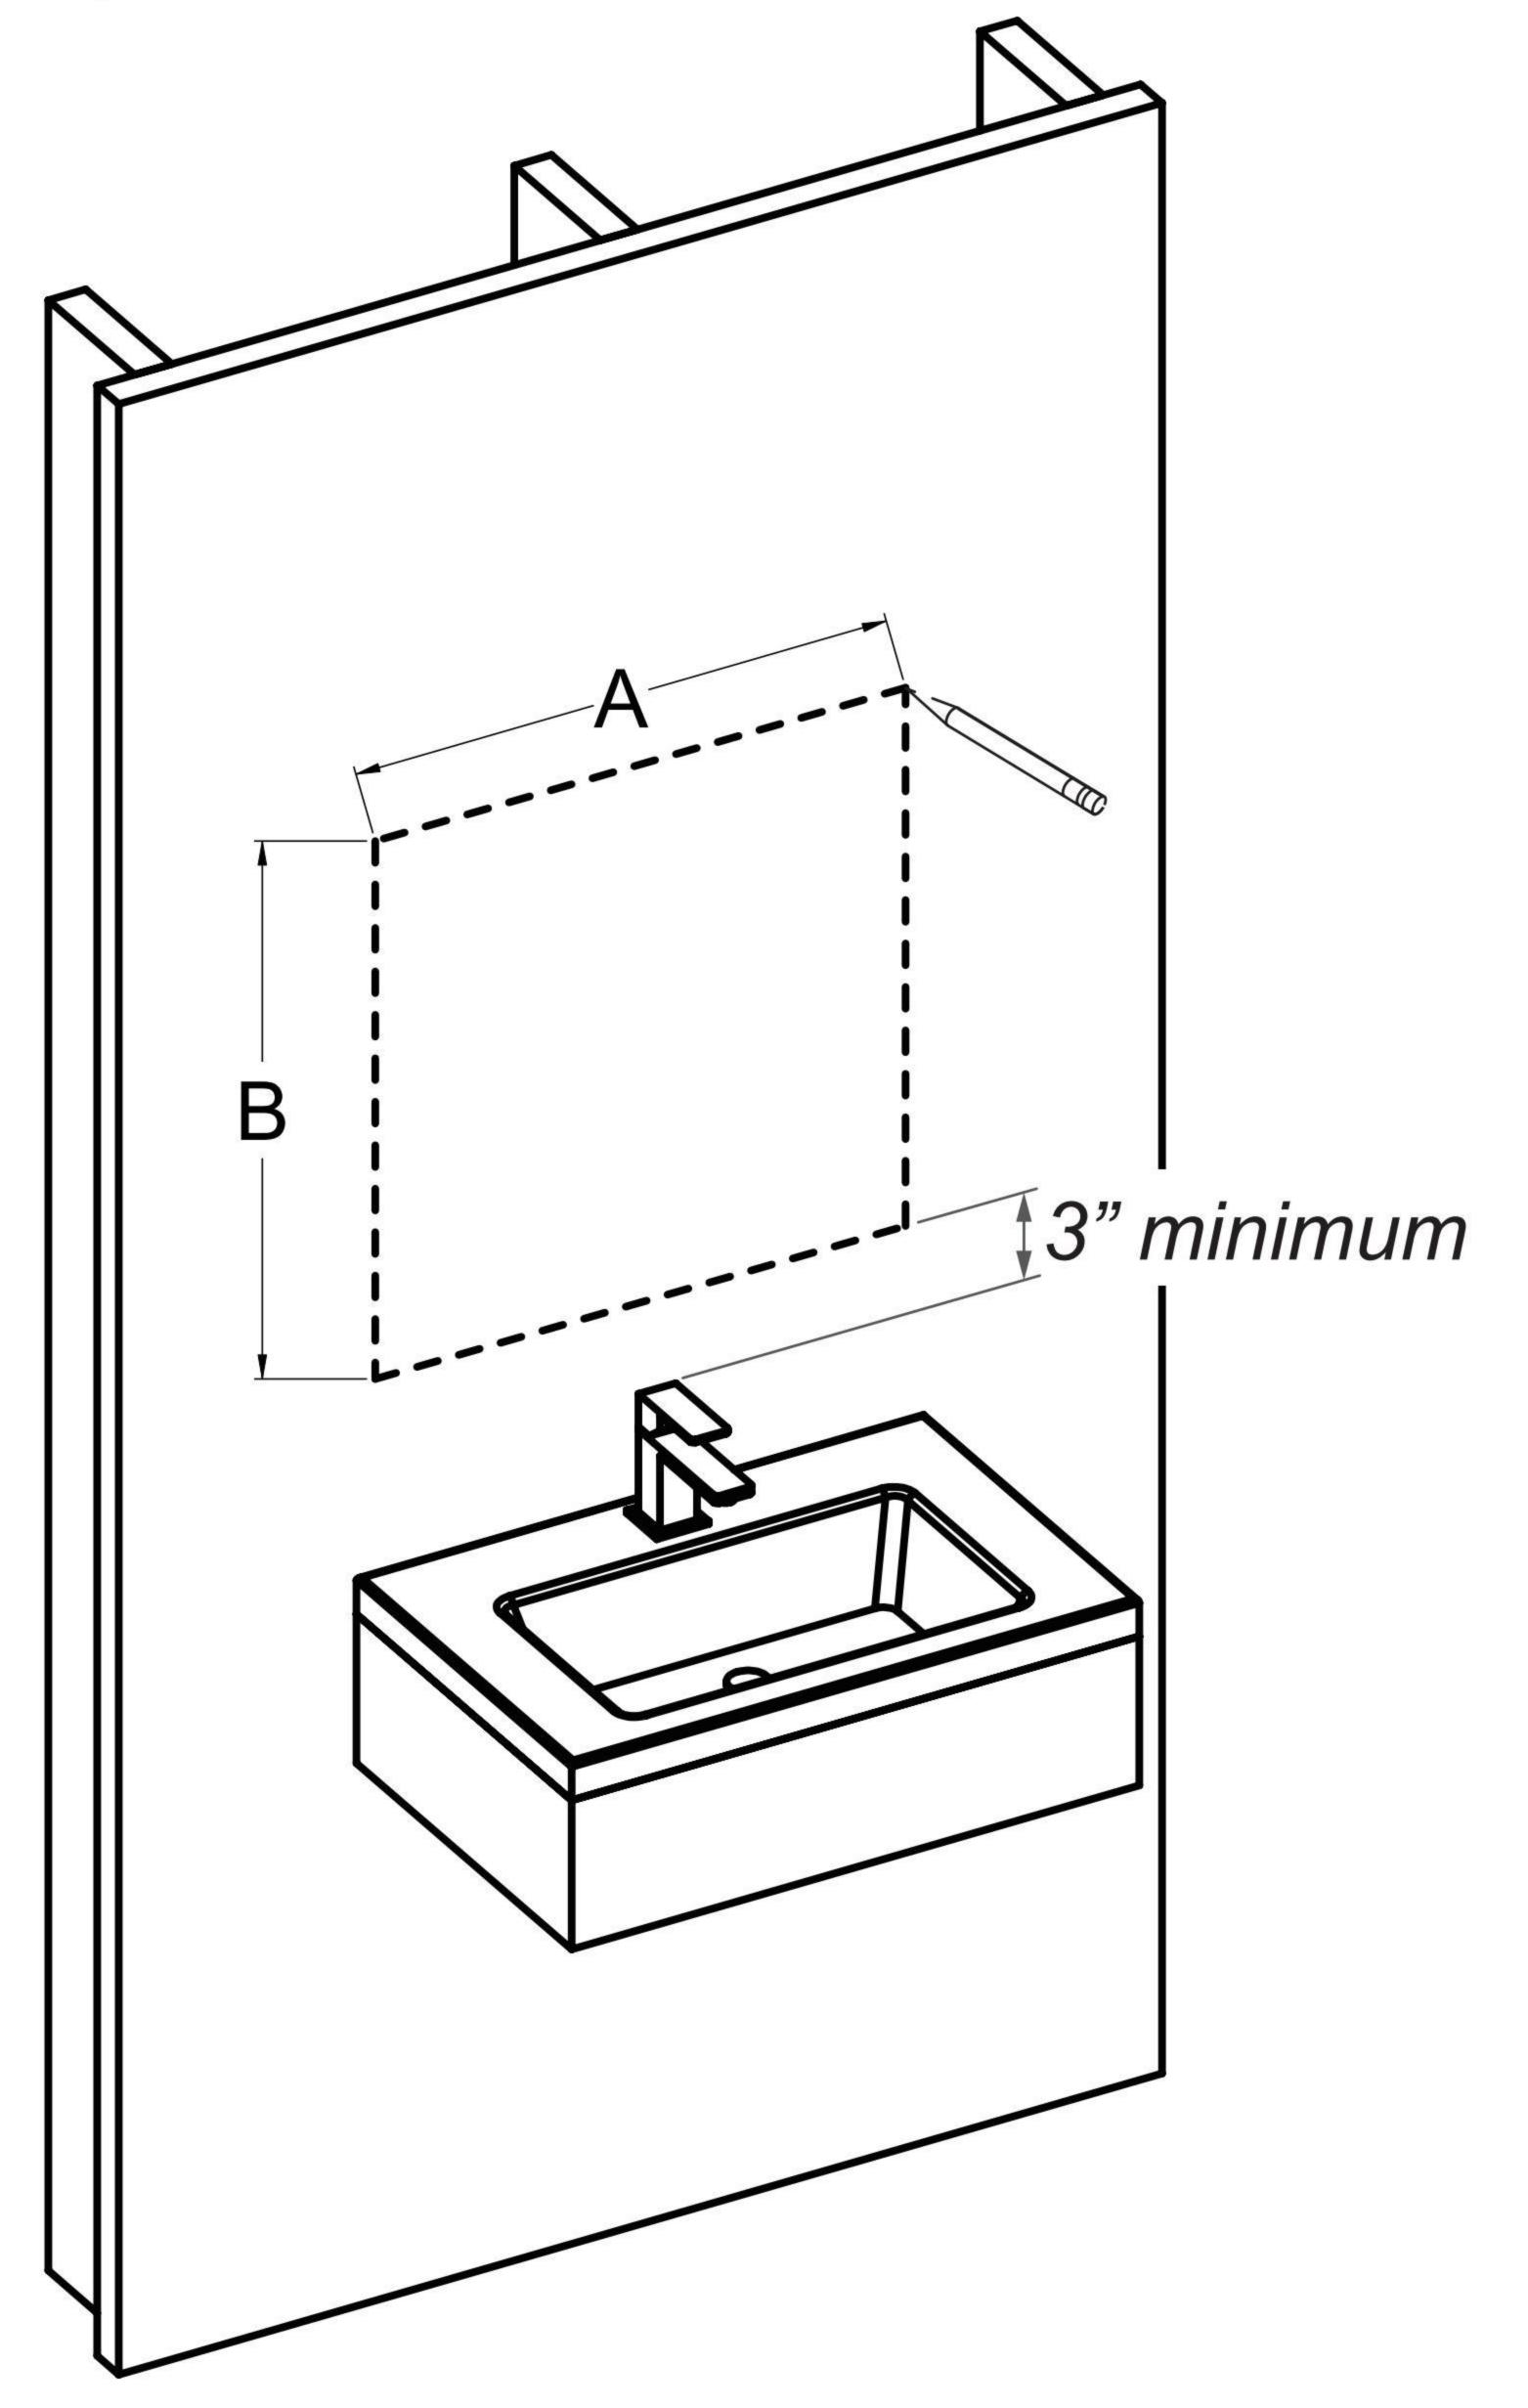

Cut the hole as marked dimension with suitable tool.

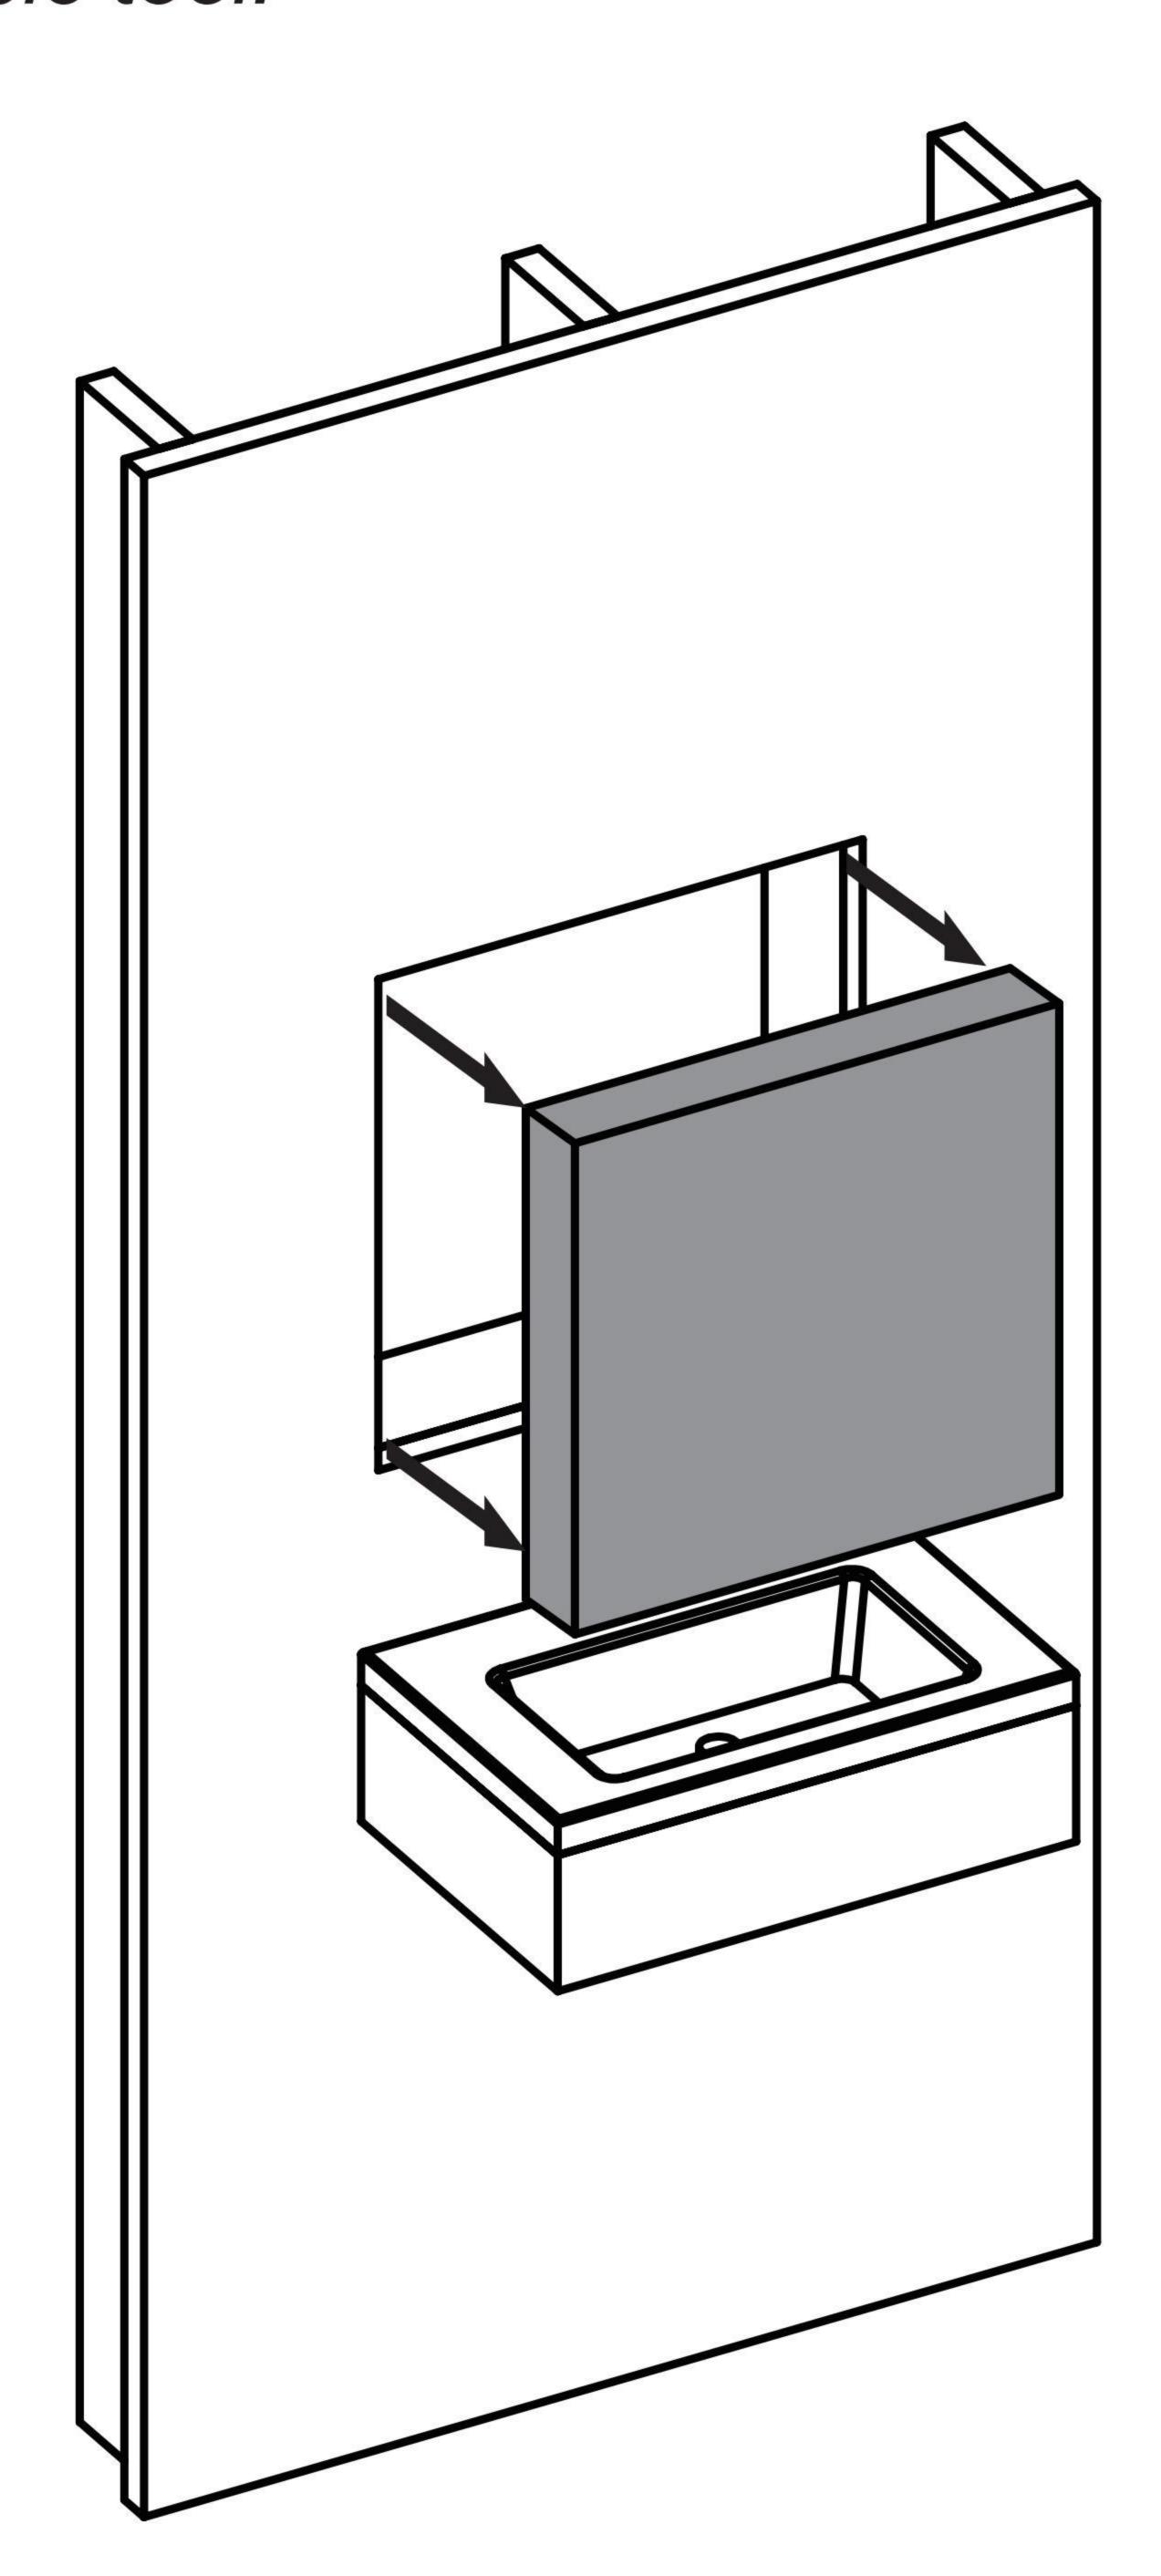

4 Frame the opening for the cabinet based on the measurements.

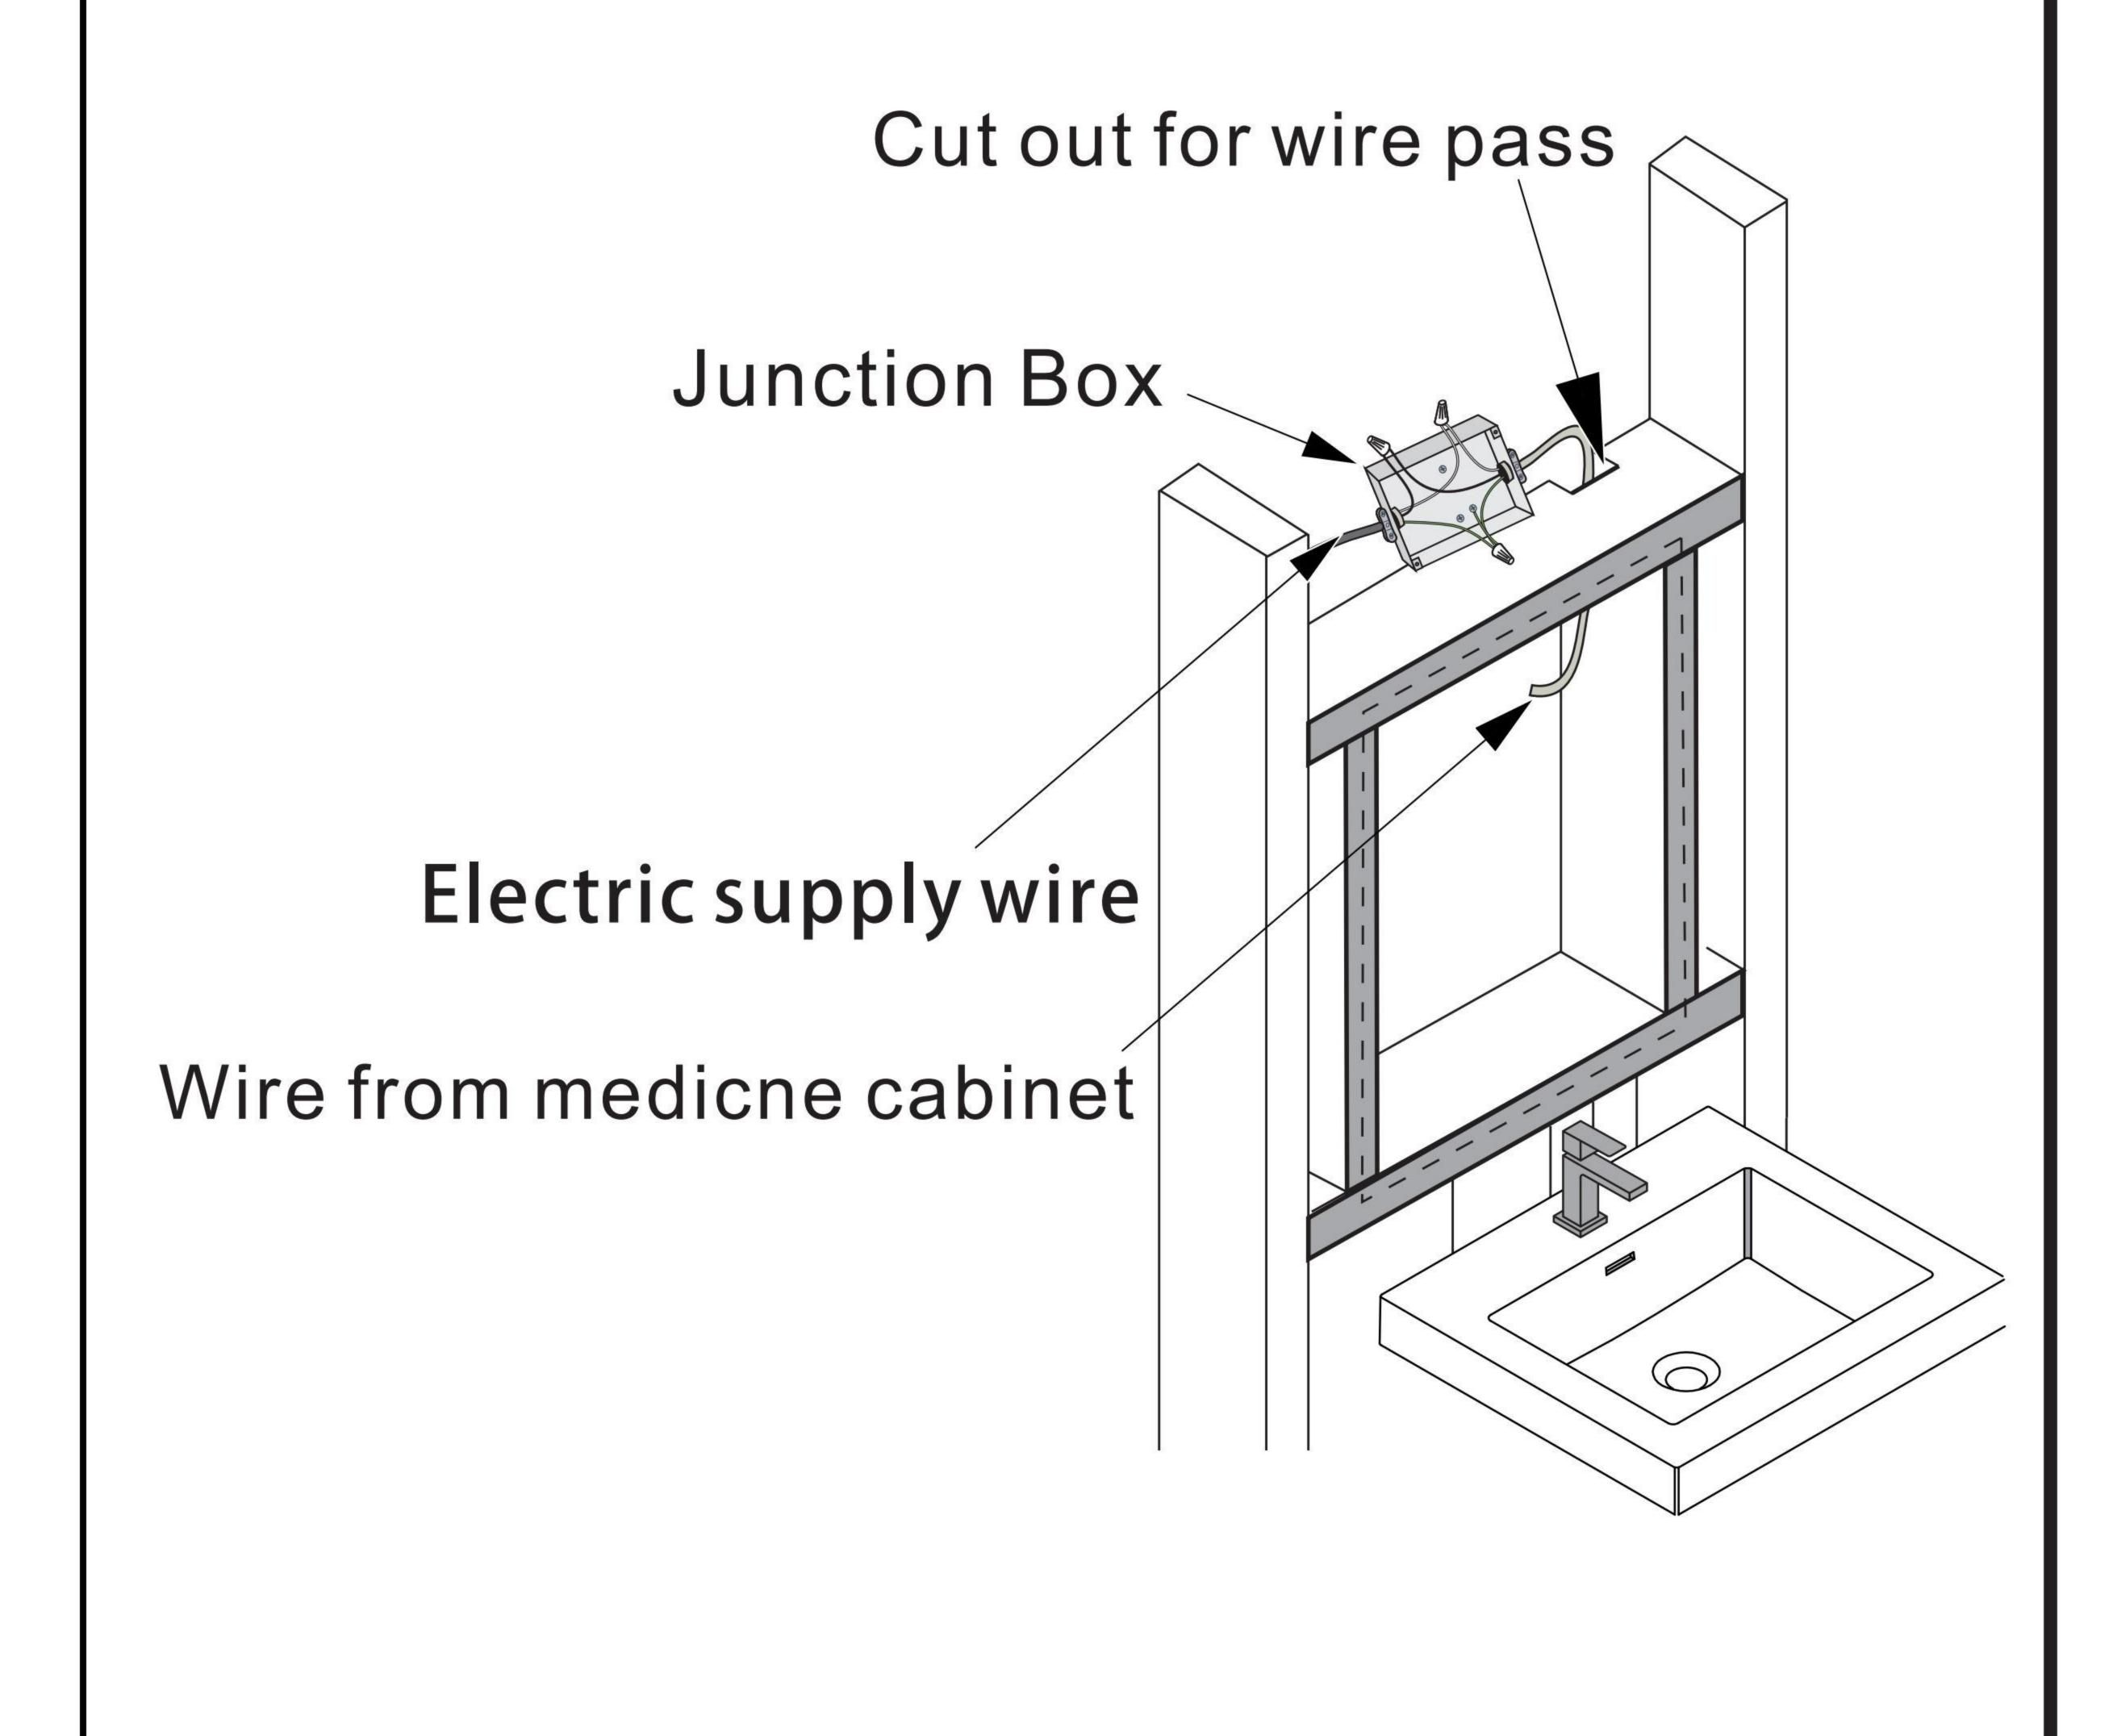


RECESS INSTALLATION


First cut off the power, then use the WIRE CONNECTOR connect to external power

supply.

WARNING: Turn off the power before wire connection!

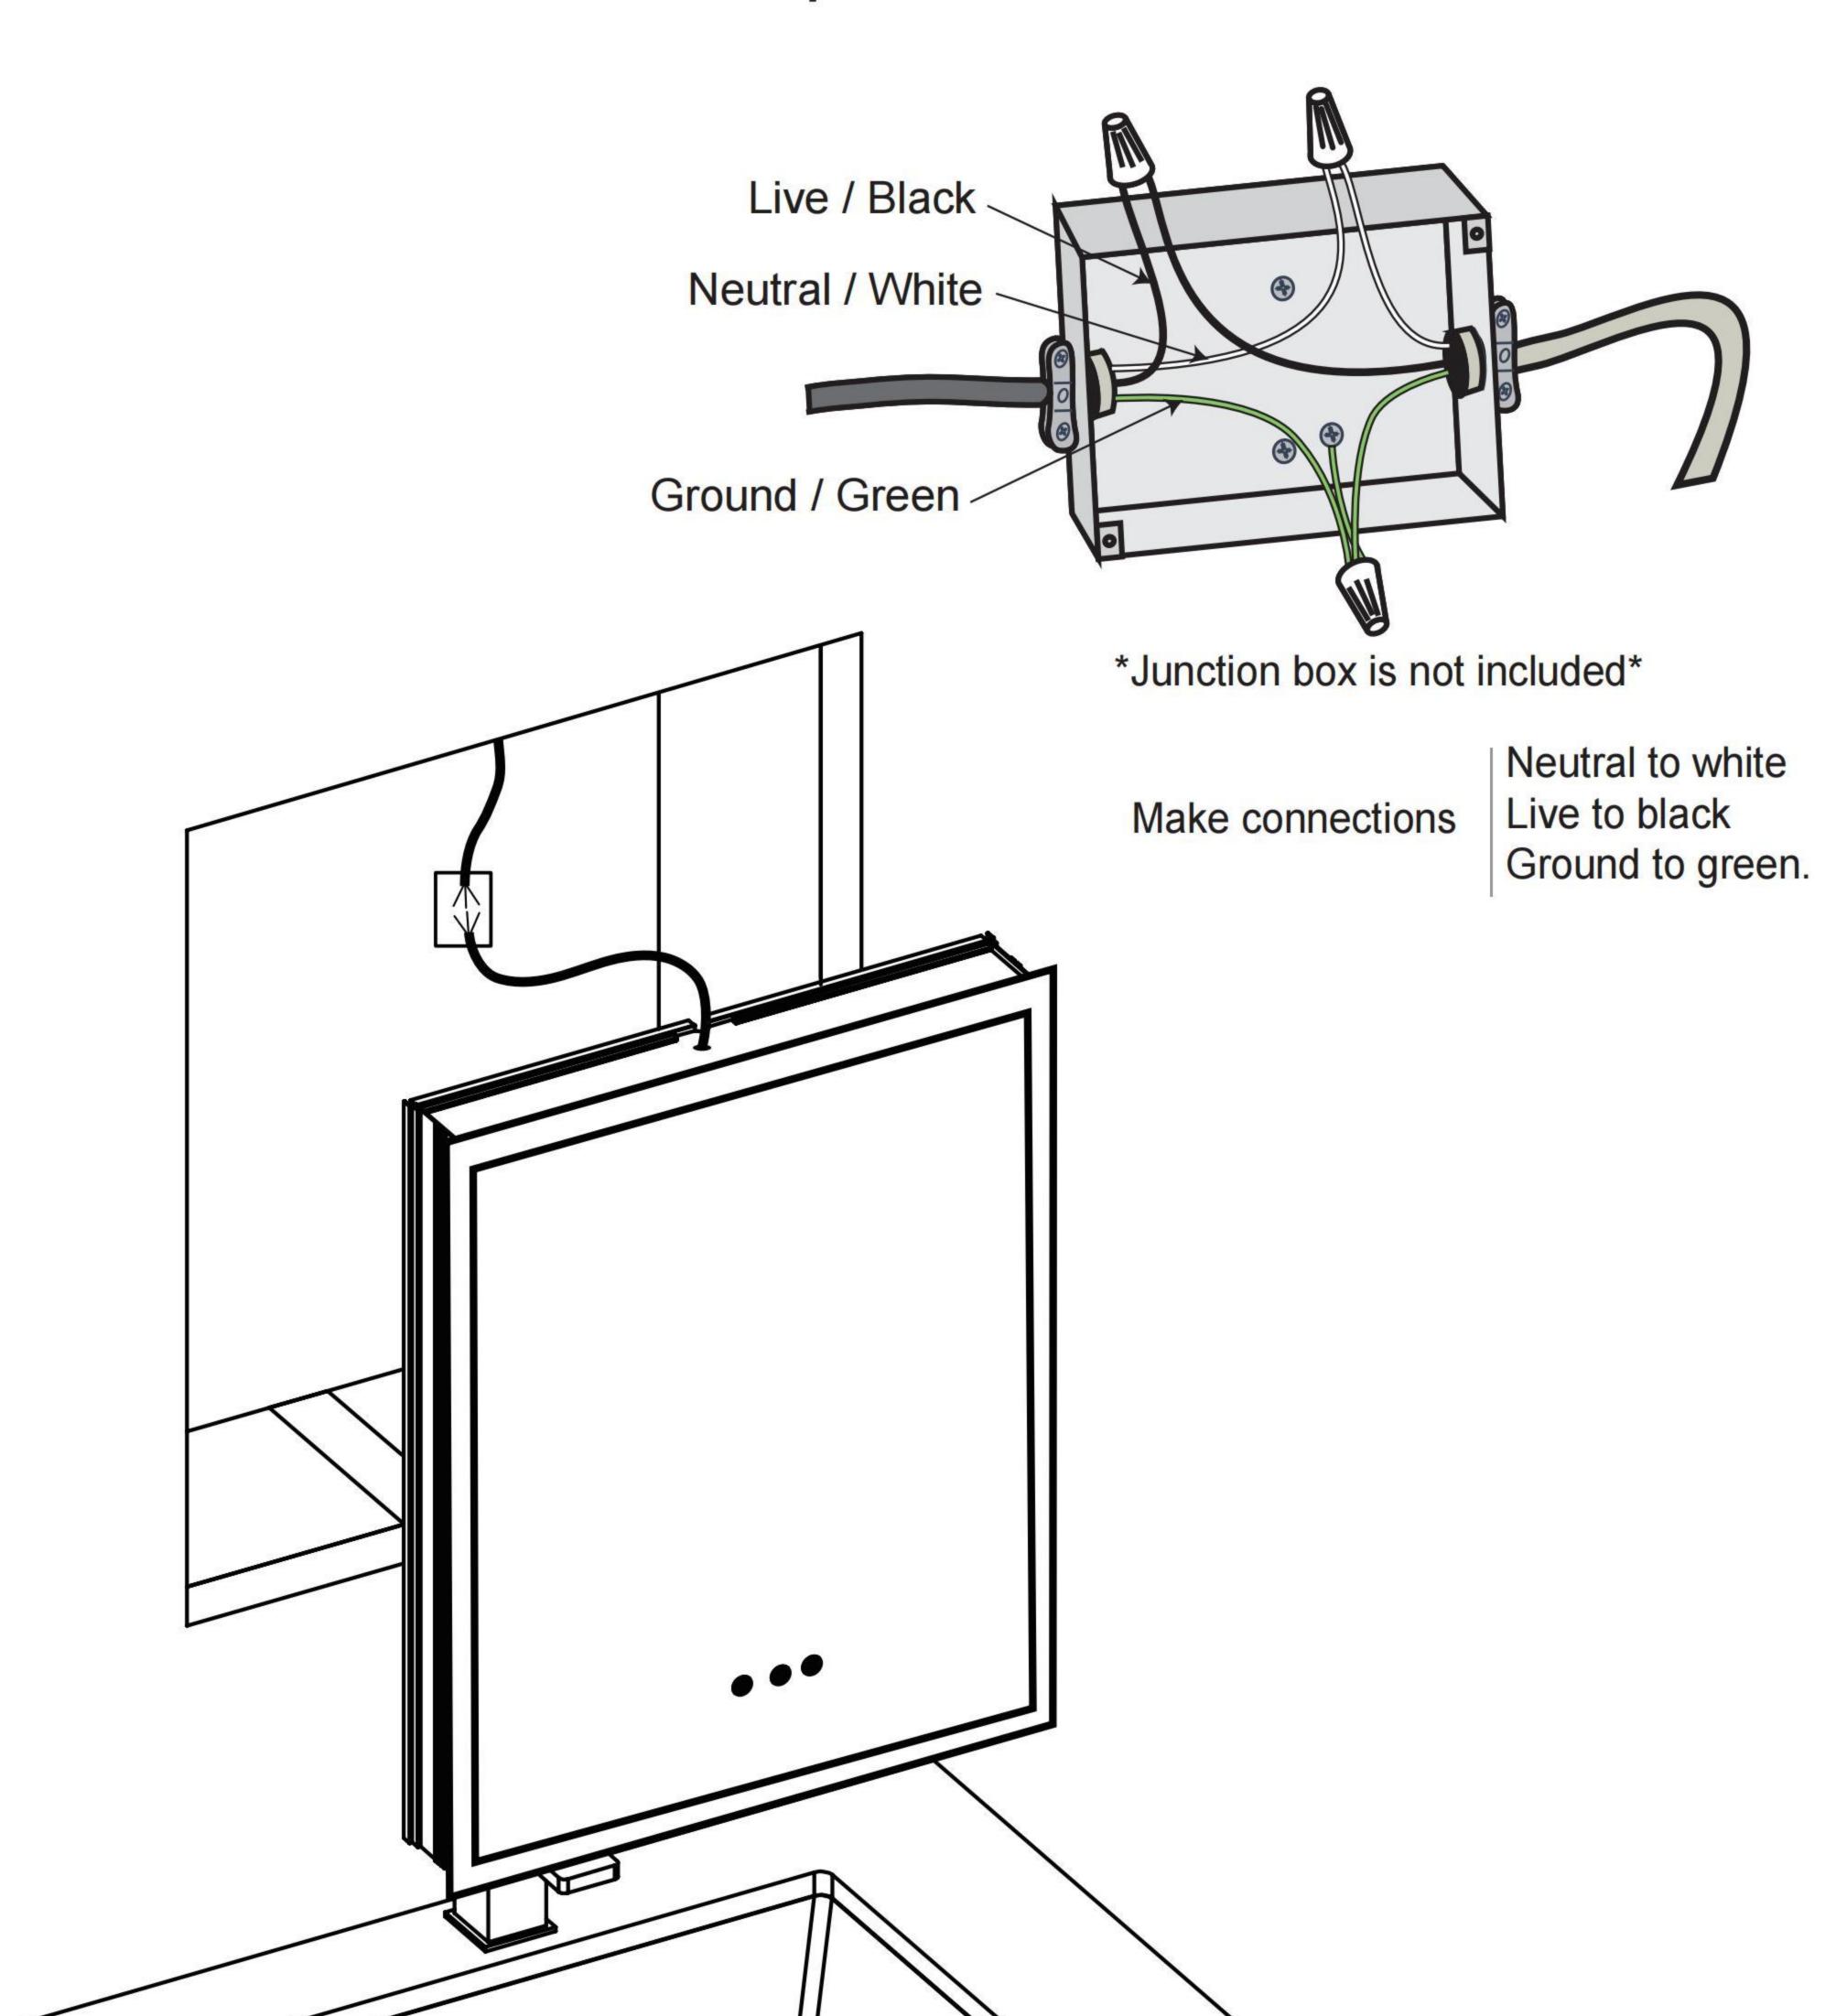


Connect electrical wires and then place the cabinet between the wall studs.

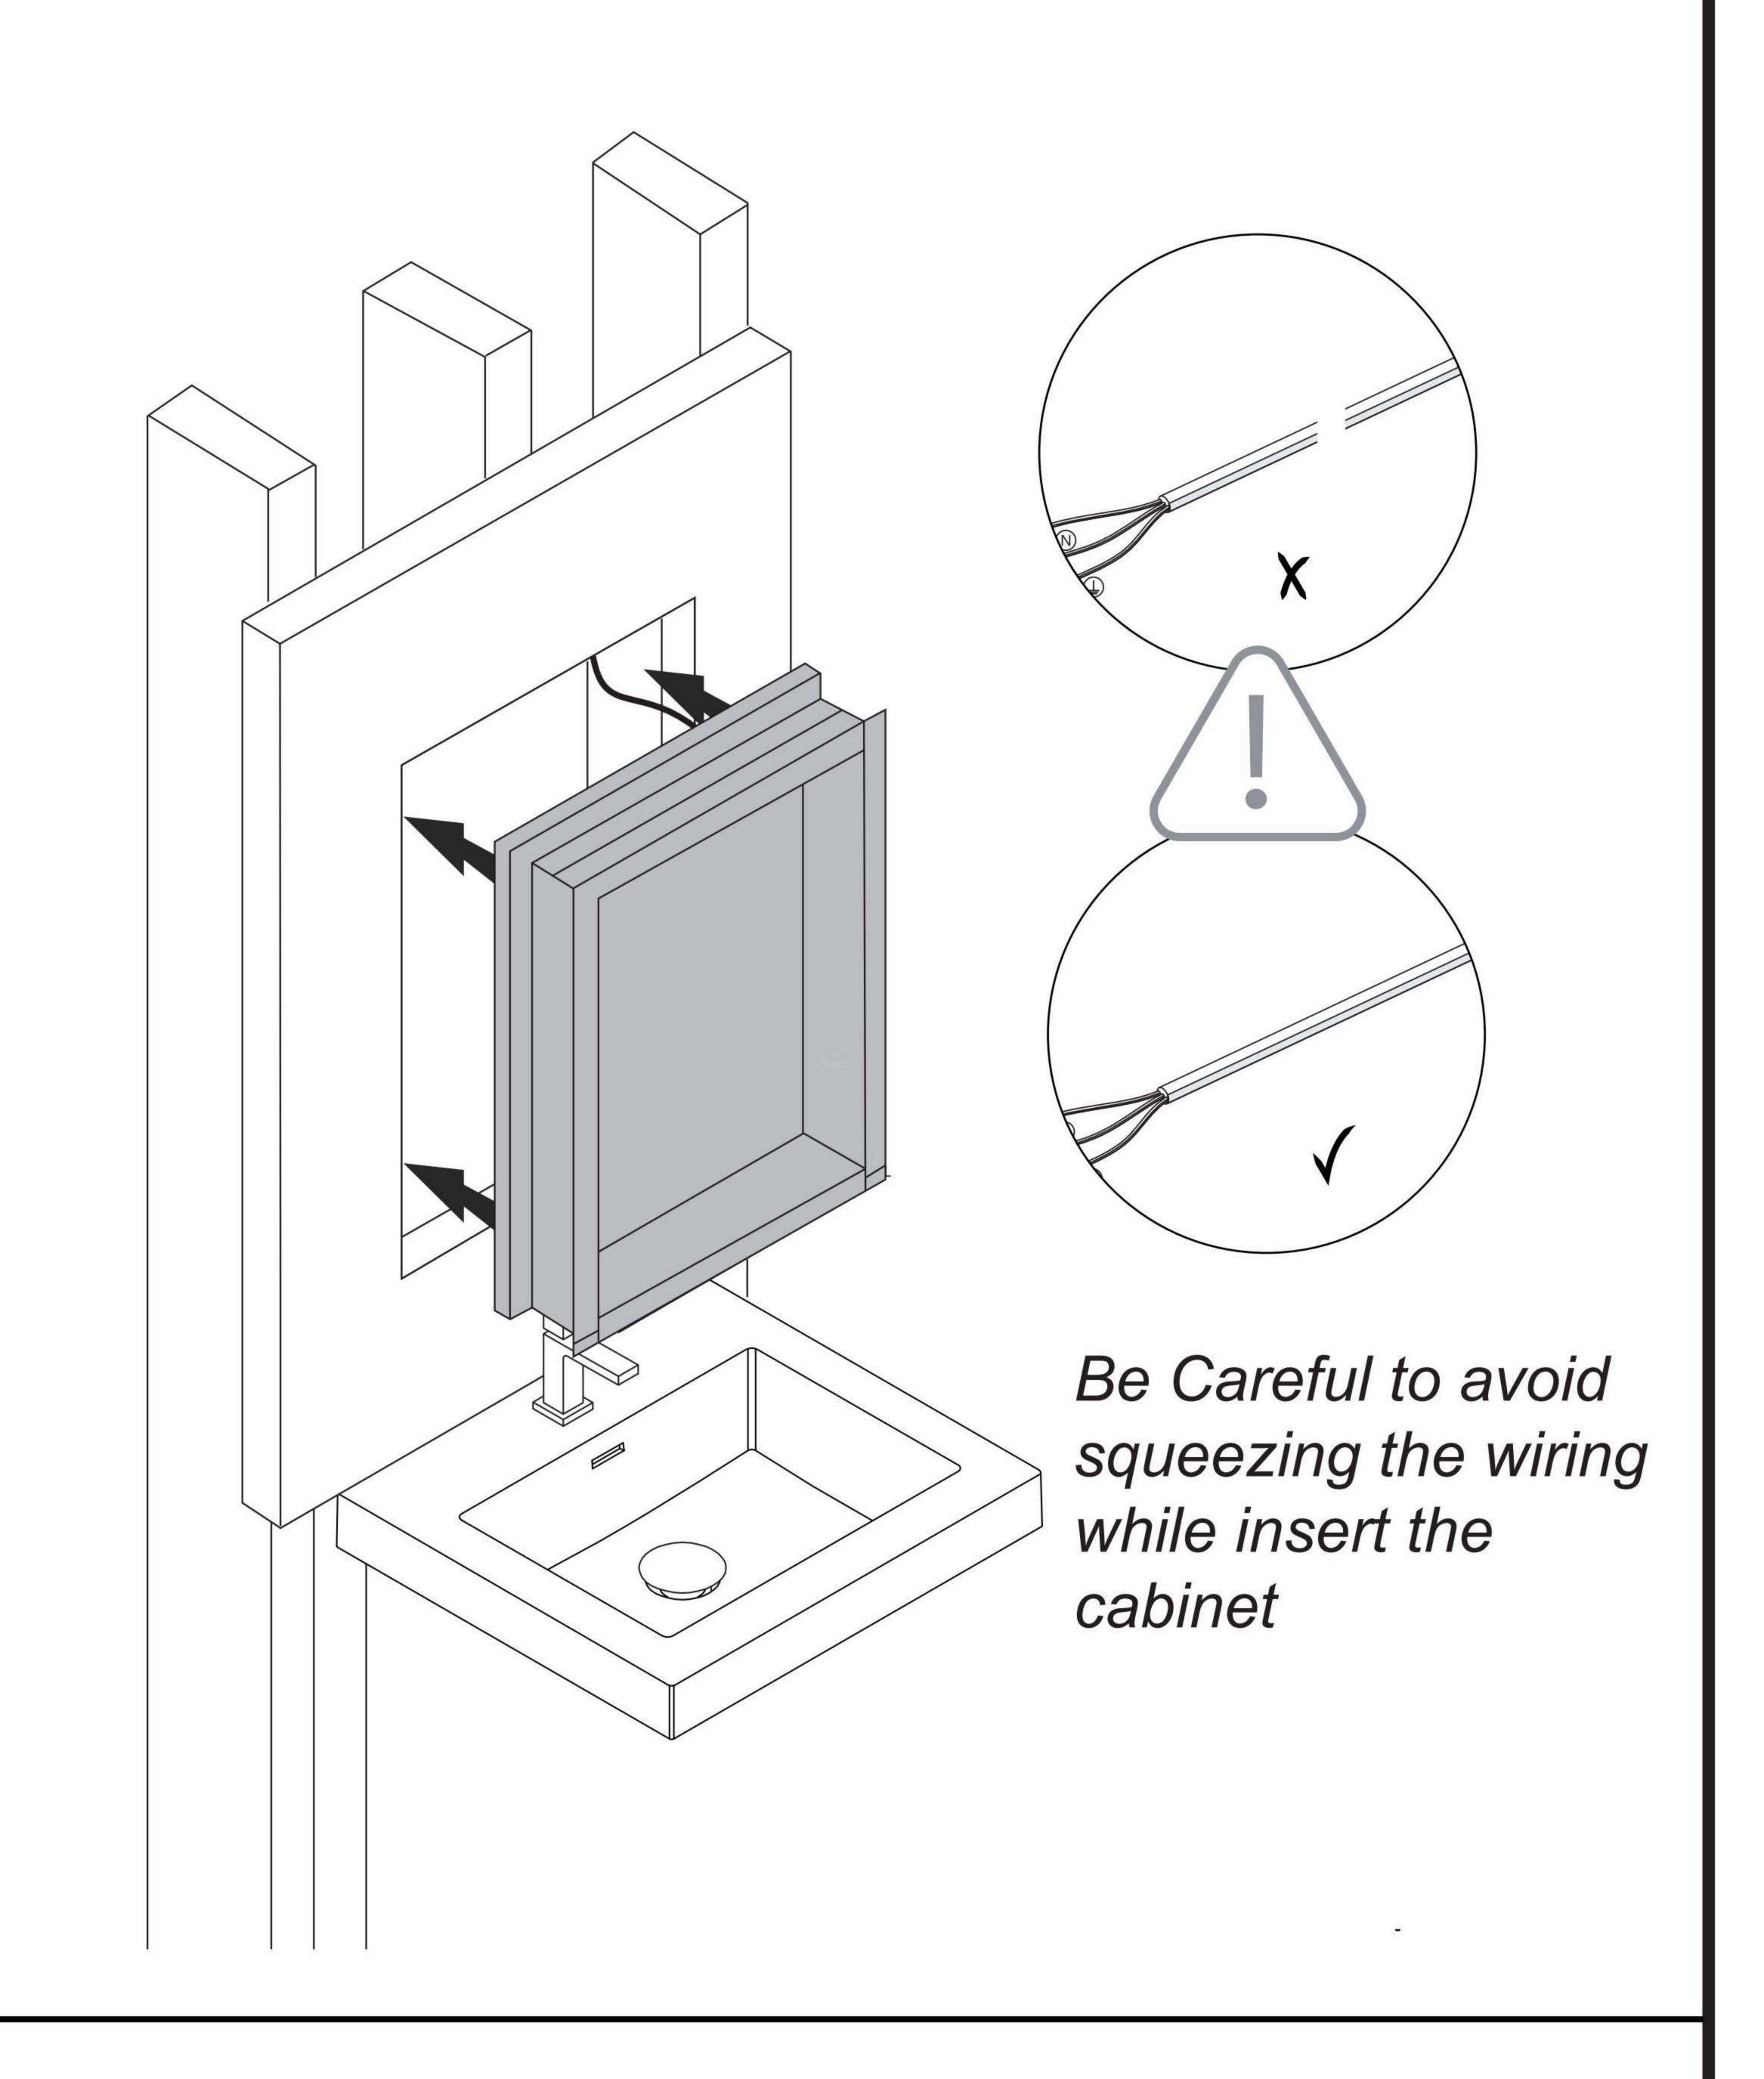

Affix using hardware screws into the studs.


NOTE: For wood stud wall, you need to use screw to fix the cabinet. For brick/concrete/stone/tile wall, you need to use wall plug and screw together to fix the cabinet.

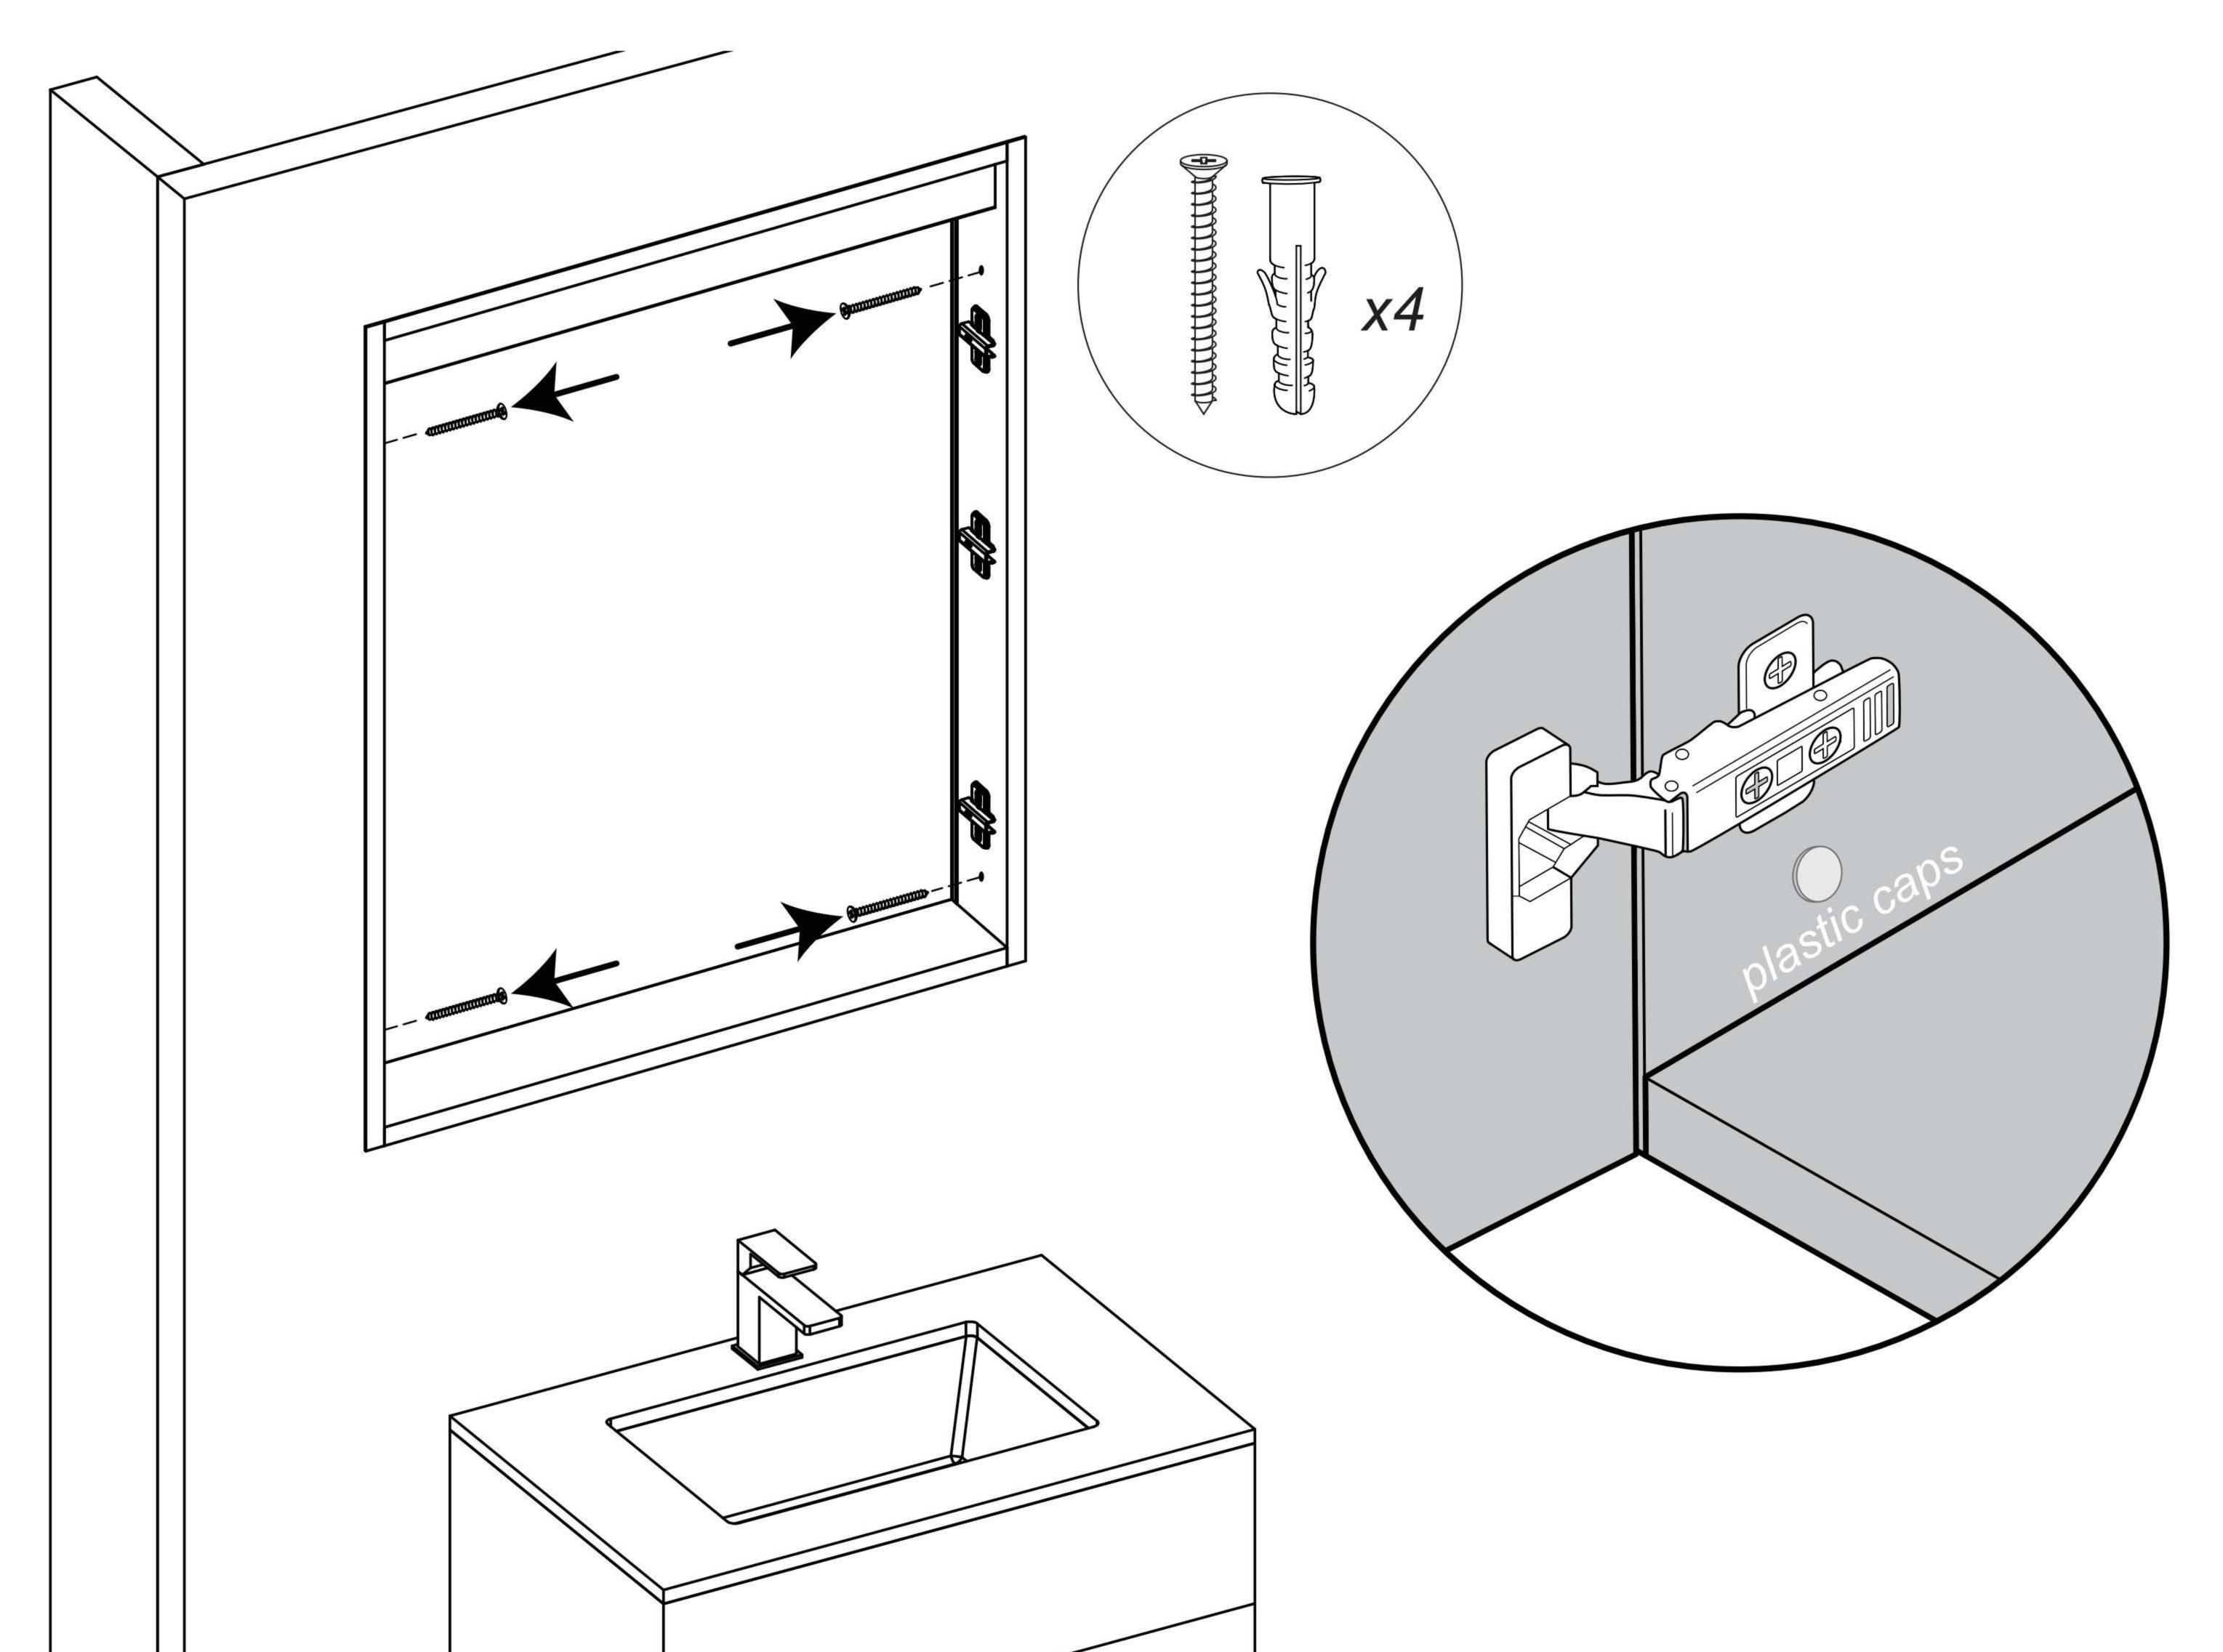


NOTE: The four screw holes for recessed installation are blocked by plastic caps. Please remove the caps first before inserting the screws into the wall.

GLASS SHELF ADJUSTMENT

- * Remove the Door(s) before adjusting cabinet shelves.
- 1. Insert the metal glass shelf clips into the shelf holes on both sides of the mirror cabinet.
- 2.Insert the Glass Shelf along the board clip slot.
- 3.Use a Phillips screwdriver to tighten the screw at the bottom of the metal shelf clip, securing and clamping the glass shelf in place.

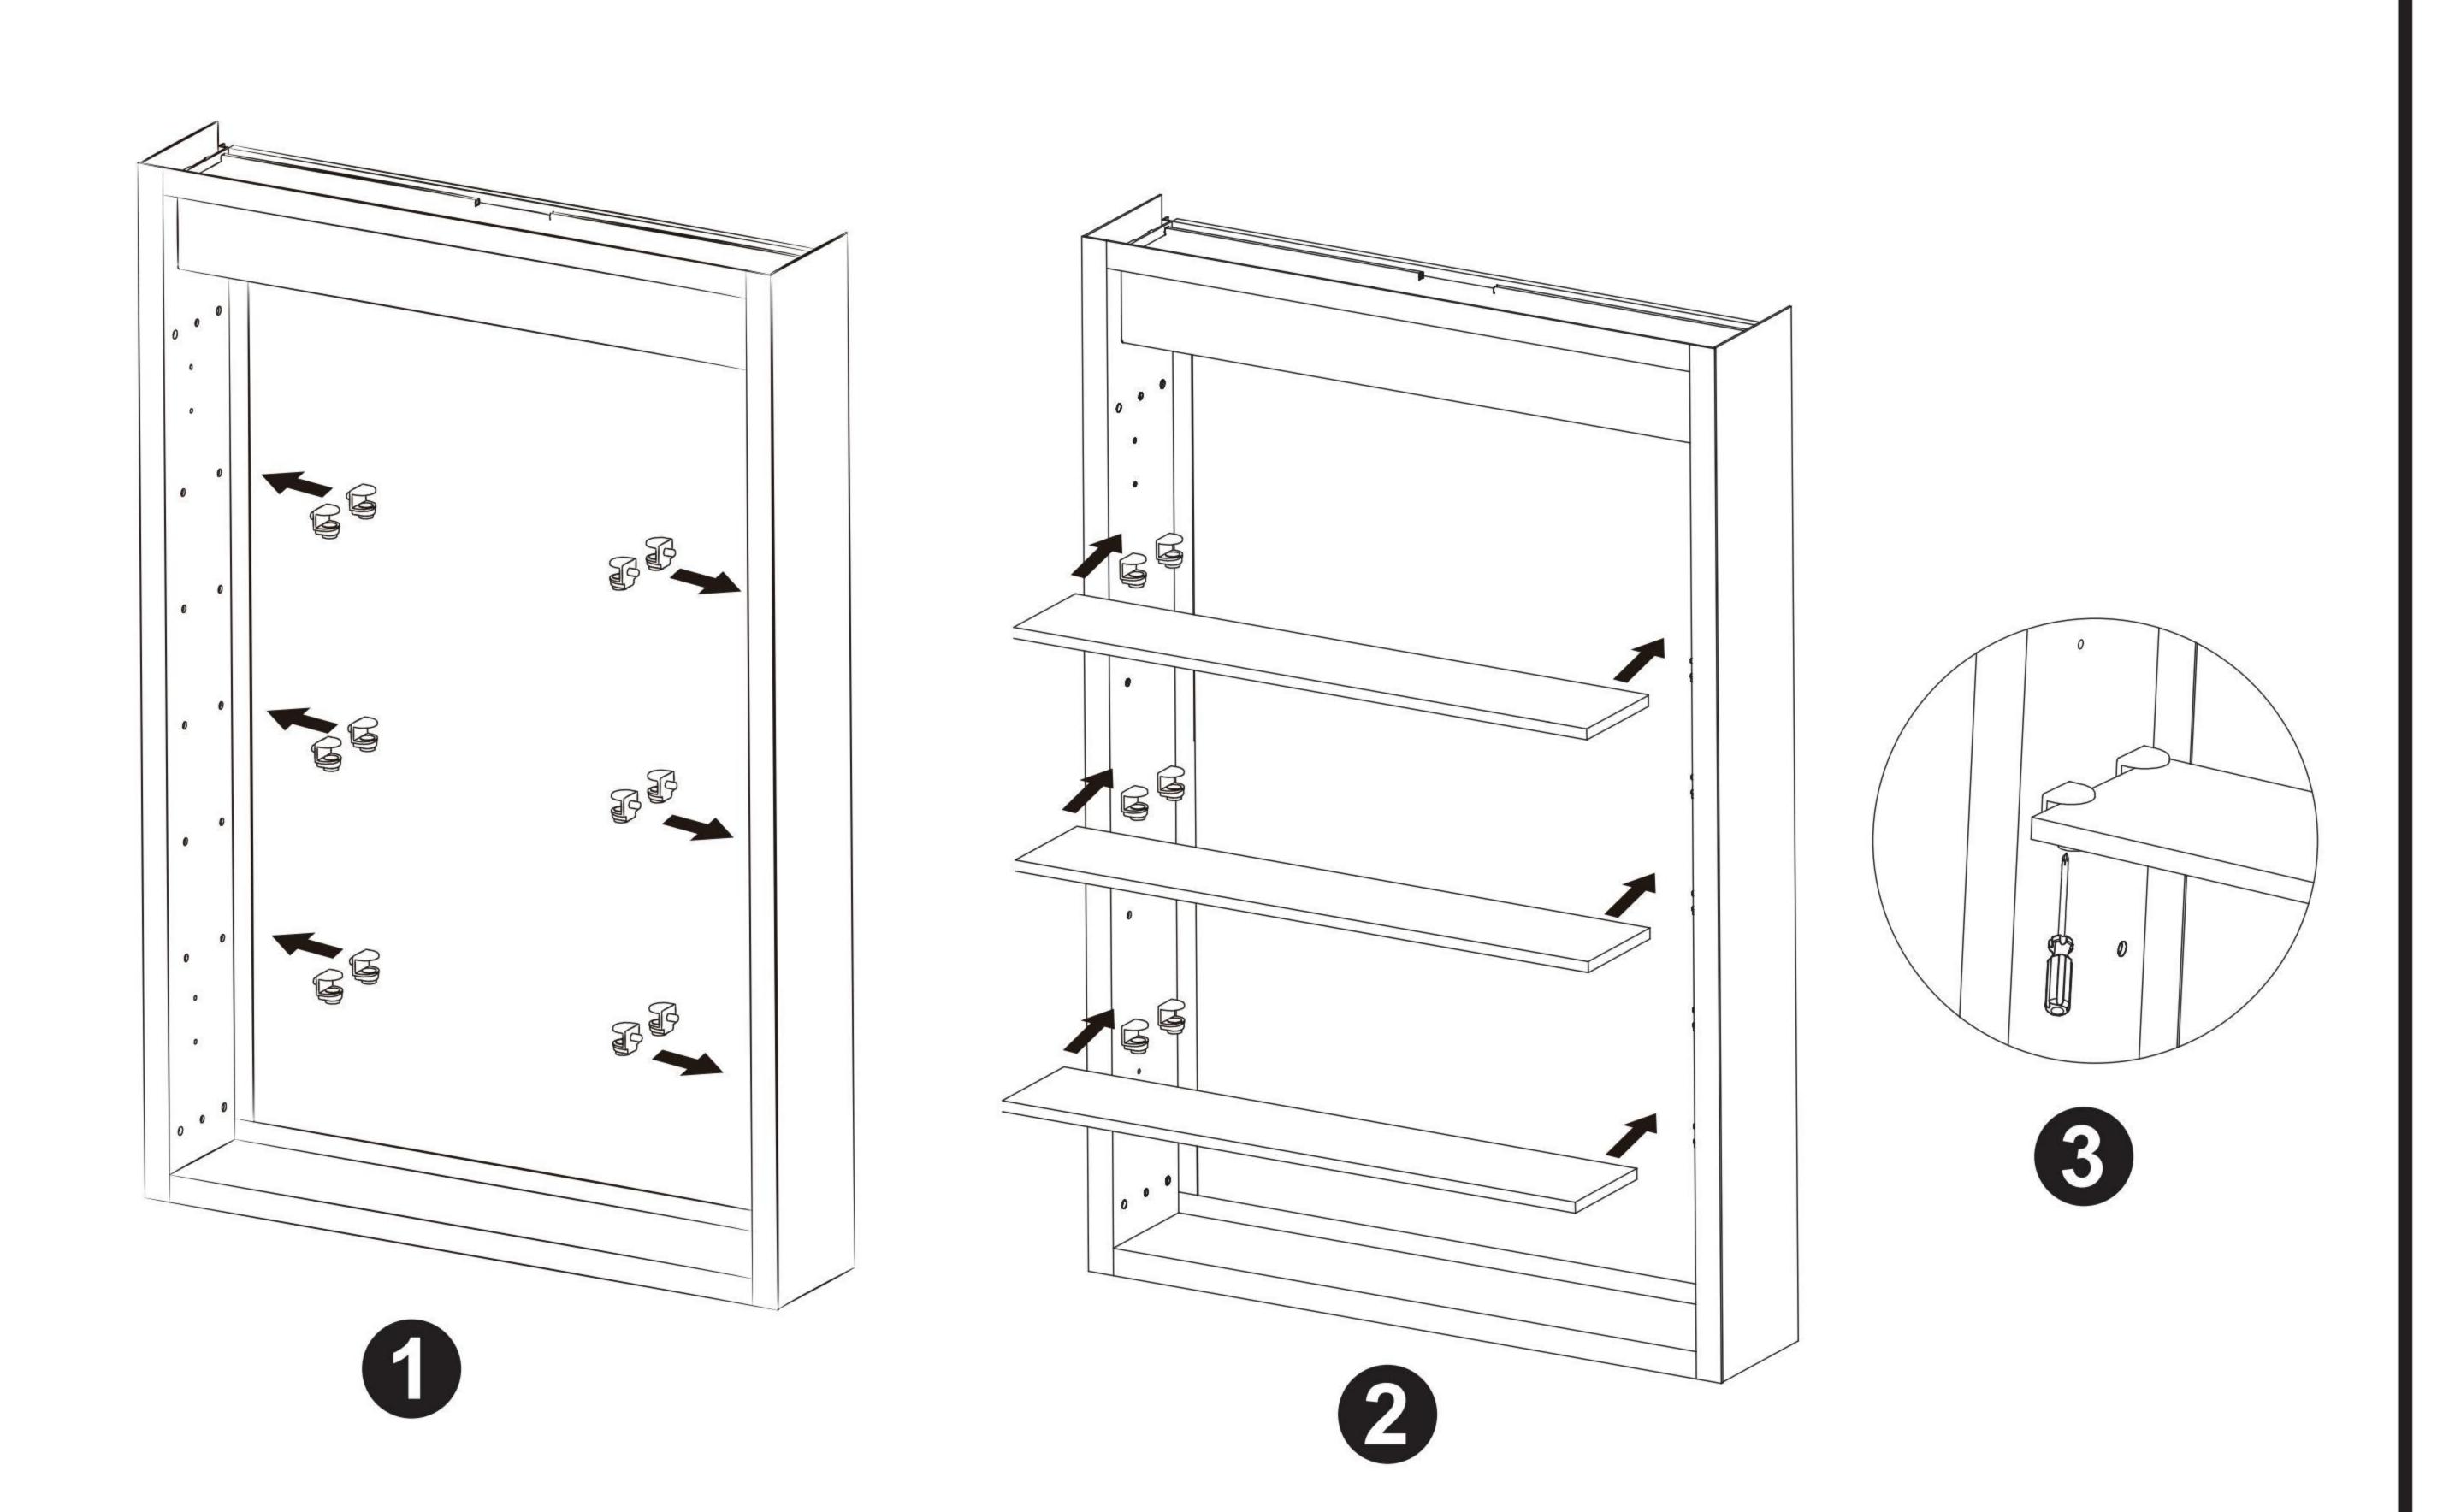

MIRROR DOOR INSTALLATION

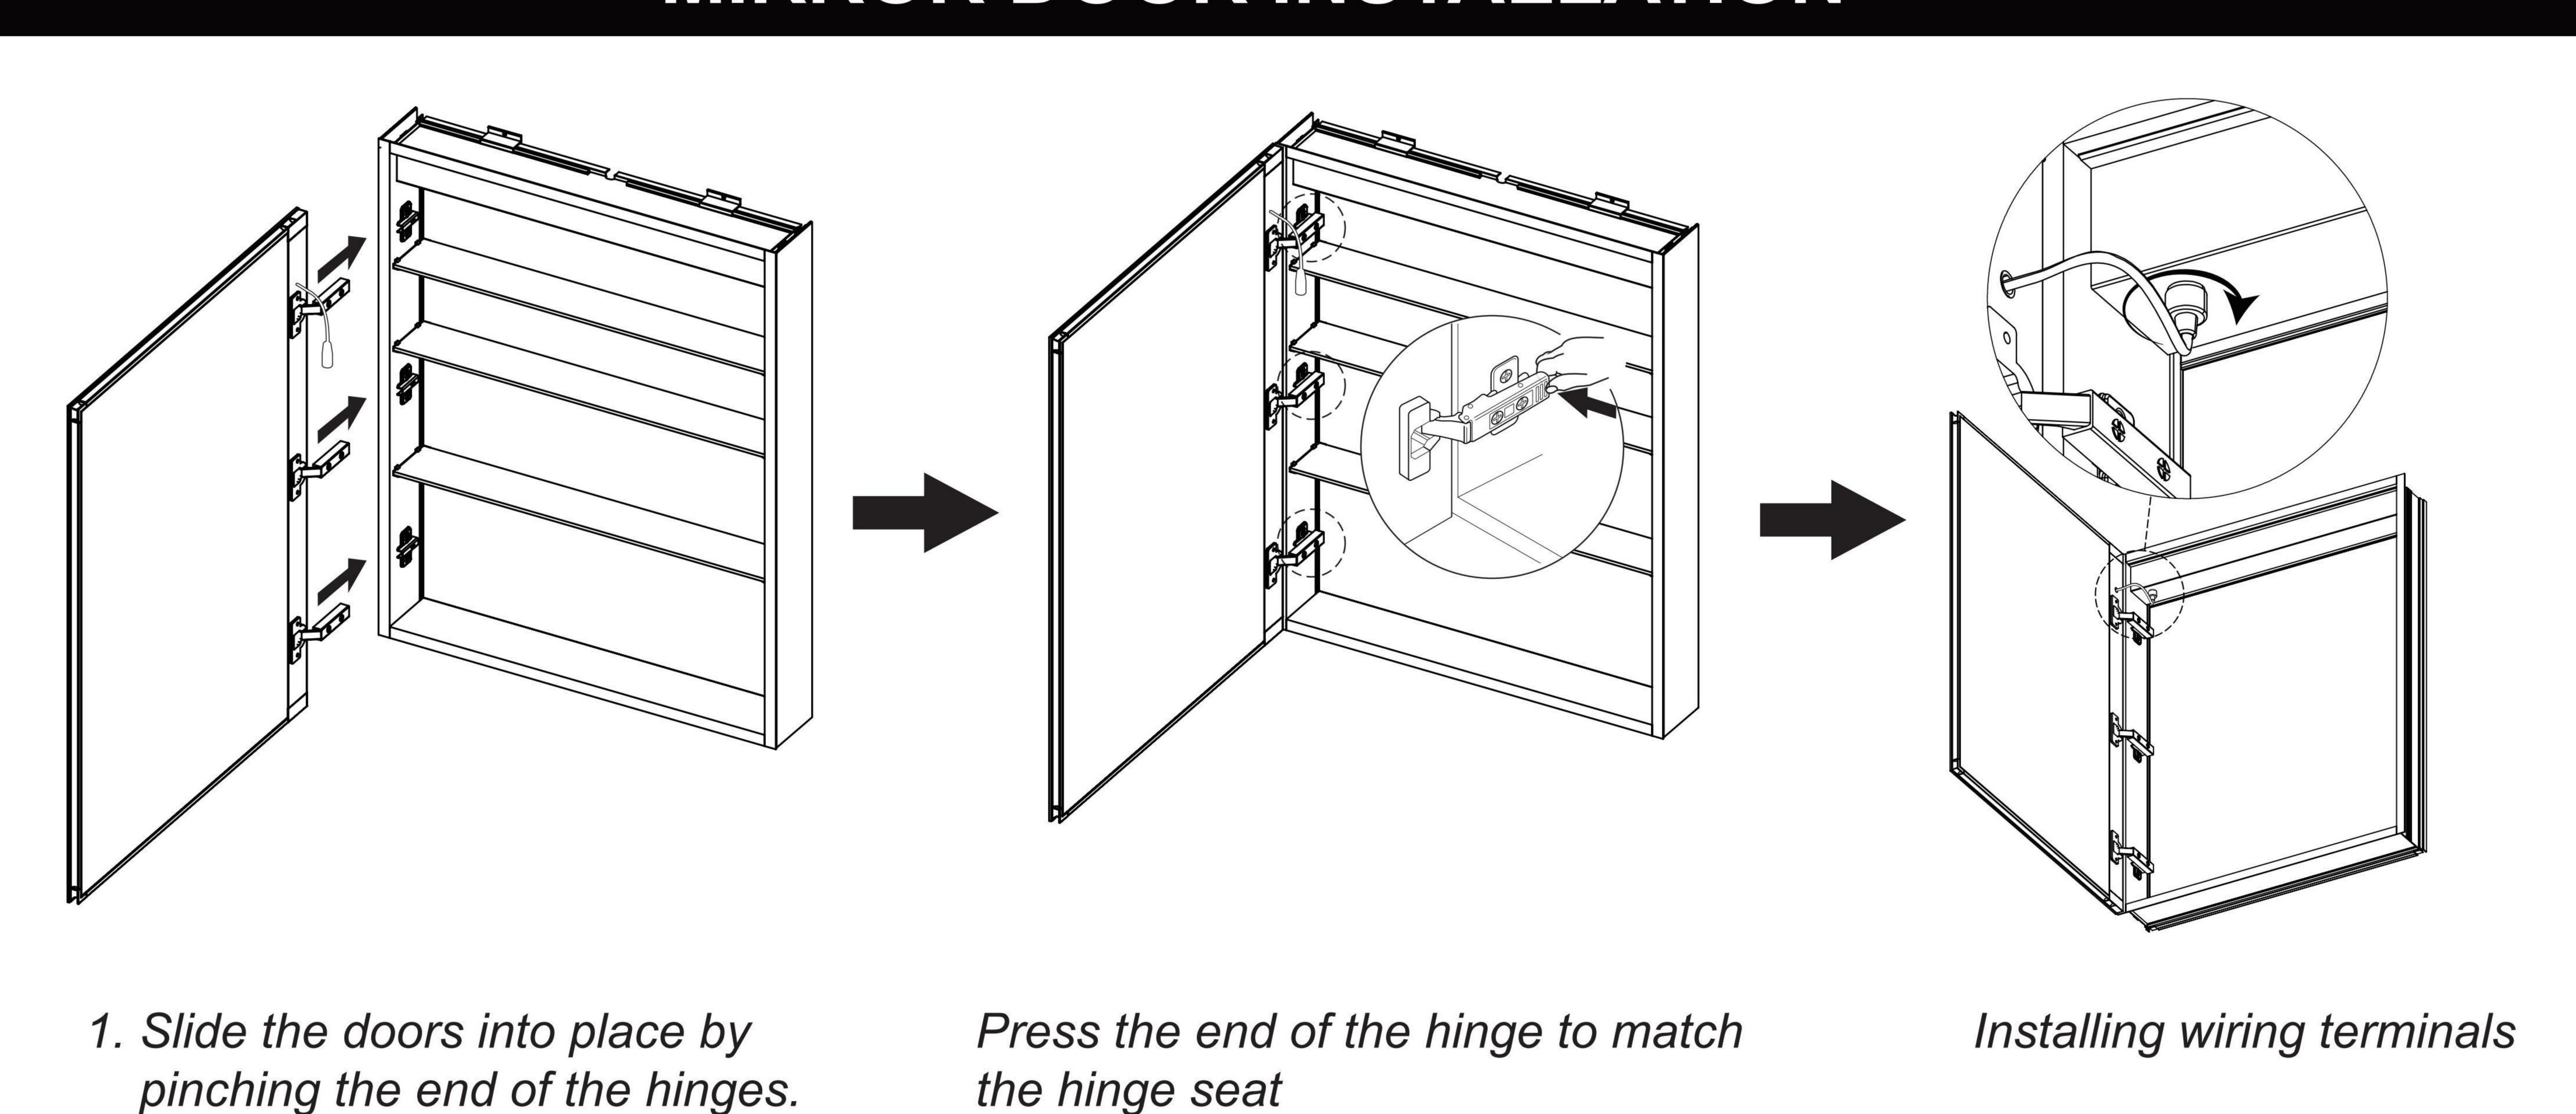


Door Adjustment / Door Removal


OPTIONAL DOOR ADJUSTMENT

2.Plug the door into the cabinet.

Doors may need to be adjusted after the initial shipping of the cabinet. The cabinet doors have a three-way adjustment feature. Height, side-to side, level and depth can be adjusted. With the hinge slightly closed you can access the middle screw for up/down adjustment.

With the hinge fully extended you can access the front and back screws. These screws will move the door side to side and in and out.

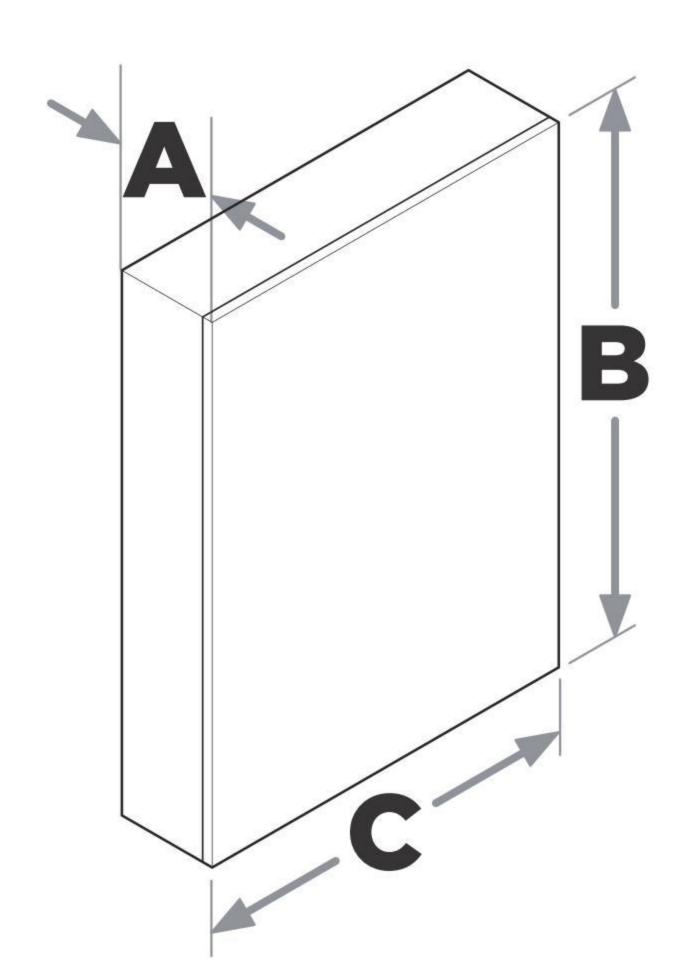


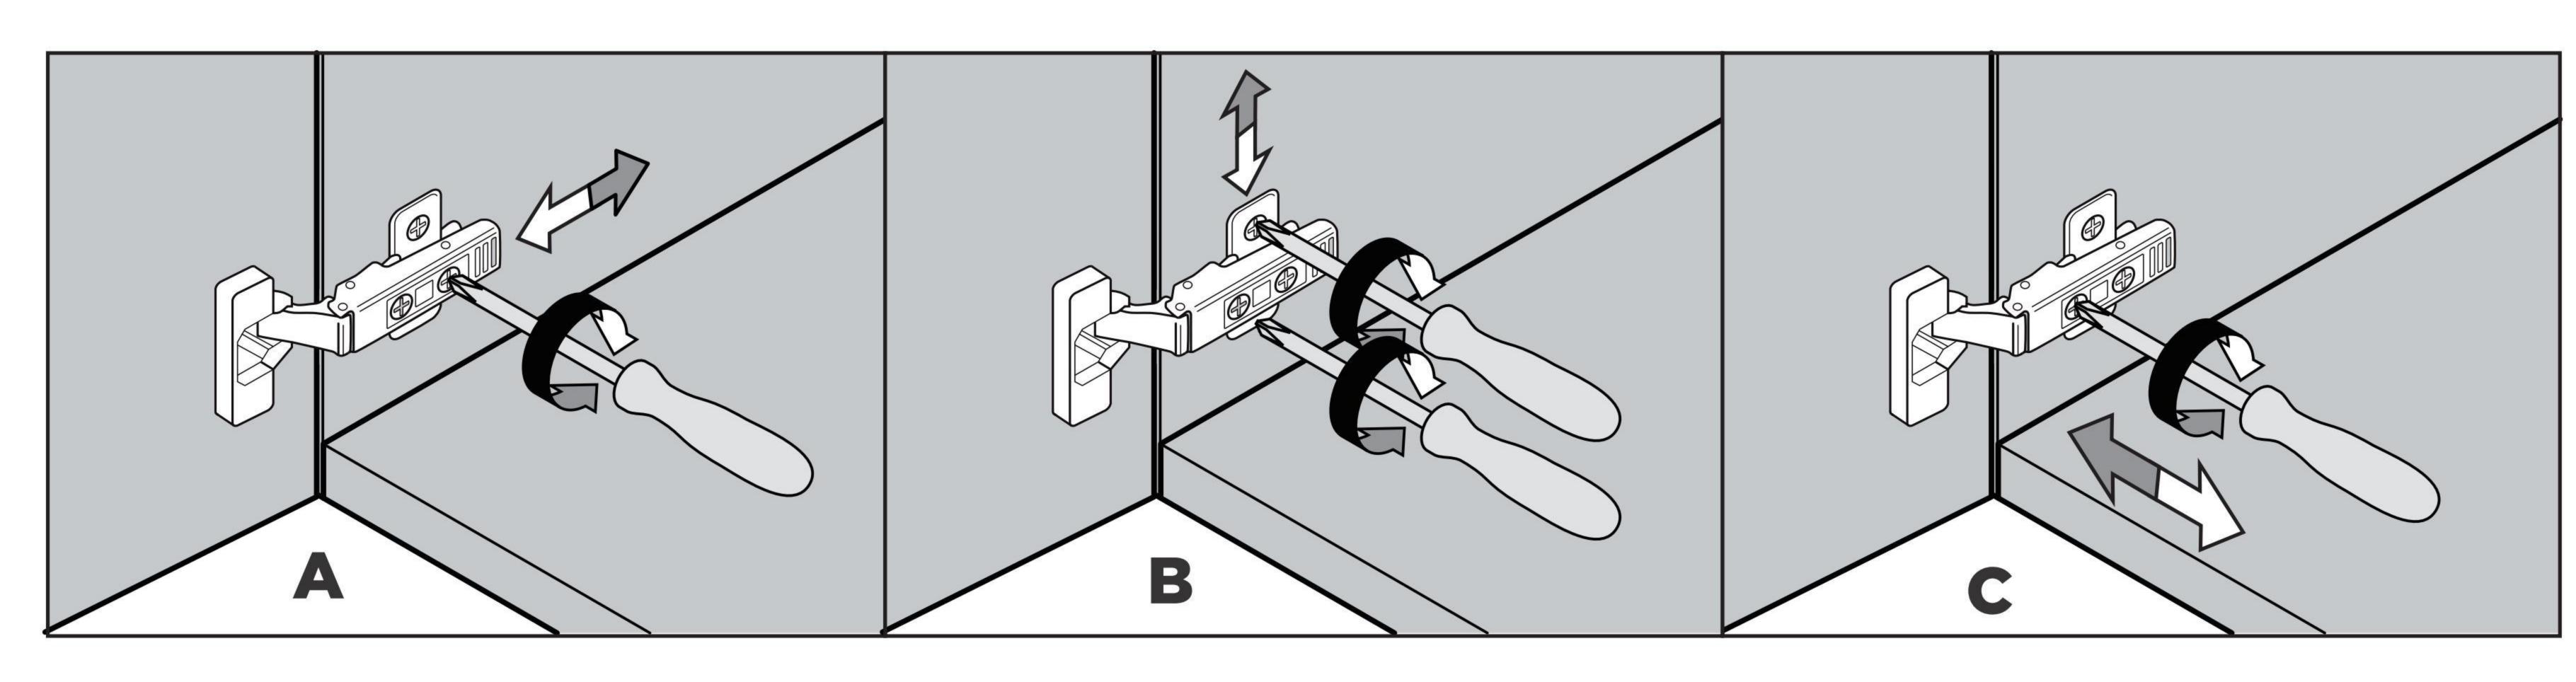

TOUCH BUTTON AND OUTLET CHARGER

How to use Defogger Switch and Dimmer Switch:

Left Touch Sensor

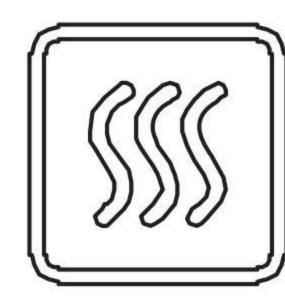

Short touch to turn ON/OFF the defogger.

"Switch"sign

Middle Touch Sensor



Short touch to ON/OFF lighting.

Right Touch Sensor



Short touch to get the light temperature 6000K, 4000K and 3000K.

Long touch to adjust the light brightness from 10%-100%.

Release the button when the light reaches the desired setting.

*Suggestion: The mirror is equipped with memory function to preserve the previous brightness/color settings.

How to use Outlet and USB Charger:

This lighted medicine cabinet contains outlet and USB chargers.

- 1. Outlet Charger is 15Amp 110V AC to power shavers, or toothbrushes, but do not use it for Hair dryer, it may blow a circuit.
- 2. USB ports provide 4.2Amp 5V DC for charging purpose only, not for data transfer.

*Suggestion: Turn off the mirror power supply if you don't use it for a long time.

*The design of touch switch may vary, and subject to change without prior notice.

USE AND MAINTENANCE


WARNINGS:

- 1.Please do not use if you found the mirror cabinet has been broken.
- 2. Never put any sharp or heavy material on the mirror surface, other wise the glass mirror will be broken and body injury accidents may occur.
- 3. Turn off the power switch in storm lightning weather to avoid electric parts damage.

Use and Maintenance:


CAUTION:

OUSE

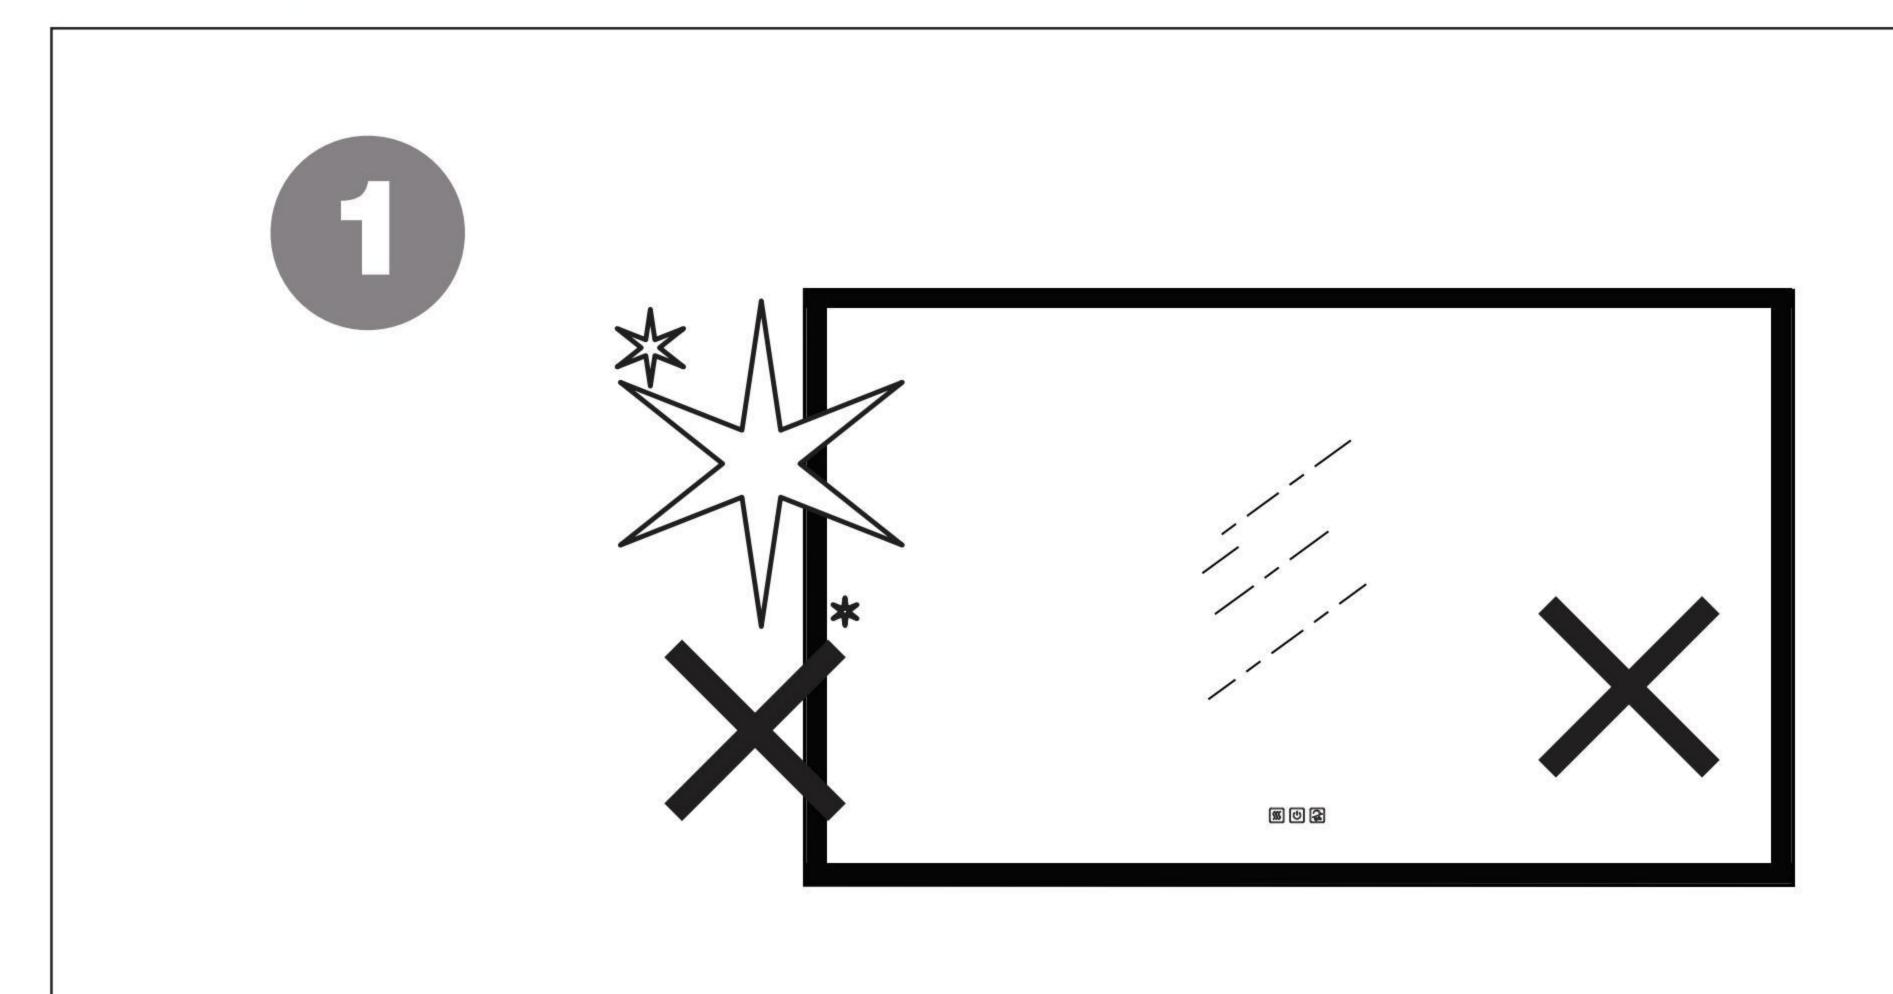


1. To avoid damage, do NOT knock the mirror cabinet with any hard objects;

OCLEANING

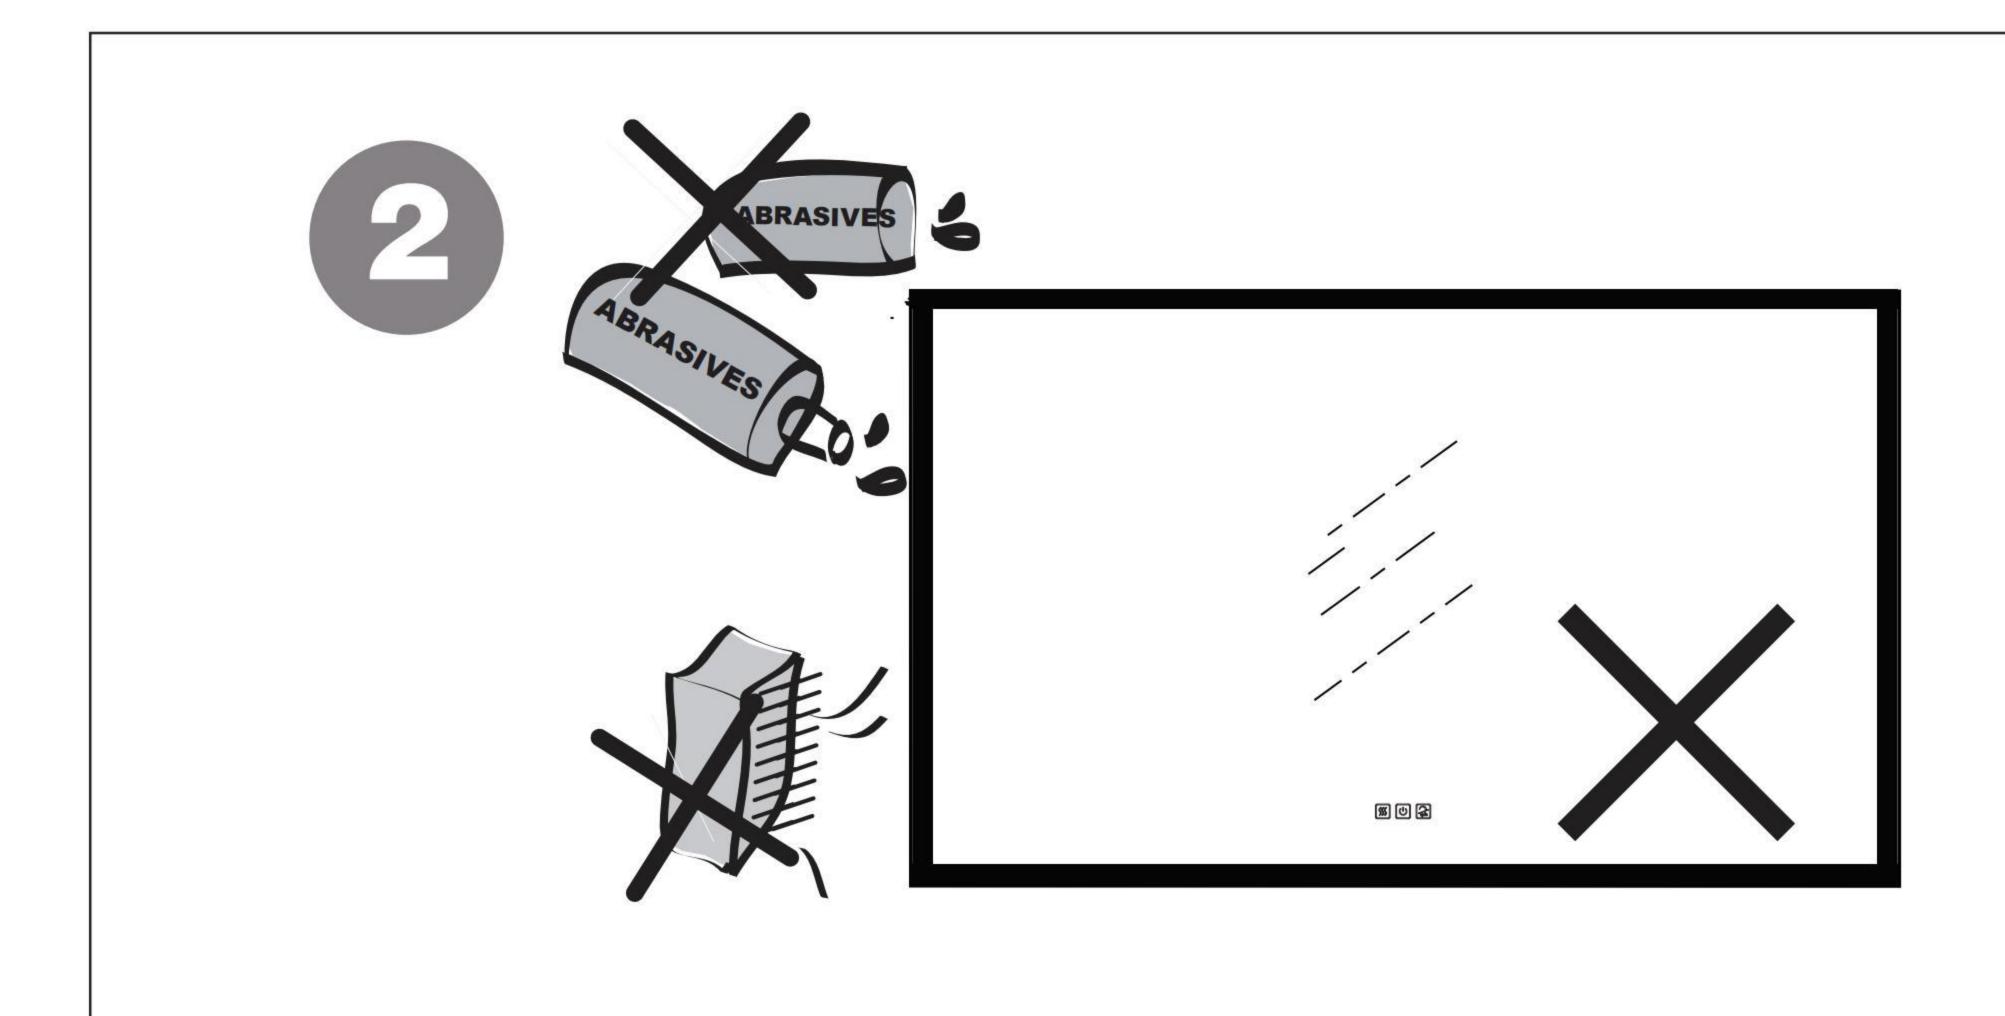

2. Do NOT clean the mirror cabinet with caustic cleaner. Do NOT wipe the mirror cabinet with Bristle brush;

O MAINTENANCE

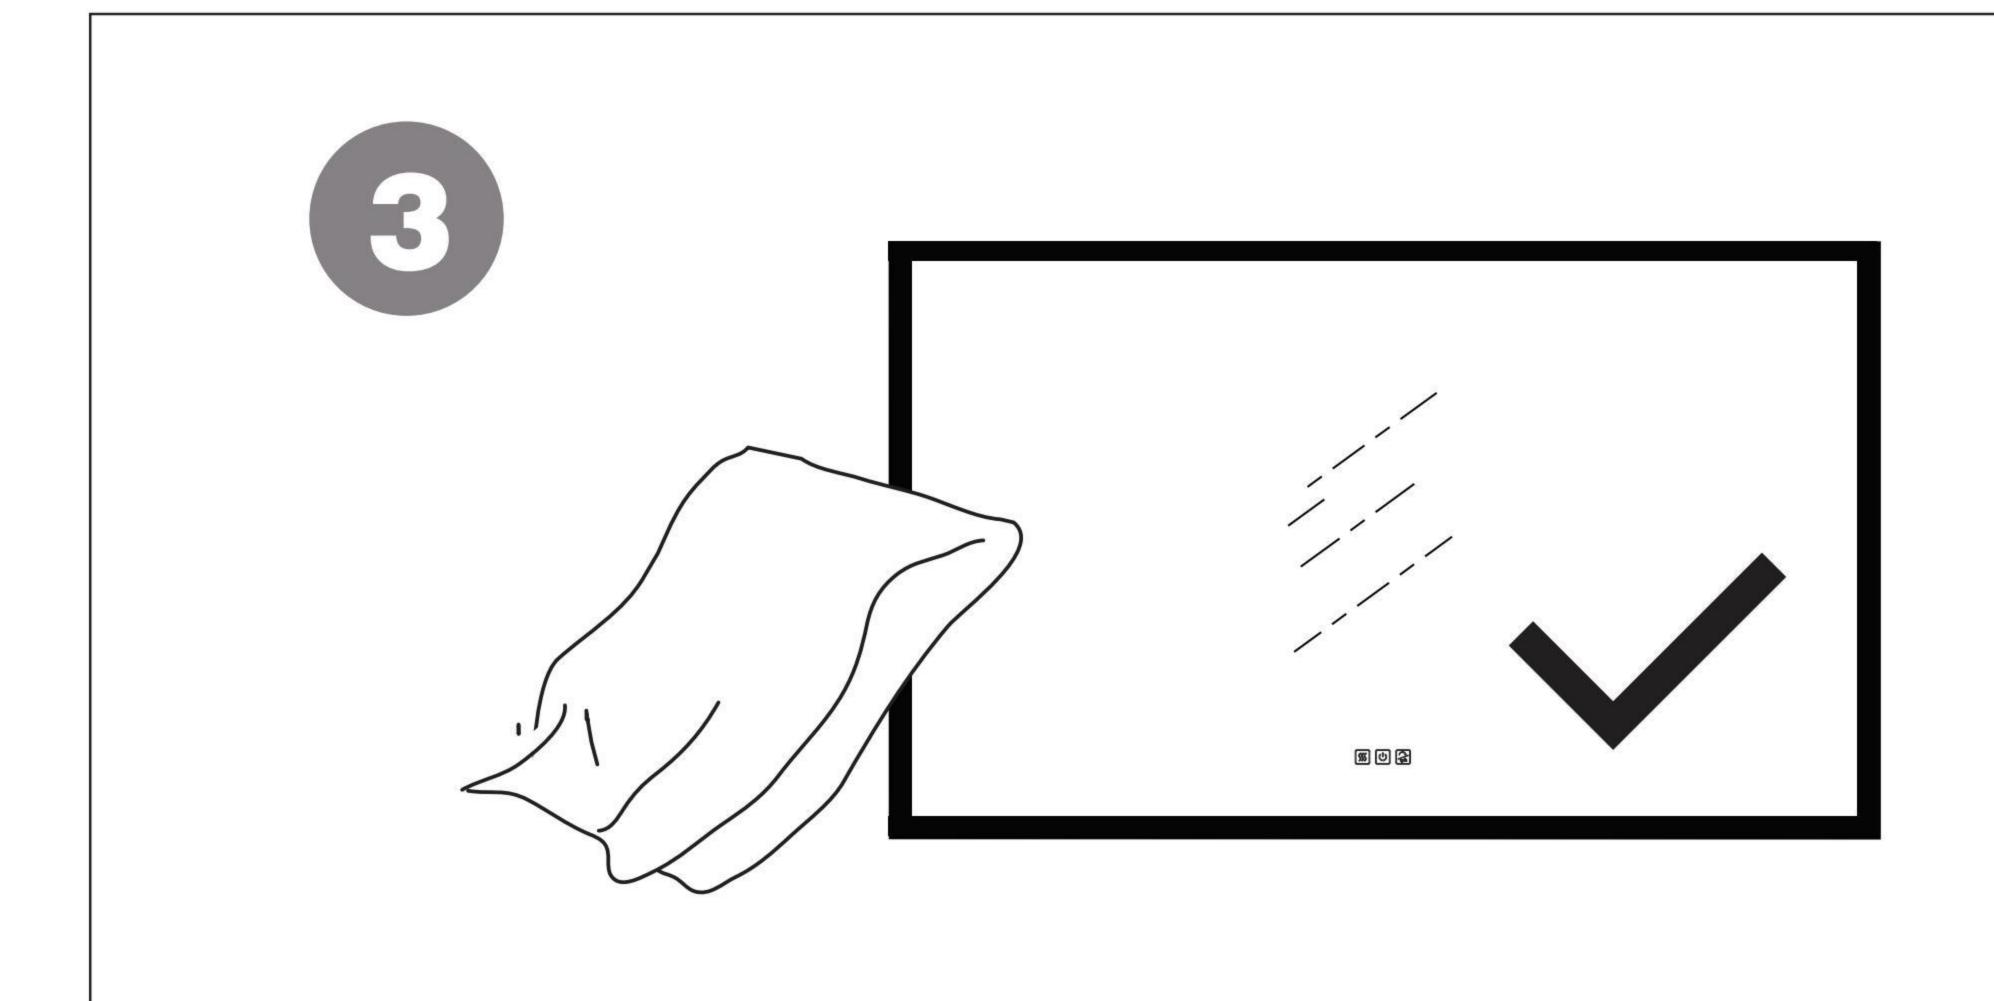

3. For daily maintenance, please use soft cloth and mild cleaner to clean the mirror cabinet.

LIMITED WARRANTY

LIMITED WARRANTY TWO YEARS TERM:

ANGELES HOME warrants to the original purchaser that, it will, at its election repair, replace, or make appropriate adjustment to products made by this company shown to have significant defects in material or workmanship which are reported to ANGELEHOME in writing within two years from the date of delivery. ANGELES HOME is not responsible for installation costs. The warranty is void in the event the product is damaged in transit, or if damage or failure is caused by abuse, misuse, abnormal usage, faulty installation, damage in an accident, improper maintenance, or any repairs other than those authorized by ANGELES HOME. At the expiration of the two years warranty period, ANGELES HOME shall be under no further obligation under any warranty, expressed or implied, including the implied warranty of merchantability. ANGELES HOME shall not be liable for any consequential damages arising out of or in connection with the use or performance of its products. Some states do not allow limi -tations on how long an implied warranty lasts or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Any liability against ANGELES HOME under any implied warranty, including the warranty of merchantability, is expressly limited to the terms of this warranty. Permission to return any merchandise under this warranty must be authorized by ANGELES HOME and returned prepaid by the purchaser. Claims under this warranty should be sent directly to your dealer.

For customer support please call 206.809.0093 weekdays 9:00 to 6:00 PST, or by email: service@angeleshome.com.