


USE AND CARE GUIDE

1X4 LED SMART TUNABLE FLAT PANEL

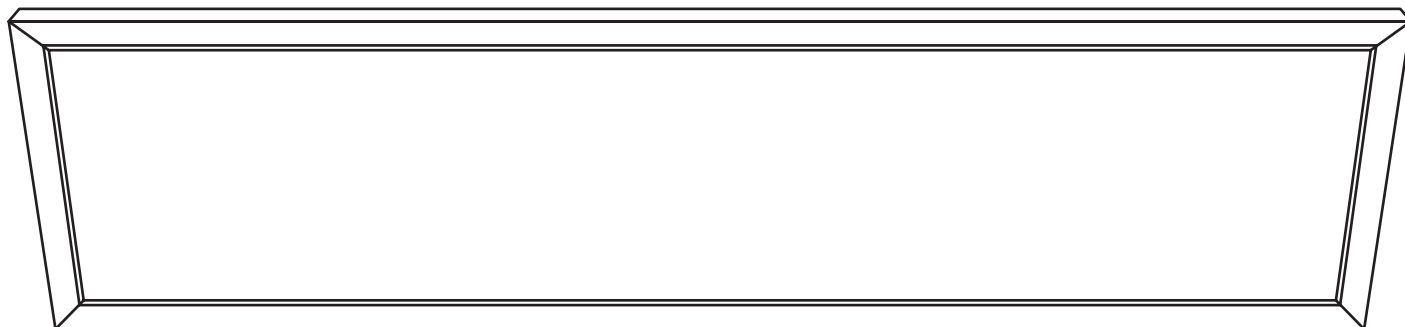

Questions, problems, missing parts? Before returning to the store,
call Commercial Electric Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-592-5233

HOMEDEPOT.COM/HUBSPACE

THANK YOU

We appreciate the trust and confidence you have placed in Commercial Electric through the purchase of this LED flat panel fixture. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Commercial Electric!

Table of Contents

Table of Contents	2	Installation	4-5
Safety Information	2	Controlling the Light with the Hubspace App	6
Warranty	2	Care and Cleaning / Troubleshooting	7
Pre-Installation	3		
Tools Required	3		
Hardware Included	3		

Safety Information

For your safety, always remember to:

- ❑ Turn off the power supply at the fuse or circuit breaker box before you install the fixture.
- ❑ Ground the fixture to avoid potential electric shock and to ensure reliable starting.
- ❑ Double-check all connections to be sure they are tight and correct.
- ❑ Wear rubber soled shoes and work on a sturdy wooden ladder.
- ❑ Account for small parts and destroy packing material, as these may be hazardous to children.

This fixture is designed for use in a circuit protected by a fuse or circuit breaker. It is also designed to be installed in accordance with local electrical codes. If you are unsure about your wiring, consult a qualified electrician or local electrical inspector, and check your local electrical code.

WILL NOT OPERATE PROPERLY WHEN CONNECTED TO A STANDARD DIMMER OR DIMMING CONTROL.



WARNING: RISK OF SHOCK. House electric current can cause painful shock or serious injury unless handled properly.



CAUTION: Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.



WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTICE: All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

FCC STATEMENT:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity:
47 CFR § 2.1077 Compliance Information

Responsible Party:
Feit Electric Company
4901 Gregg Road,
Pico Rivera, CA 90660, USA
562-463-2852


Unique Identifier:
FP1X4RGBWWHAGHD
Contains FCC ID: 2AB2Q-LA02301

Warranty

This product is warranted to be free from defects in workmanship and materials for up to 5 years from date of purchase. If it fails to do so, please contact the Customer Service Team at 1-877-592-5233 or visit www.HomeDepot.com/hubspace.


Pre-Installation

TOOLS REQUIRED

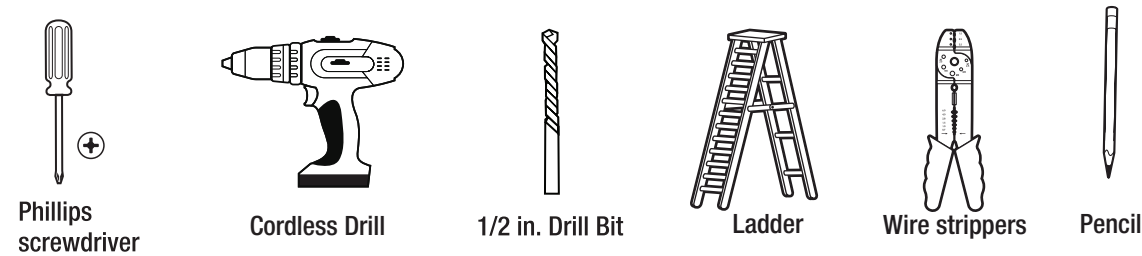

HARDWARE INCLUDED

 **NOTE:** Hardware not shown to actual size.

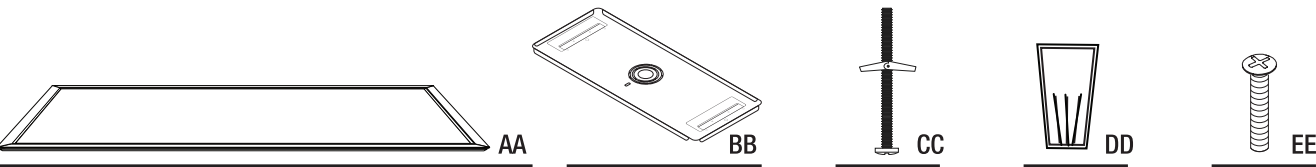

Part	Description	Quantity
AA	LED Flat Panel	1
BB	Mounting Plate (25.6 in. x 9.8 in. x 0.47 in.)	1
CC	3/16 in. Toggle Bolts	4
DD	Wire Nuts	3
EE	Screws #8-32 x 1 in.	2


Installation

1 Turning Off the Power

- Turn the power OFF at the switch and fusebox or the circuit breaker.
- Place the wall switch in the Off position.


2 Identifying the Wires

- Identify the wiring: (black - line voltage, white - neutral and bare copper - ground).

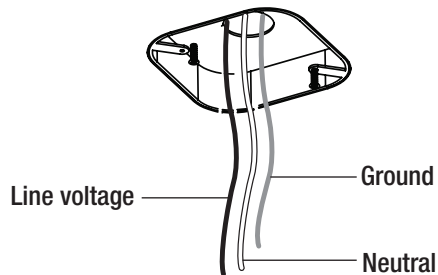


3 Attaching the Mounting Plate

- Attach the mounting plate (BB) to the junction box using the two #8-32 x 1 in. screws (EE).
- Align the mounting plate in the direction you want the fixture to be aligned. Once the toggle bolts are installed, you cannot change the orientation.

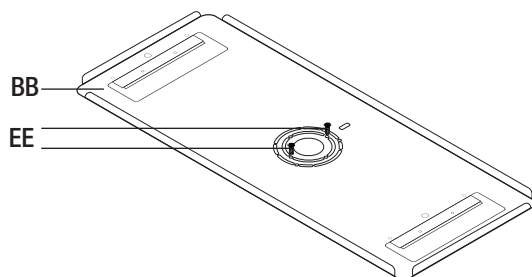


4 Positioning the Toggle Bolts

- Using the mounting plate (BB) as a guide, mark the position of the holes on the ceiling or wall where the toggle bolts will be placed.

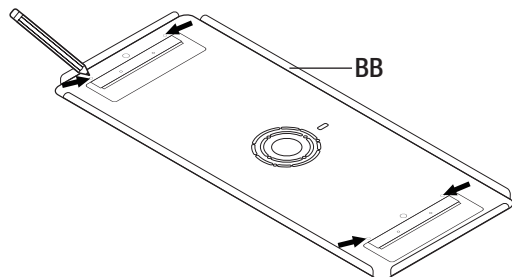


5 Securing the Toggle Bolts

- Remove the mounting plate (BB) from the junction box.
- Drill the marked locations using a 1/2 in. drill bit.
- Remove the wings from the 3/16 in. toggle bolts (CC).
- Insert a screw (CC) through the front of the mounting plate (BB) and reattach the wing to the screw (CC). Repeat for all toggle bolts.

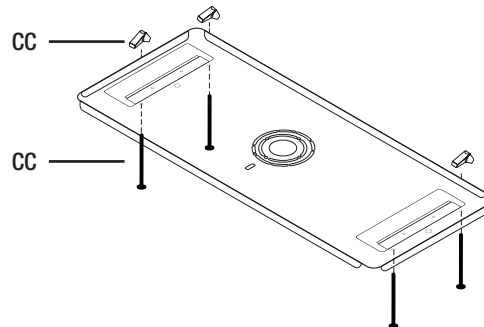


6 Feeding the Junction Box Wires

- Feed the junction box wires through the center of the mounting plate (BB) hole.

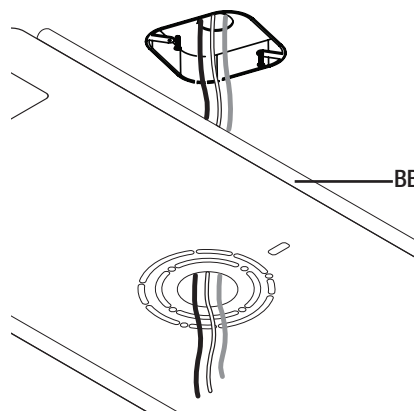

7 Re-attaching the Mounting Plate

- Re-attach the mounting plate (BB) by inserting the toggle bolts (CC) into the drilled holes.
- Once the toggle bolt wings (CC) are through and expanded, pull the toggle bolts (CC) downward to engage and tighten by hand or screwdriver.

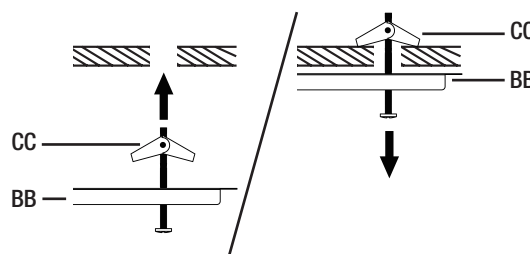


Installation (continued)

8 Attaching the Support Wire




CAUTION: Care must be taken not to have excess wires outside the junction box to avoid pinching wires. This may cause a short and could lead to a potential hazard.

- Hook the support wire from the LED flat panel (AA) on to the mounting plate (BB).

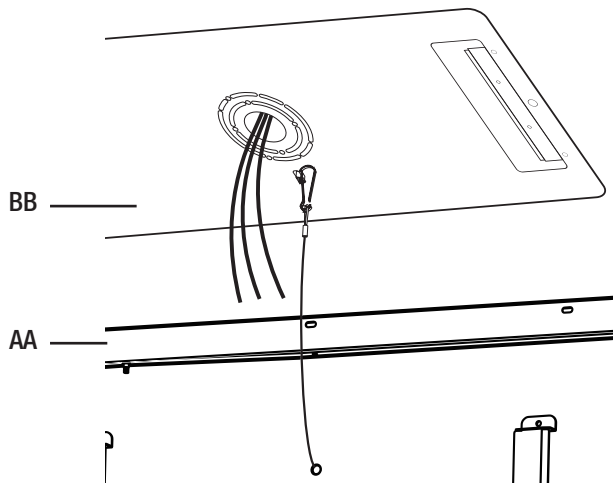


9 Installing the Fixture

- Connect the three wires coming from the fixture to the junction box wires (black - line voltage, white - neutral and green - ground) using the wire nuts (DD).

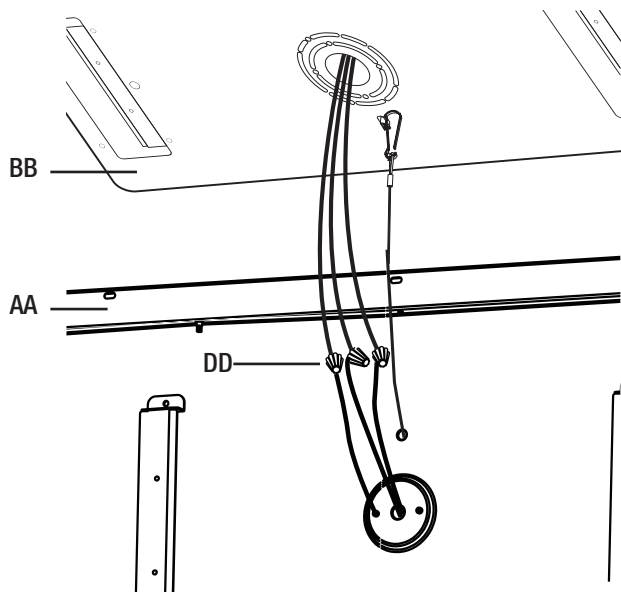


10 Connecting the Swing Arms

- Insert the LED flat panel (AA) swing arm's key hole slot into the mounting plate's (BB) hanging screw.

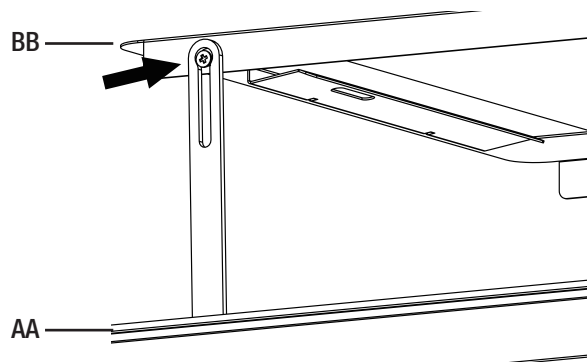


11 Attaching the Fixture

- Feed the wires to the junction box.
- Push the support wire to the center of the fixture.
- Raise the LED flat panel (AA) to the direction of the arrow on the swing arm.

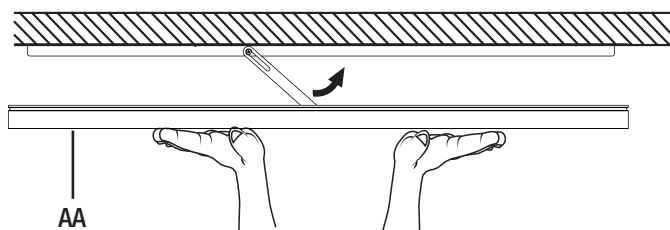

12 Securing the Fixture

- Once the fixture has been raised and is flush to the ceiling, lock the fixture by moving it towards the opposite direction it was raised.

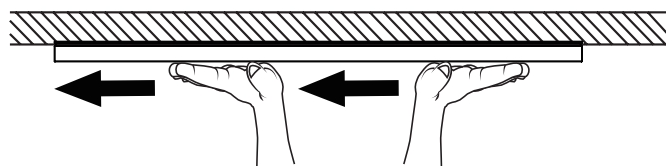

Controlling the Light with the Hubspace App

1 Downloading the Hubspace App

- Download the Hubspace™ app from the App Store or Google Play Store to your mobile device.
- Turn on the Bluetooth® & Wi-Fi® functions of the smart device to ensure the Wi-Fi® signal at home is stable and reliable.
- Launch the app.
- To register, enter your email address and a password. Or, login if you already have an account.

2 Verifying your network settings


- This Hubspace device requires a 2.4GHz Wi-Fi network, which most routers provide.
- Hubspace only shows Wi-Fi networks compatible with your device.
- If you do not see your Wi-Fi network name when you attempt to connect your device, please check your router settings.

3 Connect your fixture to the Hubspace App

- In the Hubspace app, tap the plus sign “+” in the upper-right corner.
- Scan the QR code provided in the included Quick Start Guide, or the QR code located on the side of the flat panel (removable). If you are unable to scan the QR code, you can enter the code manually by tapping Enter Code and following the instructions.
- Connect your device to power and follow the instructions on screen.

NOTICE: If you are unable to access the QR code for your light, you can put it into discovery mode with the following sequence.

- Switch the device off and on 5 times. The light will pulse to show that it can now be discovered.
- In the Hubspace app, tap the plus sign “+” in the upper-right corner and follow the instructions to discover devices.

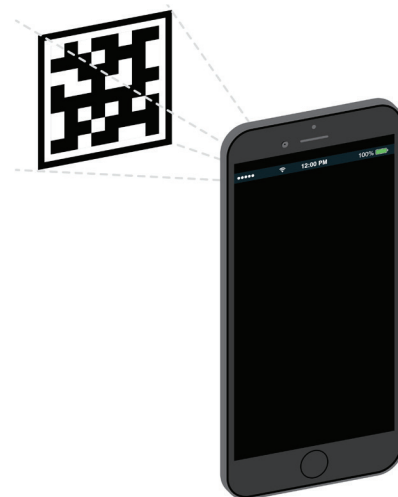

4 Using your flat panel

- Turn your flat panel on or off from the home page of the Hubspace app.
- To set a schedule or timer, tap the name of the flat panel on the home page. You will see options for setting schedules and auto-off timers.

5 Set up your voice assistant

- In the Hubspace app, tap the Hubspace button.
- Tap the Integrations tab, choose your voice assistant, and follow the instructions.

Care and Cleaning

- ❑ To clean the fixture, first disconnect the power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box.
- ❑ Use a dry or slightly dampened, clean cloth (use clean water, never use a solvent) to wipe the surface of the fixture.
- ❑ Allow the fixture to dry completely before power is restored.

Troubleshooting

Problem	Solution
My Hubspace device is not connecting to Wi-Fi.	Make sure your device is connected to a power source. Your Internet connection or Wi-Fi network may be down.
My device cannot find any Wi-Fi networks.	Make sure you have a 2.4 GHz capable Wi-Fi network within range of the device you are trying to add.
My device is in a location that does not have Wi-Fi. Can I still use it with the Hubspace App?	Yes. Use the app on a phone with an Internet connection like LTE. The phone must be within Bluetooth range of your Hubspace device and have Bluetooth enabled.
I cannot find the QR Code.	It is on the flush mount housing. A copy of the QR code is also included in your device's documentation.
The QR code has become damaged. How do I add the device?	Under the QR code are numbers. You can enter those in manually instead of scanning the code.
I lost my QR code. How do I add a device?	<ol style="list-style-type: none">1. Make sure the device is connected to power.2. In the Hubspace app, tap + , then Add Device.3. On the Scan Device screen, tap the Search button in the lower right corner.4. Follow the onscreen instructions.
The device is in another account. How do I transfer it?	Scan the QR code and it will transfer to your account.
My device is offline for long periods of time.	Make sure your Wi-Fi signal strength is sufficient. You may need to move your router, use mesh Wi-Fi, or Wi-Fi extenders.
The device is on and I scanned the QR code, but the app cannot connect to it.	Turn off Bluetooth on your phone and turn it back on. Then scan the QR code. If the problem persists, turn your phone off and on, then try again.
Can I scan the same QR code to add multiple products?	No. Each product has a unique QR code.



Questions, problems, missing parts? Before returning to the store,
call Commercial Electric Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.